

Fitting Instructions					
Page 1					
Make	Omoda	Model	5	Derivative	MK I REV A



Fitting Instructions						
Page 2						
Make	Omoda	Model	5	Derivative	MK I	REV A



Pre-installation picture.



Remove the parcel shelf.



Drop the rear seats forward to allow for installation.



Remove the false floor.



Remove the felt moulded flooring.




Remove the two fixings highlighted to release the rear sill.

Fitting Instructions						
Page 3						
Make	Omoda	Model	5	Derivative	MK I	REV A



Lift the top of the clip to allow it to release.

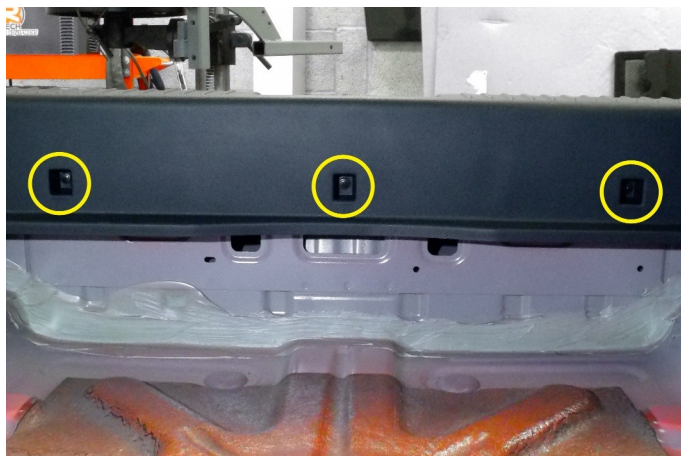

There are three screws which also need to be removed to allow the sill to come off.



The sill will now pull away from the vehicle.



Remove the three screws holding the side trim in place.



The side trim will now pull away from the vehicle. This does not need to be fully removed but just pull away enough to attach the upper leg.



Carefully open the hole shown out to 11mm.

Fitting Instructions					
Page 4					
Make	Omoda	Model	5	Derivative	MK I REV A



Attach the upper leg pylon in the setup shown using the large 3mm washer and backplate provided. This can be threadlocked into position. Once installed trim the excess wire on the backplate so no sharp edges are left.



When putting the trim back, the orange clip shown will need removing.



The clip can be cut out as shown.




Mark the side plastics using the dimensions shown as a guide. All dimensions are to the edge of the plastics.



Using a conical drill bit, open the marked hole out enough for the pylon to sit nicely in.

Fitting Instructions					
Page 5					
Make	Omoda	Model	5	Derivative	MK I REV A

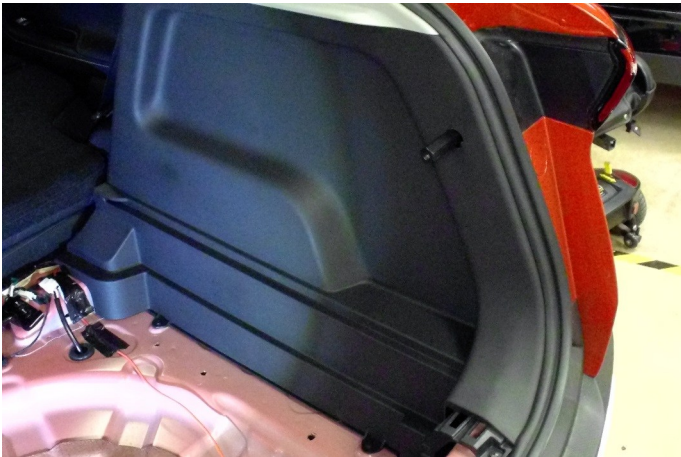


The side trim can now be re-fitted. A pylon flange can be fitted around the pylon to neatly cover the hole.



On the design vehicle, the battery was located on the passenger side under the bonnet.



Attach the inline fuse onto the power cable and onto the battery positive terminal.

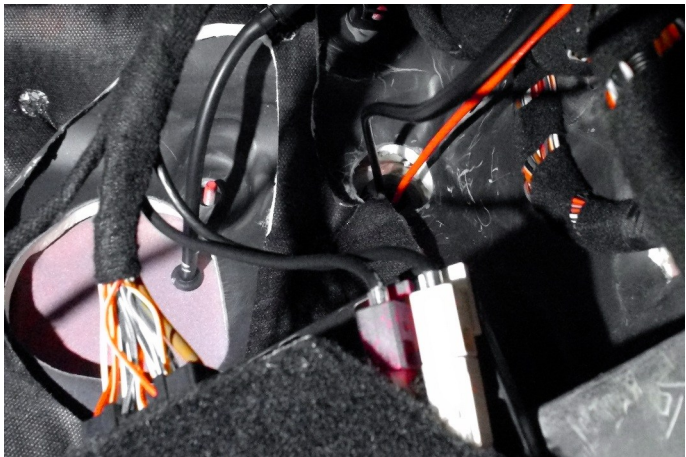

On the design vehicle, the power feed was fed through the bonnet release cable on the drivers side and brought into the engine bay.




An earthing point was found at the rear of the vehicle.

Fitting Instructions					
Page 6					
Make	Omoda	Model	5	Derivative	MK I REV A



Assemble the legs onto the frame.

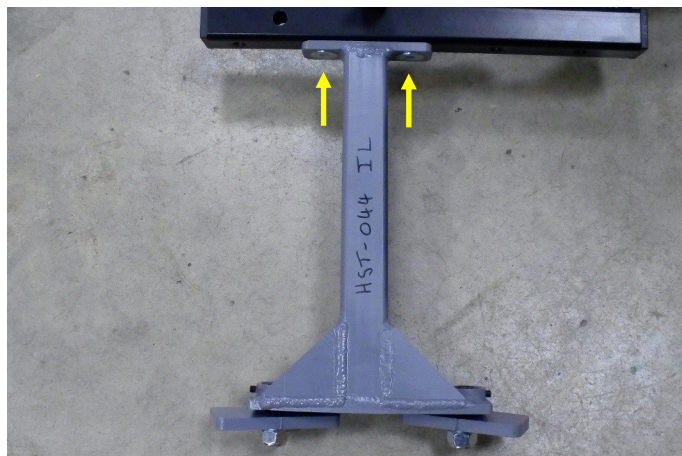

Inner Leg:
2 x M10x20mm Countersunk Set Screw



Outer Leg:
4 x M10x20mm Countersunk Set Screw



Upper Leg:
2 x M10x20mm Countersunk Set Screw



Once the legs are attached to the a-frame, attach the a-frame to the vehicle via the upper bracket pylon previously installed to the vehicle.




Ensure the a-frame is in a level position and tighten the legs onto the a-frame.


Fitting Instructions					
Page 7					
Make	Omoda	Model	5	Derivative	MK I REV A




The outer leg will sit underneath the side trim easily.

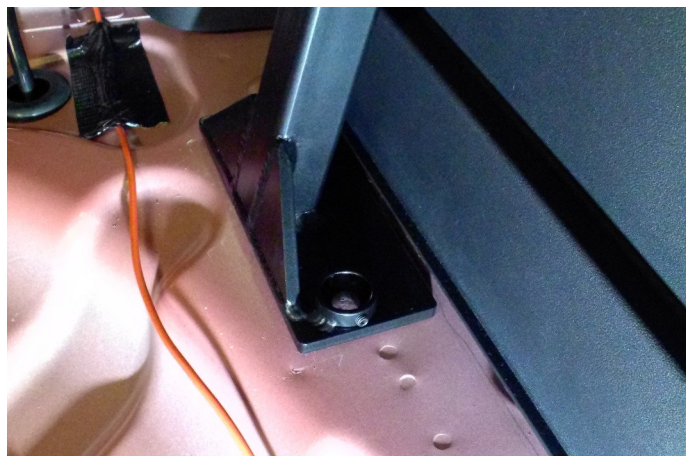

The inner leg sits just away from the side trim.

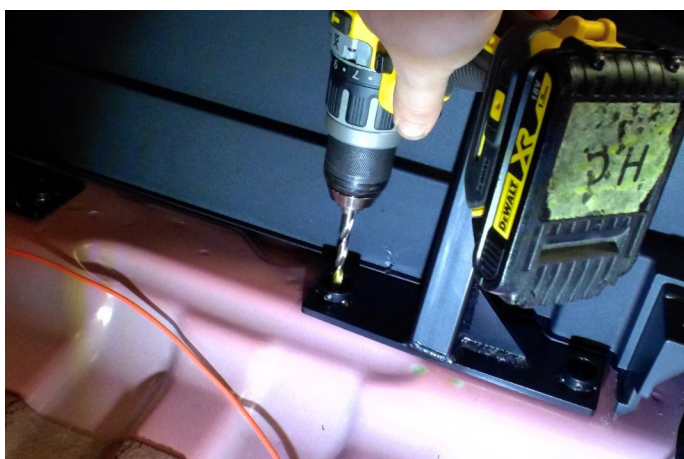

Once happy with the hoist position, carefully drill all four holes (2 for inner leg, 2 for outer leg) to 11mm.

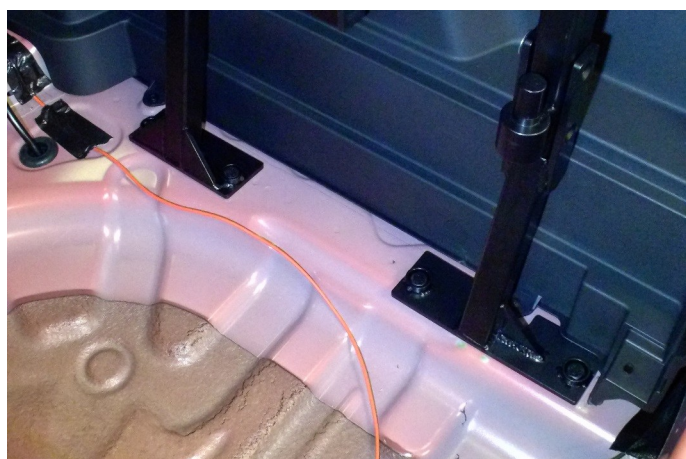

The grub screw and ring can be used to assist in holding the hex head set screw in place inside the vehicle whilst tightening underneath.




The backplates can be attached underneath the vehicle and tightly fixed. Apply an appropriate corrosion resistant sealant.



Fitting Instructions					
Page 8					
Make	Omoda	Model	5	Derivative	MK I REV A



Ensure all legs are tight on the a-frame.

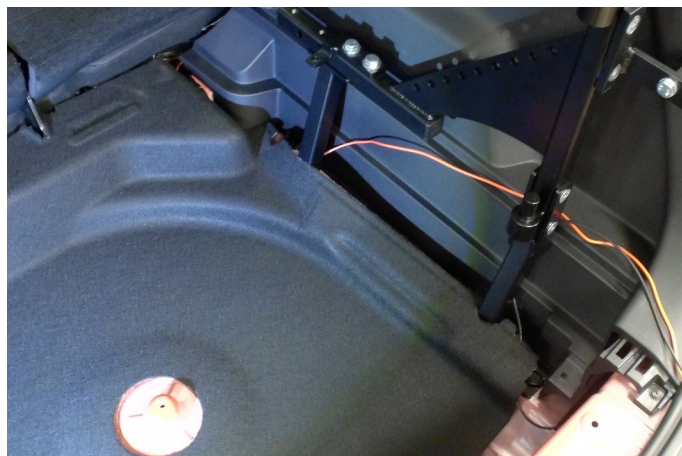


Insert the felt floor back in the vehicle as shown.



Neatly cut out the felt floor to accept the inner and outer legs. A craft knife can be used to do this.



Re-fit the rear sill ensuring all five fixings are re-attached.

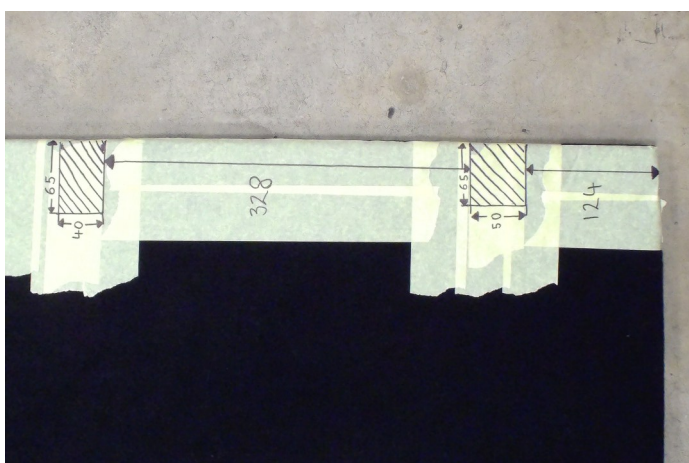

Mark the following dimensions on the boot floor as guidance.




Neatly cut out the two sections shown for the legs.

Fitting Instructions						
Page 9						
Make	Omoda	Model	5	Derivative	MK I	REV A



Make sure to feed the cables through the false floor and re-fit it into the vehicle.

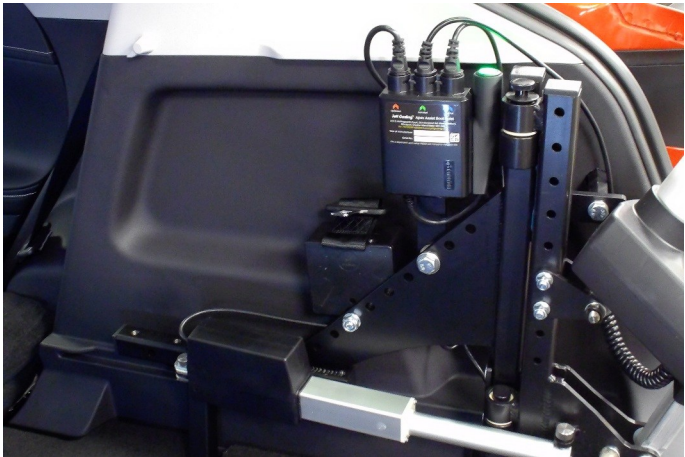

Complete the installation of the hoist, including suitable positions for the control box and restraint attachments.



Setup the hoist for the chosen mobility device.

