

Fitting Instructions

Page 1

Make	Hyundai	Model	Tucson	Derivative	MK III	REV C
------	---------	-------	--------	------------	--------	-------



Fitting Instructions						
Page 2						
Make	Hyundai	Model	Tucson	Derivative	MK III	REV C



Starting vehicle images.



Remove the false floor.



Remove the polystyrene undertray.

Fitting Instructions

Page 3

Make	Hyundai	Model	Tucson	Derivative	MK III	REV C
-------------	---------	--------------	--------	-------------------	--------	-------



Remove the boot sill which is held in with plastic rivets.




Remove the side panel which is held in with the screws shown.




Fitting Instructions

Page 4

Make	Hyundai	Model	Tucson	Derivative	MK III	REV C
-------------	---------	--------------	--------	-------------------	--------	-------

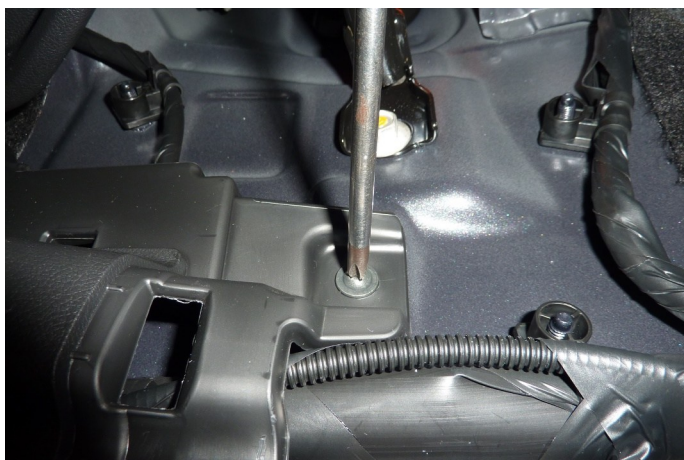

There is also a hidden screw below the RHS rear door sill plastics.

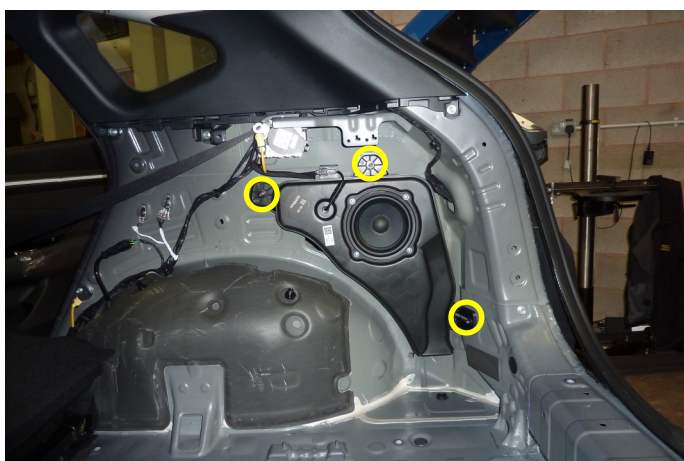

Remove the speaker box which is held in with 3x M6 Nuts.



Attach the inner, outer and upper legs to the α -frame (see next page for detailed instructions).


Fitting Instructions

Page 5

Make	Hyundai	Model	Tucson	Derivative	MK III	REV C
-------------	---------	--------------	--------	-------------------	--------	-------



Attach the inner leg using 2x M10x20mm Countersunk Set Screws (10.9)

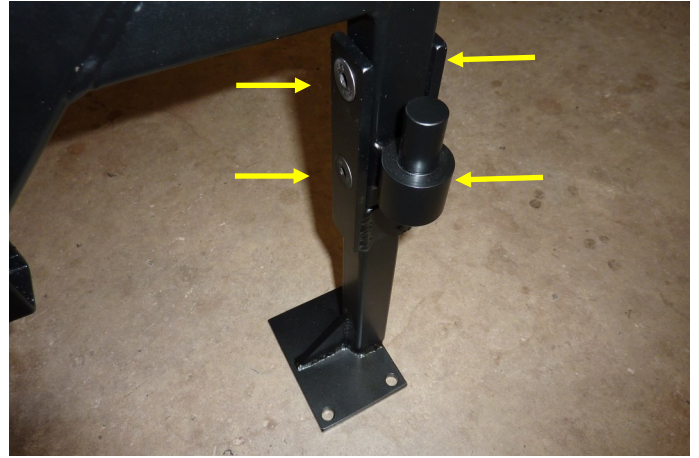

Attach the outer leg using 4x M10x20mm Countersunk Set Screws (10.9)




Attach the upper leg using 2x M10x20mm Countersunk Set Screws (10.9)



Put the a-frame in place, ensuring it is as vertical as possible.



Attach the upper leg bracket by marking a hole to drill.

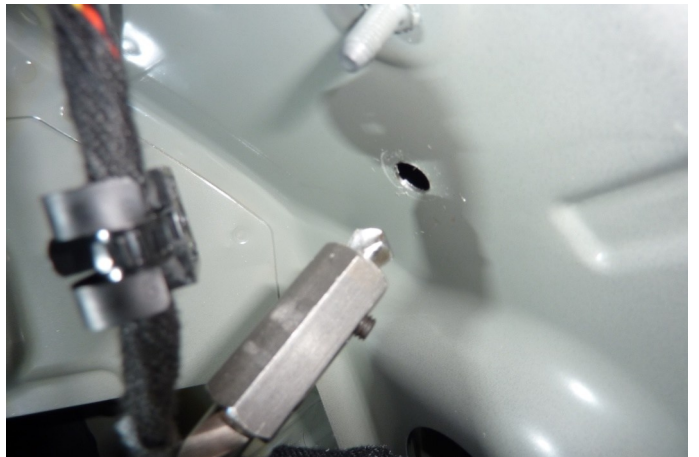

Drill for the upper leg bracket.

Ensure the use of a drill stop to prevent the drill going too far through the bodywork.

Fitting Instructions

Page 6

Make	Hyundai	Model	Tucson	Derivative	MK III	REV C
-------------	---------	--------------	--------	-------------------	--------	-------




The threaded backplate can be fed behind the inner panel.




Attach the upper bracket.



Temporarily attach the a-frame to the upper bracket to mark and drill the other holes through the floor.

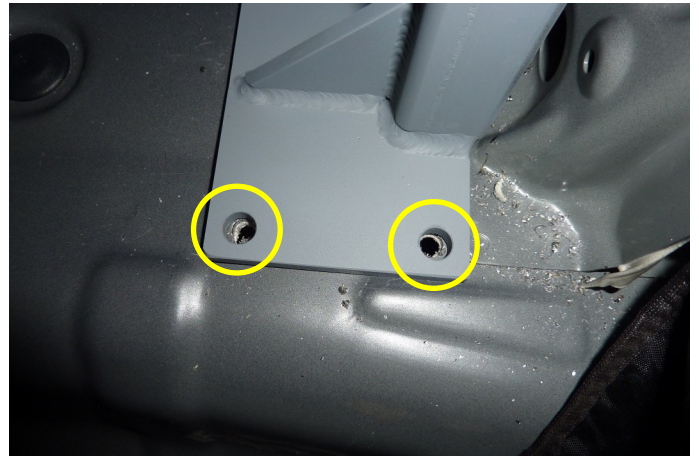


Mark and drill 2 holes for the outer leg.

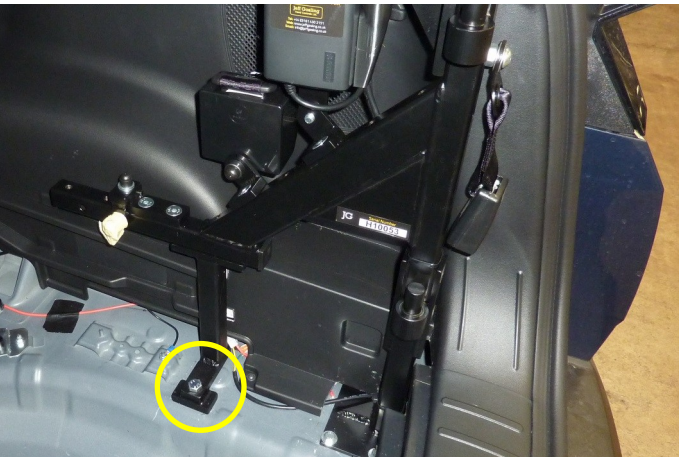


Mark and drill for 1 hole for the inner leg. Attach the inner leg through the floor of the vehicle using the spreader plate. The grub screw and ring can be used to assist in holding the hex head set screw in place inside the vehicle whilst tightening underneath. Use appropriate underseal on the fixing plate.




Fitting Instructions						
Page 7						
Make	Hyundai	Model	Tucson	Derivative	MK III	REV C

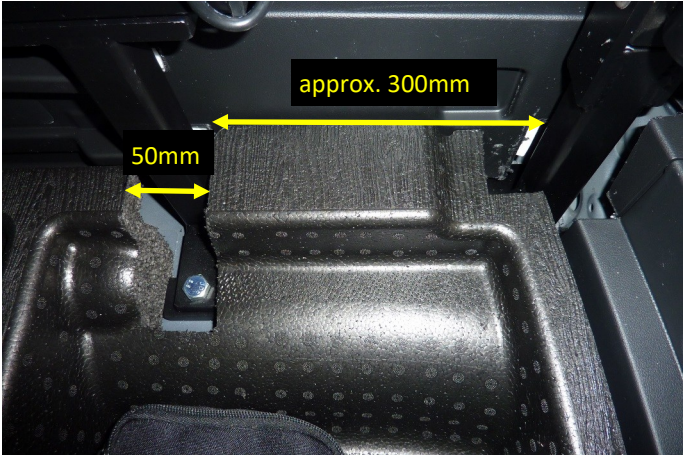

Remove the a-frame and make the appropriate cut outs. This cut out in the foam piece.

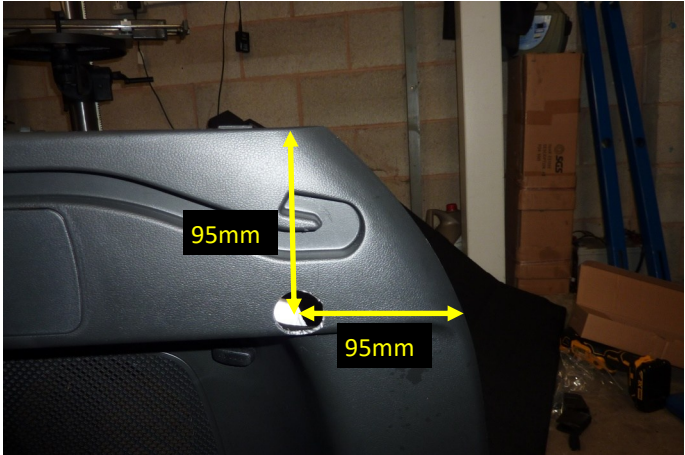

This cut out for the upper leg.

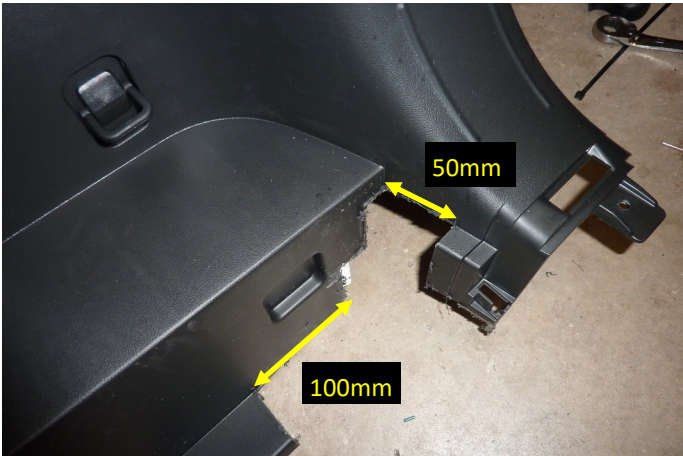

This cut out for the outer leg.




This cut out for the inner leg.



Fitting Instructions

Page 8

Make	Hyundai	Model	Tucson	Derivative	MK III	REV C
-------------	---------	--------------	--------	-------------------	--------	-------

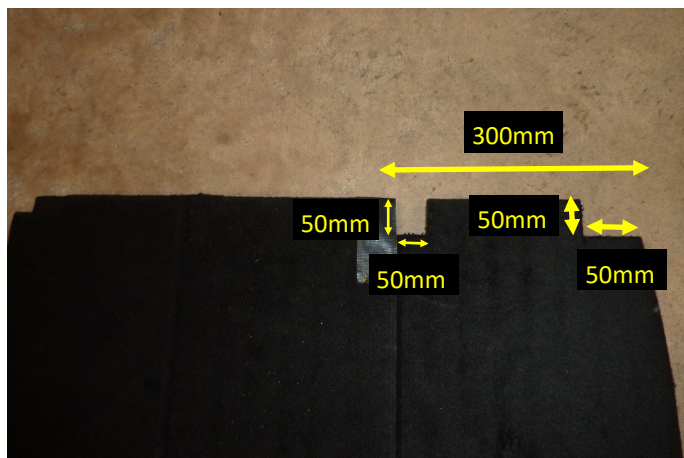

Cut the boot floor panel.



Re-attach the a-frame.



Upper Leg.




Outer Leg - use backplate shown underneath the vehicle and use appropriate underseal to protect against corrosion.

Fitting Instructions

Page 9

Make	Hyundai	Model	Tucson	Derivative	MK III	REV C
-------------	---------	--------------	--------	-------------------	--------	-------

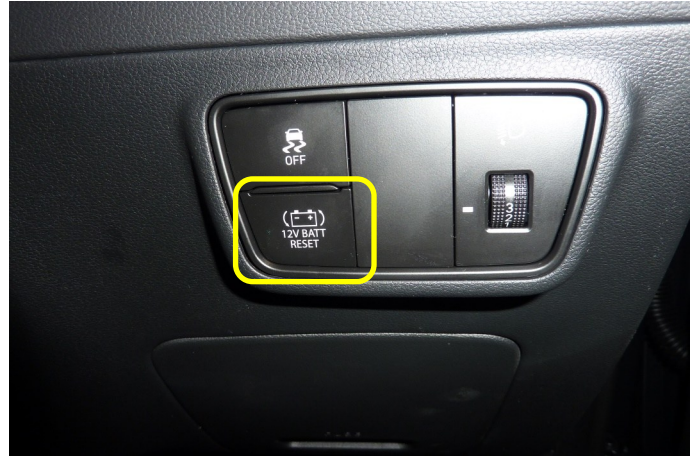

Run the power cable from the engine bay as shown in the next instructions.

The HEV variant does not have a conventional 12V battery. Instead it has a 12V supply fed from the main lithium polymer propulsion battery as shown. If the 12V supply shuts off it can be restored by pressing the reset button on the dash.



The wire can be routed through this grommet.



The undertray in the passenger side footwell can be easily removed to allow the cable to come through the bulkhead.



Fitting Instructions						
Page 10						
Make	Hyundai	Model	Tucson	Derivative	MK III	REV C



Use an appropriate earth to chassis point.

Wire the power wire and fuse to the control box in the conventional way.

The fitting instructions show the older style of a-frame. Please use the provided kit to mount the control box, restraint reel and restraint buckle in suitable locations.



Fitting Instructions

Page 11

Make	Hyundai	Model	Tucson	Derivative	MK III	REV C
-------------	---------	--------------	--------	-------------------	--------	-------

