

Fitting Instructions

Page 1

Make	Nissan	Model	Qashqai	Derivative	MK IV	REV A
------	--------	-------	---------	------------	-------	-------



Fitting Instructions

Page 2

Make	Nissan	Model	Qashqai	Derivative	MK IV	REV A
-------------	--------	--------------	---------	-------------------	-------	-------



Pre-installation pictures.



Remove the false floor.



Remove the sub-floor.

Fitting Instructions

Page 3

Make	Nissan	Model	Qashqai	Derivative	MK IV	REV A
-------------	--------	--------------	---------	-------------------	-------	-------



Disconnect the speaker.



Then remove the speaker.



Remove the polystyrene sub-floor moulding.



Remove the sound-proofing layer.



Fitting Instructions

Page 4


Make	Nissan	Model	Qashqai	Derivative	MK IV	REV A
-------------	--------	--------------	---------	-------------------	-------	-------




Remove the sill plastic which is held in with plastic rivets.



Remove the side panel plastic piece as shown. This is held in with 2x M6 screws.

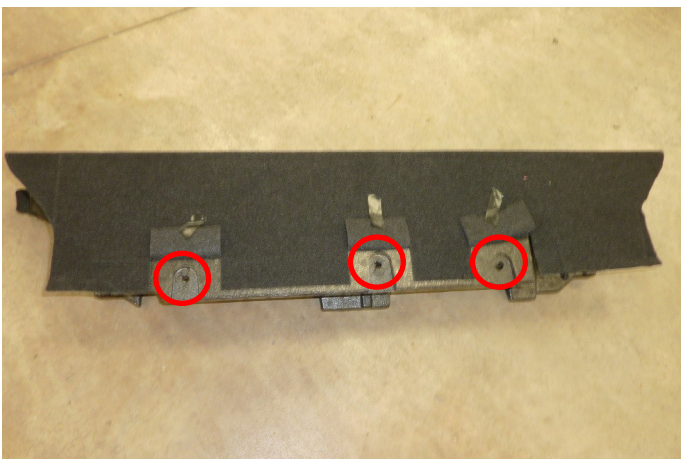

Remove the carpet covered polystyrene cross piece. This is held in place with pine cone type plastic fixings - 3 towards the rear and 2 at the front.

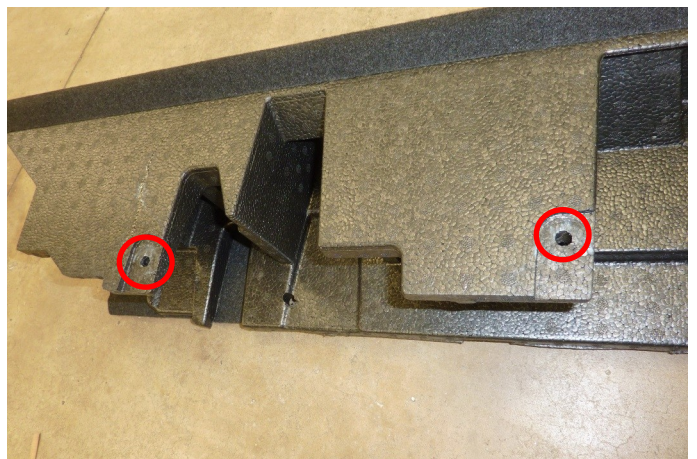

Fitting Instructions

Page 5

Make	Nissan	Model	Qashqai	Derivative	MK IV	REV A
------	--------	-------	---------	------------	-------	-------

All the fixing points for the hoist are existing 'hard point' threaded inserts already in the vehicle therefore no drilling is required.




The upper leg fixing point can be attached first. This can be accessed without the need to remove the entire side panel.




Remove the existing screw.



Drill a clearance hole through the plastic.

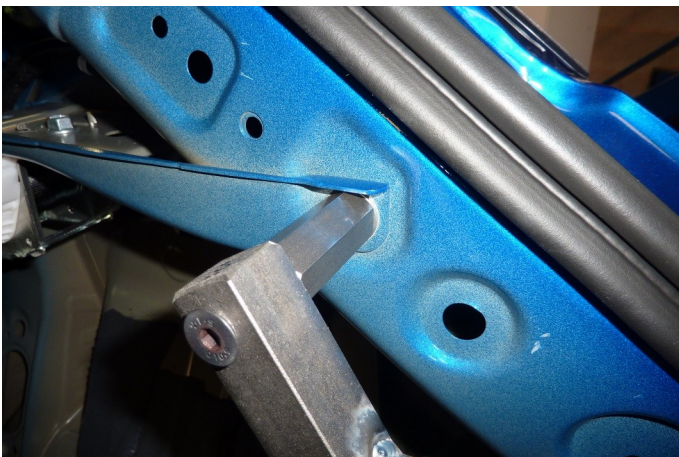


Attach the threaded pylon.

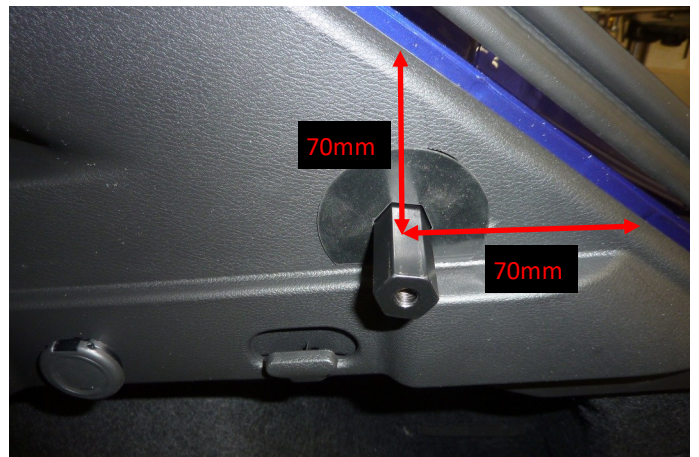

Fitting Instructions

Page 6

Make	Nissan	Model	Qashqai	Derivative	MK IV	REV A
------	--------	-------	---------	------------	-------	-------

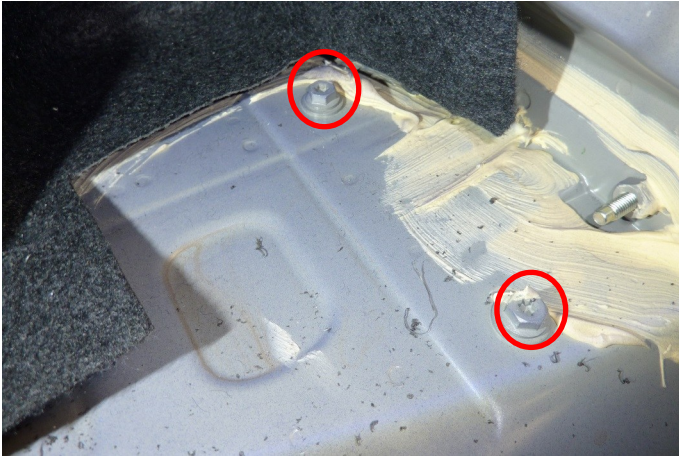


The outer leg is attached in the location of the two screws shown.




Remove the screws.



Attach the outer leg into the holes.

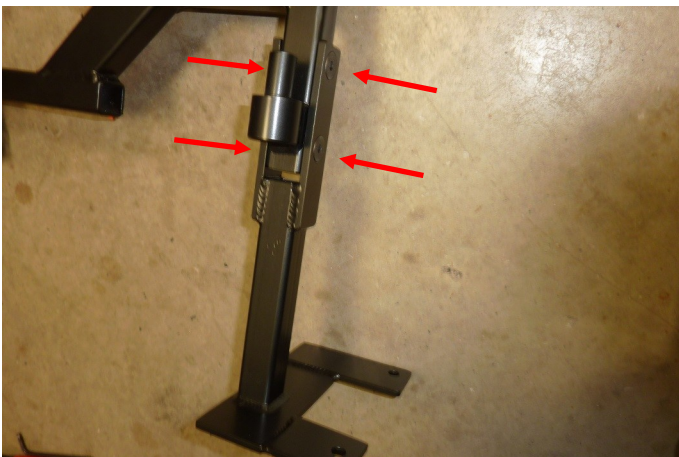

The a-frame then attaches to the legs.
Outer leg using 4x M10x20mm CSSS provided.

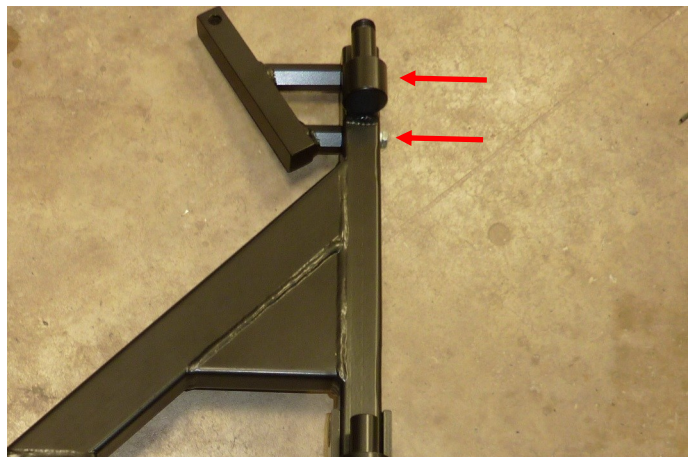

Upper leg using 2x M8x50mm HHSS and Washers provided.

Fitting Instructions

Page 7

Make	Nissan	Model	Qashqai	Derivative	MK IV	REV A
------	--------	-------	---------	------------	-------	-------




Inner leg - 2x M10x20mm CSSS provided.



The inner leg attaches to the vehicle at the 2 points shown.



Make the relevant cut outs to allow for fitting.
Mark around the inner leg to assist with cutting.

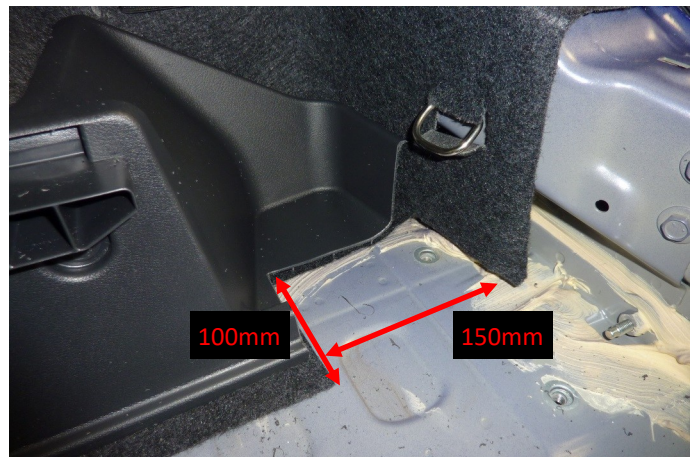

Fitting Instructions

Page 8

Make	Nissan	Model	Qashqai	Derivative	MK IV	REV A
------	--------	-------	---------	------------	-------	-------




The hoist can be wired to the 12V battery in the boot as shown.



Fitting Instructions


Page 9

Make	Nissan	Model	Qashqai	Derivative	MK IV	REV A
------	--------	-------	---------	------------	-------	-------

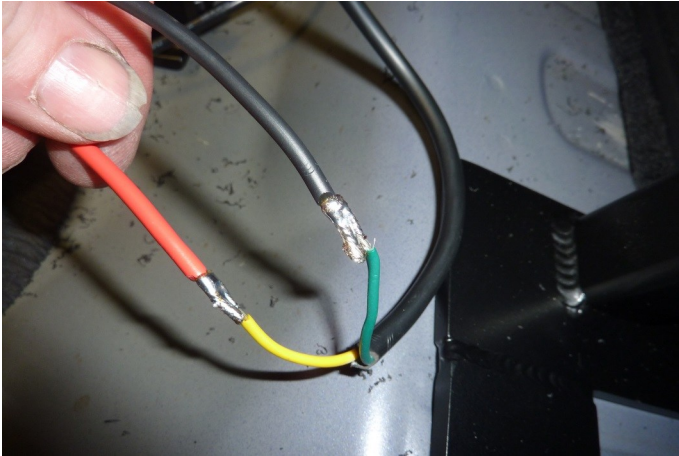


Wire the control box to the feed.


Red - Yellow / Black - Green

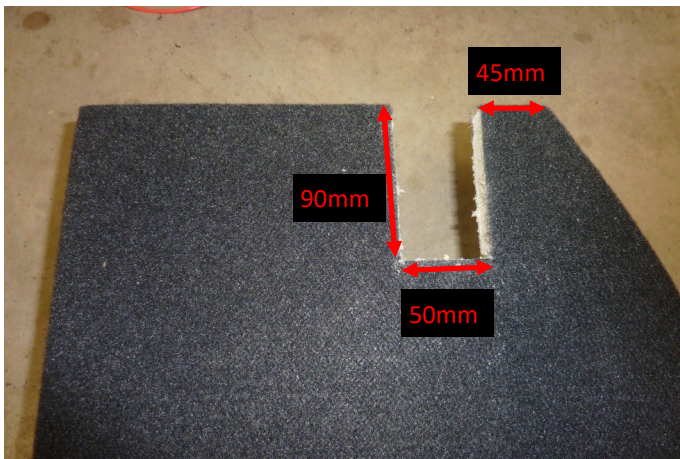

Cut the boot floor to fit around the hoist.
Approx. dimensions shown.

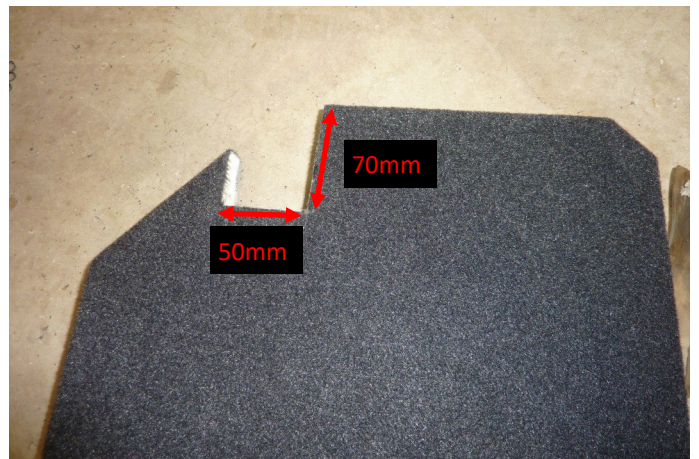


The fitting instructions show the older style of a-frame. Please use the provided kit to mount the control box, restraint reel and restraint buckle in suitable locations.

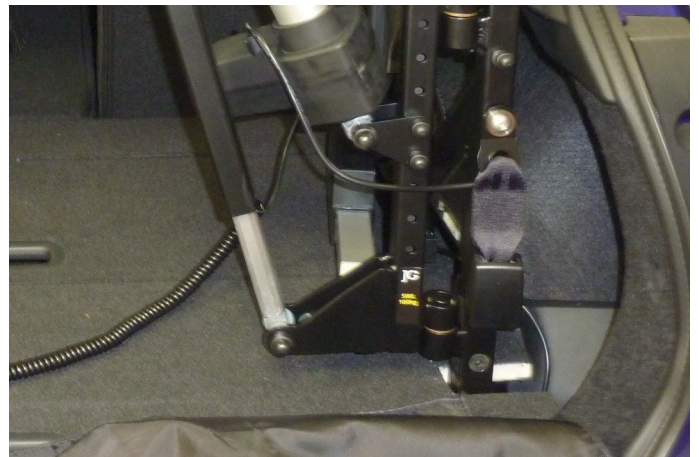

Fitting Instructions

Page 10

Make	Nissan	Model	Qashqai	Derivative	MK IV	REV A
------	--------	-------	---------	------------	-------	-------

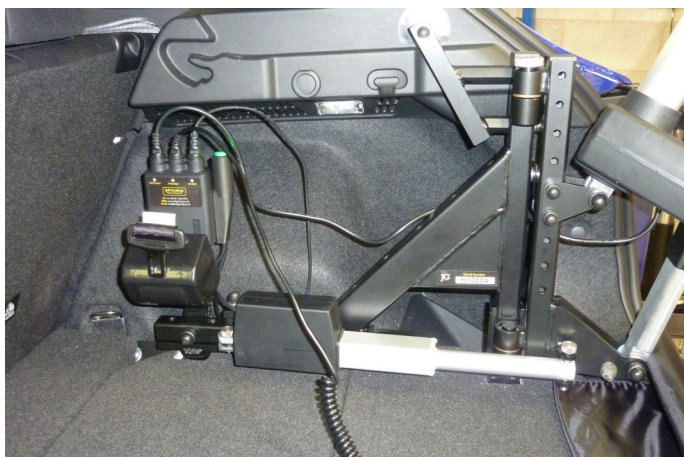

Complete the setup of the hoist ensuring all fixings are secure.

