

Fitting Instructions					
Page 1					
Make	Honda	Model	HR-V	Derivative	MK III REV A



Fitting Instructions					
Page 2					
Make	Honda	Model	HR-V	Derivative	MK III REV A



Pre-installation pictures.




Remove the two luggage loops in the boot floor (pozidrive screwdriver) and then remove the false floor.



Remove the underfloor storage compartment.


Fitting Instructions					
Page 3					
Make	Honda	Model	HR-V	Derivative	MK III REV A

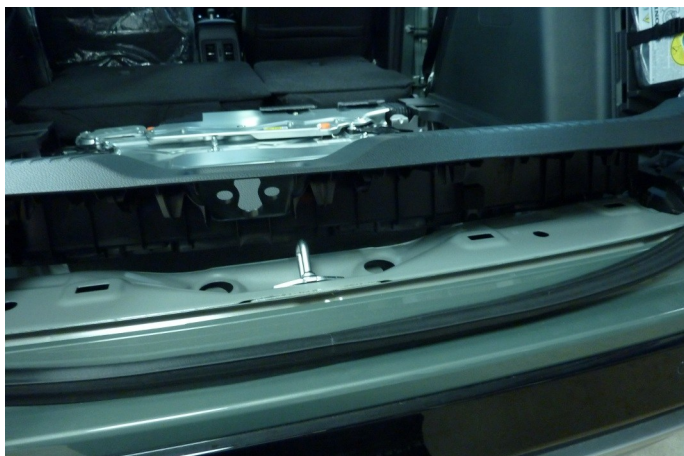


Remove the boot sill.



Remove the plastic trim at the rear door.

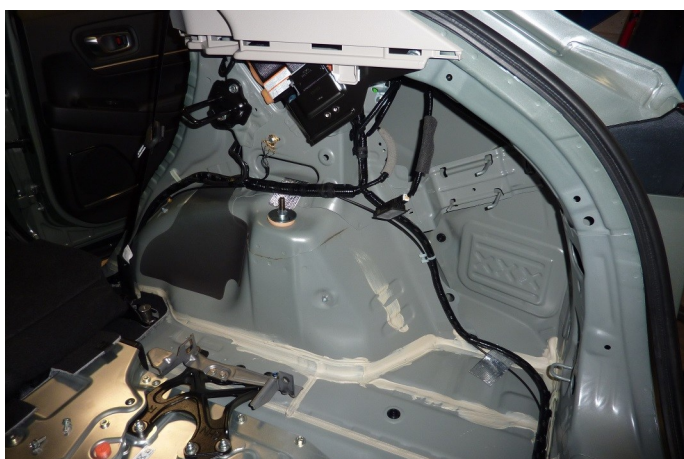

This then allows for the removal of the side panel.

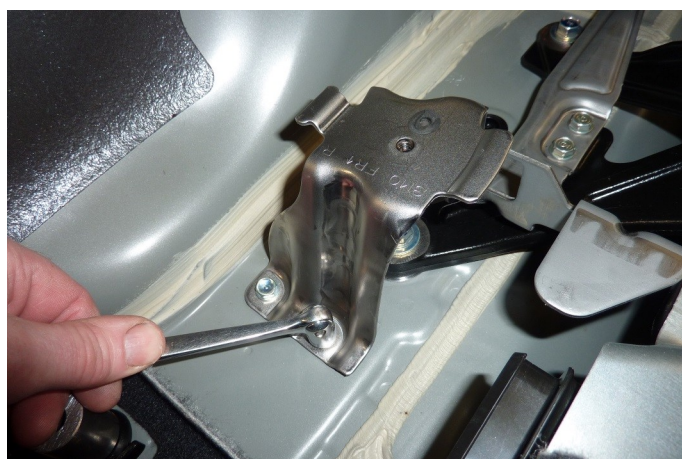


Remove this steel support bracket (10mm socket)



Remove the setscrew shown which secures the battery support bracket (12mm socket). This will be where the inner leg attaches.



Fitting Instructions					
Page 4					
Make	Honda	Model	HR-V	Derivative	MK III REV A

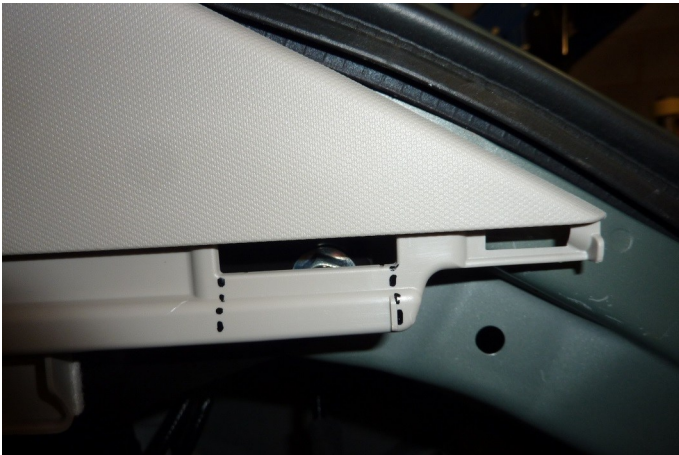


Remove a small portion of the upper side plastic to gain access for the upper leg fixing point.



Remove the setscrew in the position shown (14mm socket).



Whilst the side panel is off, run the power wire to the vehicles 12V battery which is located in the engine bay.

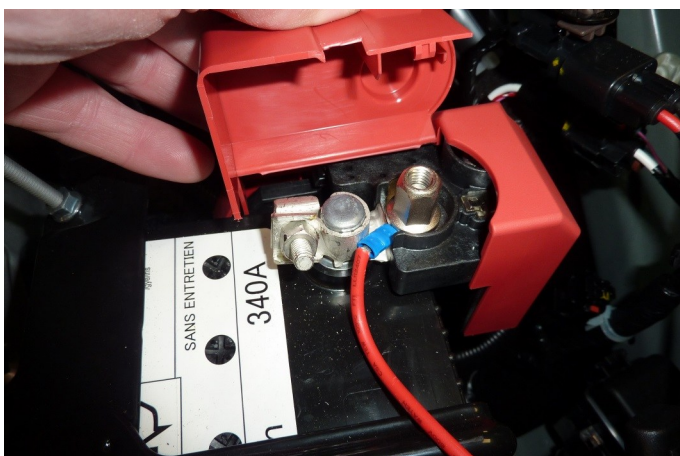

On the design vehicle, we routed the cable through the existing rubber sleeve in the bulkhead.

Fitting Instructions					
Page 5					
Make	Honda	Model	HR-V	Derivative	MK III REV A




There is a suitable chassis earth point behind the side panel in the boot as shown.



Attach the inner, outer and upper legs to the a-frame as shown.



Inner Leg:
2x M10x25mm Hex Head Set Screw
2x M10 Flat Washer

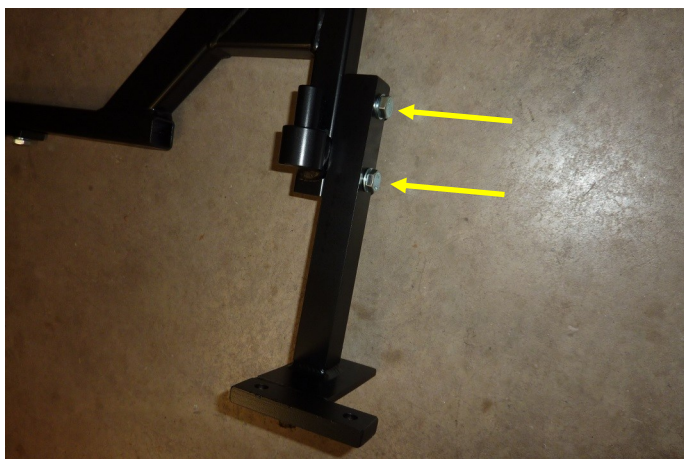

Outer Leg:
2x M10x45mm Hex Head Set Screw
2x M10 Flat Washer



Upper Leg:
2x M10x20mm Countersunk Set Screw

Fitting Instructions					
Page 6					
Make	Honda	Model	HR-V	Derivative	MK III REV A




Attach the inner leg pylon into the threaded hole shown. Ensure the heavy duty washer is used.





Temporarily place the a-frame into the vehicle and mark the 2 holes required for the outer leg. Remove the a-frame and drill these holes.

Ensure the use of a drill stop.


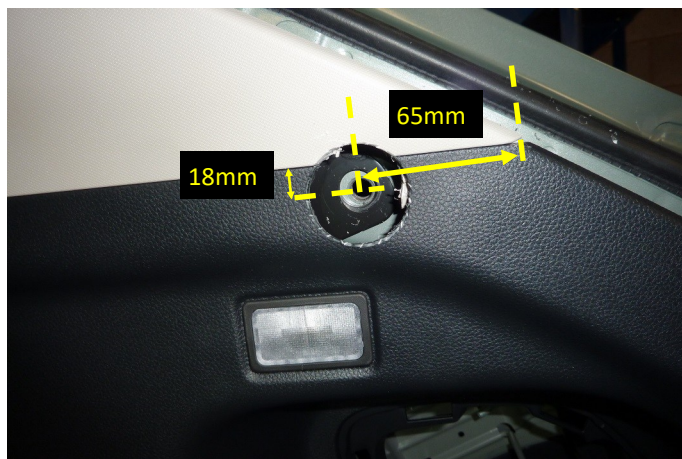


Replace the side panel and make the necessary cut outs. The position and approximate measurements for the upper leg is shown above.

Fitting Instructions					
Page 7					
Make	Honda	Model	HR-V	Derivative	MK III REV A

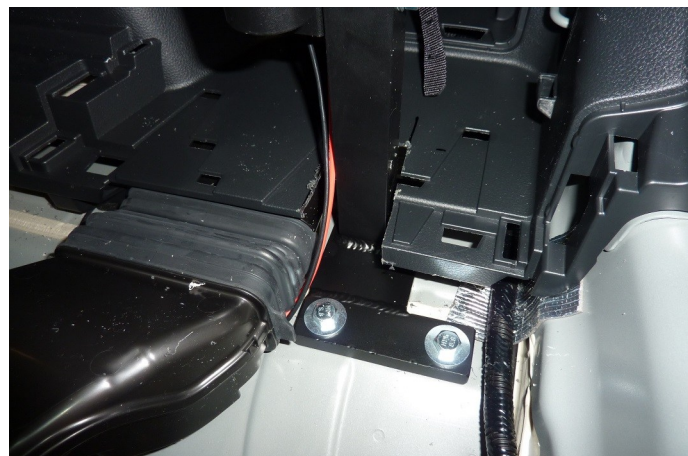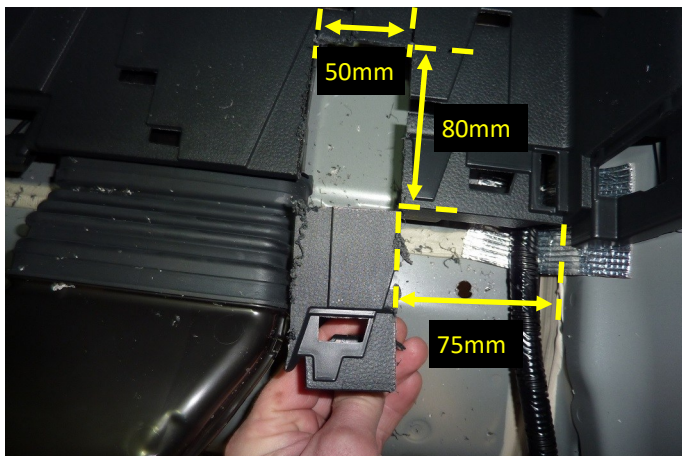

The position and approximate measurements for the cut out for the outer leg are shown above.

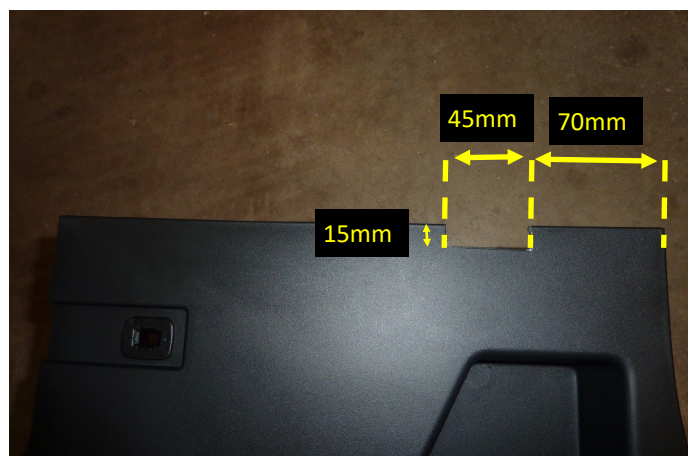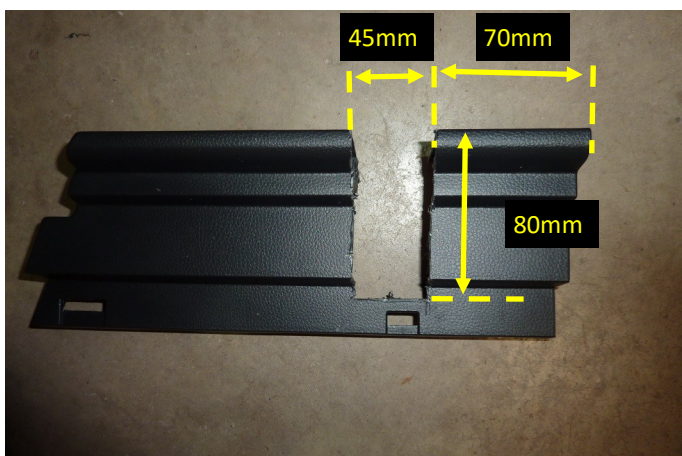

The inner side trim and the storage tray can also be cut as shown above to accommodate the outer leg.




The outer leg can be bolted through the vehicle floor using the underfloor spreader plate as shown. Apply an appropriate corrosion resistant sealant.

Fitting Instructions					
Page 8					
Make	Honda	Model	HR-V	Derivative	MK III REV A



Attach and tighten the upper and inner leg fixings too.

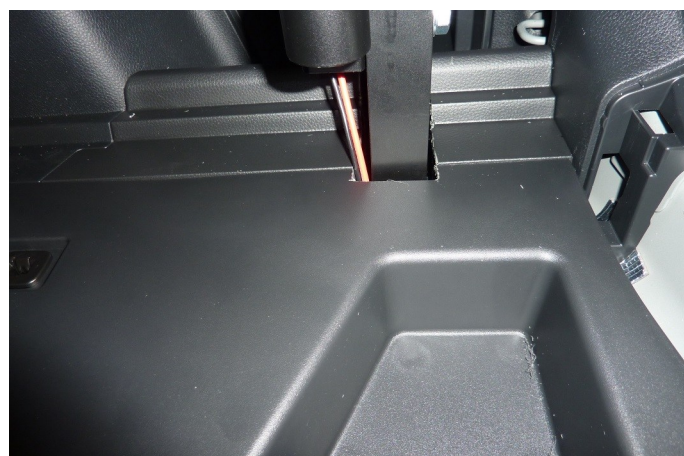

Use the pylon flange to make neat the cut hole for the upper fixing.


Reattach the cut trim and luggage compartment.



Fitting Instructions					
Page 9					
Make	Honda	Model	HR-V	Derivative	MK III REV A



Make a small cut in the boot floor to accept the inner leg as shown.

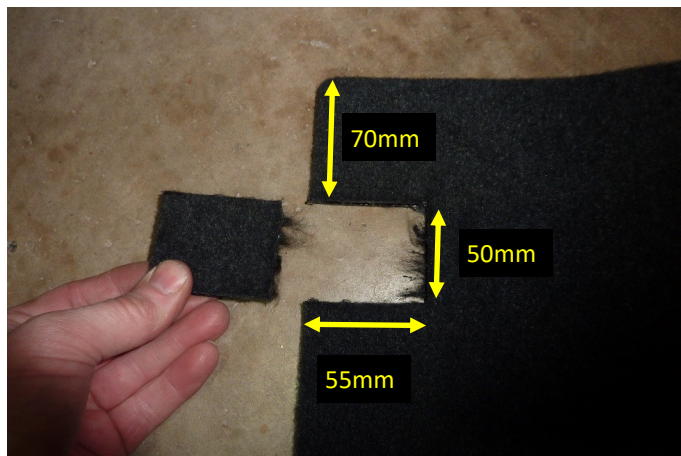

Make a small cut in the boot floor to accept the outer leg as shown.



The fitting instructions show the older style of a-frame. Please use the provided kit to mount the control box, restraint reel and restraint buckle in suitable locations.

Finish the assembly and setup of the hoist. Ensure it is wired in: Red to Yellow / Black to Green.



Fitting Instructions

Page 10

Make	Honda	Model	HR-V	Derivative	MK III	REV A
------	-------	-------	------	------------	--------	-------



Setup the hoist for the mobility device.

