

Fitting Instructions

Page 1

Make	Dacia	Model	Jogger	Derivative	MK I	REV A
-------------	-------	--------------	--------	-------------------	------	-------



Fitting Instructions					
Page 2					
Make	Dacia	Model	Jogger	Derivative	MK I REV A



Pre-installation pictures.



The rear (3rd row) seats unclip from hard points on the floor. These need to be removed.



Fold the carpet forward to reveal the vehicle floor.



Remove the boot sill plastic which is held in with plastic rivets.




Fitting Instructions

Page 3

Make	Dacia	Model	Jogger	Derivative	MK I	REV A
-------------	-------	--------------	--------	-------------------	------	-------



Remove the upper d-post plastics (all T20 torx screws).

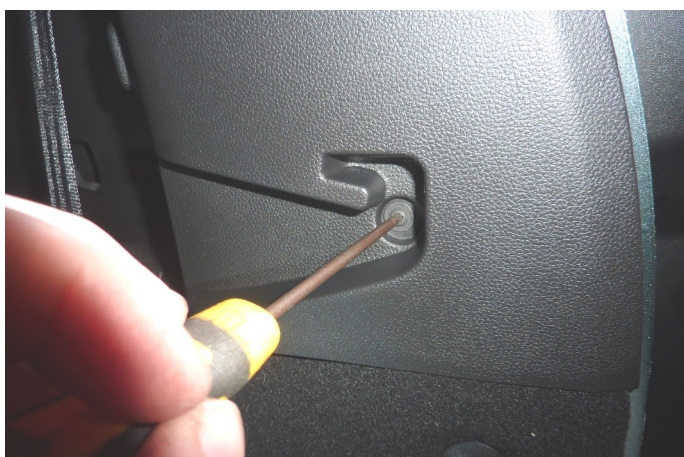

Fitting Instructions					
Page 4					
Make	Dacia	Model	Jogger	Derivative	MK I REV A



Attach the inner, outer and upper legs to the a-frame (use threadlock).



Outer leg:
Attach using 4x M10x20mm Countersunk Set Screw (10.9)



Inner leg:
Attach using 2x M10x20mm Countersunk Set Screw (10.9)



Upper leg:
Attach using 4x M10x20mm Countersunk Set Screw (10.9)

Fitting Instructions					
Page 5					
Make	Dacia	Model	Jogger	Derivative	MK I REV A




Place the a-frame (with attached legs) into the vehicle and mark a hole for the upper leg at a central point in the portion of the d-post.
Ensure a-frame is vertical.



Remove the frame and drill a 10mm clearance hole.
Ensure use of a drill stop.



Using the backplate shown, attach the upper leg fixing (hex with thread at both ends).

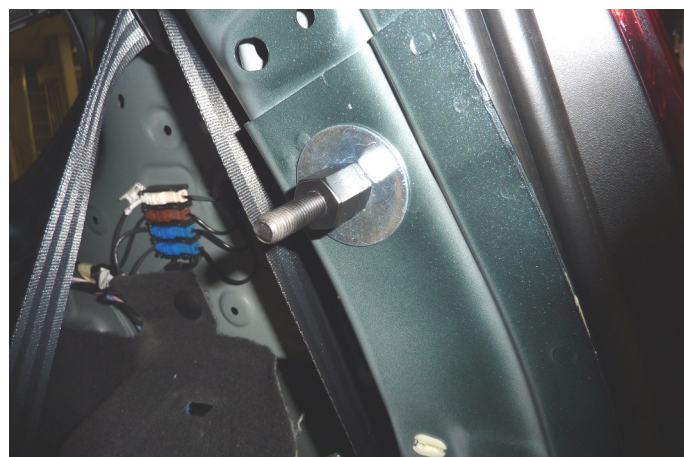

Use the washer as shown.



Drill the plastics in a suitable position to slot over the protruding thread.



Use a pylon flange to make good the hole.

Fitting Instructions					
Page 6					
Make	Dacia	Model	Jogger	Derivative	MK I REV A



The a-frame can then be attached at the upper leg and the holes for the inner and outer legs drilled through the vehicle floor (10mm clearance).




Attach the inner and outer legs using the M10x40mm hex head set screws and spreader plates. The ring/grub screw can be used to aid holding the screw in place inside the vehicle whilst tightening underneath the vehicle. Apply an appropriate corrosion resistant sealant.




Fitting Instructions					
Page 7					
Make	Dacia	Model	Jogger	Derivative	MK I REV A



Run a power cable to the supply shown in the engine bay

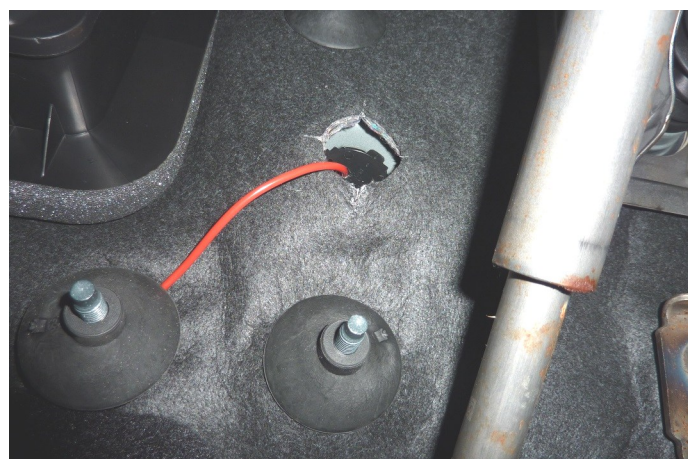


There is a suitable grommet at the drivers side through which the power wire can be routed.

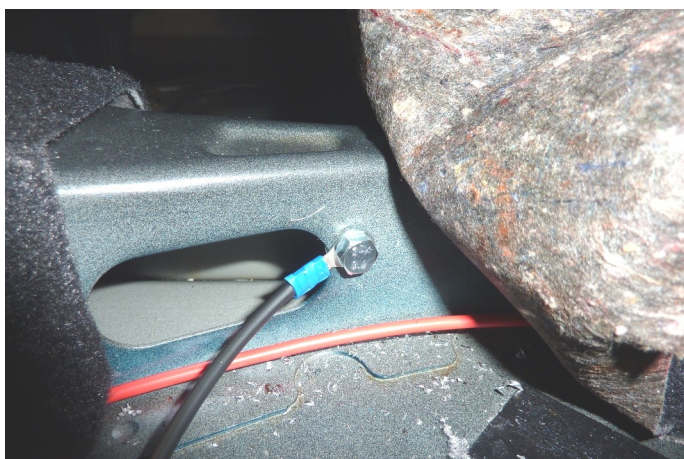

Use a suitable 'chassis' earth point for the black wire.

Fitting Instructions					
Page 8					
Make	Dacia	Model	Jogger	Derivative	MK I REV A

The fitting instructions show the older style of a-frame. Please use the provided kit to mount the control box, restraint reel and restraint buckle in suitable locations.

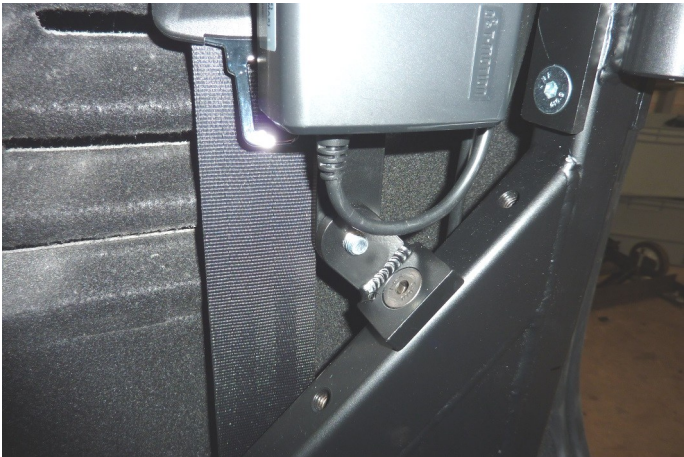

Finish the final installation of the hoist and complete the setup to work with the mobility device.