

Fitting Instructions						
Page 1						
Make	Hyundai	Model	Santa Fe	Derivative	MK V	REV A



Fitting Instructions					
Page 2					
Make	Hyundai	Model	Santa Fe	Derivative	MK V REV A



Pre-installation picture.



Remove the parcel shelf.



Lift up the false floor.



Remove the foam inserts containing the tyre inflation kit.



Remove the two hidden screw caps on both sides of the rear boot tray - these pop out.

Fitting Instructions					
Page 3					
Make	Hyundai	Model	Santa Fe	Derivative	MK V REV A



Unbolt both screws using a 10mm socket or screwdriver.





Fold the lid back down and the full tray will pull out.



Remove the d-pillar upper trim to gain access to the side trim fixings.

Fitting Instructions					
Page 4					
Make	Hyundai	Model	Santa Fe	Derivative	MK V REV A

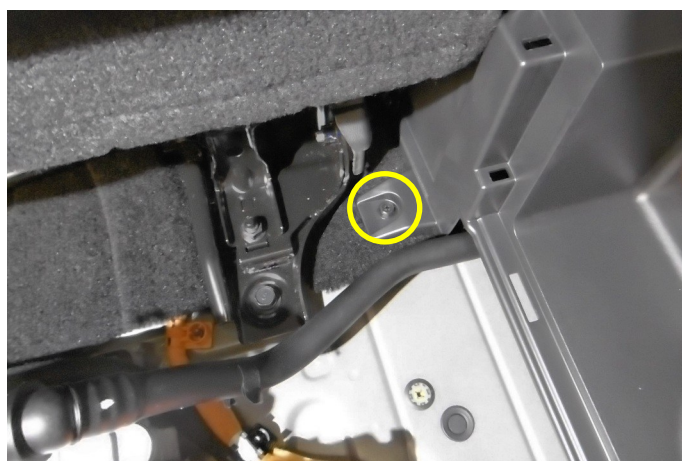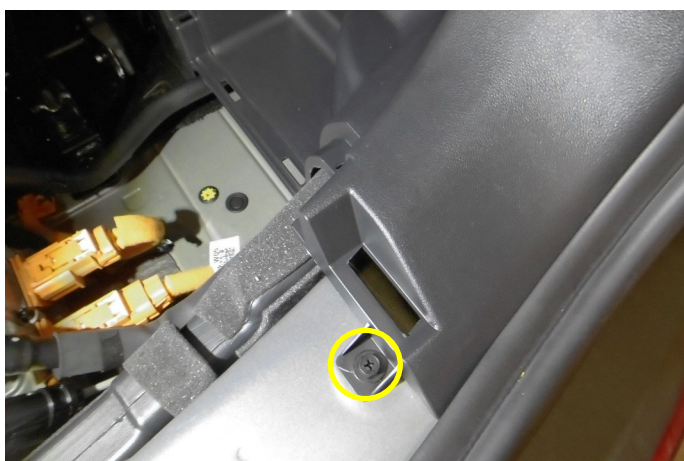

Remove the 4x side trim fixings using a 10mm socket or screwdriver to allow the plastics to flex out of the way.



The rear plastic trim can now be flexed away from the chassis.

Fitting Instructions					
Page 5					
Make	Hyundai	Model	Santa Fe	Derivative	MK V REV A





Remove the 7th seat side rear fixing using a 14mm spanner. This can be quite tight.



Cut out this section to allow the inner leg to sit within it.

Fitting Instructions					
Page 6					
Make	Hyundai	Model	Santa Fe	Derivative	MK V REV A

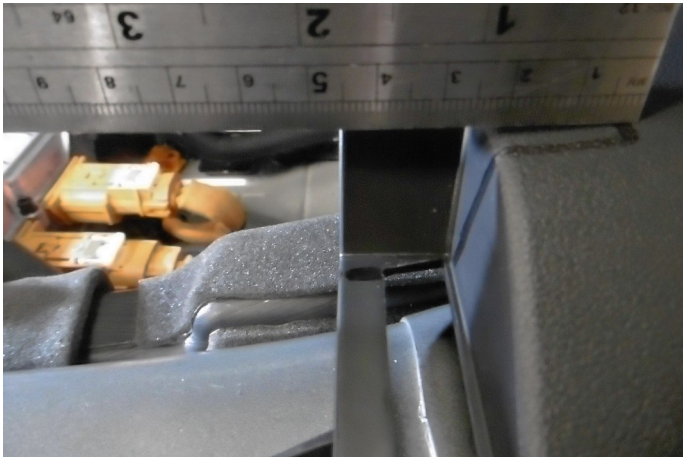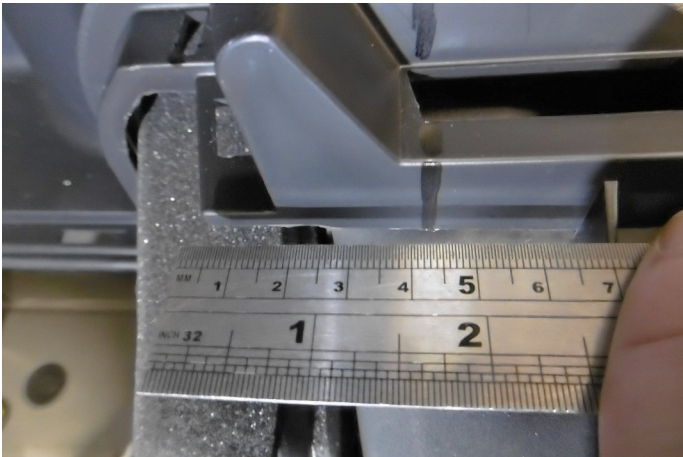

Cut this section from the sill end of the trim to allow the outer leg to sit against the chassis.




Using the measurements, make this cut to the side trim for the upper leg.

Fitting Instructions					
Page 7					
Make	Hyundai	Model	Santa Fe	Derivative	MK V REV A



Underneath the vehicle, remove the nut holding the exhaust heat shield. This will enable it to flex down.

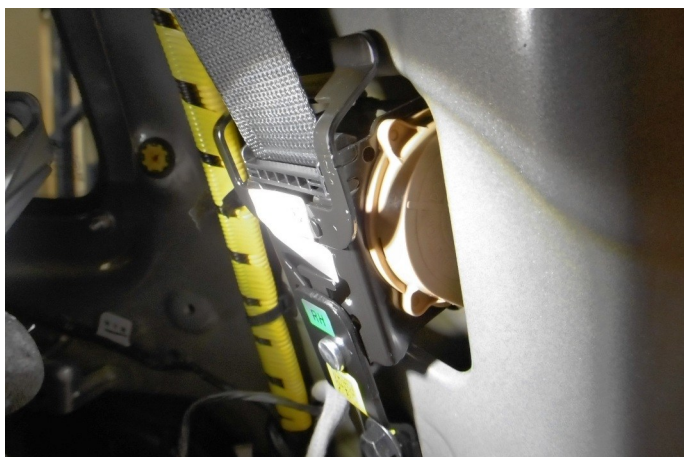


Temporarily remove the seat belt reel from the right hand side using a 14mm socket. This will allow you to gain access to the upper leg fixing.

Fitting Instructions

Page 8


Make	Hyundai	Model	Santa Fe	Derivative	MK V	REV A
-------------	---------	--------------	----------	-------------------	------	-------

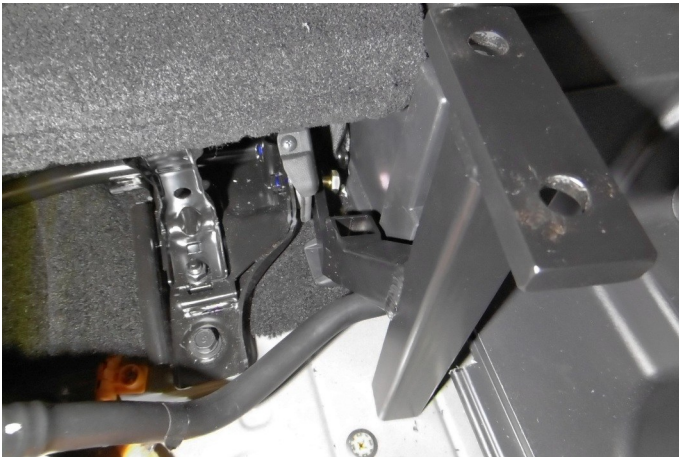

Attach the inner leg to the rear seat fixing before attaching the a-frame to the leg. This attaches using an M10 fine x30mm hex head set screw.



Loosely attach the a-frame to the inner leg (2x M10 countersunk set screws).

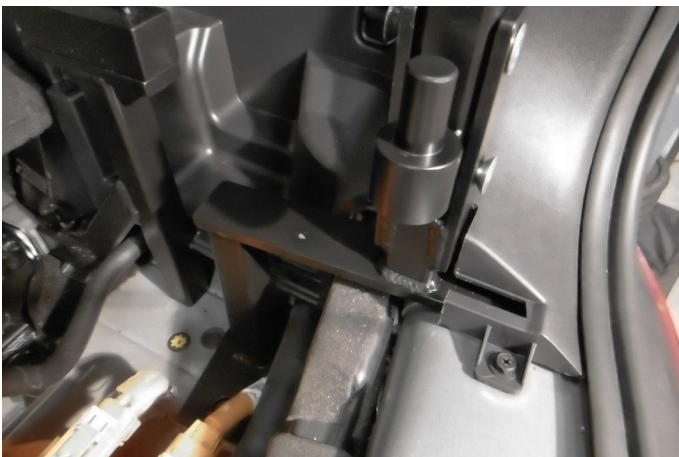


Place the outer leg onto the a-frame. Again, only loosely attach it (4x M10 countersunk set screws) and place in position.




Using an existing hole, attach the upper fixing so it is in the correct location. This can temporarily be held in place using the lower fixing.



Fitting Instructions					
Page 9					
Make	Hyundai	Model	Santa Fe	Derivative	MK V REV A

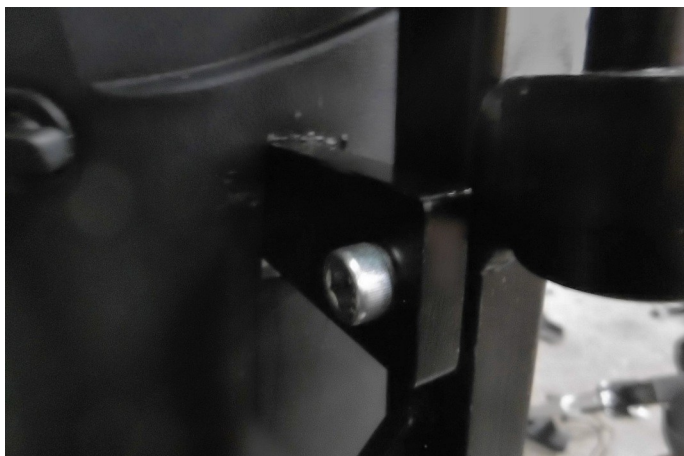

Attach the upper leg to the a-frame (M10x30mm caphead set screw).

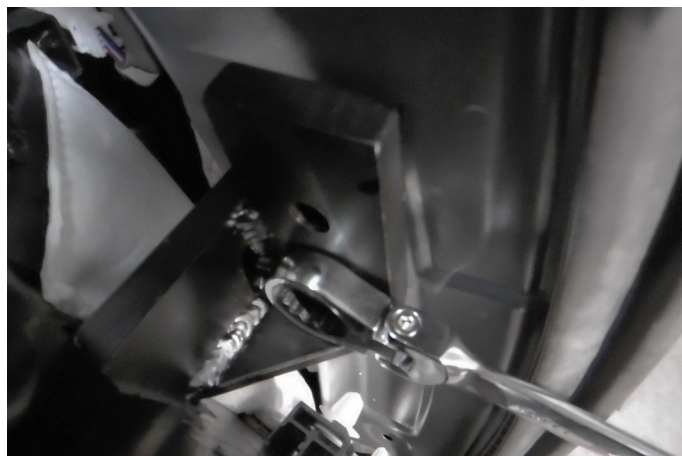



Tighten the upper leg tight to the vehicle then take the a-frame back out of the vehicle so the plastics can be flexed right back.




Using an 11mm drill bit, carefully make a witness mark through the top hole and remove the bracket so you can drill all the way through and not damage the backplate.




Fitting Instructions					
Page 10					
Make	Hyundai	Model	Santa Fe	Derivative	MK V REV A

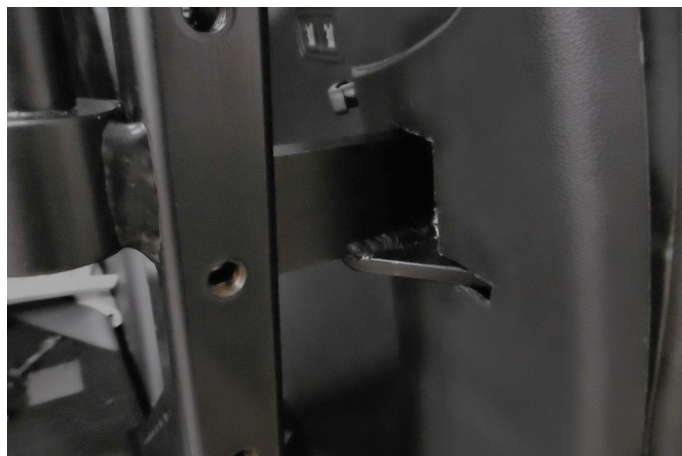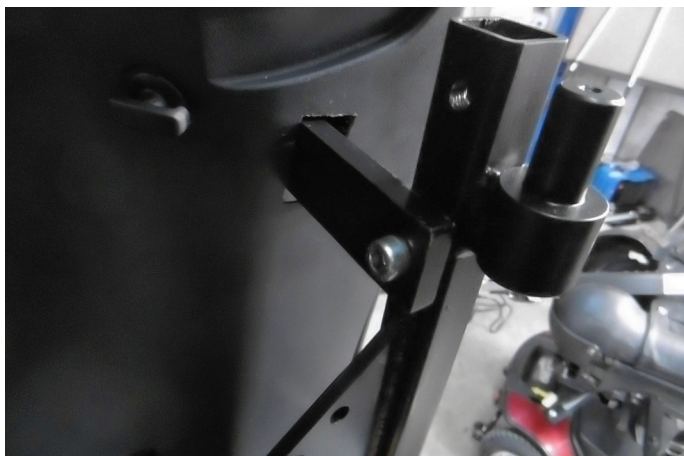

Fully attach the upper leg to the vehicle using the 2x M10x30mm hex head set screws and backplate. The plastics can then be fitted back into position and the a-frame attached to all the legs.

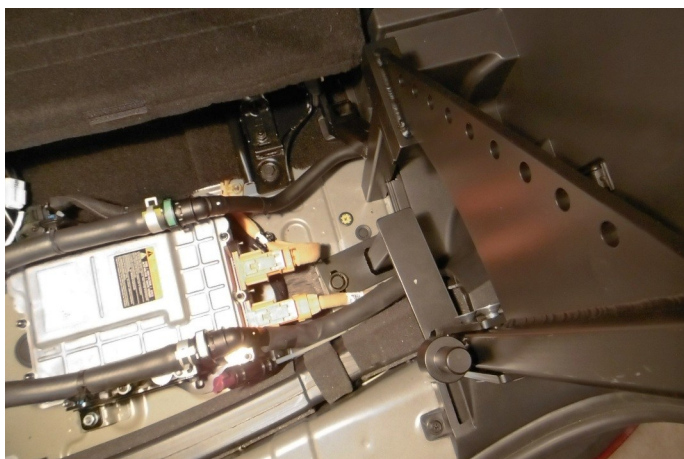

Once happy with the position of the outer leg, drill through the collar. Be extra careful of nearby cabling.

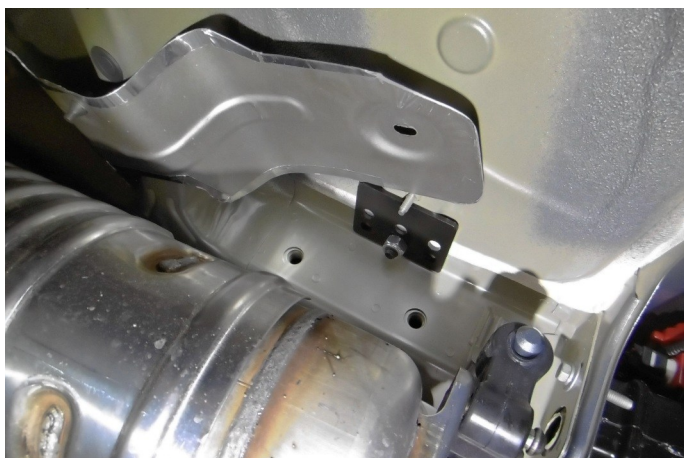

Use the 4mm spreader plates under the vehicle and apply an appropriate corrosion resistant sealant. The grub screw and ring can be used to assist in holding the hex head set screw in place inside the vehicle whilst tightening underneath. The heatshield can then be re-attached to cover the fixing.

Fitting Instructions					
Page 11					
Make	Hyundai	Model	Santa Fe	Derivative	MK V REV A




Ensure the a-frame is fully tightened onto all legs.



On the design vehicle, the battery was located in the boot near to the hoist.



The positive was fed up the side housing and attached to the positive terminal.

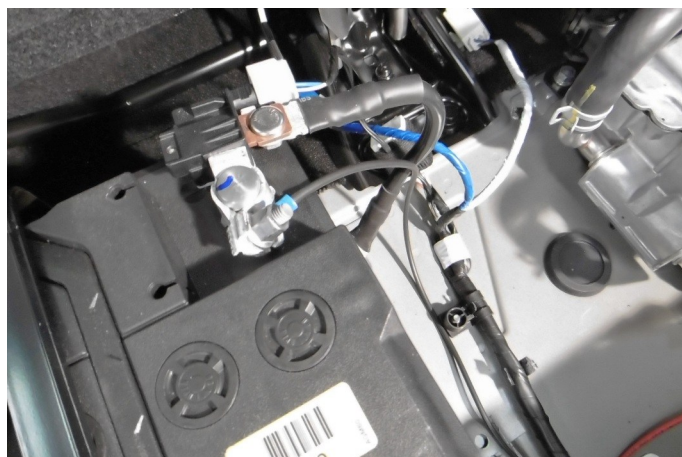

The earth was attached to the negative terminal of the battery.

Fitting Instructions					
Page 12					
Make	Hyundai	Model	Santa Fe	Derivative	MK V REV A





Make this cut to the rear sill and fit it back onto the vehicle.




Remove the shelf from the inner tub by simply pulling it away.



Fitting Instructions					
Page 13					
Make	Hyundai	Model	Santa Fe	Derivative	MK V
					REV A

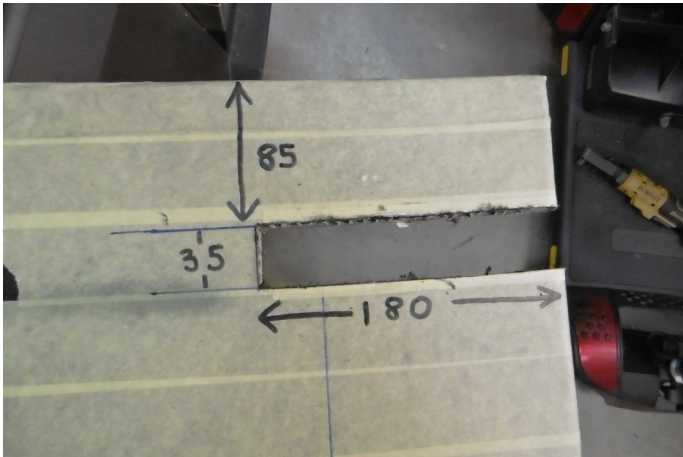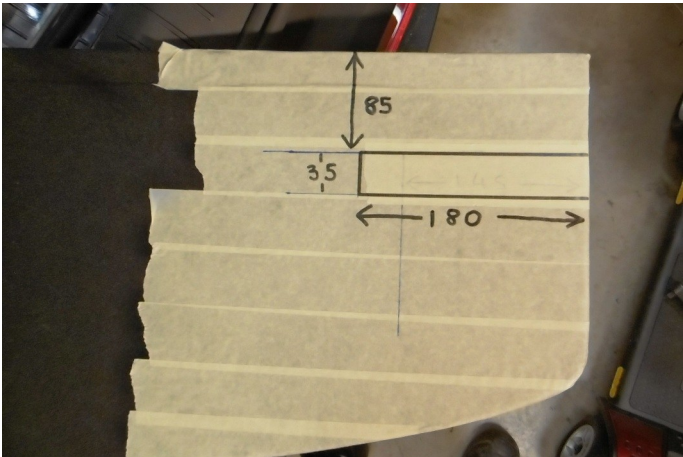

Make the following cuts to the shelf part.

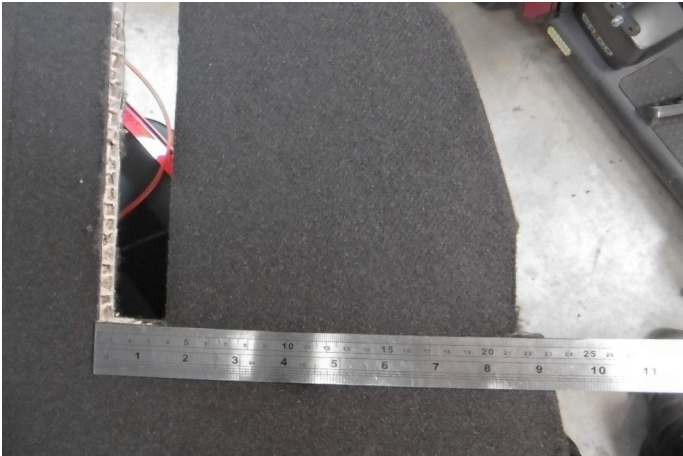

Make the following cuts to the shelf tray (more photos on next page).



Fitting Instructions					
Page 14					
Make	Hyundai	Model	Santa Fe	Derivative	MK V REV A



Fit the tray into the vehicle making sure to route your cables up next to the a-frame.

Fit the shelf component on top of the tray.



Using the kit provided, install the control box, restraint reel and restraint buckle in suitable locations. Ensure the positions do not interfere with the movement of the hoist. On the design vehicle, the above positions were used.

Ensure the setup of the hoist is complete and adjust to load the mobility device.

Fitting Instructions

Page 15

Make	Hyundai	Model	Santa Fe	Derivative	MK V	REV A
-------------	---------	--------------	----------	-------------------	------	-------

