

Fitting Instructions						
Page 1						
Make	Jaecoo	Model	7	Derivative	MK I	REV A



Fitting Instructions					
Page 2					
Make	Jaecoo	Model	7	Derivative	MK I REV A



Pre-installation pictures



Remove the false floor, spare wheel and polystyrene mouldings.



Remove sub-floor carpet.

Fitting Instructions						
Page 3						
Make	Jaecoo	Model	7	Derivative	MK I	REV A



Remove the plastic boot sill. This is held in place by two plastic rivets and posidriv screws which will need removing before pulling the sill away from the vehicle.



Fitting Instructions					
Page 4					
Make	Jaecoo	Model	7	Derivative	MK I REV A

Remove and unclip the side panel. Note: the panel does not require complete removal, it can be flexed out of the way for a-frame positioning.



Remove the loop (posidriv screwdriver).



Remove the other three screws holding the trim into the boot floor (posidriv screwdriver).




Fitting Instructions						
Page 5						
Make	Jaecoo	Model	7	Derivative	MK I	REV A



Attach the inner, outer and upper legs to the a-frame.




Inner Leg:
2 x M10x20mm Countersunk Set Screw

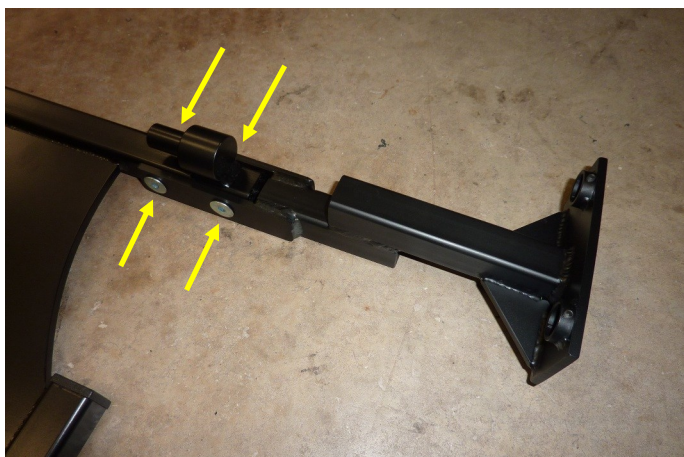

Outer Leg:
4 x M10x20mm Countersunk Set Screw



Upper Leg:
2 x M10x20mm Countersunk Set Screw

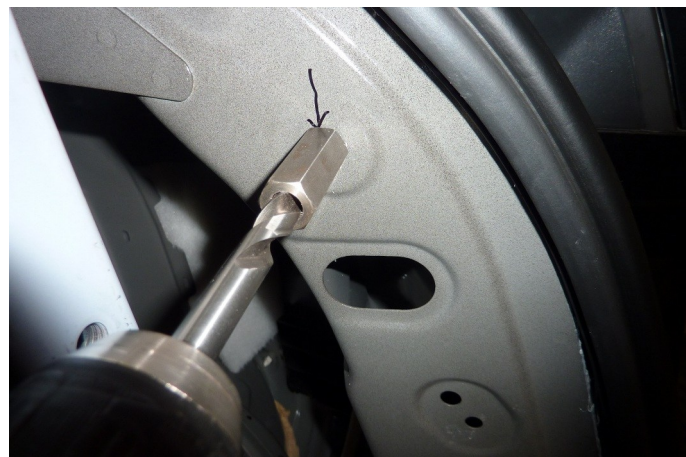

Identify the pre-existing hole shown in the d-pillar and drill out to 10mm.

Ensure the use of a drill stop.

Fitting Instructions						
Page 6						
Make	Jaecoo	Model	7	Derivative	MK I	REV A



Position the backplate behind the hole as shown.



Loosely attach the upper leg bracket to the backplate.



Place the a-frame in the vehicle, ensure it is vertical in the x and y planes and mark and drill the other upper leg bracket fixing point. **Ensure the use of a drill stop.**

Fitting Instructions						
Page 7						
Make	Jaecoo	Model	7	Derivative	MK I	REV A



The upper bracket will fit as shown using the other backplate provided.



A suitable chassis earth can be found behind the side panel.



Cut off the plastic fixing from the side panel which went into the hole now used to attach the bracket.



Trim the excess wire from the backplate and ensure no sharp edges are left.



Remove the a-frame and replace the side panel by drilling a clearance hole. Use a plastic pylon flange to cover the hole neatly.


Fitting Instructions						
Page 8						
Make	Jaecoo	Model	7	Derivative	MK I	REV A



Reattach the a-frame to the vehicle at the upper leg.




Drill the floor for the inner and outer legs and attach through the vehicle floor.

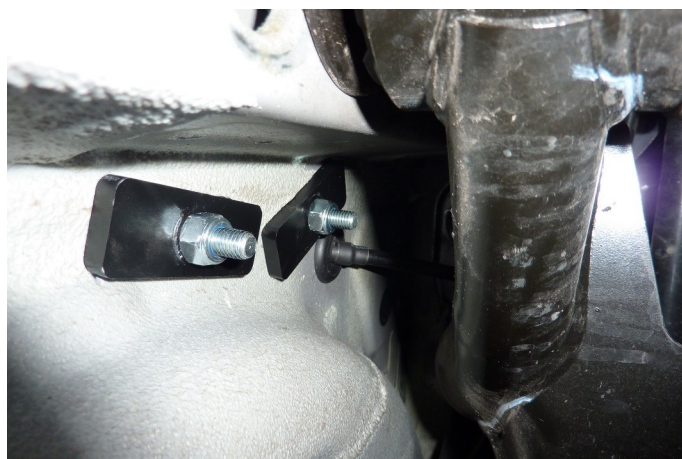


Attach the inner and outer legs using the relevant backplates under the vehicle. Apply an appropriate corrosion resistant sealant. The grub screw and ring can be used to assist in holding the hex head set screw in place inside the vehicle whilst tightening underneath.

Fitting Instructions						
Page 9						
Make	Jaecoo	Model	7	Derivative	MK I	REV A

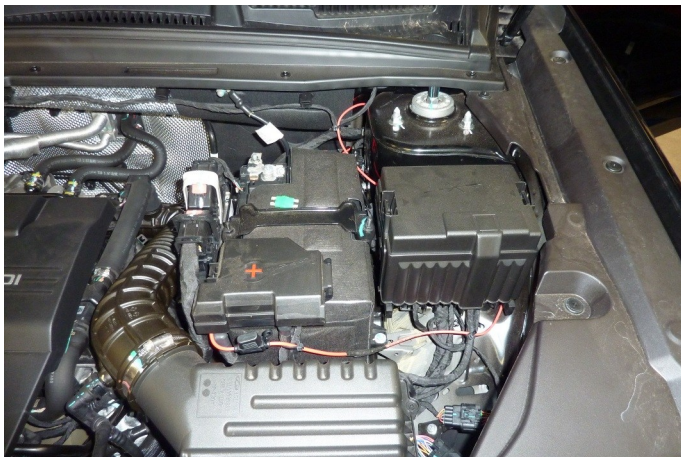

Run the power cable to the vehicle battery. On the design vehicle this was located in the engine bay.

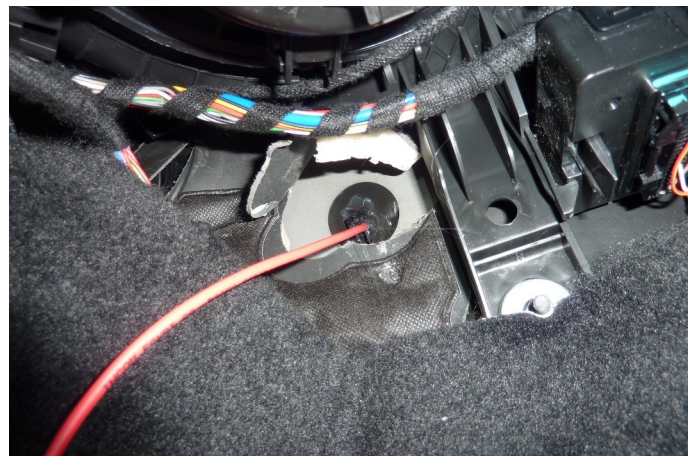


There is a soft aluminium cover plate behind the panel shown at the passenger side bulkhead area which can be used to run the cable through.

Ensure the wire is protected from sharp edges using loom tape and then use silicon or hot melt to secure and seal the wire.




Re-fit the subfloor carpet, making small cuts as shown.

Fitting Instructions						
Page 10						
Make	Jaecoo	Model	7	Derivative	MK I	REV A

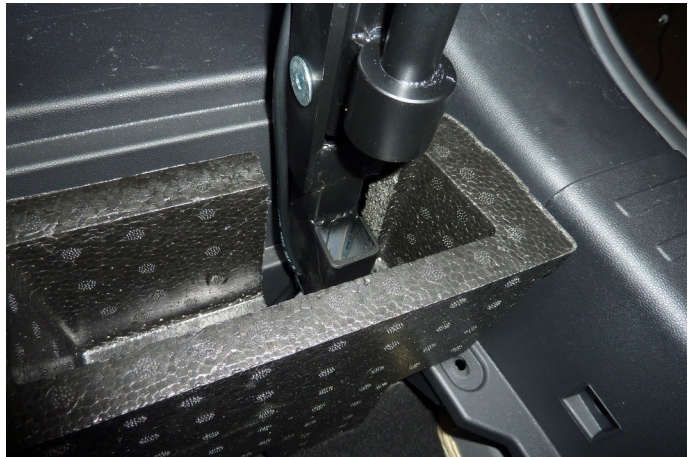

Re-fit the polystyrene sub-tray with appropriate cut outs for the inner and outer legs.

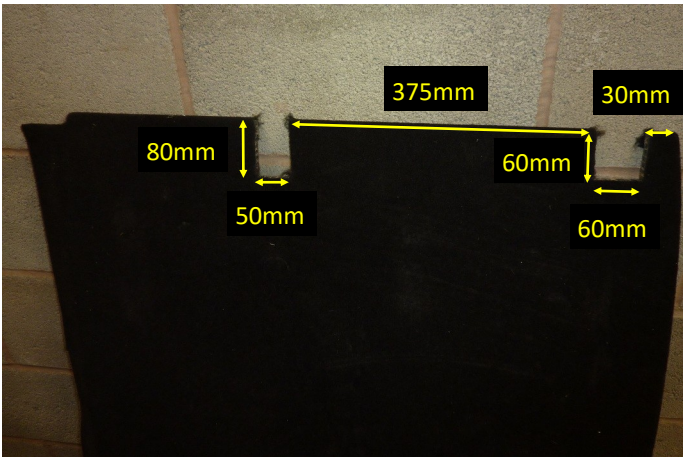

Use the above measurements as approximate guidance for cutting the false floor and then re-fit to the vehicle.



Fitting Instructions						
Page 11						
Make	Jaecoo	Model	7	Derivative	MK I	REV A



Ensure the control box, restraint reel and restraint buckle are all mounted in suitable positions for the operation of the hoist. The photographs show the positions on the design vehicle.



Complete the installation of the hoist and check it's operation.

Fitting Instructions						
Page 12						
Make	Jaecoo	Model	7	Derivative	MK I	REV A



Complete the setup of the hoist to suit the chosen mobility device.

