

Fitting Instructions					
Page 1					
Make	Ford	Model	Tourneo Courier	Derivative	MK II REV A




Fitting Instructions					
Page 2					
Make	Ford	Model	Tourneo Courier	Derivative	MK II REV A



Pre-installation picture.




Remove the parcel shelf.

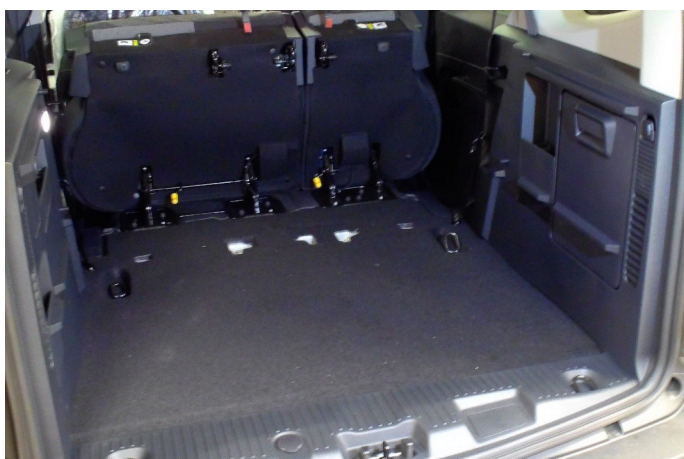


Tilt the second row seats forward to give more room for the installation.



Remove the rear boot sill.

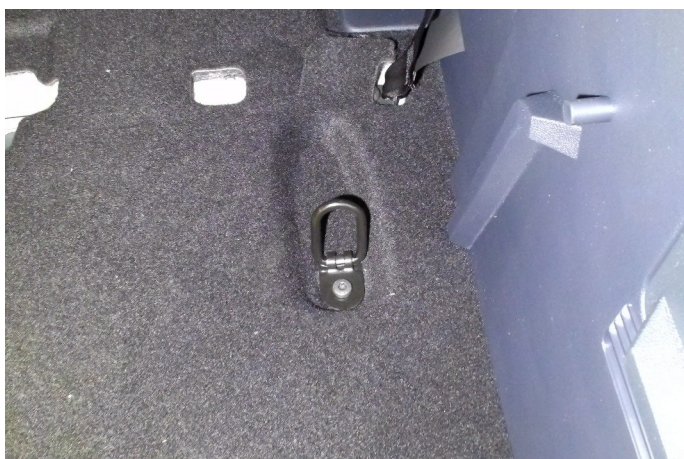

Locate the luggage restraint loop behind the right hand side seat

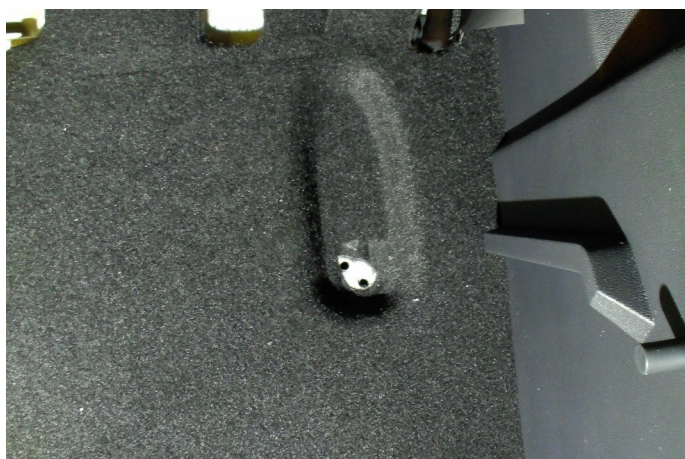

Remove the luggage restraint.

Fitting Instructions					
Page 3					
Make	Ford	Model	Tourneo Courier	Derivative	MK II REV A



Locate the luggage restraint where the rear sill is.




Remove the luggage restraint.




Remove the side trim to allow for easy installation and to gain access to the d-post.


Fitting Instructions					
Page 4					
Make	Ford	Model	Tourneo Courier	Derivative	MK II REV A

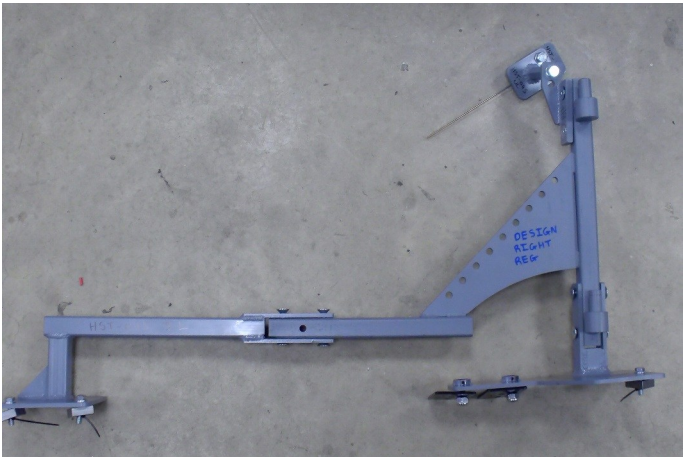

Attach the legs to the a-frame.

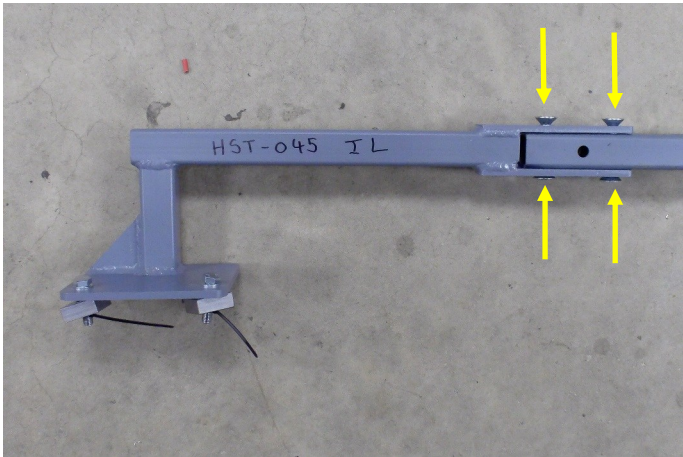


Inner Leg:
4 x M10x20mm Countersunk Set Screws

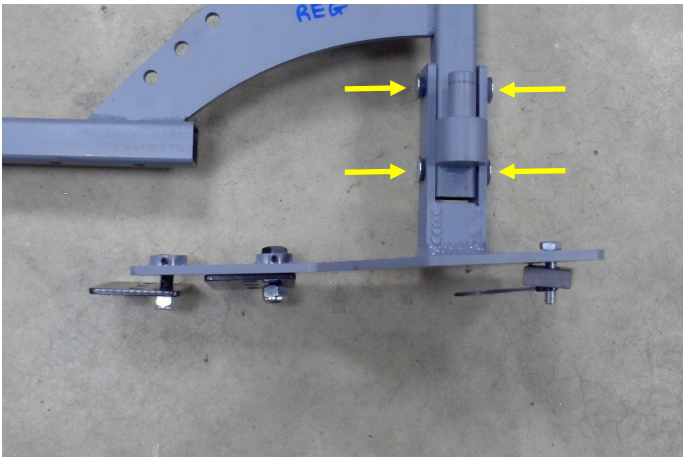


Outer Leg:
4 x M10x20mm Countersunk Set Screws



Upper Leg:
2 x M10x20mm Countersunk Set Screws

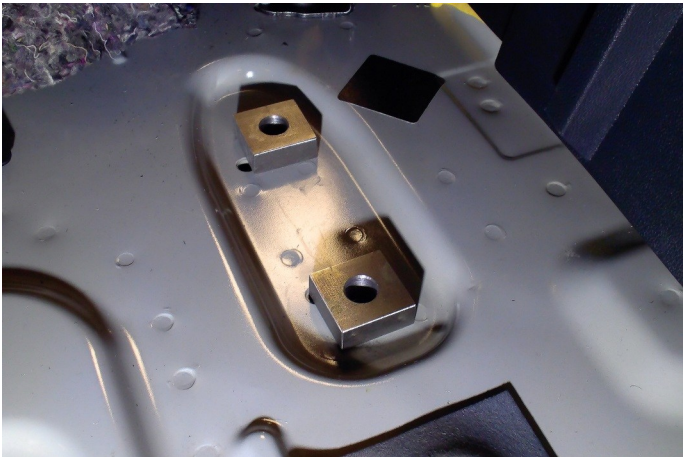

Place the two 12mm spacers over the restraint point behind the right hand side seat as shown.

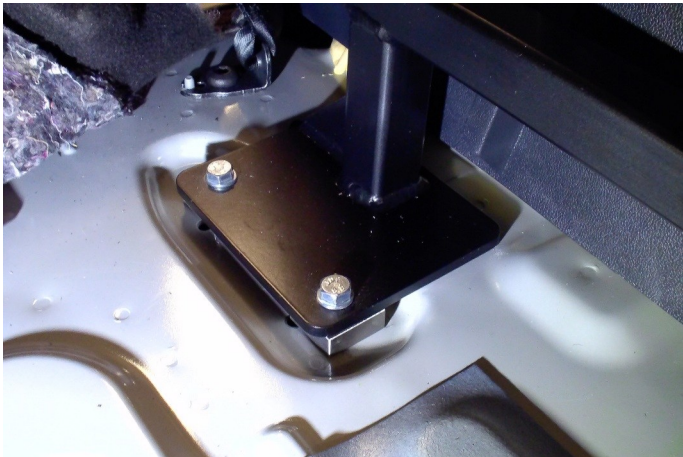

Attach the inner leg using the M8 set screws and washers provided.


Fitting Instructions					
Page 5					
Make	Ford	Model	Tourneo Courier	Derivative	MK II REV A



Place the 12mm spacer over the outer restraint point for the outer leg.



Attach the outer leg with the supplied using the M8 set screw and washer provided through one fixing.

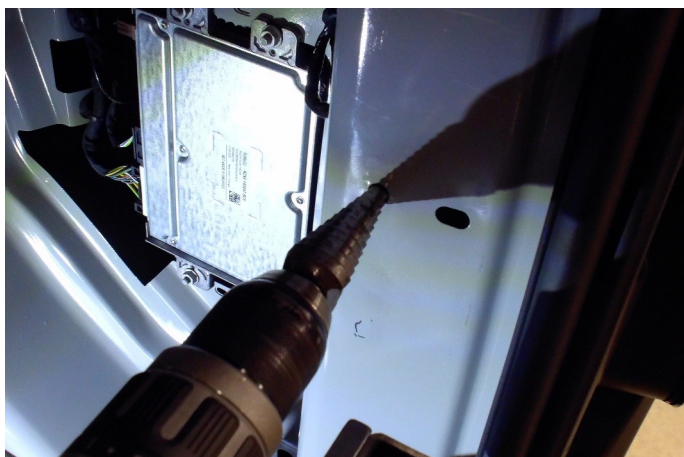


Open the hole and slot on the d-post out to 11mm as shown for the upper bracket. A conical drill will make opening these holes out easy.



Attach the upper leg with the provided back plate into the vehicle. The backplate will easily slot up through the side opening.




Fitting Instructions					
Page 6					
Make	Ford	Model	Tourneo Courier	Derivative	MK II REV A

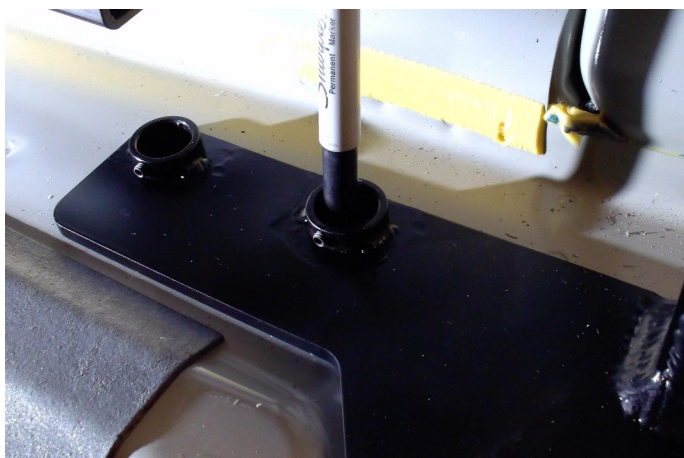

Once happy everything is in the correct position, mark the two holes on the outer leg through the ring section.




Remove the a-frame to allow you to open up the holes to 11mm.

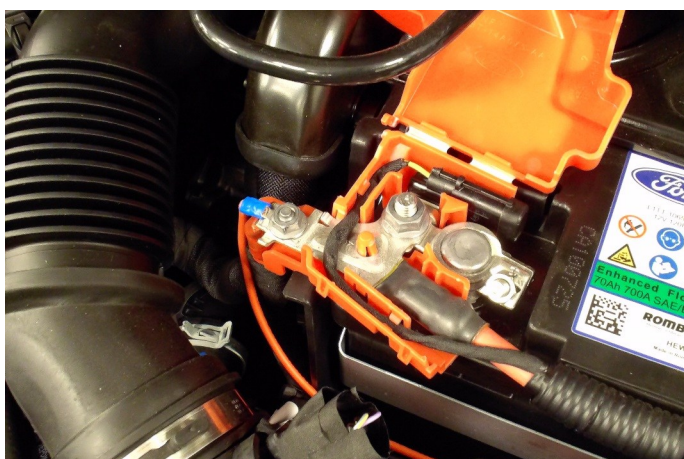

Before re-fitting the plastic trim, run the cables for the earth and 12V feed. On the design vehicle, the battery was located on the passenger side of the engine bay,



Attach the inline fuse and route the cable into the vehicle. There is a grommet behind the passenger glove box which can be used. Be careful as there is a large wiring loom going through the grommet.

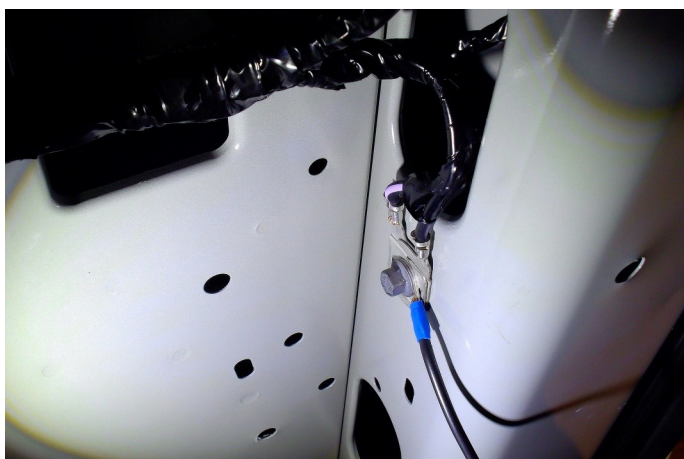


Find a suitable earth point, there were some near the upper bracket on the design vehicle.


Fitting Instructions					
Page 7					
Make	Ford	Model	Tourneo Courier	Derivative	MK II REV A



Remove the fixing lug from the side trim as the upper bracket is now using this point.

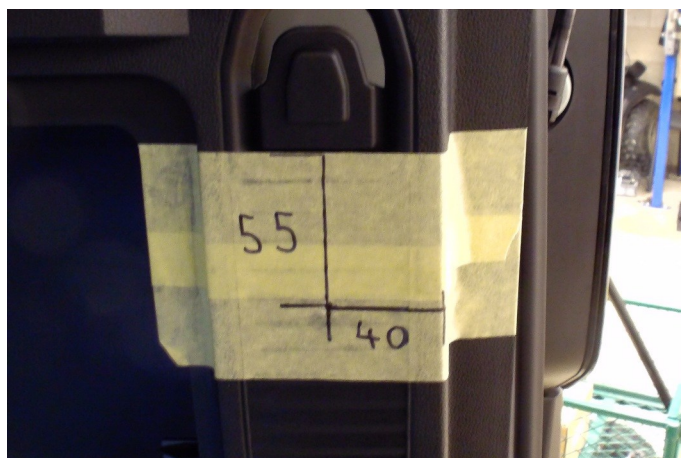

Use the following dimensions as a guide for drilling a hole to allow the upper leg pylon to protrude.

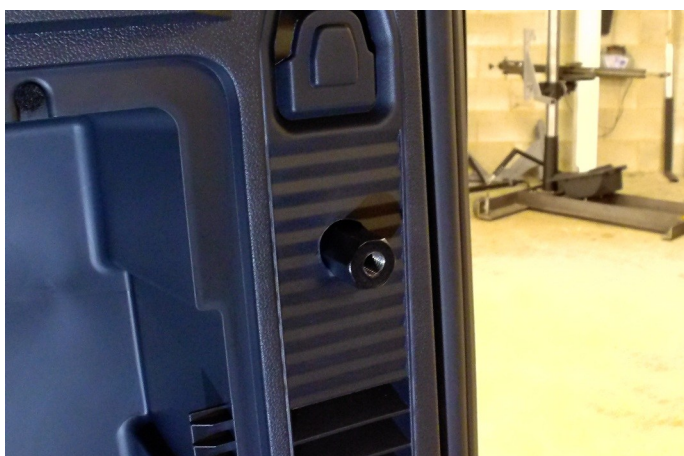

Re-fit the side trim. A pylon flange can be used if you need to neaten the hole.



Attach the a-frame to the vehicle and secure all fixings.




The outer leg M10 set screws are attached through the vehicle using the backplates and M10 nylocs provided. The grub screw and ring can be used to assist in holding the hex head set screw in place inside the vehicle whilst tightening underneath. Apply an appropriate corrosion resistant sealant.

Fitting Instructions					
Page 8					
Make	Ford	Model	Tourneo Courier	Derivative	MK II REV A




The carpet within the car can now be put back into place. Make an incision in the carpet to allow for the inner leg.

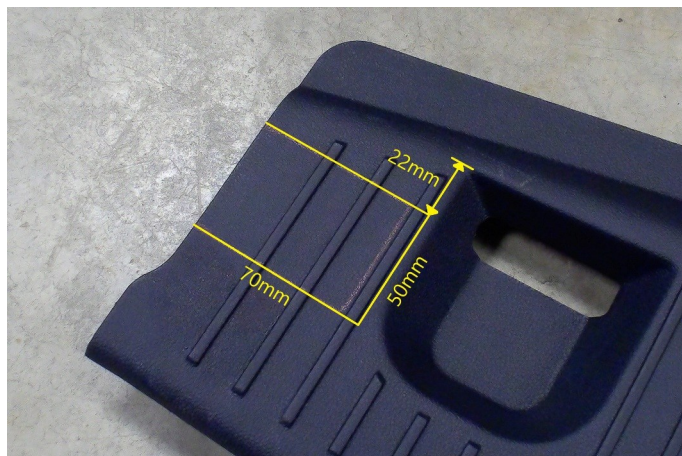

Using the measurements as guidance, make a cut to the rear sill.




Cut out the section shown for the outer leg.

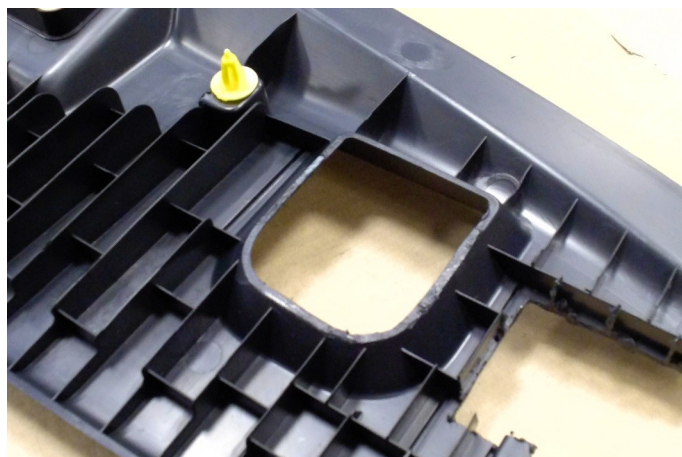

Once both cuts are made, refit the rear sill.



Fitting Instructions					
Page 9					
Make	Ford	Model	Tourneo Courier	Derivative	MK II REV A

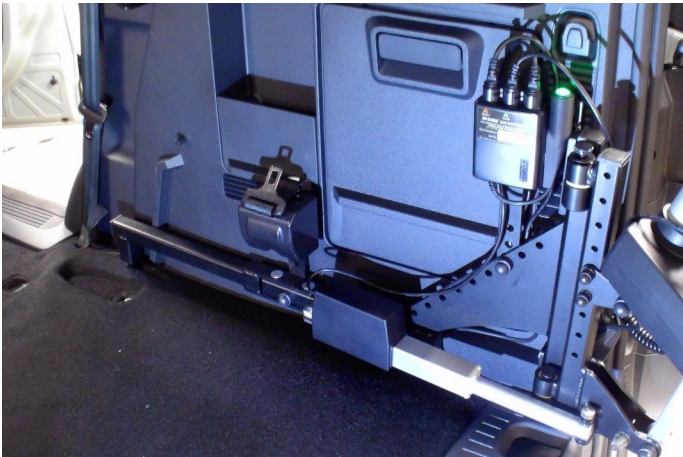

Finish the installation of the hoist and ensure the control box and restraint are in a suitable position.



Setup the hoist for the mobility device.

