

Boot Hoist Fitting Instructions

Make	MG	Model	HS	Derivative	MK II	REV B
------	----	-------	----	------------	-------	-------

Page 1

The fitting instructions are completed from the initial design in an ICE variant vehicle. This hoist will also fit in a HEV variant but please note the boot space make look different due to the batteries. The battery is located in the boot on the HEV and the cuts to the trim may be different.



Pre-installation photograph.




Remove the parcel shelf.



Remove the false floor panel.



Remove the foam insert.

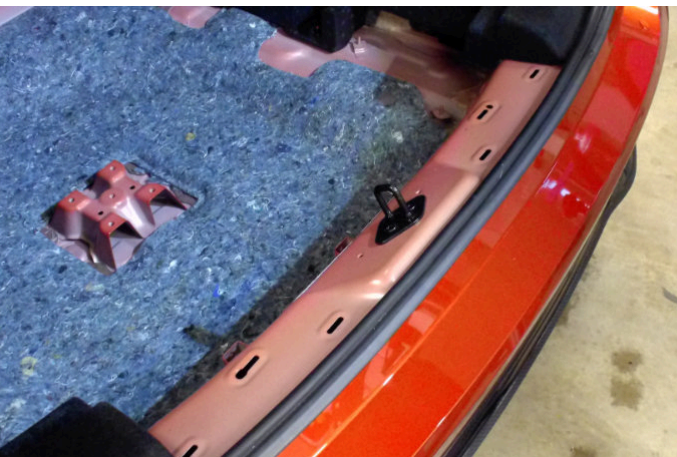

Remove the boot sill trim.



Partially detach the rear quarter panel.

Boot Hoist Fitting Instructions

Make	MG	Model	HS	Derivative	MK II	REV B
------	----	-------	----	------------	-------	-------

Page 2




Remove the retainer clips.



Pull the trim towards the rear passenger door to remove it entirely.



Remove the quarter panel trim.

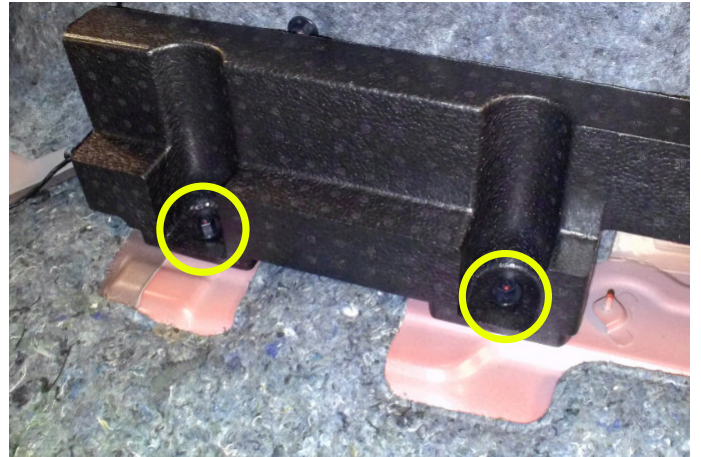

Unscrew the two retainers holding the side foam section and remove it from the vehicle.




The side quarter should now be open up so you can begin installing the α -frame.


Boot Hoist Fitting Instructions

Make	MG	Model	HS	Derivative	MK II	REV B
------	----	-------	----	------------	-------	-------


Page 3

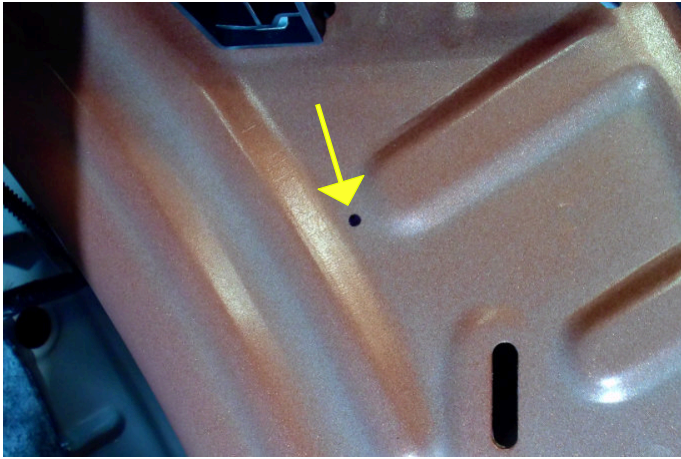


Mark out a point on the d-post where shown. The point should be central with the horizontal ridge and centred between the horizontal and vertical ridge.

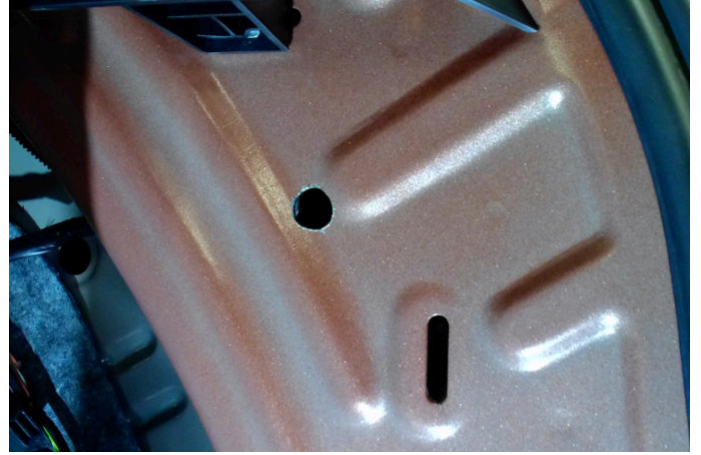

Drill an 11mm hole in the location just marked.

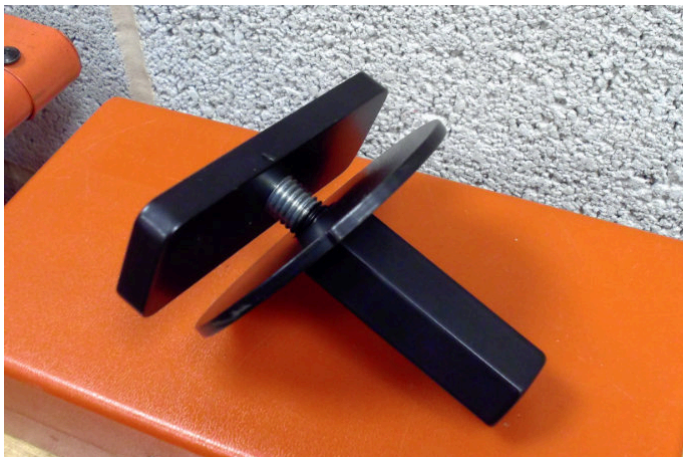

This is the assembly setup for the upper leg fixing.

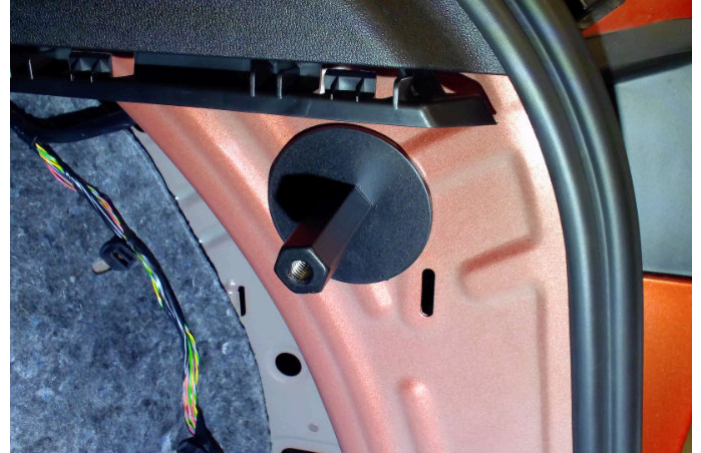

Attach the pylon through the hole along with the large washer. There is a large gap behind the d-post which you can comfortably fit your hand in and place the backing plate.



Locate the hole that is on the cross brace behind the rear right hand seat.



This is the assembly setup for the inner leg fixing.

Boot Hoist Fitting Instructions

Make	MG	Model	HS	Derivative	MK II	REV B
------	----	-------	----	------------	-------	-------

Page 4




Feed the backing plate on the welded rod through the gap underneath and position it behind the hole. Secure the pylon onto the backing plate with the M10 heavy duty washer and fully tighten.



At this point, run the power. On the design vehicle (ICE), the battery was located in the engine bay. On a hybrid variant the battery is in the boot.



Attach the inline fuse onto the positive terminal of the battery as shown.

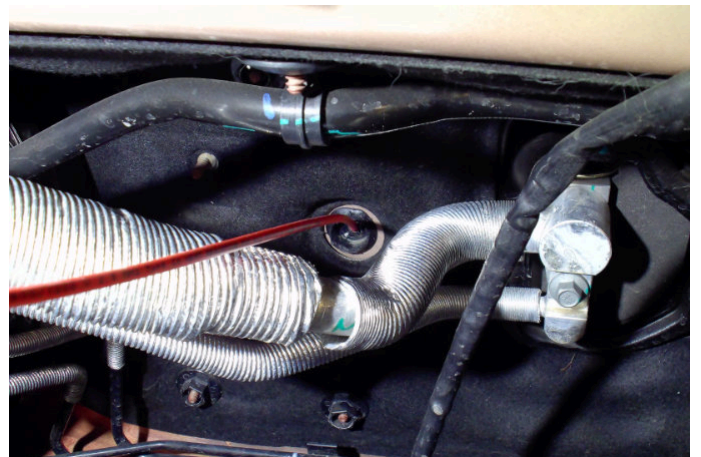

There is a grommet just behind the engine on the driver side which can be used to feed the power cable through the bulkhead into the drivers footwell.



Just above the wheel arch in the boot is a suitable earthing point to connect to.




Place the side foam back into the vehicle.

Boot Hoist Fitting Instructions

Make	MG	Model	HS	Derivative	MK II	REV B
------	----	-------	----	------------	-------	-------

Page 5

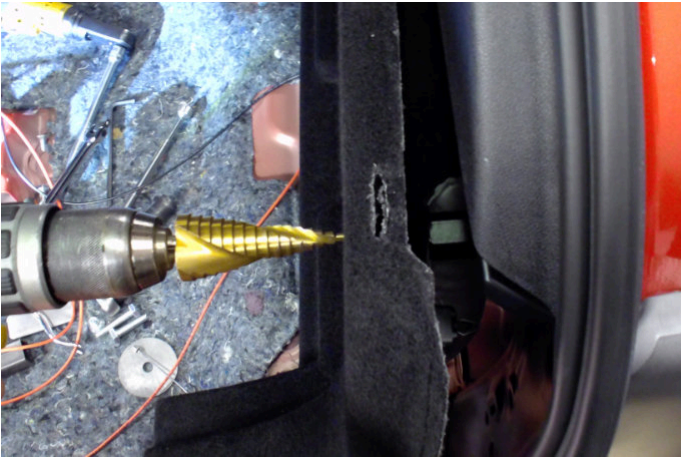

Re-fit the quarter panel and make a suitable hole for the pylon to protrude through.




Once the quarter panel is back in the vehicle completely, the pylon should stick out around 5mm.



Assemble the a-frame ready to be fit into the vehicle.



Inner Leg:
4x M10x20mm Countersunk Set Screws

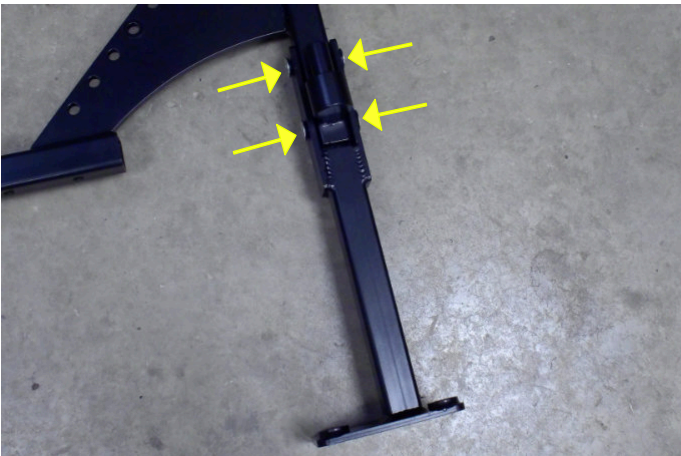

Outer Leg:
2x M10x20mm Countersunk Set Screws




Upper Leg:
2x M10x20mm Countersunk Set Screws

Boot Hoist Fitting Instructions

Make	MG	Model	HS	Derivative	MK II	REV B
------	----	-------	----	------------	-------	-------


Page 6

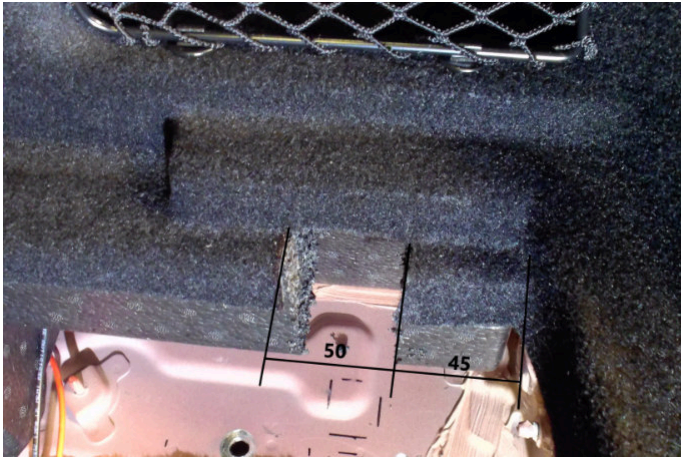

Cut the quarter panel to allow the a-frame to fit in. The cuts were easy to make with a hack saw.



Cut the quarter panel just behind the rear seat.

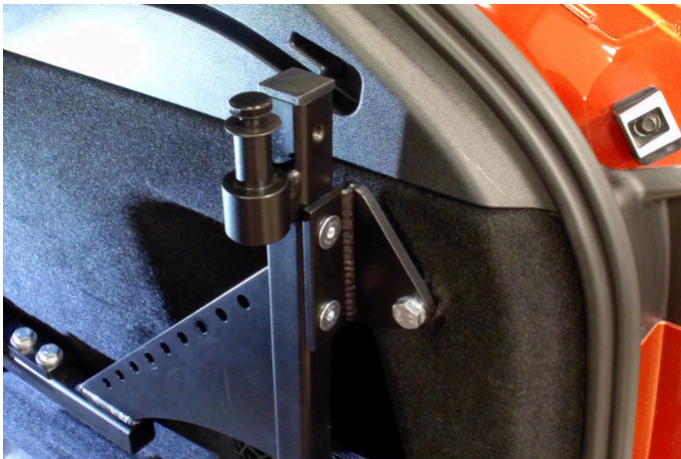

Attach the a-frame onto the upper pylon. It is best to just loosely fit the set screw to give movement on the inner leg.



Attach the inner leg onto the pylon with the M10 set screw and washer. A 17mm socket could easily fit through to tighten the set screw.



Once the inner leg fixing is tight, tighten the upper leg fixing.




Make sure the a-frame is level.

Boot Hoist Fitting Instructions

Make	MG	Model	HS	Derivative	MK II	REV B
------	----	-------	----	------------	-------	-------


Page 7

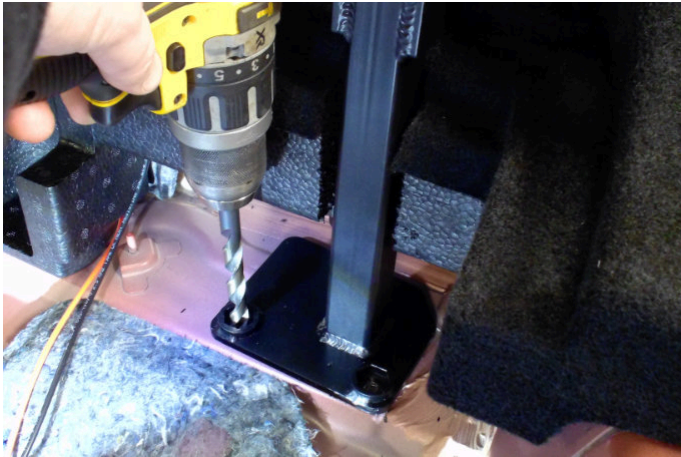


Once you are happy with the position of the a-frame, carefully drill the outer leg holes to 11mm.



Once both holes are drilled, slide the M10 heavy duty washers underneath the plate in alignment with the holes.

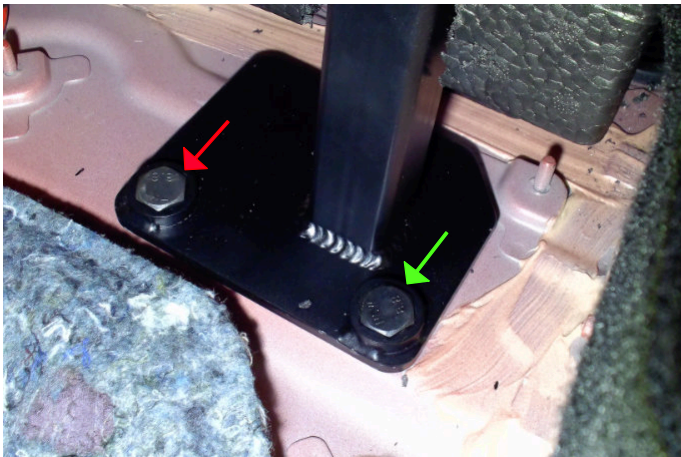

Drop the M10x30mm set screw (red) into the hole furthest into the vehicle and the M10x40mm set screw (green) in the hole closest to the rear of the vehicle.

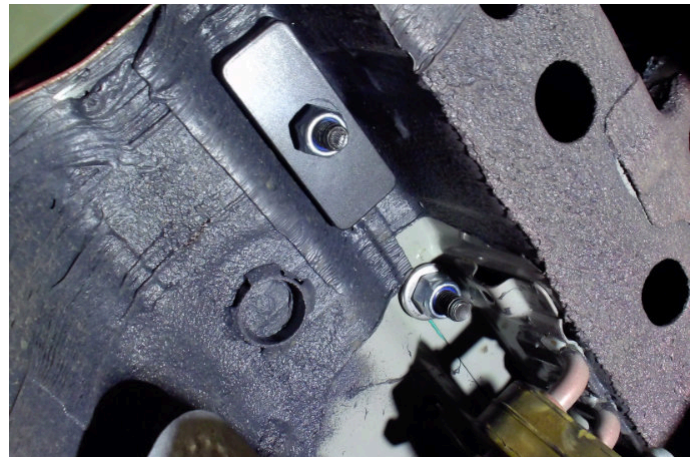

Attach the backing plate onto the M10x40mm fixing and the M10 heavy duty washer onto the M10x30mm fixing. Ensure the use of a suitable sealant on the under vehicle fixings.




The a-frame is now installed into the vehicle.



Re-attach the rear sill into the vehicle.

Boot Hoist Fitting Instructions

Make	MG	Model	HS	Derivative	MK II	REV B
Page 8						

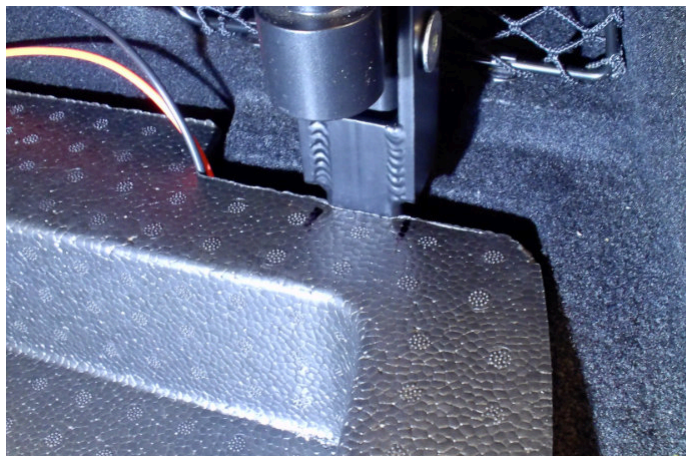

Place the foam inner into the vehicle at an angle towards the a-frame and mark the position of the outer leg.




Also mark the position for the inner leg.



Make two cuts in the foam floor inner to allow for the a-frame legs.



Fit the foam floor inner back into the vehicle.

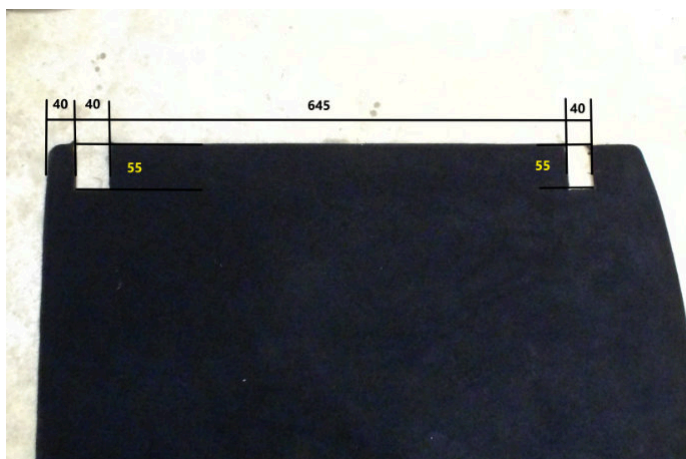

Make the cut outs shown to the false floor.



Re-fit the false floor back into the vehicle.

Boot Hoist Fitting Instructions

Make	MG	Model	HS	Derivative	MK II	REV B
------	----	-------	----	------------	-------	-------

Page 9



Complete the setup of the hoist by attaching the hinge post, arm and actuators. Ensure the control box and restraint system are mounted in suitable locations.

