

Boot Hoist Fitting Instructions

Make	Kia	Model	EV5	Derivative	MK I	REV A
Page 1						



Pre-installation photograph.




Remove the retractable parcel shelf and false floor.



There are two trim retaining clips on the inside face of the boot sill, remove these.



The boot sill can now be removed. This will easily pull upwards and out of the vehicle.

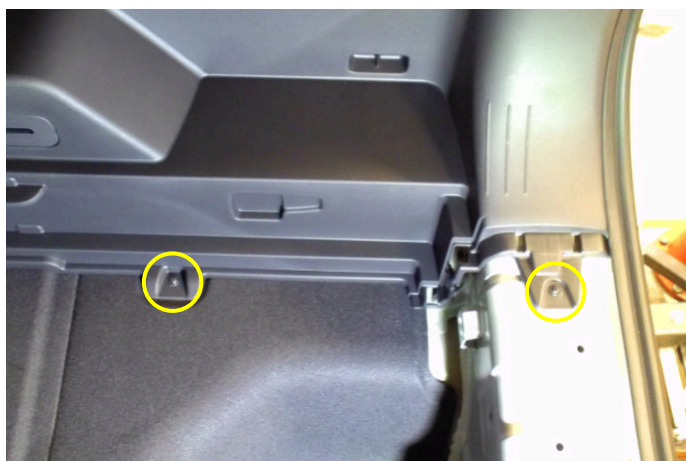

Remove the two screws from the side trim.



Drop the drivers side rear seat down and you will see another screw just behind the rear seat, remove this screw.

Boot Hoist Fitting Instructions

Make	Kia	Model	EV5	Derivative	MK I	REV A
------	-----	-------	-----	------------	------	-------

Page 2



Pull away the drivers side rear door sill bottom trim to allow the boot trim to be removed. You will see another screw holding in the rear trim, remove this.



The rear side trim can now be removed from the vehicle to allow for the upper leg installation.



The carpeted floor can be folded to one side temporarily.



Identify the following hole and remove the loom retainer from it.



Drill the existing hole to 11mm.




This is the setup arrangement for the upper leg pylon fixing.


Boot Hoist Fitting Instructions

Make	Kia	Model	EV5	Derivative	MK I	REV A
------	-----	-------	-----	------------	------	-------

Page 3

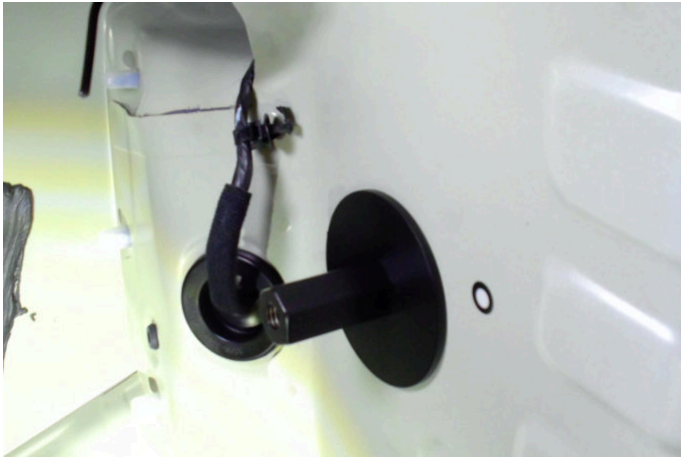

Attach the pylon and washer through the drilled hole and attach the backing plate on the inside.

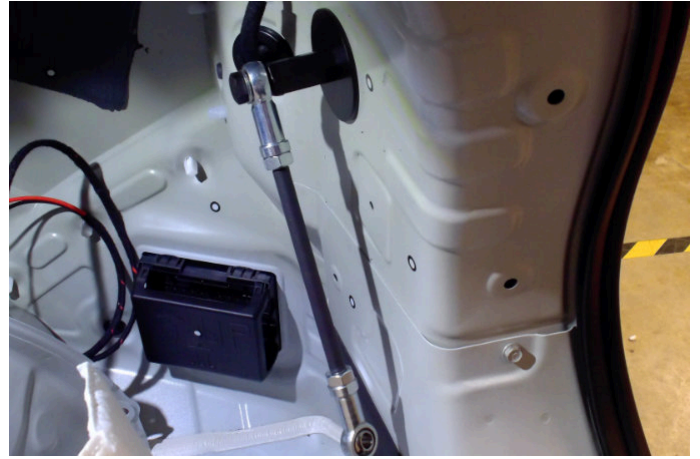


You can now tighten the track rod end onto the pylon.



It is best to run your 12v feed and earth cable before continuing with the a-frame installation. On the design vehicle, the battery was on the passenger side of the engine bay.



Connect the inline fuse holder to the positive terminal on the battery.

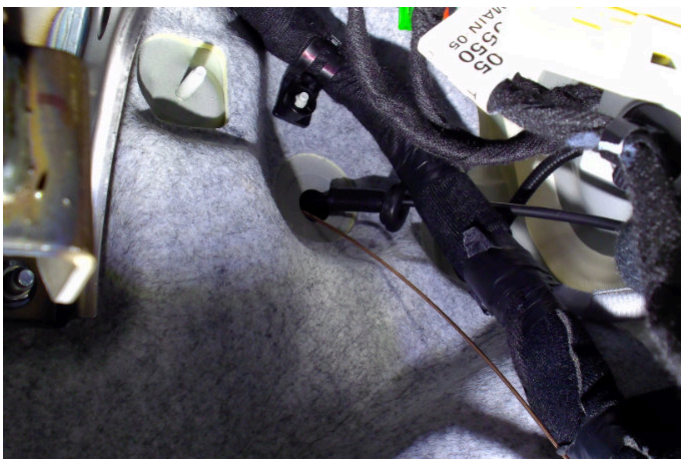


The 12v feed wire can be fed through the bonnet release grommet into the engine bay, it is advised to use something similar to welding rod to push through so that you are able to feed your hand through the opening shown and attach your 12v wire onto then pull back through the vehicle bulk head.



Boot Hoist Fitting Instructions

Make	Kia	Model	EV5	Derivative	MK I	REV A
------	-----	-------	-----	------------	------	-------

Page 4

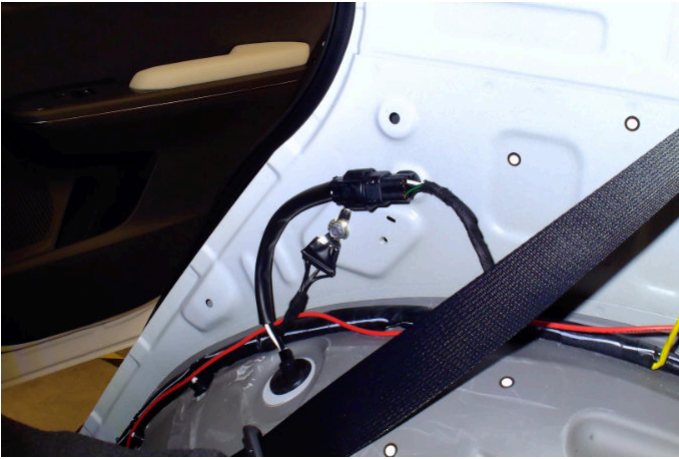


While the rear side trim is still off the vehicle there is a grounding point on the vehicle which can be used to attach your earthing wire to.




Before you put the side trim back you will need to remove a section of this coating where the inner leg will sit. You can easily chip it away with a chisel or flat bladed screw driver.




Remove this following section aswell where the outer leg will sit.

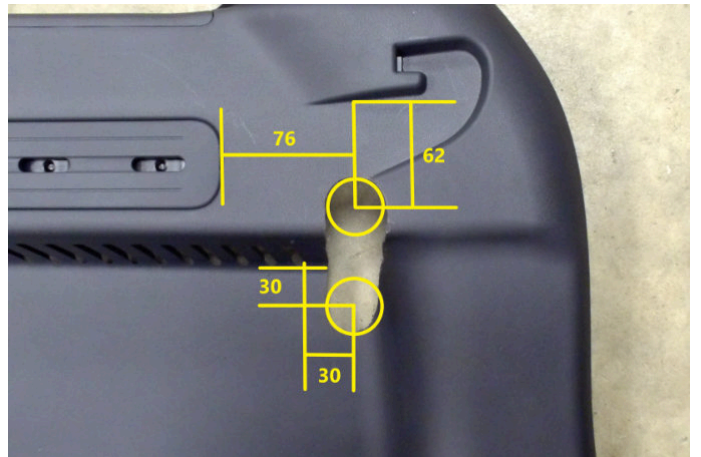

Drill two holes with a 35mm arbor, then make two straight clean cuts to each side of the holes to create a slot. This is for the upper leg to fit through.

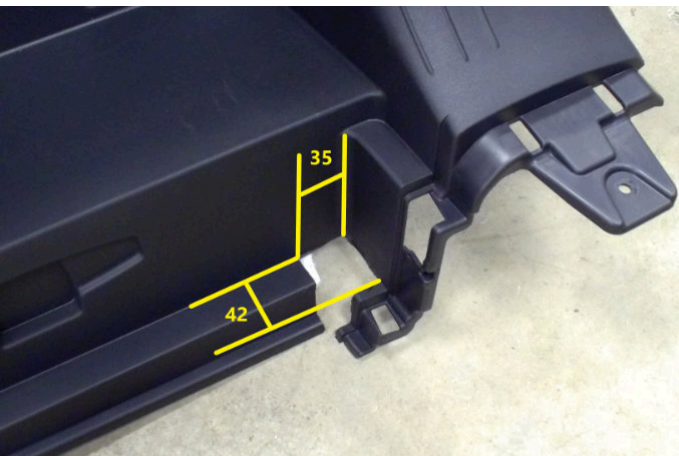

Make the following cut for the outer leg.

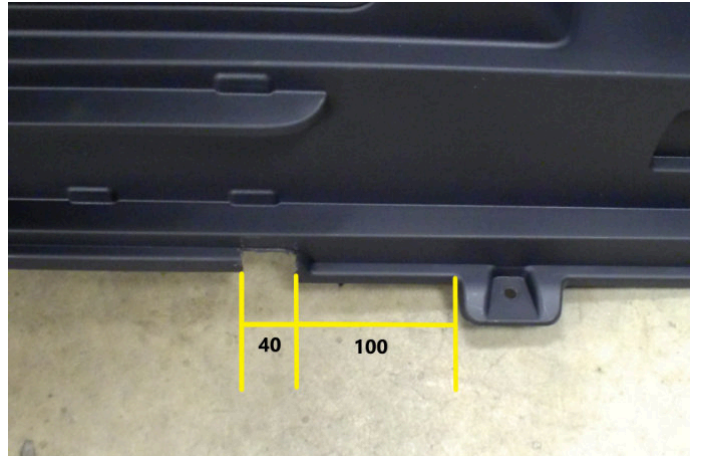

Make the following cut for the inner leg.


Boot Hoist Fitting Instructions

Make	Kia	Model	EV5	Derivative	MK I	REV A
------	-----	-------	-----	------------	------	-------

Page 5




Place the side trim back into the vehicle with the upper leg pointing through the slot which you have made. Do not completely fix the side trim yet as you will need to manouver it slightly to fit the a-frame legs.

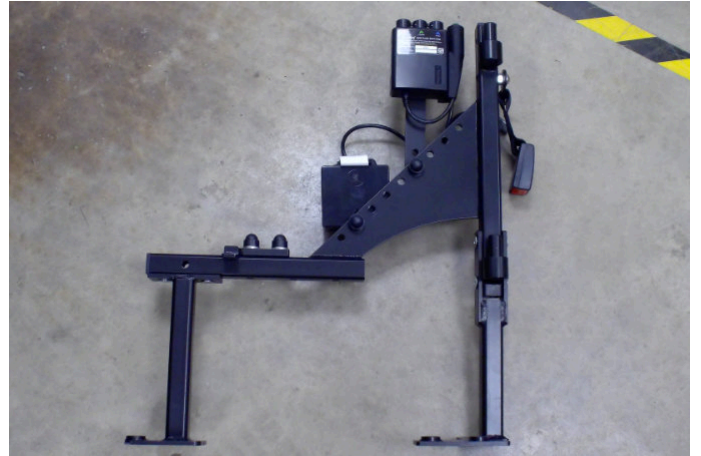


Attach the inner and outer legs onto the a-frame.



Inner Leg:
2x M10x20mm Countersunk Set Screws.

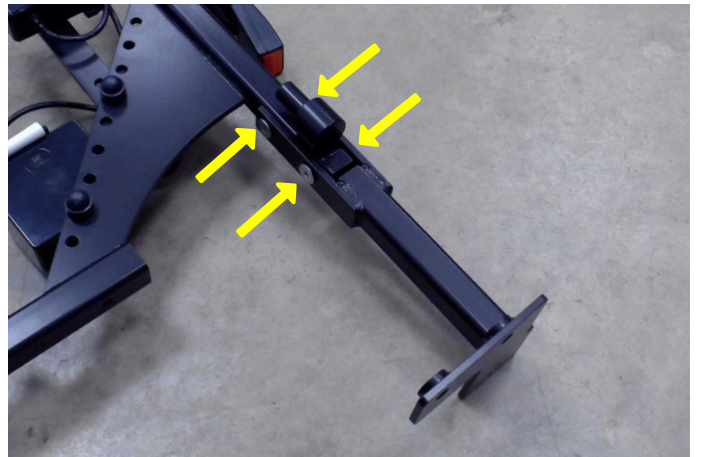

Outer Leg:
4x M10x20mm Countersunk Set Screws.

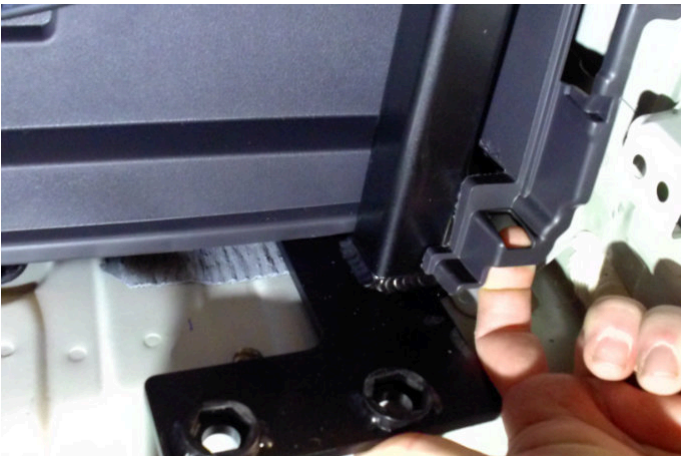

Bring the a-frame into the vehicle and flex the plastic slightly so the outer leg can fit into the cut out which you have made.




Attach the upper leg onto the a-frame using the M10 x 30mm Hex Head Set Screw and washer.

Boot Hoist Fitting Instructions

Make	Kia	Model	EV5	Derivative	MK I	REV A
------	-----	-------	-----	------------	------	-------


Page 6

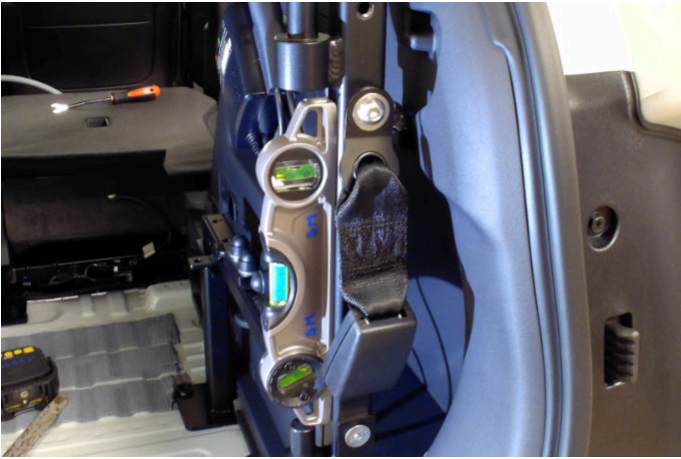

With the upper leg attached, bring the a-frame into a level position.



Drill through the 2x holes for the outer leg to 11mm.

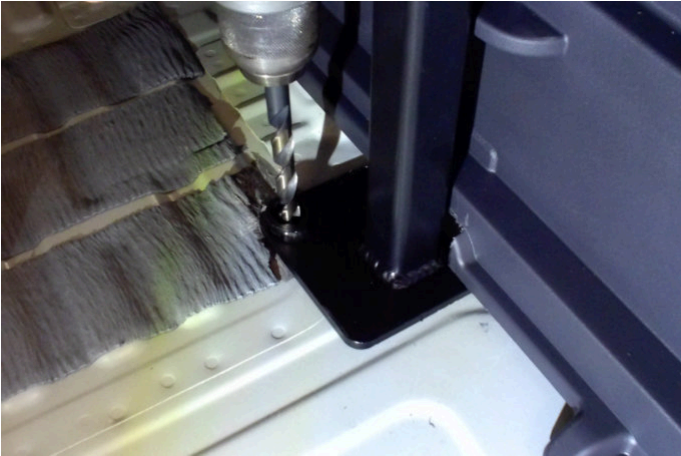

Drill through the hole for the inner leg to 11mm.



Place the M10x40mm Hex Head Set Screw into the inner leg.



Place the 2x M10x40mm Hex Head Set Screws into the outer leg. The side trim can be clipped back into position now.



You can install the backing plate underneath the vehicle without removing any undertray.

Boot Hoist Fitting Instructions

Make	Kia	Model	EV5	Derivative	MK I	REV A
Page 7						




Attach the backing plates underneath the vehicle for the outer leg, make sure the backing plates do not overlap each other. Use an appropriate sealant on the fixings underneath the vehicle.




Unfold the carpeted floor back down and make a small cut out for the inner leg with a stanley knife.



Refit the boot sill trim back into the vehicle.

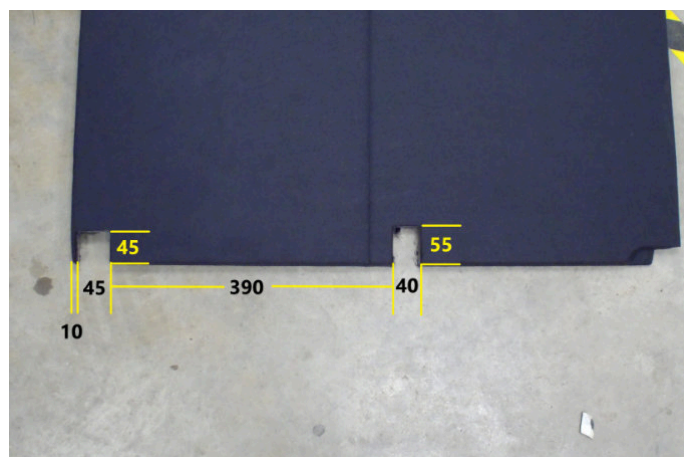

Make the following cuts to the boot false floor.

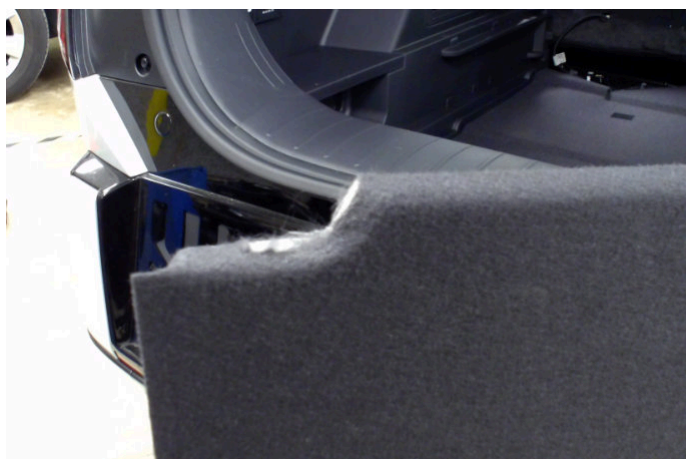

Cut out the interlocking section on either side so that the boot floor can drop into position.




Fit the false floor into the vehicle. If you require the false floor to be set on the lower height then the cuts will need to be 10mm further back as the floor sits slightly further back.

Boot Hoist Fitting Instructions

Make	Kia	Model	EV5	Derivative	MK I	REV A
------	-----	-------	-----	------------	------	-------

Page 8

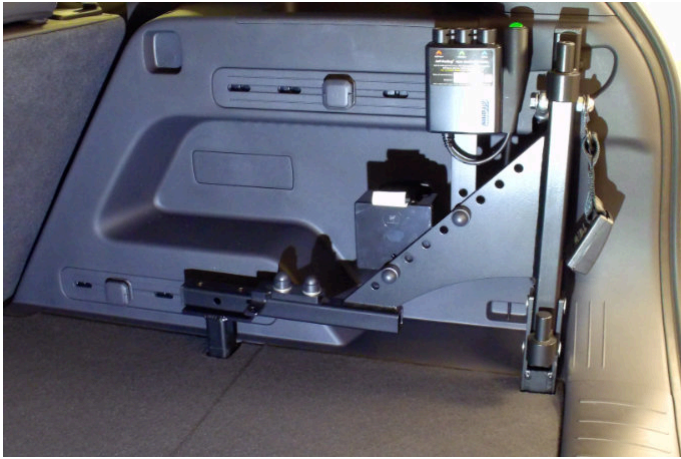

Mount the control box and restraint system in suitable positions. The positions used on the design vehicle are shown.



Finish the hoist installation by fitting the hinge post, arm and in/out actuator.



Setup the hoist for the chosen mobility device.

