

Boot Hoist Fitting Instructions

Make	Ford	Model	Explorer	Derivative	MK I	REV A
Page 1						



Pre-installation photograph.



Remove false floor and parcel shelf from vehicle.



There are two retainers holding the carpet to the chassis. Remove these from either side.



The carpet can now be removed from the vehicle.



Fold the 2nd row seats down to assist with ease of installation.



There are two torx 20 screws holding the lower side trim in place.


Boot Hoist Fitting Instructions

Make	Ford	Model	Explorer	Derivative	MK I	REV A
------	------	-------	----------	------------	------	-------

Page 2



Remove the screws from both side trims so you can remove the boot sill.

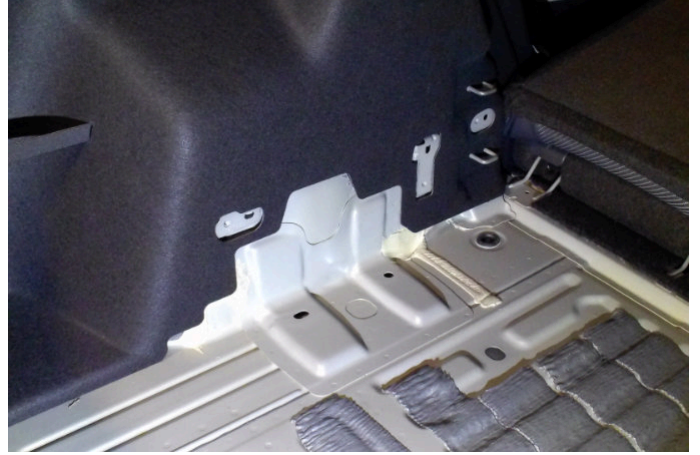


Remove the trims from both sides.



The boot sill should now be free to lift out of the vehicle.



Remove the boot sill away from the vehicle.

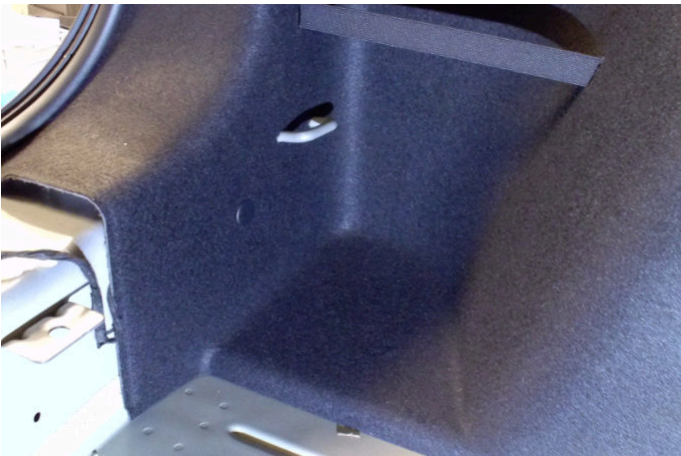

There is a small trim retainer holding the carpet back, remove this.




The left side carpeted side trim can now be flexed out of the way.

Boot Hoist Fitting Instructions

Make	Ford	Model	Explorer	Derivative	MK I	REV A
------	------	-------	----------	------------	------	-------

Page 3

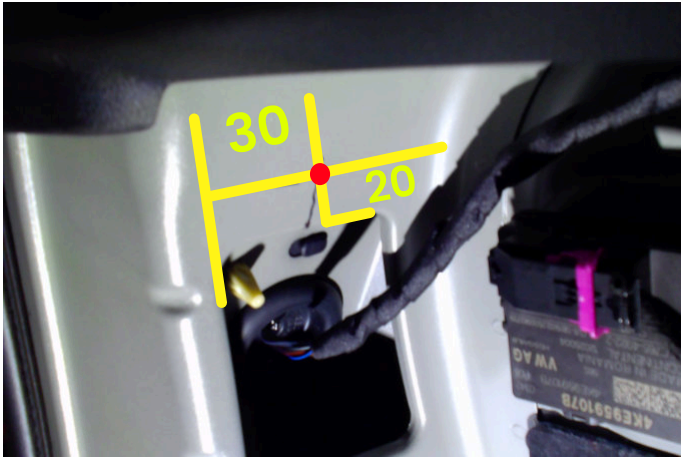

Mark a point which is 30mm from the edge of the rectangular opening and 20mm up.



Drill a hole to 11mm at this point.



This is the assembly for the upper leg.



Place the large backing plate through the opening and position behind the drilled hole.



Attach the upper leg assembly onto the back plate as per photo.



This is the assembly for the inner leg.

Boot Hoist Fitting Instructions

Make	Ford	Model	Explorer	Derivative	MK I	REV A
------	------	-------	----------	------------	------	-------

Page 4




Place the large backing plate through a opening just behind the 2nd row seats and align with the following hole.



Attach the inner leg assembly onto the backing plate as per photo.




Fold the side trim back, roughly in position.

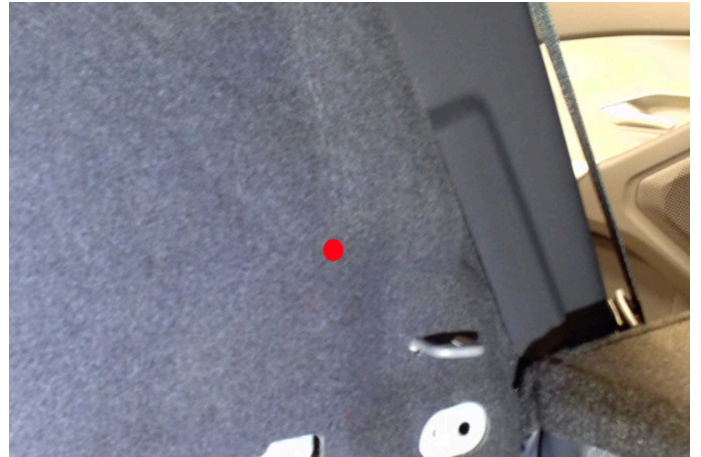

Using your hand to feel the pylon, mark a hole where the pylon will position through the side trim.



Cut a hole to allow the inner leg pylon to fit through.

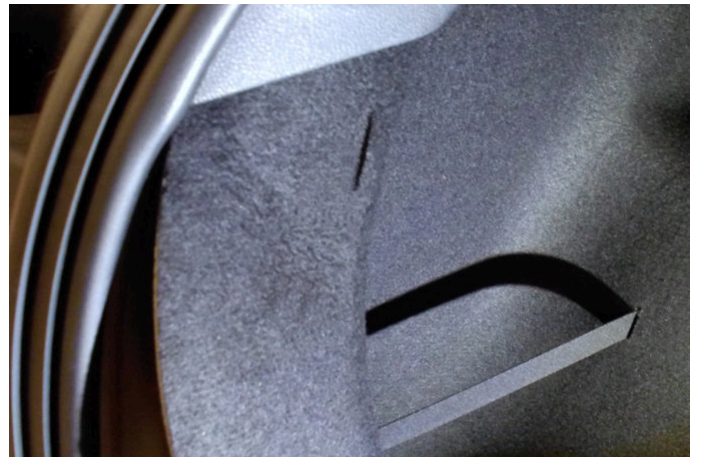

Make a small incision in the side trim for the upper leg assembly to slide through. Make the incision close to the upper plastic trim.

Boot Hoist Fitting Instructions


Make	Ford	Model	Explorer	Derivative	MK I	REV A
Page 5						




Place the upper leg through the slot you have made and place the side trim back in position.



Assemble the a-frame ready to be fitted into the vehicle.

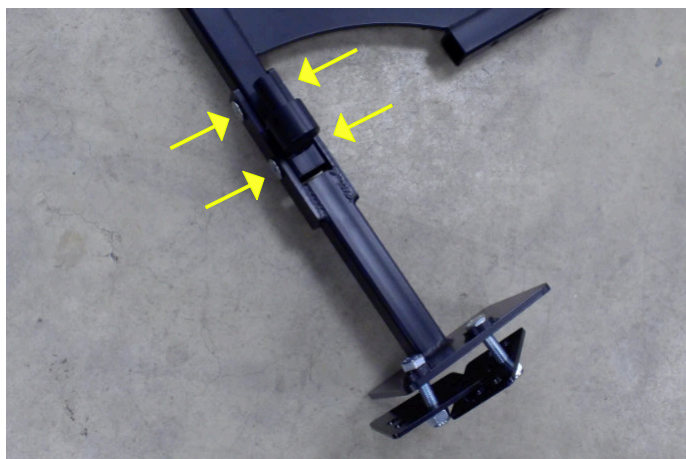

Outer Leg:
4x M10x20mm Countersunk Set Screws

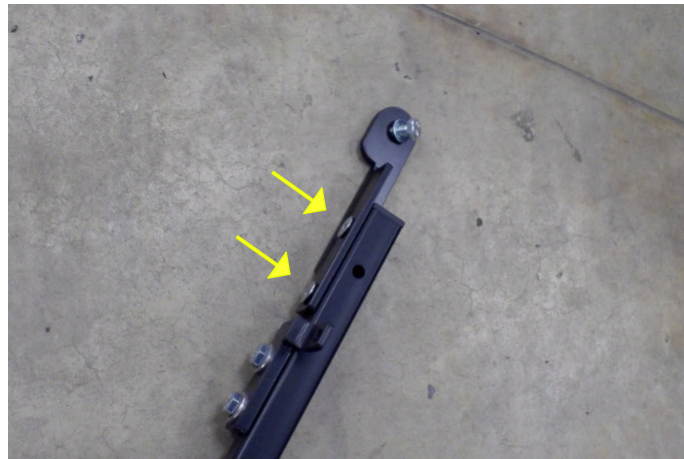

Inner Leg:
2x M10x20mm Countersunk Set Screws



Bring the a-frame into the vehicle in position.



Attach the a-frame to the inner leg pylon and lock into place.

Boot Hoist Fitting Instructions

Make	Ford	Model	Explorer	Derivative	MK I	REV A
------	------	-------	----------	------------	------	-------

Page 6



Make sure the outer leg is in the following position. Position the outer leg plate so the edge of the plate is just touching the ridge from the vehicle



Once in the correct place, drill the holes out to 11mm.



Drop the 2x M10 set screws through the plate



You may need to drop part of a undertray to get to the outer leg fixings.



Place the 2x backing plates onto the set screws and tighten the nylocs on. Ensure the use of a suitable sealant on the under vehicle fixings.



Now make sure the a-frame is in a level position.


Boot Hoist Fitting Instructions

Make	Ford	Model	Explorer	Derivative	MK I	REV A
------	------	-------	----------	------------	------	-------


Page 7




With the a-frame being level, attach the upper leg assembly to the a-frame.

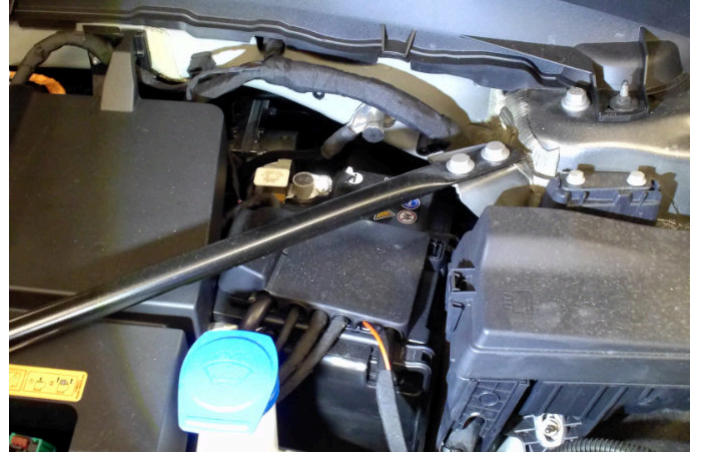


The 12v battery was located in the engine bay on the passenger side of the design vehicle.

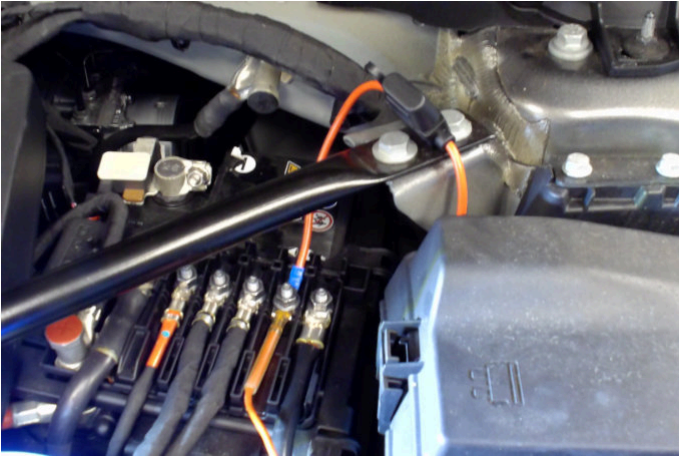


Attach the inline fuse onto one of the positive terminal points from the 12v battery.

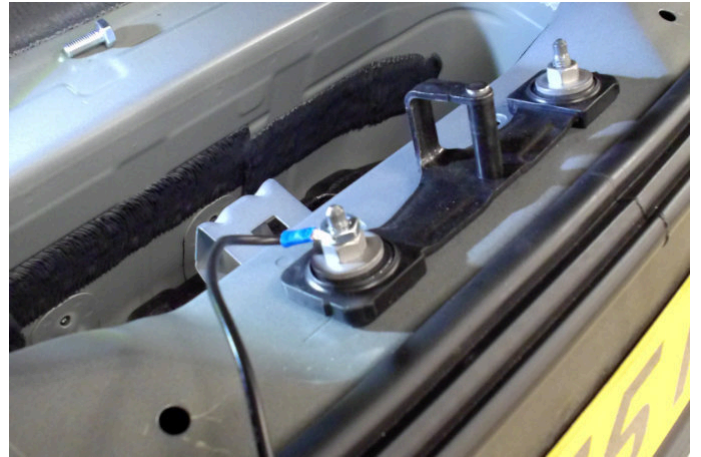

There is plenty of clearance from the boot sill to attach an earth point onto the boot lock stud.

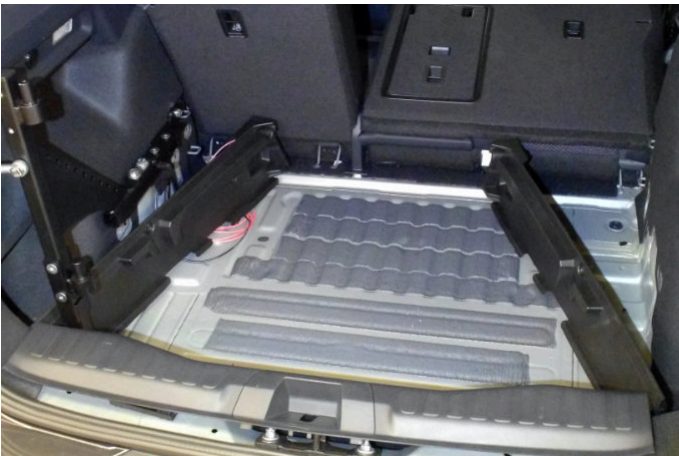

Place both side trims back in the vehicle at an angle as per photo and attach the boot sill onto either side.

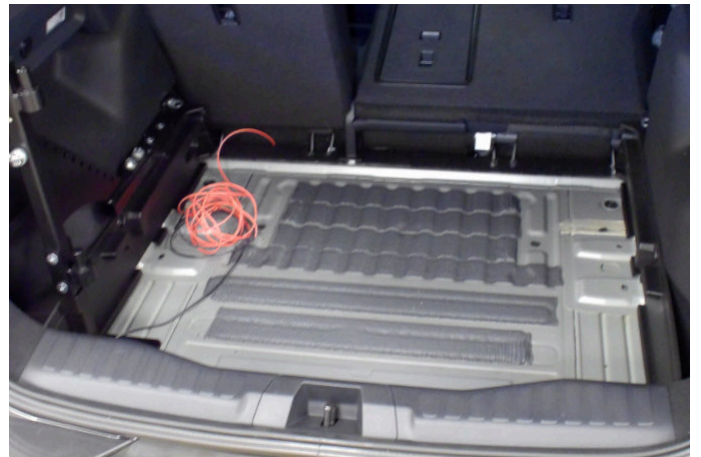

Now assemble the side trim and boot sill back into the vehicle. No cuts have to be made for the a-frame.

Boot Hoist Fitting Instructions

Make	Ford	Model	Explorer	Derivative	MK I	REV A
------	------	-------	----------	------------	------	-------

Page 8




Place the carpet back into the vehicle and make two cuts to allow for the outer leg.



Place the false floor into the vehicle and up to the a-frame. Mark where the a-frame leg will sit.



Make the following cut into the false floor from your markings.

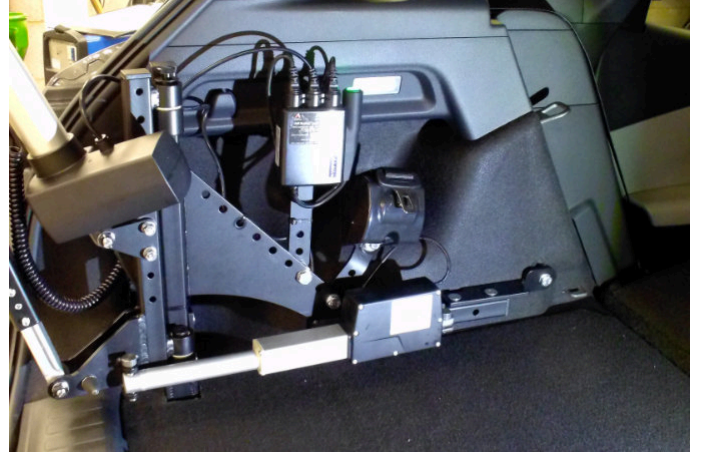

Complete the setup of the hoist by attaching the hinge post, arm and actuators. Ensure the control box and restraint system are mounted in suitable locations.



Setup the hoist to lift the desired mobility aid.



Boot Hoist Fitting Instructions

Make	Ford	Model	Explorer	Derivative	MK I	REV A
------	------	-------	----------	------------	------	-------

