

Fitting Instructions					
Page 1					
Make	Kia	Model	Niro	Derivative	MK II REV C



Fitting Instructions

Page 2

Make	Kia	Model	Niro	Derivative	MK II	REV C
------	-----	-------	------	------------	-------	-------



Pre-installation pictures.



Note: this hoist fits on the left hand side.



Remove false floor and tyre repair kit.




Remove the two plastic rivets holding on the boot sill and then remove.

Fitting Instructions

Page 3

Make	Kia	Model	Niro	Derivative	MK II	REV C
-------------	-----	--------------	------	-------------------	-------	-------

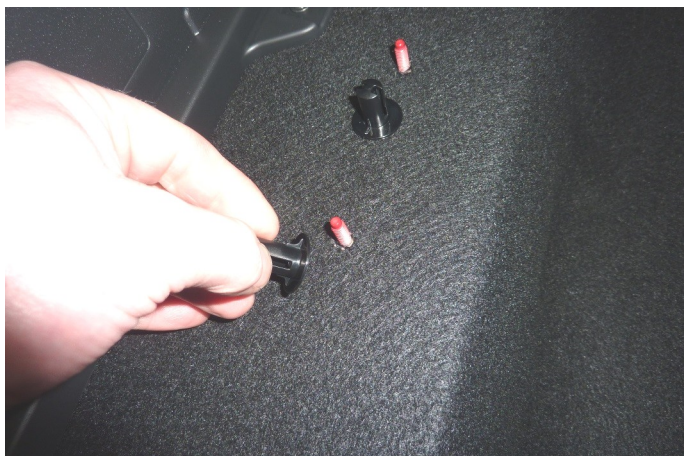

Remove the screw and plastic nuts holding down the sub-floor carpet.



Remove the upper side panel.

Fitting Instructions

Page 4

Make	Kia	Model	Niro	Derivative	MK II	REV C
-------------	-----	--------------	------	-------------------	-------	-------



Remove the screws which hold the side panel in place (see photos below too).



Remove the second row seat base which is held on with this screw which is accessible from the boot side (12mm socket).



Remove this panel from the left rear passenger door sill.

Fitting Instructions

Page 5

Make	Kia	Model	Niro	Derivative	MK II	REV C
------	-----	-------	------	------------	-------	-------



Remove the second row single seat back by removing these screws (12mm socket).



The entire side panel can now be removed.

Fitting Instructions						
Page 6						
Make	Kia	Model	Niro	Derivative	MK II	REV C



Hold the upper leg bracket to the vehicle in the position shown in order to mark the holes for drilling.



Remove the bracket and drill the required holes (8mm clearance).

Ensure the use of a drill stop.



The bracket then fits behind the metal work and is held in place using the 2x M8x30mm Hex Head Set Screws and Nyloc Nuts.


Fitting Instructions

Page 7

Make	Kia	Model	Niro	Derivative	MK II	REV C
------	-----	-------	------	------------	-------	-------



The side panel can be drill to allow the bracket to protrude and then re-fitted.

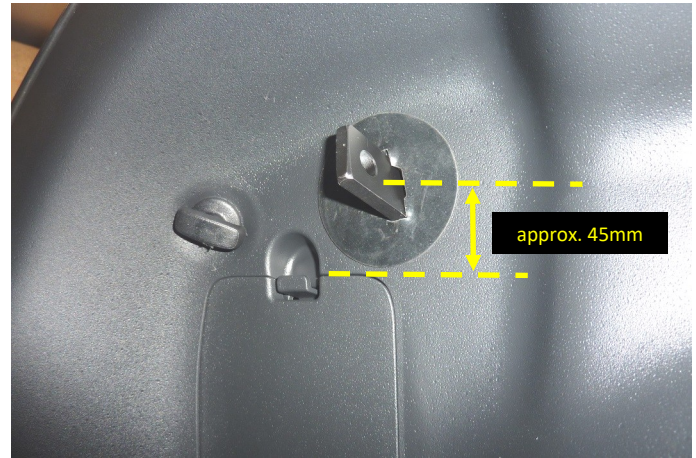

A rubber pylon flange can be cut and fitted to cover the hole.



A 12V power supply can be routed to the battery located in the engine bay as shown.



Either of the 2 terminals shown are 12V and are directly connected to the battery.



The wire can be routed through the bulkhead grommet as shown which is located in the passenger footwell.




Fitting Instructions

Page 8


Make	Kia	Model	Niro	Derivative	MK II	REV C
------	-----	-------	------	------------	-------	-------




A suitable chassis earth point should be used to attach the black wire.

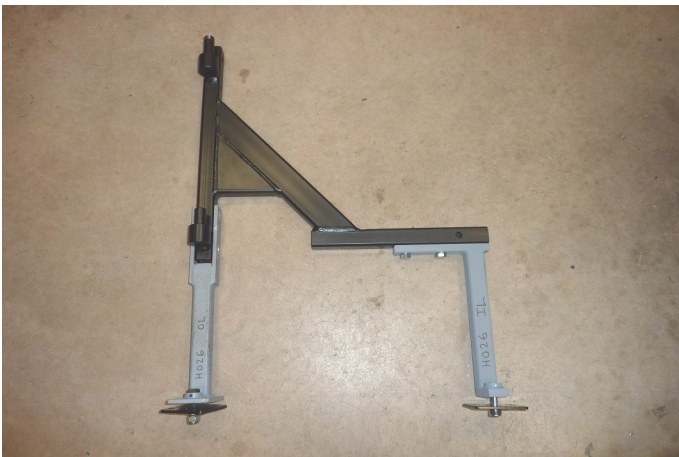

The outer and inner legs can be attached to the a-frame as shown.

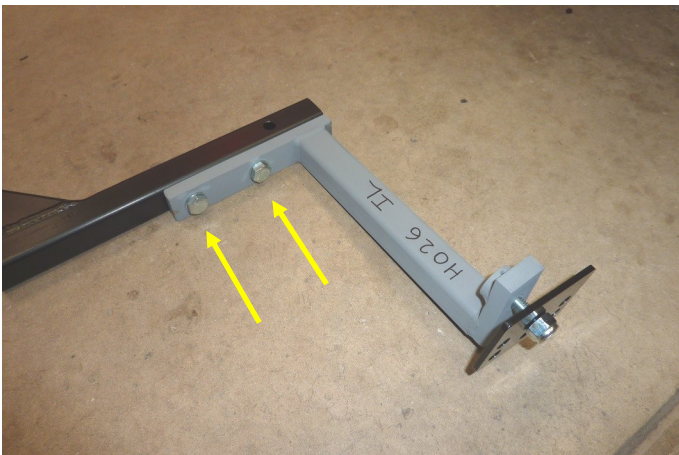

Inner leg:
2 x M10x25mm Hex Head Set Screw
2 x M10 Flat Washers

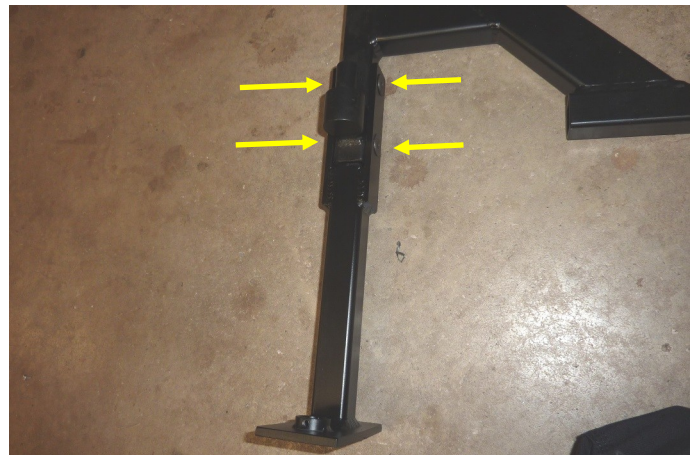

Outer leg:
4 x M10x20mm Countersunk Set Screw

Fitting Instructions					
Page 9					
Make	Kia	Model	Niro	Derivative	MK II REV C


Some variants have an ad-blue tank as shown below. If this is on the vehicle, this will need to be detached and lowered, and temporarily supported with cable ties whilst the outer and inner legs are installed.



Detach the ad-blue tank as shown.



Cable tie the tank so it is held whilst you install the legs.

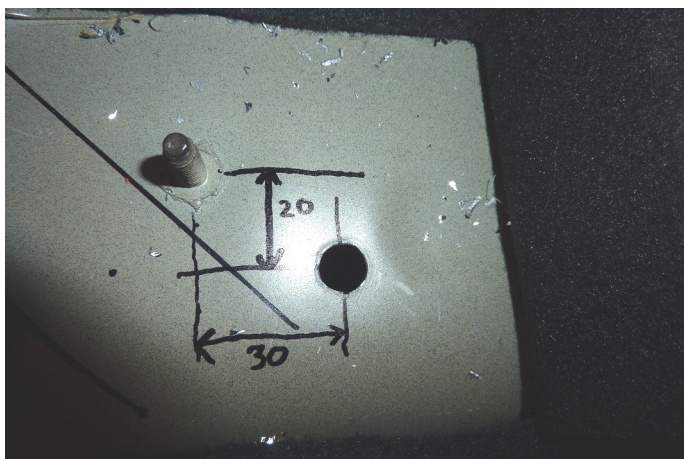


The approximate position for the inner leg is here.





Fitting Instructions

Page 10

Make	Kia	Model	Niro	Derivative	MK II	REV C
------	-----	-------	------	------------	-------	-------

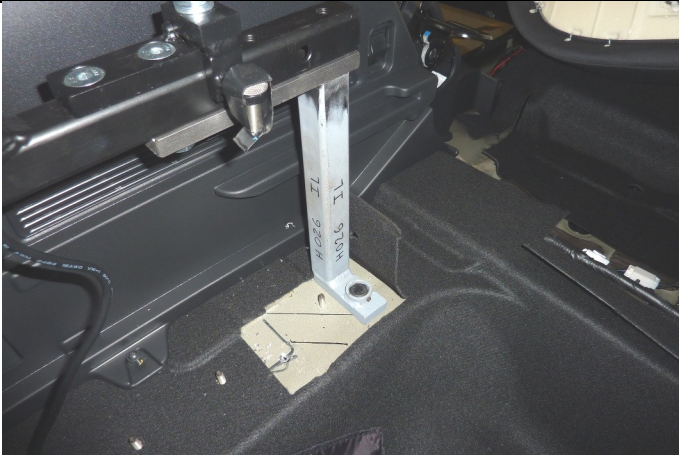


Please note: JG have not yet installed this redesigned version to suit the ad-blue tank variation therefore full installation pictures are to follow.

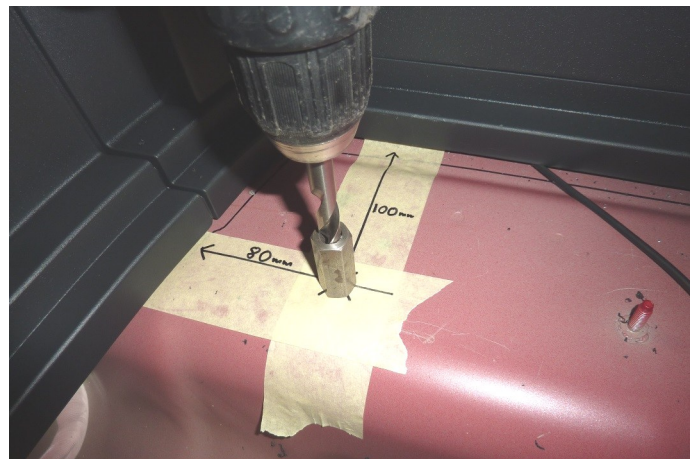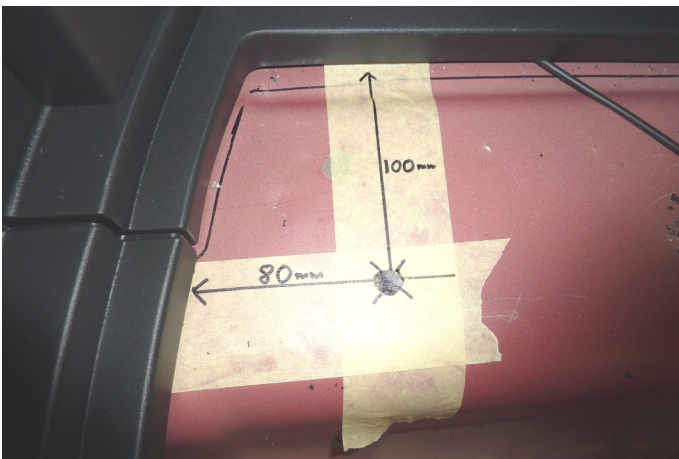

The a-frame can be positioned in the vehicle and the hole for the outer leg fixing can be drilled using the above measurements as a guide.

A 10mm clearance hole should be drilled. **Ensure the use of a drill stop.**

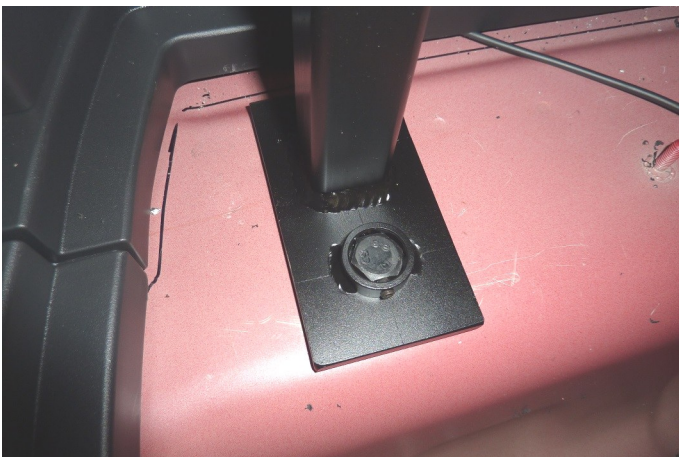

The outer leg can be fixed in position.

The ring/grub screw can be used to aid holding the screw in place inside the vehicle whilst tightening underneath the vehicle. Apply an appropriate corrosion resistant sealant.

Fitting Instructions

Page 11

Make	Kia	Model	Niro	Derivative	MK II	REV C
-------------	-----	--------------	------	-------------------	-------	-------



The upper leg is attached to the a-frame and the previously positioned bracket as shown.



Ensure the frame is straight.



The sub-carpet can be fitted around the inner and outer legs by cutting slits in the correct

Fitting Instructions

Page 12

Make	Kia	Model	Niro	Derivative	MK II	REV C
------	-----	-------	------	------------	-------	-------

Photographs below show the older style a-frame. Ensure the control box, restraint reel and restraint buckle are mounted in suitable locations on to the a-frame.



Complete the install of the hoist and adjust to suit the required mobility device.

Fitting Instructions

Page 13

Make	Kia	Model	Niro	Derivative	MK II	REV C
------	-----	-------	------	------------	-------	-------

