

Boot Hoist Fitting Instructions

Make	MINI	Model	Countryman	Derivative	MK III	REV A
Page 1						



Pre-installation photo.



Remove parcel shelf.



Remove false floor, this will pull towards you to release from the rear hinge.



Remove the boot sill trim.



Remove the inner floor trim. To release this, simply lift vertical to release from clips.




Remove the carpeted boot bucket.

Boot Hoist Fitting Instructions

Make	MINI	Model	Countryman	Derivative	MK III	REV A
------	------	-------	------------	------------	--------	-------

Page 2

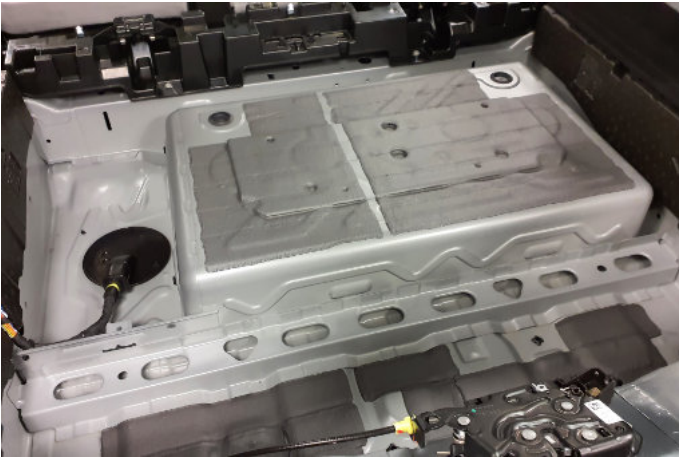

The boot should now have all of the trims and floor removed.



Remove the following luggage restraint.



Remove the plastic side pocket.



The foam insert can now be removed from the underside of the side panel.



Remove both of the following hole covers to allow the side panel to move.



Pull the side trim out as follows, this does not need to be fully removed.

Boot Hoist Fitting Instructions

Make	MINI	Model	Countryman	Derivative	MK III	REV A
------	------	-------	------------	------------	--------	-------


Page 3



Identify the following wiring loom on the rear pillar.



Pull the loom away with the clip and secure to one side using a cable tie.

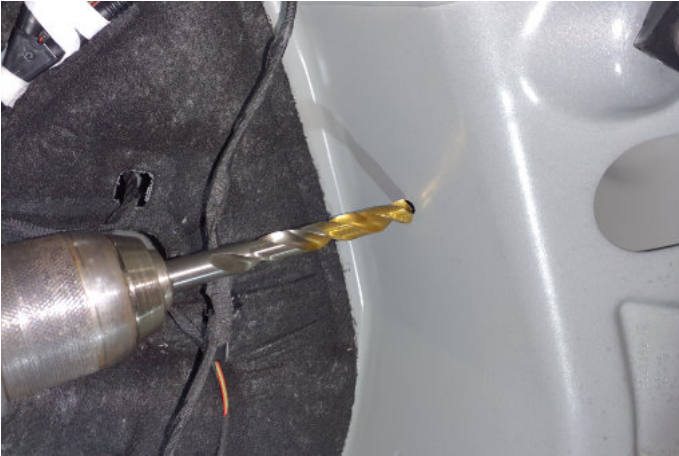

Drill out a 11mm hole where the wiring loom was attached to.



This is the setup for the upper leg, the shorter side of the threaded rod attaches to the vehicle pillar with the large washers.



You can feed your hand through a cavity and drop the M10 cap head and washer through the drilled hole.



On the opposite side attach the other large washer and tighten with the supplied M10 nut.

Boot Hoist Fitting Instructions

Make	MINI	Model	Countryman	Derivative	MK III	REV A
------	------	-------	------------	------------	--------	-------

Page 4



You can fit a allen key through the following hole and tighten the nut with a 17mm spanner.




Align the upper leg assembly in the following approximate position and tighten the nut to the track rod end on the vehicle pillar side.



Make a cut roughly 150mm away from the edge of the side trim to allow the upper leg assembly to fit through.



The side trim of the vehicle can now be pushed back. Do not fully attach it at this point.

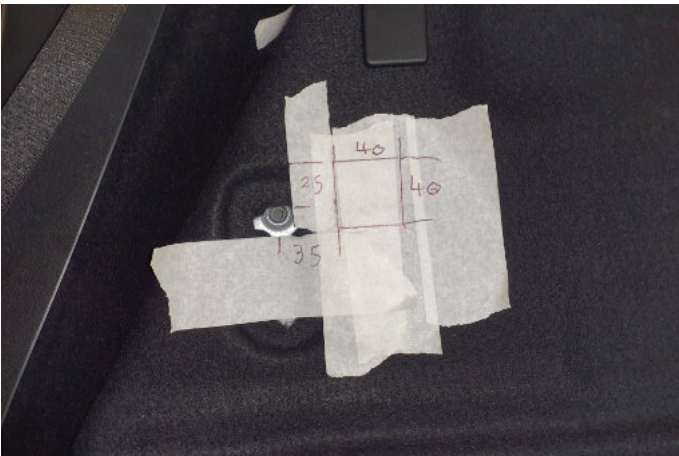

Using the following dimensions, mark and cut a square hole out of the side trim to allow for the inner leg.



The cut should look as per photo.

Boot Hoist Fitting Instructions

Make	MINI	Model	Countryman	Derivative	MK III	REV A
Page 5						



Feed the inner leg through the cut out and attach it to the pre-existing M8 threaded holes with the provided M8 set screws and washers.



The side trim can now be fully put back into position.



Re-attach the luggage restraint and place the bucket compartment back.



Re-fit the foam inner back underneath the side trim.


Boot Hoist Fitting Instructions

Make	MINI	Model	Countryman	Derivative	MK III	REV A
------	------	-------	------------	------------	--------	-------

Page 6



Assembled A-frame.

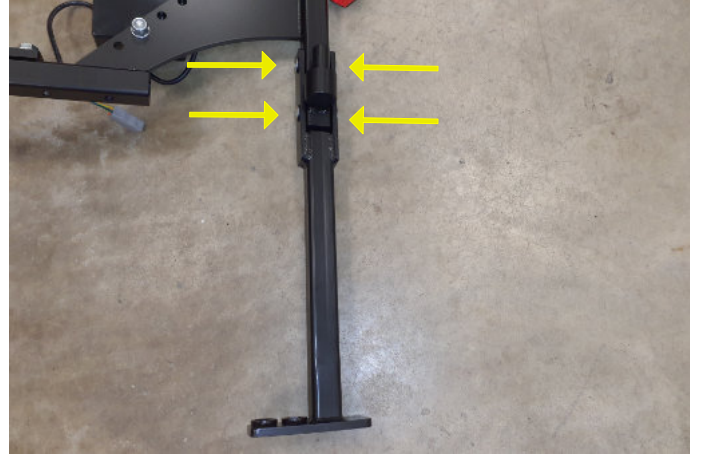

Outer Leg attaches with:
4 x M10x20mm Countersunk Set Screws



Upper leg attaches with:
2 x M10x35mm Button Head Set Screws
2 x M10 Heavy Duty Washers
2 x M10 Plain Washers
2 x M10 Half Nylocs



Place the assembled a-frame into the vehicle.



Attach the upper leg female track rod end onto the upper leg bracket on the a-frame with the M10 Binx nut.



Attach the a-frame onto the inner leg.

Boot Hoist Fitting Instructions

Make	MINI	Model	Countryman	Derivative	MK III	REV A
------	------	-------	------------	------------	--------	-------

Page 7



Make sure the a-frame is level using a spirit level.




The outer leg should be positioned as per photo.



Once in position, drill through the two holes to 11mm.



Drop the M10 x 45mm Hex Head Set Screws through the holes.

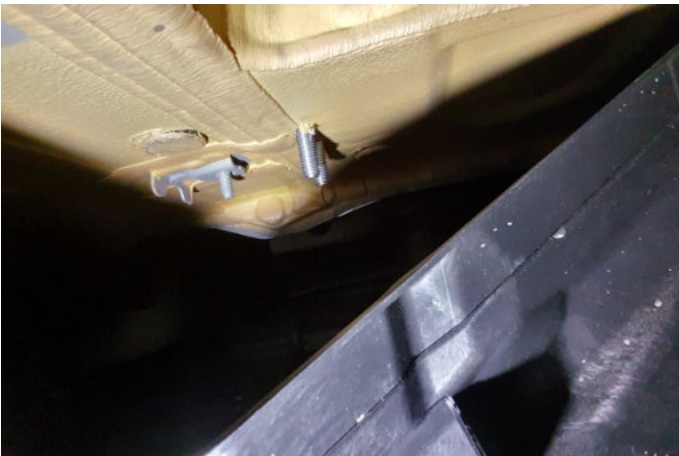

You may need to drop one side of the vehicles undertray to gain access to the set screws.



Attach the backing plate and nylocs onto the set screws, use a rust prevention spray on the fixings once tight.

Boot Hoist Fitting Instructions


Make	MINI	Model	Countryman	Derivative	MK III	REV A
Page 8						



The a-frame installation is now complete.




The 12v vehicle battery was located within the engine bay on the passenger side on the design vehicle.

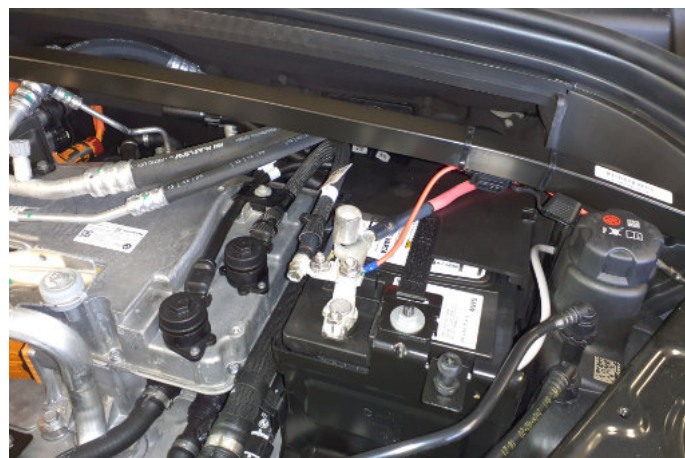

Attach the fused wire to the positive battery terminal.



There was a grommet on the design vehicle on the passenger side, behind the bonnet hinge which conveniently leads to the passenger footwell.

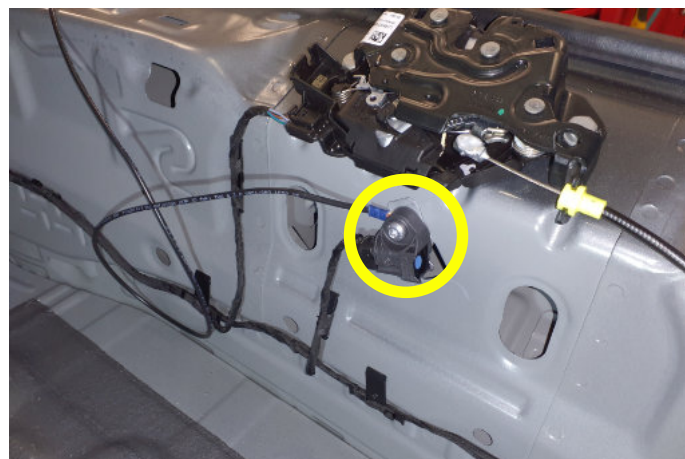

In the boot of the vehicle, underneath the bootlock there is a sensor which has an ideal M6 thread to allow you to earth to.

Boot Hoist Fitting Instructions

Make	MINI	Model	Countryman	Derivative	MK III	REV A
Page 9						



Place the boot floor bucket into the vehicle up to the a-frame.



Mark each side of the outer leg onto the bucket then take a measurement of how far out the a-frame is from the side of the vehicle.



Make the following cut into the bucket.



Once the cut has been made, fit the floor bucket back into the vehicle.



Place the inner floor trim back into the vehicle.



Re-fit the rear sill trim.

Boot Hoist Fitting Instructions

Make	MINI	Model	Countryman	Derivative	MK III	REV A
Page 10						



Place the false floor into the vehicle and mark again for the outer leg.



Make the following cut into the false floor.



Place the false floor back into the vehicle.



Assemble the hoist onto the a-frame including the hinge post, arm and actuators. Make sure the control box and restraint system are fitted in suitable locations.

Boot Hoist Fitting Instructions

Make	MINI	Model	Countryman	Derivative	MK III	REV A
------	------	-------	------------	------------	--------	-------

Page 11



Setup the hoist for the mobility device.

