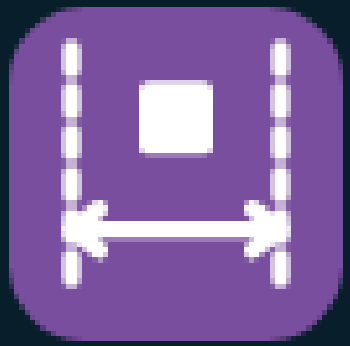

A-M-T 1.8.8

PLAN TAGS & DIMS

COMMAND GUIDE

Automates selected plan annotations by placing dimensions and tags in available plan space.

A-M-T TOOL SERIES

Configure.
Run.
Review.

01 Understand the options

02 Follow the workflow

03 Check the result

Understand the settings

Door tags

Enable or disable door tagging.

Room tags

Enable or disable room tagging.

Door tag type

Choose the family type used for door tags.

Room tag type

Choose the family type used for room tags.

Wall dimensions

Enable dimensions along supported straight wall boundaries.

Door dimensions

Enable dimensions associated with door openings.

Priority

Controls the order in which annotation tasks are processed.

How to use Plan Tags & Dims

1. Open the target floor plan.
2. Choose which tags and dimension groups to create.
3. Select the required door and room tag types.
4. Run the command and inspect the annotation placement.

EXPECTED RESULT

The command creates the selected plan dimensions and tags while attempting to place annotations in free space.

Before you finish

QUICK CHECKLIST

- ◯ Correct model and active view
- ◯ Required types/templates are loaded
- ◯ Review settings before running
- ◯ Inspect the output in Revit
- ◯ Save a backup before bulk changes

COMMAND FLOW

01 SELECT

02 CONFIGURE

03 RUN

04 VERIFY

NOTES & LIMITATIONS

Wall/room boundary dimensioning is based on supported straight wall geometry; linked and curved boundaries are not supported by the documented implementation.