





### Spotted Gum
















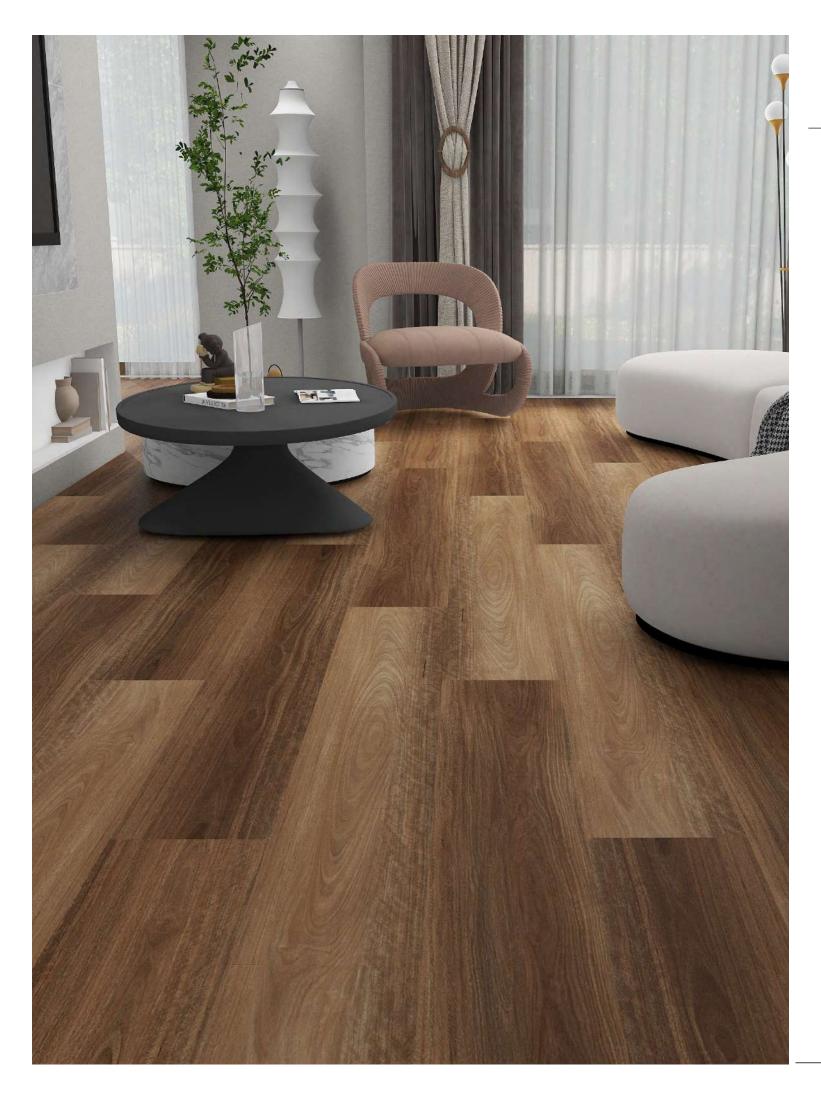

#### Black Butt














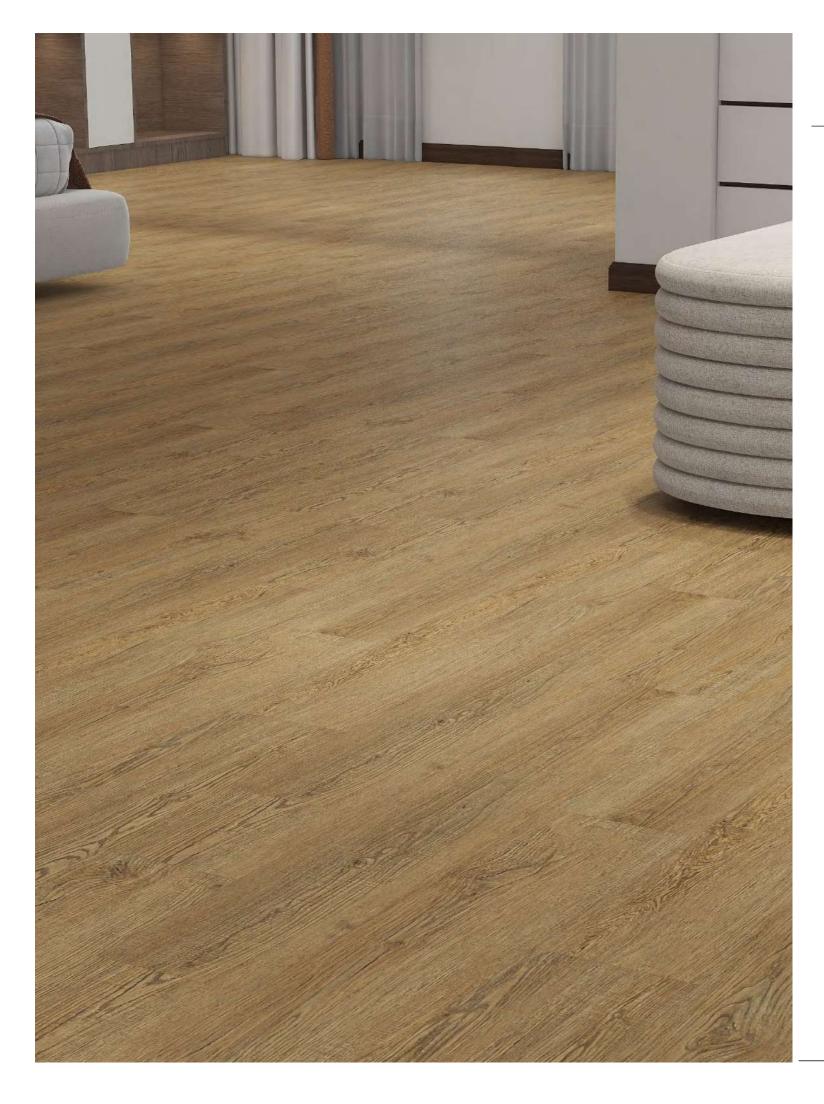

## Honey Oak
















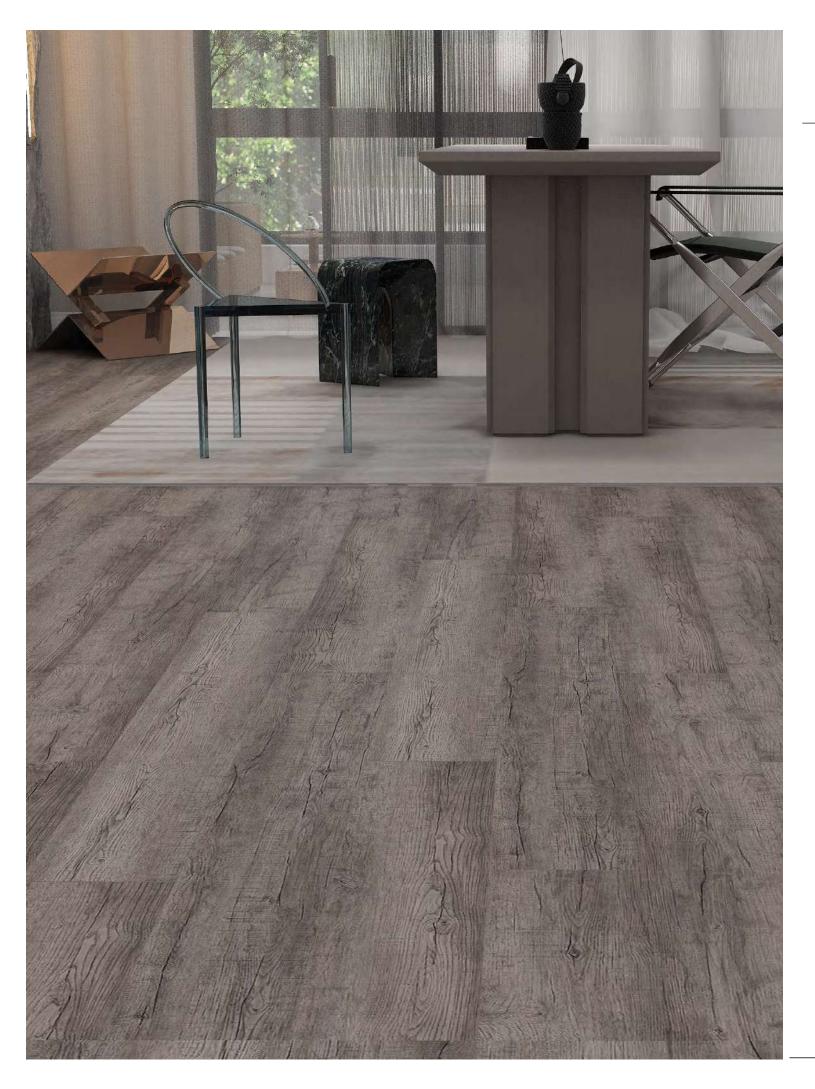

# Midnight Grey

















### **Spotted Gum**

















#### Forest Oak
















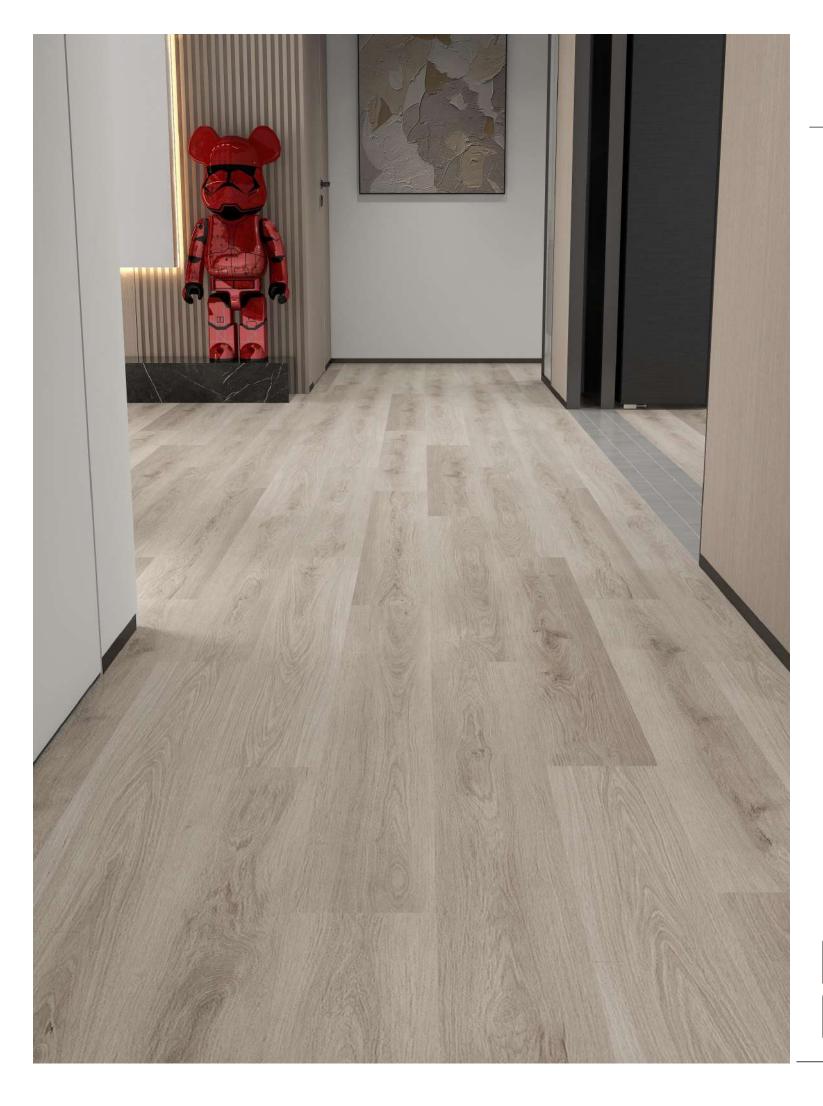

# Dark Grey



















# European Oak














# Installation Instruction

- The floor must be leveled before installation. Within a 2-meter radius, the surface must be level, with a height variation not exceeding 5 mm. Any areas exceeding this tolerance should be leveled using cement or quick-drying compound, or it is recommended to use a cement-based self-leveling compound.
- The floor must be dry, smooth, and free of dust, solvents, grease, asphalt, sealants, or other contaminants. The surface should be hard and dense, and it should not produce dust.
- Newly poured cement subfloors must be fully dry and properly cured, with a moisture content of less than 5% (or less than 2% for floors with underfloor heating). Wooden subfloors should have a moisture content of 6%-10%.
- The flooring can be installed over a subfloor with an underfloor heating system, but the heating must be uniform, maintaining a consistent temperature, and no point on the subfloor should exceed 30°C. Before installation, the underfloor heating system should be turned on to remove any residual moisture.
- All wooden and wood-based subfloors, including plywood and particle board, can be used as a base for installing premium stone-plastic composite (SPC) flooring, provided they are smooth, flat, and stable. If the surface of the wooden subfloor is not smooth, a underlayment at least 0.5 cm thick should be installed over it.
- Premium stone-plastic composite (SPC) flooring can be installed over many hard surfaces, such as tiles, wooden floors, linoleum, PVC floor tiles, etc., provided the subfloor surface is smooth and level. If installing over tiles, the grout joints should be smoothed and leveled with a grout repair compound, and the tiles should be free from any hollow spots.

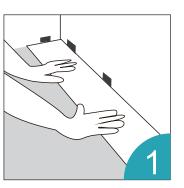


Start the installation from the corner of the wall, aligning the tongue-and-groove with the wall. Use spacers to maintain a 6-9 mm gap between the flooring and the wall.




Continue this process to complete the installation of the first row. If there is not enough space for a full plank length, use tools to cut and fit the flooring as needed.



Continue this process until the last row.

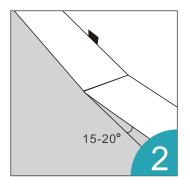

At a 15-20 degree angle, insert the tongue of the short edge of the second plank into the groove of the short edge of the previous plank, and gently press to secure the joint.

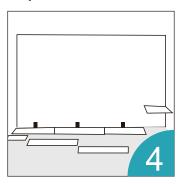

Insert the tongue on the long edge of the second row planks into the groove of the first row planks and gently press to ensure a tight fit. Subsequent rows should be installed in the same manner as the first row.



Align the tongue of the plank with the wall, use tools to cut off the overlapping part with the previous row, and then install the remaining tongue portion according to the standard procedure.





info@tilesgalleria.com.au

www.tilesgalleria.com.au

33 First Ave Kilkenny SA 5009

