

AVR Programmer Setup

Correct Connection of Flat Ribbon Cables to Adapter Board

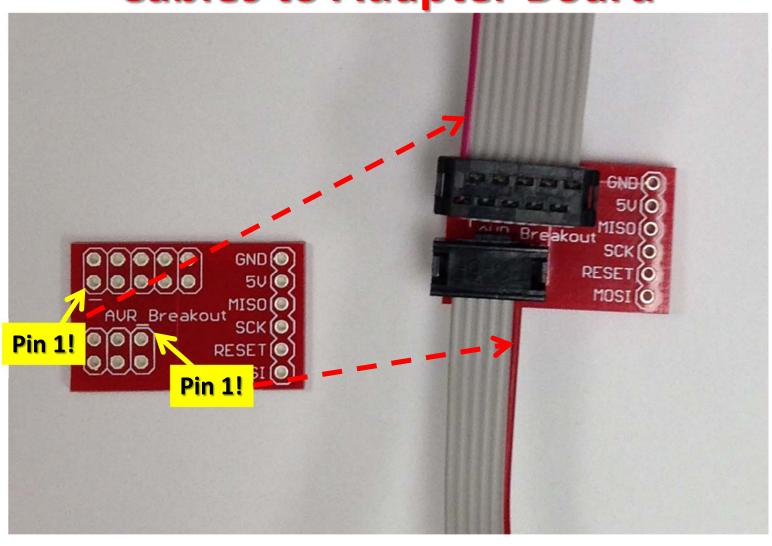

Example - Use of the Adapter Board (Prog. B)

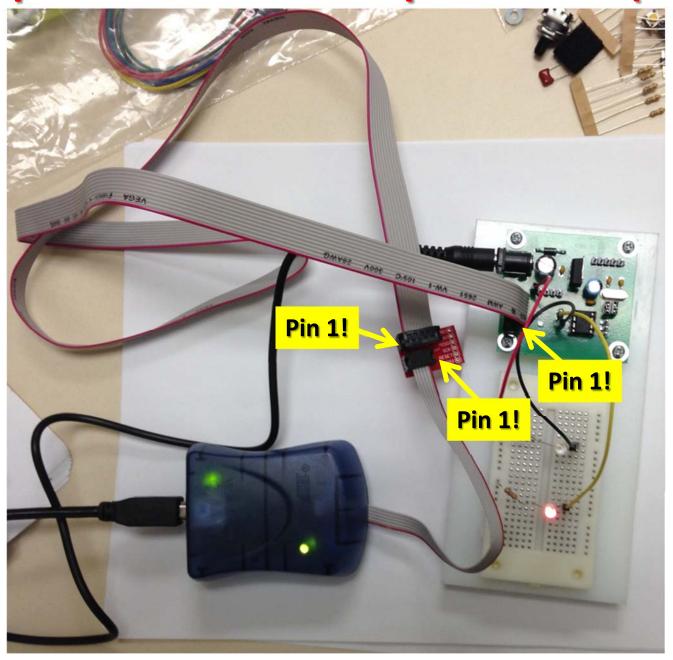

AVR ISP Programmer A (Pololu USB AVR Programmer v2.1)



Pin 1!

Note

• Some Programmers can be connected directly to the μC board (see below).

