



Course Code: COE 3201 Course Title: Data Communication

Dept. of Computer Engineering Faculty of Engineering

Lecture No:	8	Week No:	9	Semester:	Fall 23-24
Lecturer:	Dr Amirul Islam				

Lecture Outline



- 1. Analog to Analog Conversion
- 2. Amplitude Modulation (AM)
- Frequency Modulation (FM)
- 4. Phase Modulation (PM)
- 5. Multiplexing
- 6. Frequency-Division Multiplexing

Analog to Analog Conversion



Analog-to-analog conversion, or analog modulation, is the representation of analog information by an analog signal. One may ask why we need to modulate an analog signal; it is already analog. Modulation is needed if the medium is bandpass in nature or if only a bandpass channel is available to us.

Analog to Analog Conversion



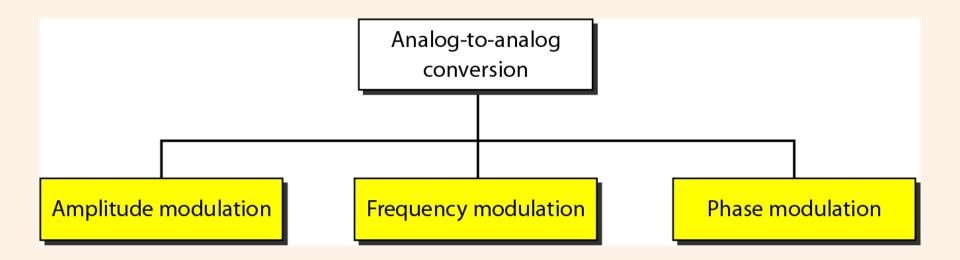


Figure 5.15: Types of analog-to-analog modulation

Amplitude Modulation (AM)



- In AM transmission, the carrier signal is modulated so that its amplitude varies with the changing amplitudes of the modulating signal.
- The frequency and phase of the carrier remain the same; only the amplitude changes to follow variations in the information.
- The modulating signal is the envelope of the carrier.

Amplitude Modulation (AM)



As Figure 5.16 shows, AM is normally implemented by using a simple multiplier because the amplitude of the carrier signal needs to be changed according to the amplitude of the modulating signal.

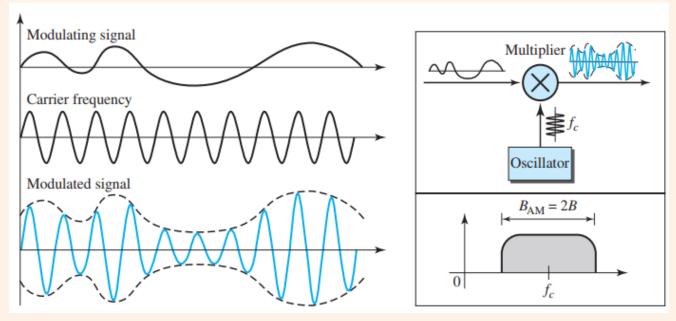


Figure 5.16: Amplitude modulation

Amplitude Modulation (AM)



- An increase in the amplitude of the modulating signal causes the amplitude of the carrier to increase.
- An increase or a decrease in the amplitude of the modulating signal causes a corresponding increase or decrease in both the positive and the negative peaks of the carrier amplitude.
- An imaginary line connecting the positive peaks and negative peaks of the carrier waveform (the dashed line in the figure) gives the exact shape of the modulating information signal.
- This imaginary line on the carrier waveform is known as the envelope.

Frequency Modulation (FM)



- In FM transmission, the frequency of the carrier signal is modulated to follow the changing voltage level (amplitude) of the modulating signal.
- □ The peak amplitude and phase of the carrier signal remain constant, but as the amplitude of the information signal changes, the frequency of the carrier changes correspondingly.
- ☐ Figure 5.18 shows the relationships of the modulating signal, the carrier signal, and the resultant FM signal.

Frequency Modulation (FM)



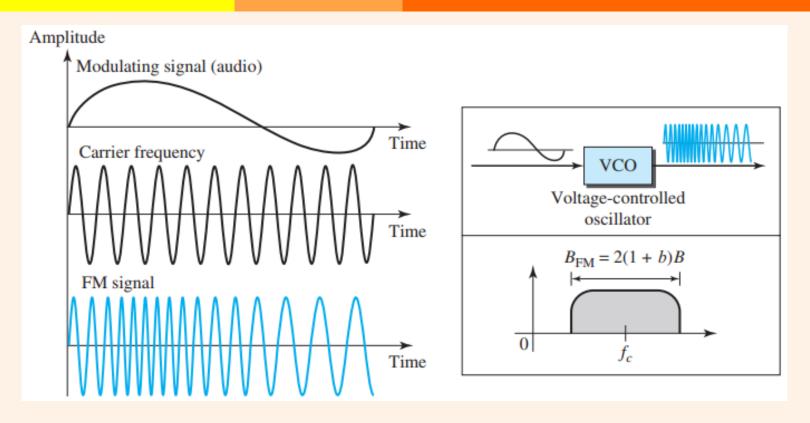


Figure 5.18: Frequency modulation

Phase Modulation (PM)



- In PM transmission, the phase of the carrier signal is modulated to follow the changing voltage level (amplitude) of the modulating signal.
- The peak amplitude and frequency of the carrier signal remain constant, but as the amplitude of the information signal changes, the phase of the carrier changes correspondingly.

Phase Modulation (PM)



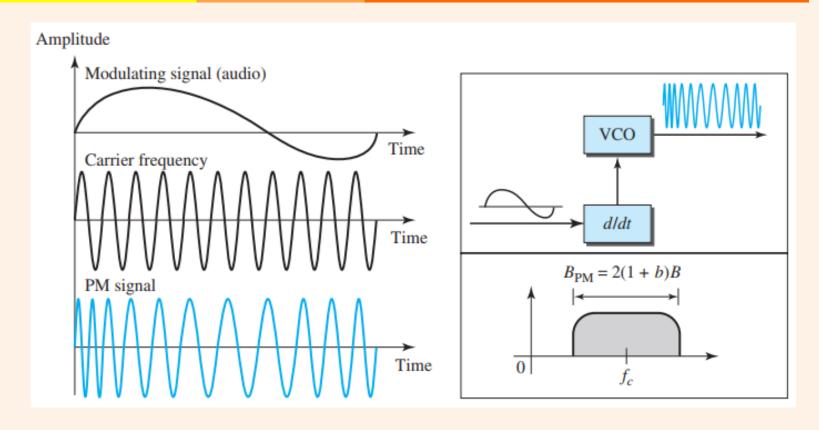


Figure 5.19: Phase modulation

Multiplexing



- Multiplexing is the set of techniques that allows the simultaneous transmission of multiple signals across a single data link.
- □ As data and telecommunications user increases, so does traffic. We can accommodate this increase by continuing to add individual links each time a new channel is needed, or we can install higher-bandwidth links and use each to carry multiple signals.

Multiplexing



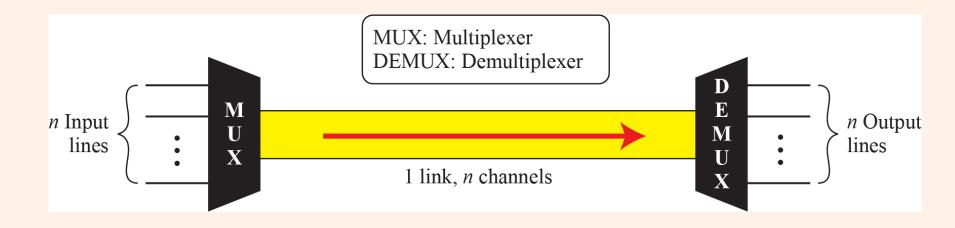


Figure 6.1: Dividing a link into channels

Multiplexing




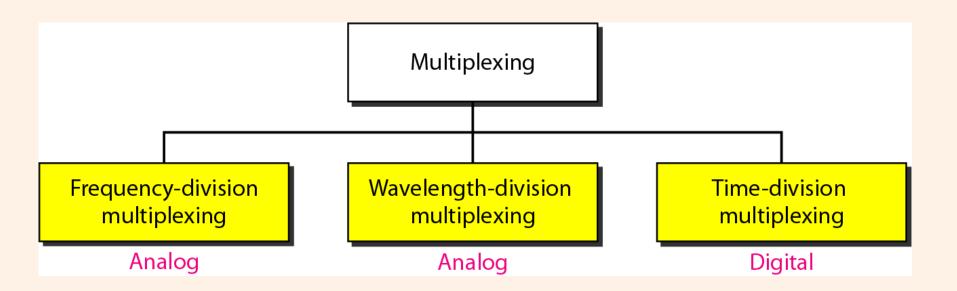


Figure 6.2: Categories of multiplexing



- □ Frequency-division multiplexing (FDM) is an analog technique that can be applied when the bandwidth of a link (in hertz) is greater than the combined bandwidths of the signals to be transmitted.
- In FDM, signals generated by each sending device modulate different carrier frequencies.
- These modulated signals are then combined into a single composite signal that can be transported by the link.



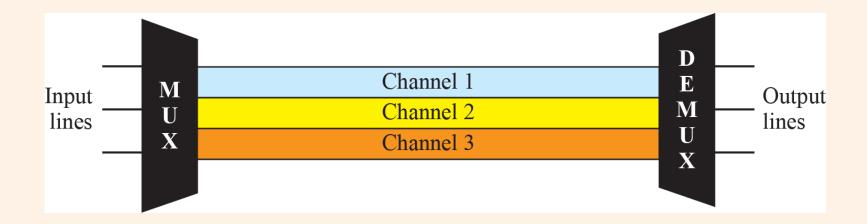

FDM Process



- Figure 6.4 is a conceptual illustration of the multiplexing process.
- Each source generates a signal of a similar frequency range.
- Inside the multiplexer, these similar signals modulate different carrier frequencies (f1, f2, and f3).
- The resulting modulated signals are then combined into a single composite signal that is sent out over a media link that has enough bandwidth to accommodate it.

FDM Process



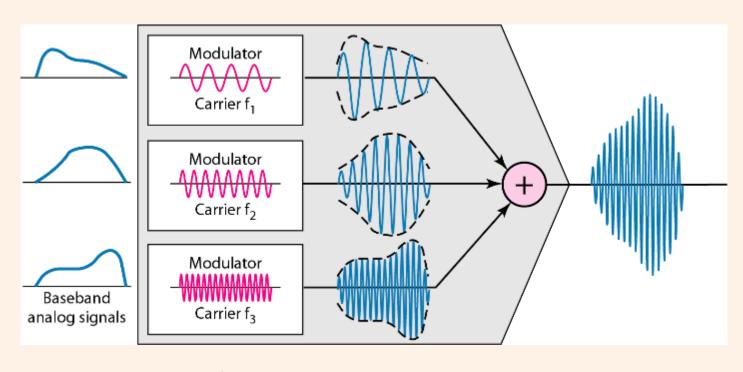


Figure 6.4: FDM Process

FDM Demultiplexing



- The demultiplexer uses a series of filters to decompose the multiplexed signal into its constituent component signals.
- The individual signals are then passed to a demodulator that separates them from their carriers and passes them to the output lines.
- Figure 6.5 is a conceptual illustration of demultiplexing process.

FDM Demultiplexing




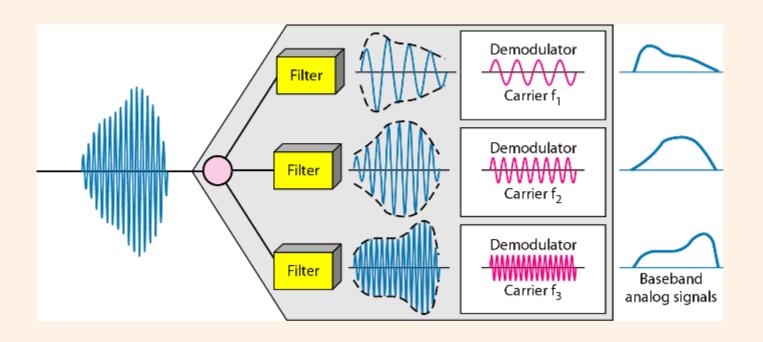


Figure 6.5: FDM demultiplexing example



Example 6.1: Assume that a voice channel occupies a bandwidth of 4 kHz. We need to combine three voice channels into a link with a bandwidth of 12 kHz, from 20 to 32 kHz. Show the configuration, using the frequency domain. Assume there are no guard bands.


Solution: We shift (modulate) each of the three voice channels to a different bandwidth, as shown in the figure,

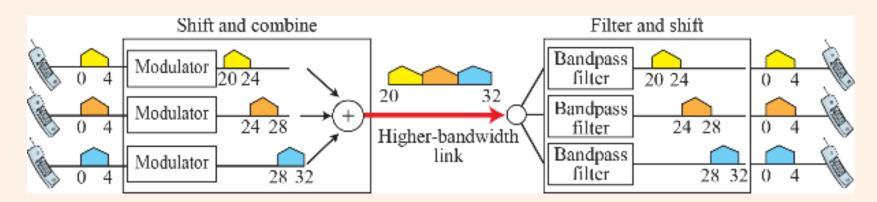



Example 6.2: Five channels, each with a 100-kHz bandwidth, are to be multiplexed together. What is the minimum bandwidth of the link if there is a need for a guard band of 10 kHz between the channels to prevent interference?

Solution: For five channels, we need at least four guard bands. This means that the required bandwidth is at least $5 \times 100 + 4 \times 10 = 540 \text{ kHz}$, as shown in the figure.

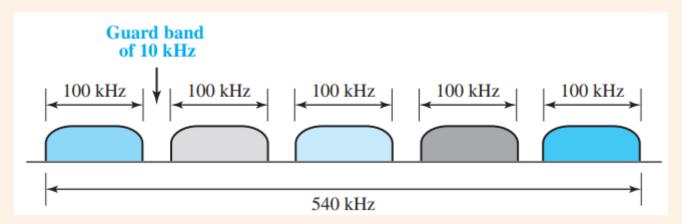



Example 6.3: Four data channels (digital), each transmitting at 1 Mbps, use a satellite channel of 1 MHz. Design an appropriate configuration, using FDM.

Solution: The satellite channel is analog. We divide it into four channels, each channel having a 250-kHz bandwidth. Each digital channel of 1 Mbps is modulated so that each 4 bits is modulated to 1 Hz. One solution is 16-QAM modulation. Figure 6.8 shows one possible configuration.



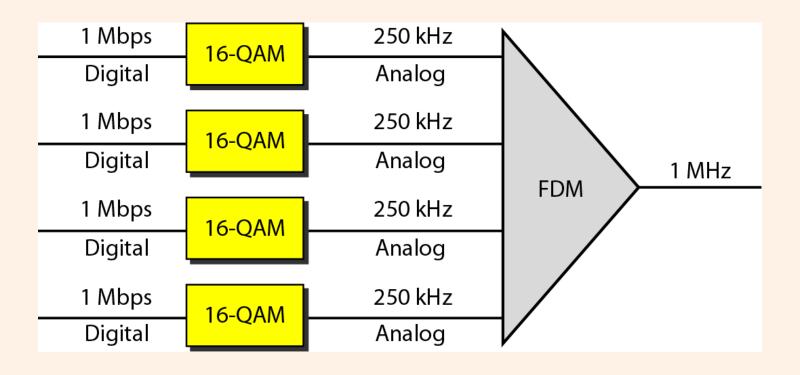


Figure 6.8: Example 6.3



- To maximize the efficiency of their infrastructure, telephone companies have traditionally multiplexed signals from lower-bandwidth lines onto higher-bandwidth lines.
- In this way, many switched or leased lines can be combined into fewer but bigger channels. For analog lines, FDM is used.
- One of these hierarchical systems used by telephone companies is made up of groups, supergroups, master groups, and jumbo groups (see Figure 6.9).



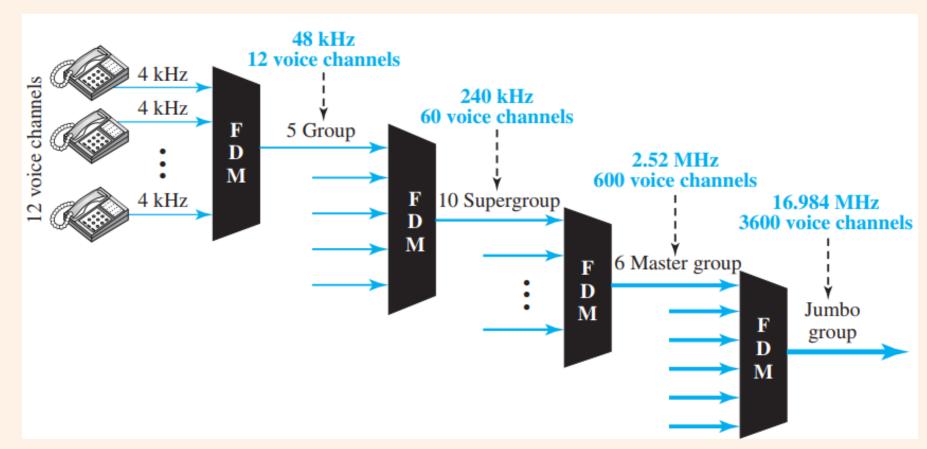


Figure 6.9: Analog hierarchy



- In this analog hierarchy, 12 voice channels are multiplexed onto a higher-bandwidth line to create a group.
- A group has 48 kHz of bandwidth and supports 12 voice channels.
- At the next level, up to five groups can be multiplexed to create a composite signal called a supergroup. A supergroup has a bandwidth of 240 kHz and supports up to 60 voice channels.
- Supergroups can be made up of either five groups or 60 independent voice channels.



- At the next level, 10 supergroups are multiplexed to create a master group. A master group must have 2.40 MHz of bandwidth, but the need for guard bands between the supergroups increases the necessary bandwidth to 2.52 MHz. Master groups support up to 600 voice channels.
- □ Finally, six master groups can be combined into a jumbo group. A jumbo group must have 15.12 MHz (6 × 2.52 MHz) but is augmented to 16.984 MHz to allow for guard bands between the master groups.



References

- 1. Prakash C. Gupta, "Data communications", Prentice Hall India Pvt.
- 2. William Stallings, "Data and Computer Communications", Pearson
- 3. Forouzan, B. A. "Data Communication and Networking. Tata McGraw." (2005).