

Revised 12/12/18

PT-1000 Temperature Probe

Reads **Temperature**

Range -200°C to 850°C

Probe type Class A platinum, RTD

Accuracy +/- (0.15 + (0.002*t))

Reaction Time 90% in 13s

Cable length 81cm

Output **Analog**

Time before recalibration 3–5 years

Life expectancy 15 years

Maintenance N/A



Specifications

Cable length
Weight
Min cable temp
Max cable temp
Sensing material

81cm (32")
40 grams
-55°C
125°C
304 SS

Dimensions 6mm x 81cm (0.2" x 32")

BNC connector Yes


Sterilization Chemical / Autoclave

Food safe **Ye**:

Typical Applications

- Standard lab use
- Field use
- Soil
- Hydroponics / aquaponics
- Beer, wine and other liquor

The PT-1000 can be fully submerged in fresh water or salt water, up to the BNC connector *indefinitely*.

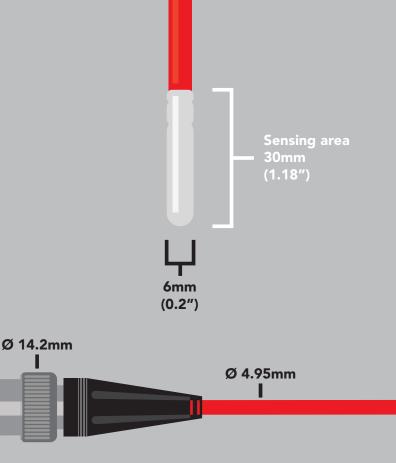



Cable Length 81cm (32")



Operating principle


Unlike any other material, platinums correlation between resistance and temperature seems to be woven into the fabric of the universe. It is for this reason, that the platinum RTD temperature sensor is the industrial standard for temperature measurement.

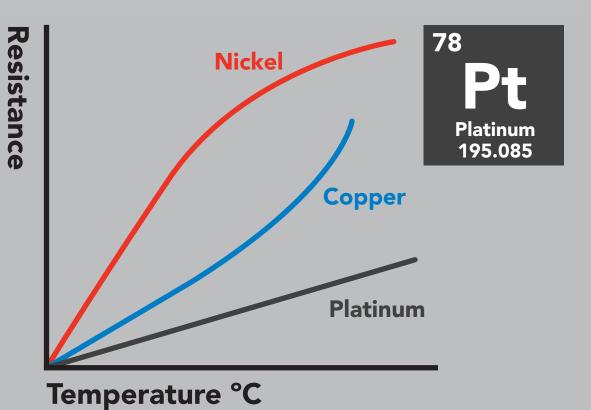

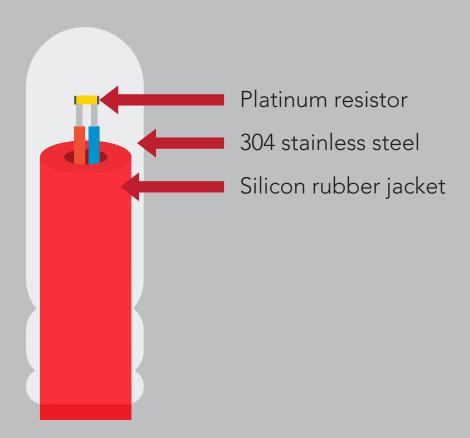



The PT-1000 temperature probe is a resistance type thermometer. Where PT stands for platinum and 1000 is the measured resistance of the probe at 0° C in ohms (1k at 0° C). As the temperature changes the resistance of the platinum changes.

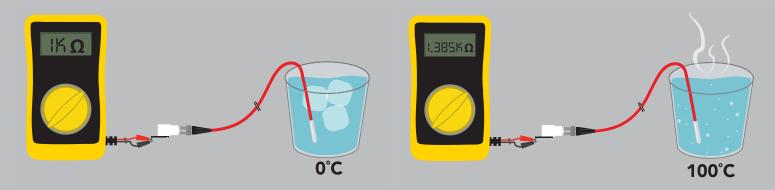

To convert the resistance of the probe to temperature, use the following simplified equation:

$$T = -\frac{\sqrt{(-0.00232(R) + 17.59246)} - 3.908}{0.00116}$$

T = Degrees Celsius

R = Resistance measured from PT-1000 temperature probe


Below is a small table of temperatures and resistances, to help insure the above equation has been properly embedded into your code.

°C		Ω	°C		Ω	C	C		Ω
-10	=	960.9	7	=	1027.3		24	=	1093.5
-9	=	964.8	8	=	1031.2		25	=	1097.3
-8	=	968.7	9	=	1035.1		26	=	1101.2
-7	=	972.6	10	=	1039		27	=	1105.1
-6	=	976.5	11	=	1042.9		28	=	1109
-5	=	980.4	12	=	1046.8		29	=	1112.8
-4	=	984.4	13	=	1050.7		30	=	1116.7
-3	=	988.3	14	=	1054.6		31	=	1120.6
-2	=	992.2	15	=	1058.5		32	=	1124.5
-1	=	996.1	16	=	1062.4		33	=	1128.3
0	=	1000	17	=	1066.3		34	=	1132.2
1	=	1003.9	18	=	1070.2		35	=	1136.1
2	=	1007.8	19	=	1074		36	=	1139.9
3	=	1011.7	20	=	1077.9		37	=	1143.8
4	=	1015.6	21	=	1081.8		38	=	1147.7
5	=	1019.5	22	=	1085.7		39	=	1151.5
6	=	1023.4	23	=	1089.6		40	=	1155.4




Extended temperature range

In order to read temperatures that are above or below the max cable temperature (-55°C to 125°C) additional probe housing or **thermowells**, are needed to protect the cable from any temperature related damage.

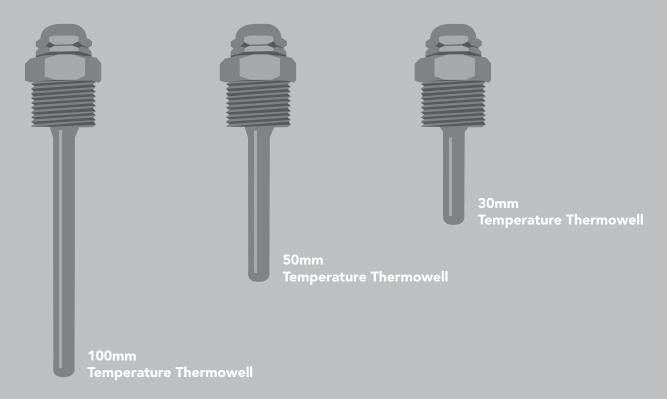

Probe cleaning

Over time PT-1000 probes can become dirty and covered in deposits. Both soft and hard coatings can be removed by lightly brushing around the sensing area.

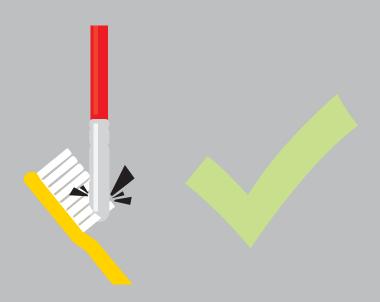




Extending the probe cable length

You can extend the cable to greater than 100 meters with no loss of signal. Atlas Scientific has tested up to 300 meters without a problem, however you run the risk of turning your PT-1000 into an antennae, picking up noise along the length of your cable.

If you want to extend your cable, we recommend that you use proper isolation, such as the **Basic EZO** $^{\text{m}}$ **Inline Voltage Isolator**, or **Tentacle Shield**. Be sure to calibrate your probe with the extended cable.

Extending a probe cable can be easily done with our **BNC Extension Cable**. Simply connect the BNC end of the probe to the Extension cable, and you are all set.

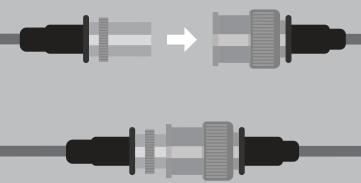

If you need to water proof a BNC connection, we highly recommend using a product like **Coax-Seal** to safely cover and prevent any water damage that may occur.

