



dummy\_calib\_tsbl\_scan\_raw {name == 4000 && wires == 0 && layer == 8 && chamber == 8}

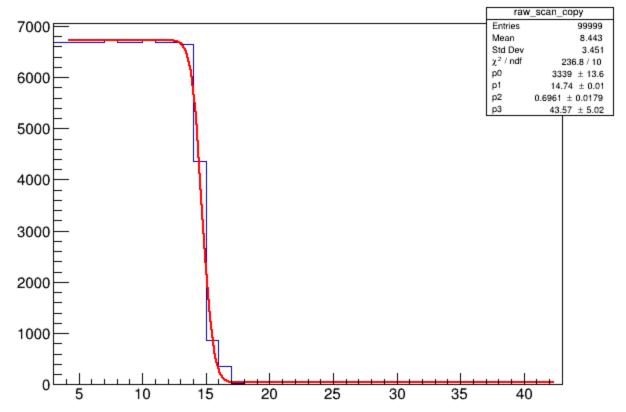


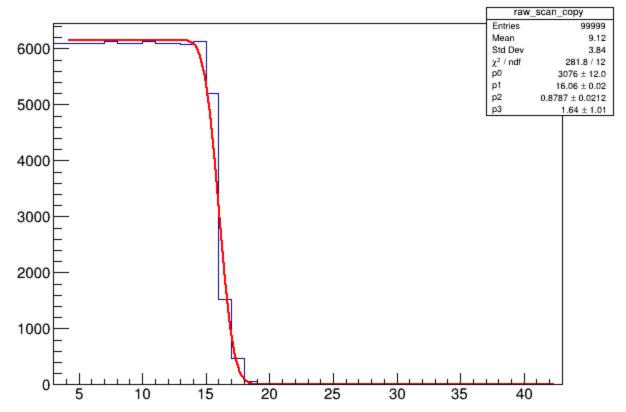

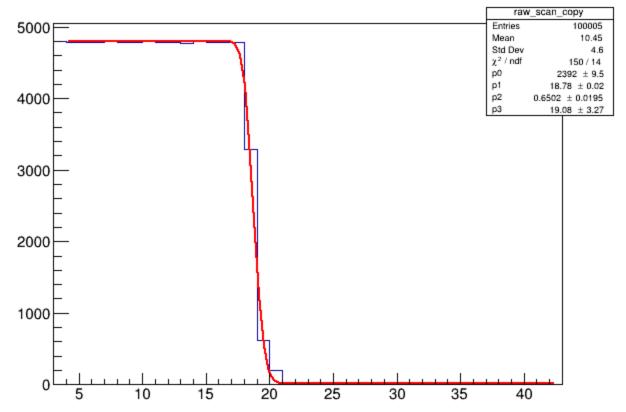


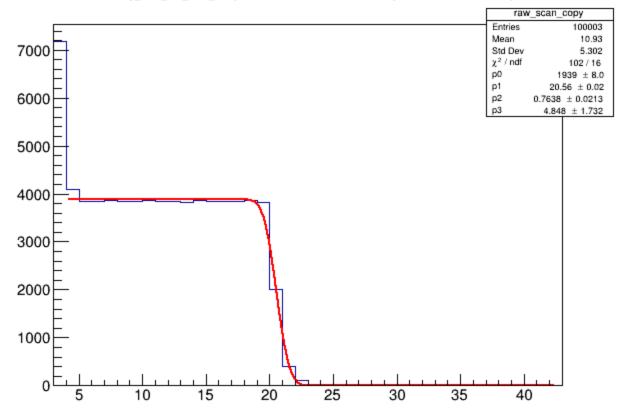


dummy\_calib\_tsbl\_scan\_raw {name == 4000 && wires == 4 && layer == 8 && chamber == 8}

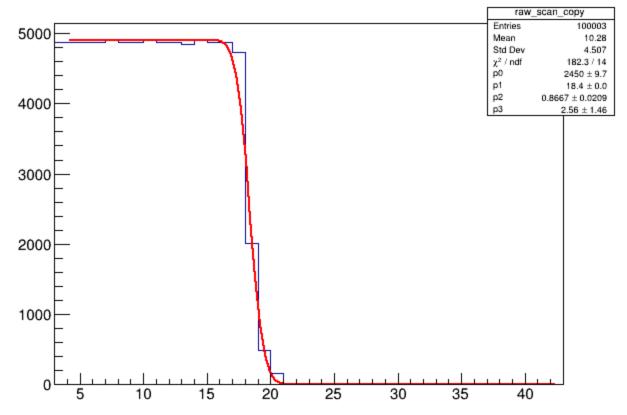

dummy\_calib\_tsbl\_scan\_raw (name == 4000 && wires == 5 && layer == 8 && chamber == 8)

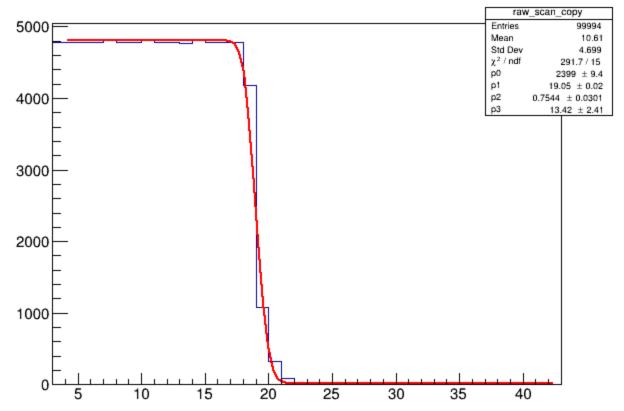

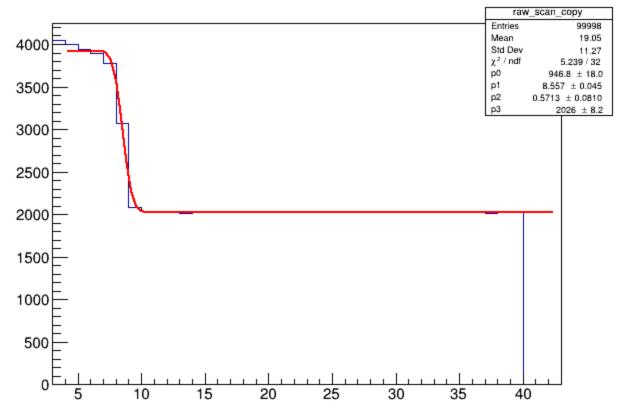

dummy\_calib\_tsbl\_scan\_raw {name == 4000 && wires == 7 && layer == 8 && chamber == 8}

