

USAGE OpenCore UEFI on DELL Optiplex 790xx (Only for Post Install SSD or HD)

- Example using Windows 10:
- ↓ command ↓
- diskpart
- list disk
- sel disk (Disk Number #)
- sel par 1
- format fs=fat32 quick

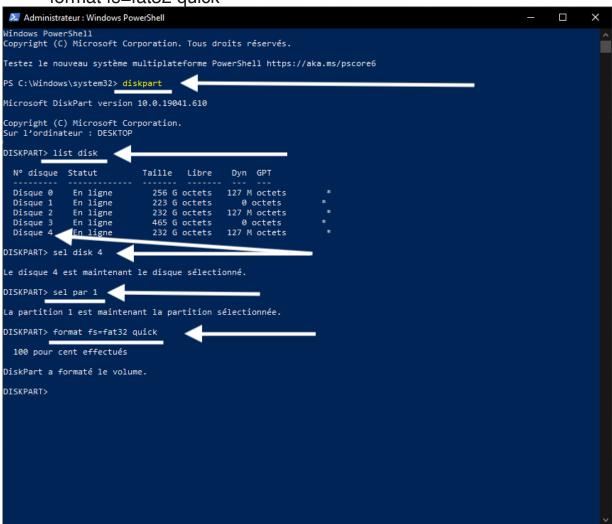

Rename EFI Partition from macOS

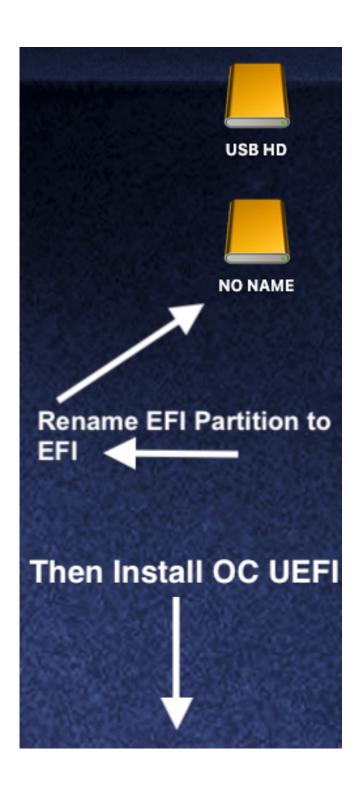



Video Setup Bios UEFI

