

Column #60, April 2000 by Jon Williams:

Calling All Stamps

I remember my first modem.... What a beauty: a 300-baud brick of a device that plugged right into the back of my trusty Commodore 64. On its first day of operation, I used that modem to chat with my friend, Bruce, who lived about 20 miles away. We stayed up all almost night typing messages back and forth to each other. It was horribly inefficient — as far as communications goes — but it was just so darned cool; our computers could talk to each other. Not long thereafter we discovered uploading and downloading. The world had suddenly become a much brighter place.

Today, modems are ubiquitous and we take them for granted. Our access to the Internet is enabled with modems and yet, we hardly give it a thought. I write these articles in Texas and, using my modem, send them off to California for publication. The point is, our big blue world has been made quite a bit smaller by connecting devices with modems. So...how might we use one with a Stamp?

The BASIC Stamp is a great tool for data collection and control. It's ease of programming, I/O and built-in serial capabilities make it a great lab tool that can be connected to a host PC. But what if the Stamp data-collector and the PC are not located in the same room or, better yet, you want to talk to several remote devices?

As we've seen, it's really not a problem; all we need is a modem. There are applications all over the Internet the demonstrate connecting a modem to the Stamp. The problem, thus far, has been packaging. How does one neatly package a salvaged modem with the Stamp? It can be a bit tricky, especially if you want one nice, neat, *small* box in your remote location.

A California-based company called Cermetek (www.cermetek.com) has solved the packaging problem with their line of embedded modems. These modems are very small – not much bigger than a BS2. And, like the BS2, there configured as DIP (albeit 0.8") packages. The modem that we'll use in our application is the Cermetek CH1786, which is available in an App Kit directly from Parallax.

CH1786 Basics

For review, the purpose of a modem is to allow to computers to "talk" to each other over some form of remote connection; usually, but certainly not limited to, telephone lines. In its most basic form, this is accomplished by converting the serial stream of ones and zeros to tones that are compatible with telephone line standards. This is called modulation. The receiving modem converts these tones back to ones and zeros. This is called demodulation. Hence, the term, modem. It's a contraction for modulation / demodulation.

Phone modems also provide an important electrical interface to the telephone line. This is called a Data Access Arrangement (DAA). Keep in mind that the telephone companies are justifiably fussy about devices that are connected to their lines. The CH1786 includes an FCC approved DAA. Even with the approved DAA, it is recommended that protective devices be installed between the modem and the telephone jack. That will reduce the chance of a surge coming in from the telephone lines (pretty common occurrence in high-lightning areas) from damaging the CH1786. The nice thing about using the Cermetek modem is that you can put it into a commercial device without going through the rigors and considerable expense of an FCC evaluation.

Like the Stamp, modems are "smart" devices and will respond to commands. The CH1786 is no exception. The list of commands is referred to as the "AT" (for attention) command set and was originally developed by Hayes for its modems. All modem manufacturers have adopted the AT command set (with modifications). With the sophistication of current modems, the AT command set is very broad and, unfortunately, not always universal. Thankfully, we only need a few of the basic commands for our project.

Our Project: A Remote Temperature Monitor

Our demonstration project is a simple recording thermometer – a remote recording thermometer. It constantly scans a Dallas Semiconductor DS1620 digital thermometer and records the current, high and low values. We'll get the data from the Stamp by calling it with a terminal program.

When a call is detected by the modem, the line is answered and the temperature information is sent to the user's remote terminal. From the remote location, the user is able to refresh the temperature display and even reset the stored high and low temperature values.

To keep things simple, we'll use a general-purpose terminal program (such as Windows® Terminal) as our remote access. But keep in mind that your terminal program does not have to run on Windows®. That's one of the neat things about the remote contact part of this project: the user can be running any operating system. The only requirements of the terminal program are that it runs ANSI emulation and can dial into your Stamp project through the remote computer's phone modem.

About The Circuit

With my typical adherence to the "KISS" theory (Keep It Simple, Silly), the circuit is very straightforward. Four lines are used to connect the Stamp to the CH1786: TX (transmit), RX (receive), RI (ring indication) and DCD (data carrier detect). A quick scan through the code will show that we're not even using the Ring Indicator – it's there for possible future use.

The reason is because the RI line does not go low and stay low during the ring, it actually pulses (low-high transitions) at a 20 to 30 Hertz rate (corresponds with the ringing sound and is probably there to allow your processor to detect distinctive ringing where available). The code includes a short sub-routine for dealing with the pulsing RI line should you want to use this input in your projects (more later).

So how will we know when the user is calling? The DCD line will tell us. This input goes low when the remote user has called in and the two modems are "hooked up." It's very convenient. You might wonder then, why bother we'd with the Ring Indicator? One possible reason is to use it as a sort of warning. By detecting the Ring, critical processes could be finished before the modem answers and has to deal with the remote connection. You might also decide to ignore a call based on current conditions. In our

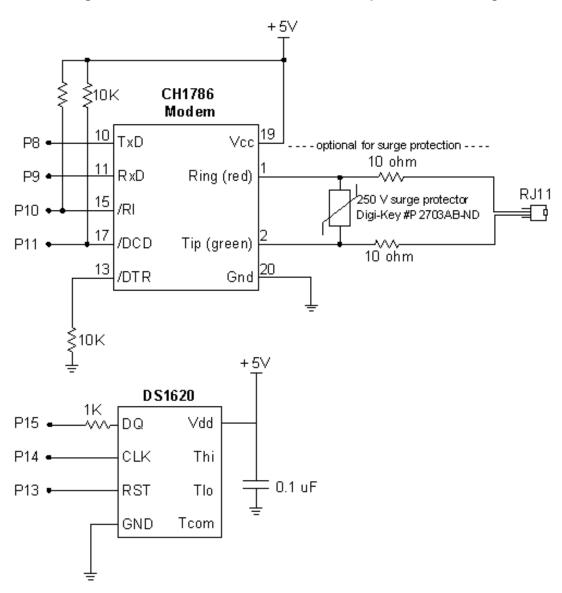


Figure 60.1: CH1786 schematic for remote temperature monitoring

Page 202 • The Nuts and Volts of BASIC Stamps (Volume 2)

case, we're going to tell the modem to answer the phone and let us know when everything is connected.

The DS1620 is connected with a standard 3-wire interface. The clock and data signals can be shared with other devices that use the same 3-wire bus.

Also notice that an external power supply is required. This is important. In operation, the modem draws more current than the Stamp can provide. A simple three-terminal regulator gives us the necessary 5 volts from a junk-box DC power supply.

The Software

The general structure of the software is a task switcher. In operation, a task switcher works like this:


do maintenance do a task do maintenance do another task

This design allows the program to be broken up into small, manageable tasks that don't take a long time to run. This is important in our design since we want to keep tabs on the DCD indication. We'll put that in the *maintenance* section.

When using the task switcher design, there are two choices for updating the task control variable: in the maintenance section (before the BRANCH command) or individually within each task. The method used here is the latter; the task variable is updated by the current task. This allows the system to be more dynamic. For example a task might use the state of an input pin to determine which task will run next.

To new programmers, designing a program in this manner may seem like a lot of work. It really isn't, once you've tried it and, I promise, it will make your programs easier to deal with as they become more sophisticated. And much more flexible when you need to make a design change.

Figure 60.2: Dial-up terminal program connects to BASIC Stamp and modem

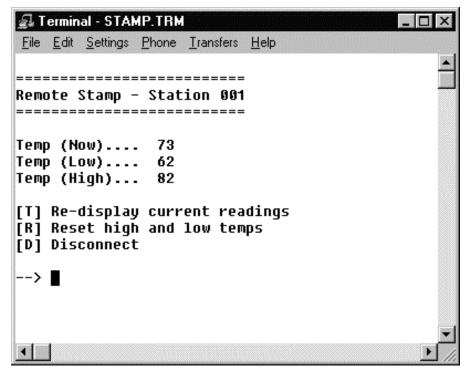

All right, let's look at our code. We start by setting our Dirs (I/O direction) which, in this program, is not actually necessary because the various Stamp commands will set the pins appropriately. It's still a good idea though, if only a reminder to you as to what each pin is doing.

The saved high and low temperatures are set to their opposite extremes. We do this so that these values will be reset to the current temperature on the first scan of the DS1620.

Initializing the modem is handled in two sections. First, we train the modem for speed by sending "AT" and a carriage return at the baud rate we want to use (up to 2400 baud for the Cermetek CH1786). Since we're connecting directly to the modem, we use a "true" (non-inverted) connection. In the Constants section you'll find we've defined T2400 to make the program easier to read.

Our SEROUT command to the modem includes the pacing parameter. This is important on command strings, especially when they get long (the CH1786 will allow up to 40 characters in a command string). If everything works, the modem should respond by sending back "OK." You'll see a SERIN line after our commands. This is to ensure the modem is working. If the modem does not respond with "OK" within two and a half seconds, the program will jump to a routine called Error (once we get past the initialization section, we'll assume the modem is fine and stop "listening" for "OK").

The error handler doesn't actually do anything except wait for one second, then jump back to the initialization section to try again. You could enhance this code by illuminating an error indicator. Just be sure to turn off your error indicator when the modem does initialize.

Most of modem's behavior is controlled by values stored in what are called "S registers." There are dozens or S registers. Thankfully, we only need to worry about two. The first, S0, allows the modem to answer the phone line if set to a value greater than zero. We'll use two.

The second register that we're concerned with is S7. This register determines how long the modem will wait for a carrier from the remote device once it's answered the phone. Thirty seconds should be long enough for the two devices to connect. Don't ignore this setting. I did while experimenting and found that when this register wasn't set, my project would never let go of the phone line when a call had been answered.

Once the modem is working, we'll fire-up the DS1620. Interestingly, it also communicates serially with the Stamp, but in this case it's synchronous serial communications. What this means is that the Stamp must provide a clock signal with the data. The BS2 commands SHIFTOUT and SHIFTIN take care of this very nicely.

The first thing we do with the DS1620 is tell it that we're writing to it. Once we've done that, we send the configuration byte. Our setup is for use with a CPU (that is, we're going to retrieve data from it) and to use free-run mode (continuously scan temperature). With our configuration byte sent, we have to release the DS1620 momentarily so that it can be stored in the DS1620's EEPROM. This takes about 10 milliseconds. With that done, we send it the command to start running. Pretty easy stuff.

Okay, now we're into the heart of the code. The first part (maintenance section) gets the current temperature and updates the stored values. Calling ScanT does this. This routine connects with the DS1620 and retrieves the current temperature. The temperature comes back as a 9-bit value that is actually expressed in 0.5 degrees (Celsius) increments. In our

program, a call to GetF will take care of the conversion to Fahrenheit. If you want to stick with Celsius, change the call to GetC. Both of these routines deal with converting the DS1620 data to whole number values and setting the sign appropriately. Once we've got our current temperature, we update stored high and low values if necessary.

Next we check the DCD line. If it's low, the modem has answered and we can talk to the remote device. On detecting DCD, the program jumps to GetMdm. The first thing this does is pause a bit so that the other end can be ready. I found that some combinations of modems/terminal programs did not respond to the carrier detection as fast as the Stamp/CH1786. You may need to experiment with the PAUSE value.

With everything hooked up and ready the Stamp sends a menu to the remote computer. The menu displays our current and stored temperature readings. With the menu displayed, the program waits for the remote user to press a key.

The key is decoded with a LOOKDOWN command. This code is simple and very effective. The first thing we do is set the variable, *cmd*, to a known bad value. LOOKDOWN will convert a valid key (upper or lower case) to a value from zero to five. If the key is not valid, *cmd* will not be changed. Since we only have three things to do but have six possible *cmd* values, we divide command by two. This fixes it for the BRANCH command. If the key was bad, *cmd* will not work in the BRANCH command (its value exceeds the range of options) and the program will loop back to get another key.

If the remote user presses "t" or "T" the program will go get the current temperature and redisplay the menu.

If the user presses "r" or "R" the program will prompt the user for a confirmation before resetting the stored high and low temperatures. The confirmation is handled by a routine called YesNo. This routine will display the prompt, "Are you sure? (Y/N): " and then wait for up to five seconds for the user to respond. If the user does not respond or presses a key other than "y" or "Y," the answer variable is set to No and the program resumes.

The menu choice of "d" or "D" (for disconnect from session) is handled in the same manner.

Extending the Project

There are several logical extensions to this simple project. The first would be the addition of a real-time-clock (i.e., DS1302) to record the time and date of the high and

low temperature values. The Stamp might also collect the state of other inputs at the time of the temperature recordings. Finally, you might take advantage of the modem's ability to dial out by sending an emergency message to the user's pager (see below).

For advanced applications, a specialized terminal program could be developed. This would simply sending and receiving large amounts of data. Such a program could, for example, be setup to automatically poll the remote Stamps and record the readings to a hard disk. The RTCs in the remote units could be checked and automatically synchronized with the PC. The possibilities with a custom application are endless.

Sending Data to A Pager

Access to most numeric pagers is incredibly easy: dial the pager service, wait for the service to be ready, then punch in a set of numbers on the telephone keypad. This can be accomplished with a modem. The trick is to keep the modem in "command" (dialing) state so that DTMF digits can be sent to the pager service. You can do this by adding a semicolon to the end of the telephone number.

This bit of code will send "911" to a digital pager:

```
Pager: SEROUT TX1, T2400, 10, ["ATDT123-456-7890;", CR]
PAUSE 10000 'let service answer and get ready
send the numbers

SEROUT TX1, T2400, 10, ["ATDT911", CR]
PAUSE 5000 'let number be dialed
SEROUT TX1, T2400, ["+++"]
PAUSE 2000
SEROUT TX1, T2400, 10, ["ATH0", CR] 'hang up

RETURN
```

Some pager services expect a terminating character (usually '#'). If this is the case with your service, simply add it to the message string:

```
SEROUT TX1, T2400, 10, ["ATDT911,#", CR]
```

The comma inserts a small delay (which is programmable in the modem through the S8 register) between the message numbers and the terminating character.

The code listing above is for example only; I don't suggest that you embed operational data this way. A better way to go would be to store your pager service number(s) and possible message in DATA statements. Then call a subroutine that points to the stored pager service number and message.

A final note on sending messages to pagers: Some paging services a finicky about DTMF dialing speed, that is, the duration of the each digit in the dial string. The CH1786 has a default dialing speed of 95 milliseconds for each digit. This should work for most systems. If you find, however, that your system is not being dialed correctly or digits are missing from the transmission string, you can adjust the dialing speed with the S11 register. To change the dialing speed to 125 milliseconds, you can add this line to the modem initialization section:

```
SEROUT TX1, T2400, 10, ["ATS11=125", CR]
```

Sending text messages to an alphanumeric pager is a substantially more involved procedure, so much so that it may not be possible to do with the current line of Stamps (I haven't tried myself). If you're interested, download the Telelocator Alphanumeric Protocol (TAP) from www.motorola.com.

Wrap Up

Just when you though **SERIN** and **SEROUT** across wires on your bench was cool, we've demonstrated that connecting to a remote Stamp across a telephone network is pretty easy too. And, with Cermetek's line of embedded modems, professionally packaging our project is not an issue. As an example of what can be done with a Stamp 2 and a Cermetek modem, take a look at www.hotwireftx.com.

So what's next? Well, I've got some ideas but I'd really rather hear from you. Feel free to put your computer's modem to work and send your suggestions via e-mail.

Suggested Reading:

I consider these "must have" books for any Stamp programmer:

Programming And Customizing The Basic Stamp Computer

by Scott Edwards www.seetron.com ISBN 0-07-913684 (paperback) Also available from Parallax

Scott's book has a great project that allows you to control X-10 devices remotely using a modem and simple terminal program.

Serial Port Complete

by Jan Axelson www.lvr.com ISBN 0-9650819-2-3

If you want to learn the nitty-gritty details of serial communications, this is the book for you. Everything you need to know to role your own communications programs. It even has a large section devoted to Stamps.

```
' Nuts & Volts - Stamp Applications
' April 2000
' ----[ Title ]-----
' File..... CERMETEK.BS2
' Purpose... Cermetek CH1786 demo program
' Author.... Jon Williams
' E-mail.... jonwms@aol.com
' ----[ Program Description ]-------
' This program monitors a Dallas Seminconductor DS1620 digital thermometer
' while waiting for an incoming call. When a call is received, the Stamp
^{\mbox{\tiny I}} causes the modem to answer the call then displays temperture data on
' the remote terminal.
' ----[ I/O Definitions ]------
' modem pins
TX1
      CON
                                ' transmit to modem
                                ' receive from modem
RX1
      CON
            9
                                ' ring indicator
     VAR In10
RI
                                 ' carrier detect
DCD
     VAR
            In11
' DS1620 pins
Rst
     CON
          13
                                 ' DS1620.3
Clk
     CON
          14
                                 ' DS1620.2
DQ
     CON
            15
                                 ' DS1620.1
' ----[ Constants ]------
True CON False CON
             1
      CON
No
Yes
      CON
             0
T2400 CON
            396
                                 ' 2400 baud for modem
      CON
            10
                                 ' line feed character
LF
FF
      CON
            12
                                 ' form feed (clear remote screen)
```

Page 210 • The Nuts and Volts of BASIC Stamps (Volume 2)

```
' DS1620 commands
RTmp
     CON $AA
                                ' read temperature
WTHi CON $01
                                ' write TH (high temp register)
WTLo CON $02
                                ' write TL (low temp register)
RTHi CON $A1
                                ' read TH
                                 ' read TL
RTLo CON $A2
Strt CON $EE
                                 ' start conversion
            $22
                                ' stop conversion
StpC CON
WCfg CON
            $0C
                                 ' write configuration register
RCfg CON
            $AC
                                 ' read configuration register
NTasks CON 3
                                 ' total number of tasks
' 9-bit temp input from DS1620
tmpIn VAR Word
                            ' negative flag
' half degree C bit
' converted fahrenheit value
nFlag VAR tmpIn.Bit8
hlfBit VAR tmpIn.Bit0
tempF VAR Word
tempC VAR Byte
                               ' converted celcius value
                                ' current temperature
tmpNow VAR Word
                                ' low temp
tmpLo VAR Word
                                ' high temp
tmpHi VAR Word
sign VAR Byte
sLo VAR Byte
sHi VAR Byte
                                 ' - for negative temps
inByte VAR
cmd VAR
answer VAR
            Byte
                                 ' input from user terminal
             Byte
                                 ' command pointer
                                 ' user response to prompt
            Byte
                                 ' task control variable
task VAR
            Byte
                                 ' for ring indicator filter
riFltr VAR
            Byte
' ----[ EEPROM Data ]-------------------
' ----[ Initialization ]------
Init: Dirs = %011000010000000
      tmpLo = $FFFF
                                 ' start with opposite extremes
      tmpHi = 0
I Modm: PAUSE 250
                                 ' allow modem to power up
```

```
' train modem for speed
      SEROUT TX1, T2400, 10, ["AT", CR]
      SERIN RX1, T2400, 2500, Error, [WAIT ("OK")]
      PAUSE 250
      ' auto answer on second ring (S0=2)
       ' set max time for carrier detect to 30 secs (S7=30)
      SEROUT TX1, T2400, 10, ["ATS0=2 S7=30", CR]
      SERIN RX1, T2400, 2500, Error, [WAIT ("OK")]
I_1620: HIGH Rst
                                 ' alert the DS1620
      \verb|SHIFTOUT DQ,Clk,LSBFIRST,[WCfg]| & | write configuration| \\
       ' use with CPU; free run mode
      SHIFTOUT DQ, Clk, LSBFIRST, [%0000010]
      LOW Rst
      PAUSE 10
                                  ' pause for DS1620 EE write cycle
      HIGH Rst
      SHIFTOUT DQ,Clk,LSBFIRST,[Strt] ' start temp conversions
      LOW Rst
NoDCD: IF DCD = Yes THEN NoDCD ' make sure DCD is clear
Main: GOSUB ScanT
                                  ' get current temperature
      IF DCD_ = Yes THEN GetMdm ' call received
      BRANCH task, [Task0, Task1, Task2]
      GOTO Main
Task0: ' task code here
      task = 1
                                  ' select a specific task
      GOTO NextT
                                  ' go do it
Task1: ' task code here
      task = 2
      GOTO NextT
Task2: ' task code here
      task = 0
      GOTO NextT
NextT: ' task = task + 1 // NTasks ' round-robin to next task
```

Page 212 • The Nuts and Volts of BASIC Stamps (Volume 2)

```
GOTO Main
       END
' ----[ Subroutines ] ------
' =========
' Modem Routines
' =========
' error with modem
' - structured as seperate routine to allow user indications/enhancements
Error: ' additional code here
       PAUSE 1000
                                  ' try to initialize again
      GOTO I_Modm
GetMdm: PAUSE 5000
                                  ' let other end get ready
Modm1: GOSUB DoMenu
                                  ' show readings and menu
Get1: SERIN RX1, T2400, [inByte] ' wait for input
       ' process user input
      cmd = 99
       ' convert letter to digit (0..5)
      LOOKDOWN inByte, ["tTrRdD"], cmd
      ' branch to handler
       BRANCH cmd, [Cmd0, Cmd1, Cmd2]
       GOTO Modm1
Cmd0: GOSUB ScanT
                                   ' get current temp
      GOTO Modm1
Cmd1: GOSUB RstT
                                  ' reset high and low
      GOTO Modm1
Cmd2: GOSUB Discon
                                  ' disconnect from user
      IF answer = No THEN Modm1 ' stay with user
GOTO NoDCD ' back to the beginning
' clear remote terminal and display menu
DoMenu: SEROUT TX1, T2400, [FF]
      SEROUT TX1, T2400, ["==========", CR, LF]
      SEROUT TX1, T2400, ["Remote Stamp - Station 001", CR, LF]
      SEROUT TX1, T2400, ["=========", CR, LF]
      SEROUT TX1, T2400, [LF]
SEROUT TX1, T2400, ["Temp (Now).... ", sign, DEC tmpNow, CR, LF]
       SEROUT TX1, T2400, ["Temp (Low).... ", sLo, DEC tmpLo, CR, LF]
```

```
SEROUT TX1, T2400, ["Temp (High)...", sHi, DEC tmpHi, CR, LF]
       SEROUT TX1, T2400, [LF]
       SEROUT TX1, T2400, ["[T] Re-display current readings", CR, LF]
       SEROUT TX1, T2400, ["[R] Reset high and low temps", CR, LF]
       SEROUT TX1, T2400, ["[D] Disconnect", CR, LF]
       SEROUT TX1, T2400, [LF, "--> "]
       RETURN
' reset high and low temperatures
RstT: SEROUT TX1, T2400, [CR, LF, LF, "Reset? "]
       GOSUB YesNo
       IF answer = No THEN RstX
       GOSUB ScanT
       tmpLo = tmpNow
       sLo = sign
       tmpHi = tmpNow
       sHi = sign
RstX: RETURN
' disconnect
Discon: SEROUT TX1, T2400, [CR, LF, LF, "Disconnect? "]
       GOSUB YesNo
       IF answer = No THEN DiscX
       SEROUT TX1, T2400, [CR, LF, LF, "Disconnecting.", CR, LF]
       ' return modem to command state
       ' and hang up
       PAUSE 2000
       SEROUT TX1, T2400, ["+++"]
       PAUSE 2000
       SEROUT TX1, T2400, 10, ["ATHO", CR]
DiscX: RETURN
' confirm for [Y]es or [N]o
    and get user input (default = No)
YesNo: SEROUT TX1, T2400, ["Are you sure? (Y/N) : "]
       answer = No
       ' get answer
       ' - but only wait for 5 seconds
       SERIN RX1, T2400, 5000, YesNoX, [inByte]
       IF inByte = "y" THEN IsYes
       IF inByte = "Y" THEN IsYes
```

Page 214 • The Nuts and Volts of BASIC Stamps (Volume 2)

```
GOTO YesNoX
IsYes: answer = Yes
YesNoX: RETURN
' process ring indicator
' - filters pulsing ring indicator
^{\mbox{\tiny I}} - waits for about 0.25 second of no RI pulsing before returning
DoRing: ' your code here
 ' (i.e., count number of rings)
RIWait: riFltr = 0
                                       ' clear the "no pulses" counter
RIchk: IF RI = Yes THEN RIWait 'still pulsing riFltr = riFltr + 1 'not pulsing,:

IF riFltr > 50 THEN RIX 'RI cle
                                       ' not pulsing, increment count
                                              ' RI clear now
                                      ' 5 ms between RI scans
       PAUSE 5
                                       ' check again
       GOTO RIchk
                                       ' done - outta here
RIx: RETURN
' =========
' DS1620 Routines
' get current temperature
' -- update high and low readings
ScanT: HIGH Rst
                                     ' alert the DS1620
       SHIFTOUT DQ,Clk,LSBFIRST,[RTmp] ' read temperature SHIFTIN DQ,Clk,LSBPRE,[tmpIn\9] ' get the temperature
       LOW Rst
       GOSUB GetF
                                       ' convert to Farhenheit
        tmpNow = tempF
        IF (tmpLo < tmpNow) THEN THigh
                            ' set new low
        tmpLo = tmpNow
       sLo = sign
THigh: IF (tmpHi > tmpNow) THEN TDone
       tmpHi = tmpNow ' set new high
       sHi = sign
TDone: RETURN
' convert reading from 1/2 degrees input (rounds up)
GetC: IF nFlag = 0 THEN CPos ' check negative bit (8)
        sign = "-"
                                       ' set sign
        tempC = -tmpIn / 2 + hlfBit ' if neg, take 2's compliment
       GOTO CDone
CPos: sign = " "
       tempC = tmpIn / 2 + hlfBit
```