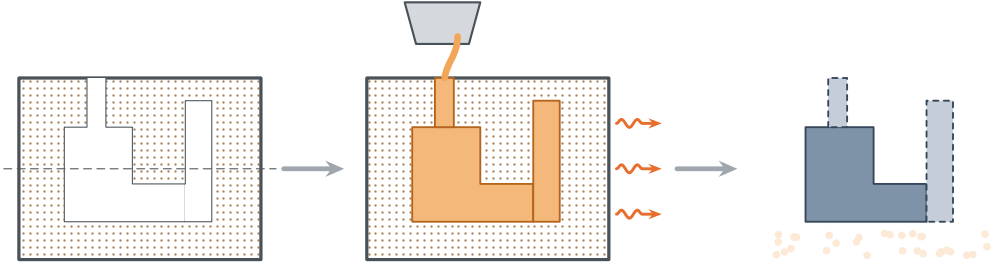

1 sand mould with cavity

2 pour, solidify

3 break the sand, cut gate and riser