


CPU / CLOCK

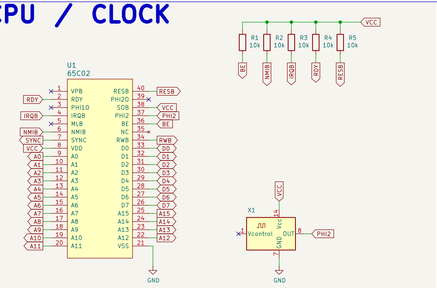


KIM MONITOR

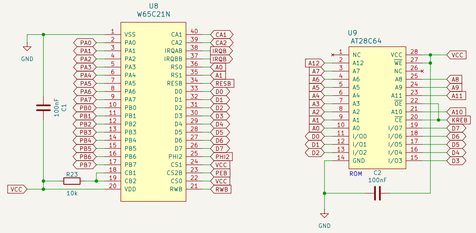

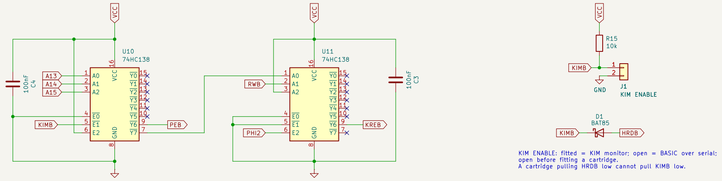



KIM ENABLE: fitted = KIM monitor; open = BASIC over serial;
open before fitting a cartridge.
A cartridge pulling HRDB low cannot pull KIMB low.

IO5 | SERIAL

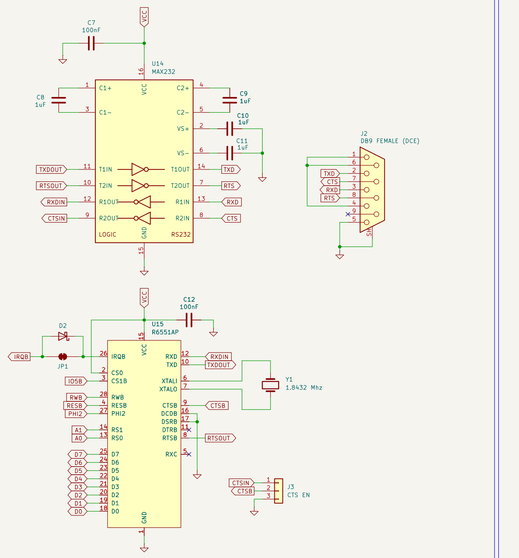


KEYPAD

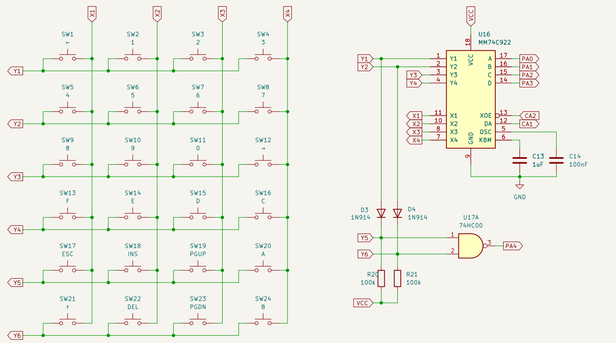





RAM / ROM

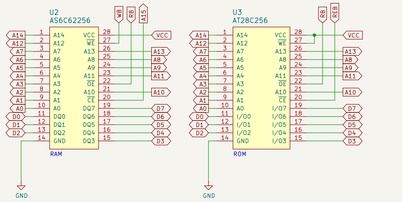


ROM DECODING

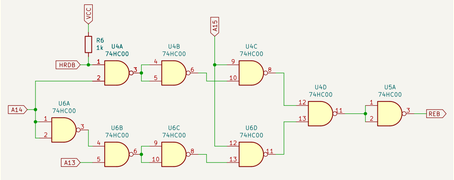


RESET

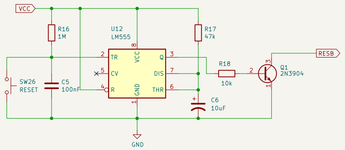


CARD SLOT / 6502 BUS

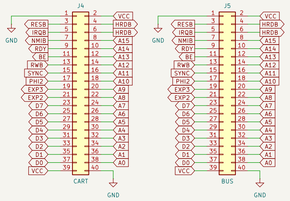


POWER

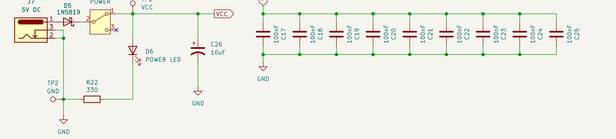

IO DECODING

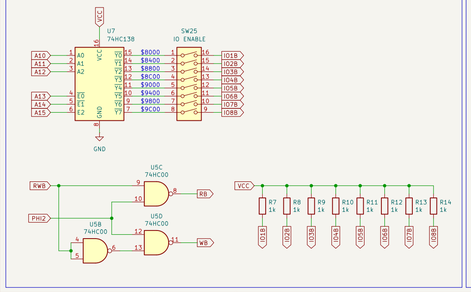



LCD

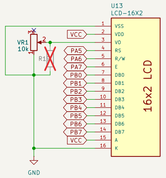

BREADBOARD HEADERS

One strip of female headers above the breadboards, for jumper wires.
Row 1 is the 6502 BUS odd pins. Row 2 the even pins (EXP0 and EXP1 are HRDB).
Select the eight I/O selects after the DIP switch.

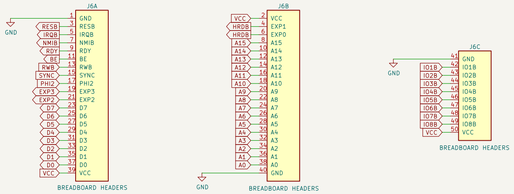

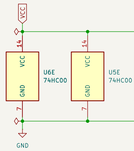

A.C. Wright Design
Sheet: /
File: KIM Board.kicad_sch

Title: 6502 KIM Board

Size: User	Date: 2026-10-25	Rev: 1.0
KiCad E.D.A. 10.0.3		Id: 1/1