


WORK INSTRUCTIONS

ReDry 2-Way Vent — Assembly & Packing

For Abby & Alberto · August 23, 2026 · Photos from the shop walkthrough, Aug 22, 2026

WHAT YOU ARE BUILDING

The **ReDry 2-Way Vent**: a roof-drying vent built on a spun-aluminum base. The white two-way vent body (with the fan inside) locks onto the aluminum standpipe, a white sleeve and elbow hood cover it, and the finished vents are packed two per box — laid head to tail — with a trim ring and an installation sheet.

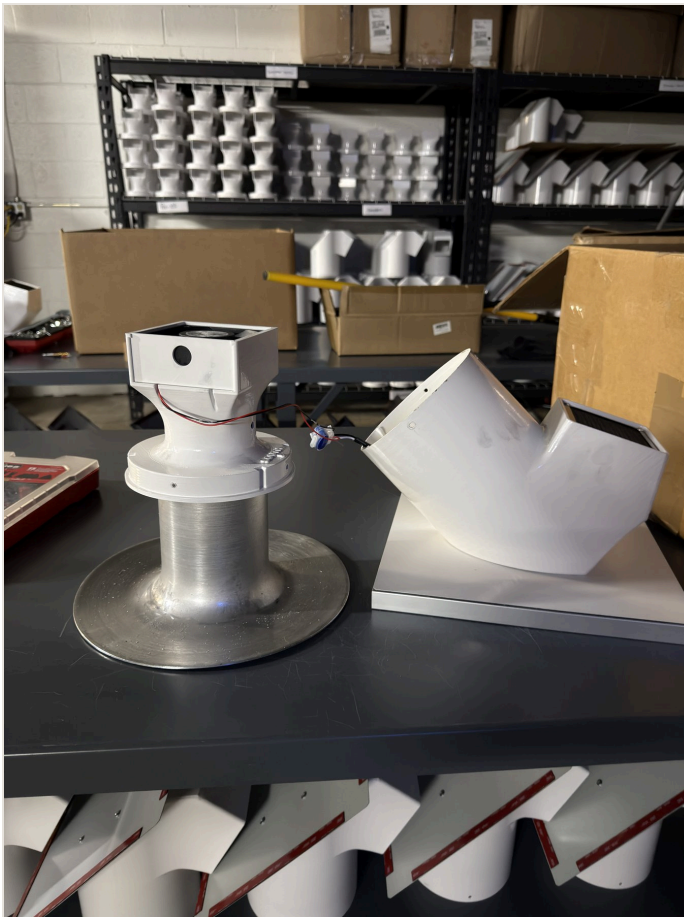

Each finished box contains:

1. Two fully assembled vents (aluminum base + vent body + sleeve + elbow hood), laid head to tail
2. One white ReDry trim ring

3. One printed "Vent Installation Guide" sheet
4. Kraft paper void fill + white foam strips

PARTS AND WHERE THEY LIVE

Aluminum base (12" flange + standpipe) — bench / incoming rack

Two-way vent body (bell + fan box, wired) — parts rack

White sleeve + elbow hood — racks by the bench (hoods have red adhesive strips)

Long threaded screw + wing nut — hardware at the bench

Self-tapping button-head screws — hardware at the bench

ReDry trim rings — stack at the shipping cart


Vent Installation Detail sheets — stack at the shipping desk

ULINE 24×24×12 boxes (S-4910), flat — pallet by the conveyor

Kraft void-fill paper — dispenser under the shipping cart

White foam strips — packing station

Water-activated tape (plain + ReDry print) — tape machine on the shipping cart

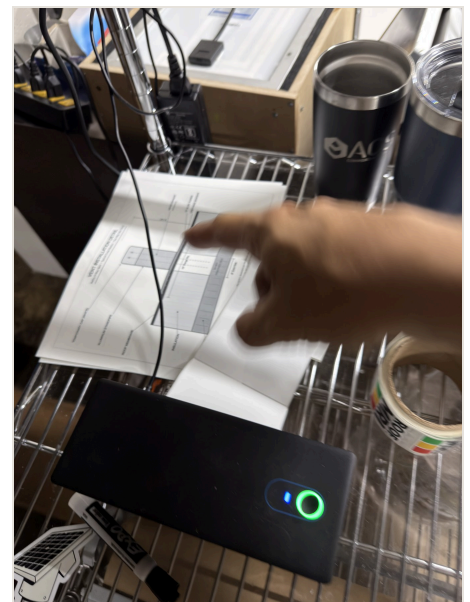


PART 1 — ASSEMBLE THE VENT

The white temporary cap is **not** used on assembled vents — capping bases is a [separate job](#).

1 Start with the aluminum base

Set the base on the bench. Note the **slots near the top of the standpipe** — the vent body locks through these. No cap on these bases.

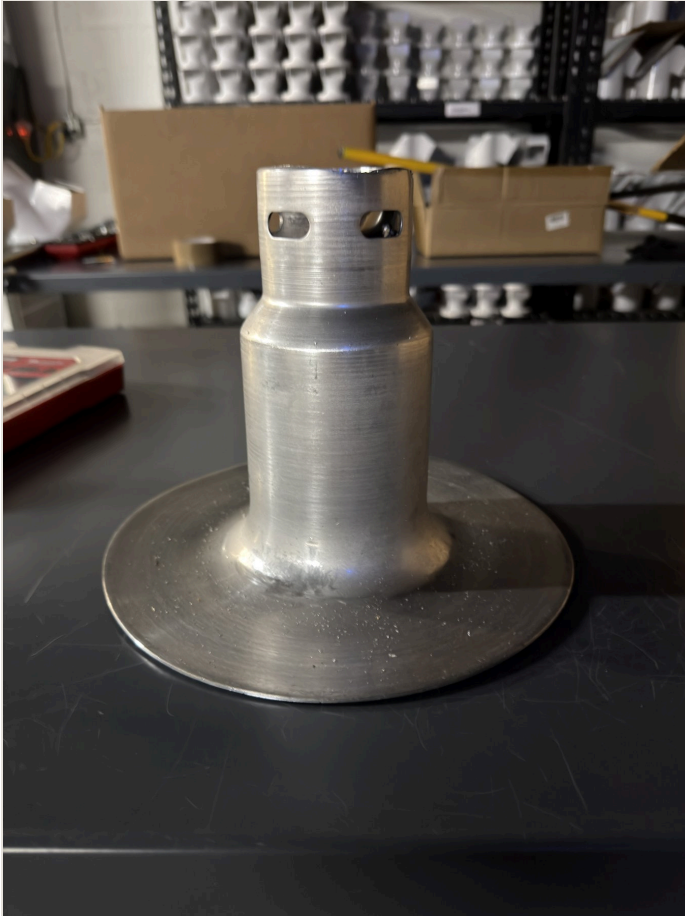

Know the vent body

The white two-way vent body: round bell that fits the standpipe, square fan box with the round port, and the fan lead (red/black wires with the connector). There are **pass-through holes at the neck** — find them before you start.



3

Set the vent body on the standpipe and drop in the long screw

Seat the bell over the standpipe. Drop the **long threaded screw** down through the neck hole so it passes through the standpipe slot.




4 Wing nut from below — snug it

Thread the **wing nut** onto the screw from underneath and tighten until the body is locked to the standpipe. Snug is enough — do not crush the plastic. Keep the fan lead tucked so it never gets pinched.




5 Slide the white sleeve over the standpipe

Bring over the sleeve and the elbow hood. Slide the sleeve down over the standpipe and line up its pre-drilled hole with the aluminum.

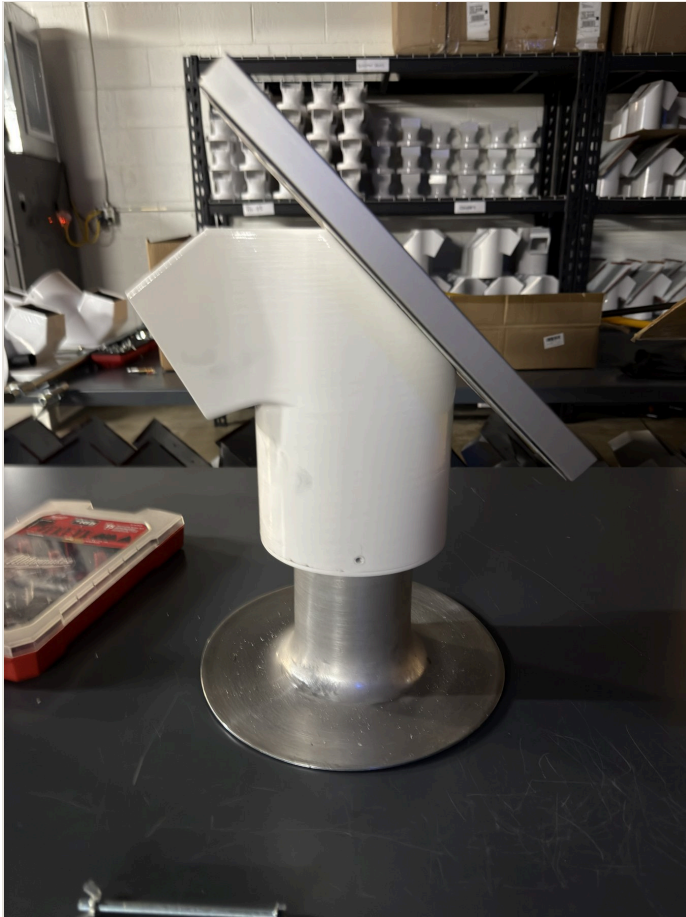

Screw the sleeve to the standpipe

Drive a **self-tapping button screw** through the pre-drilled hole so it bites the aluminum.

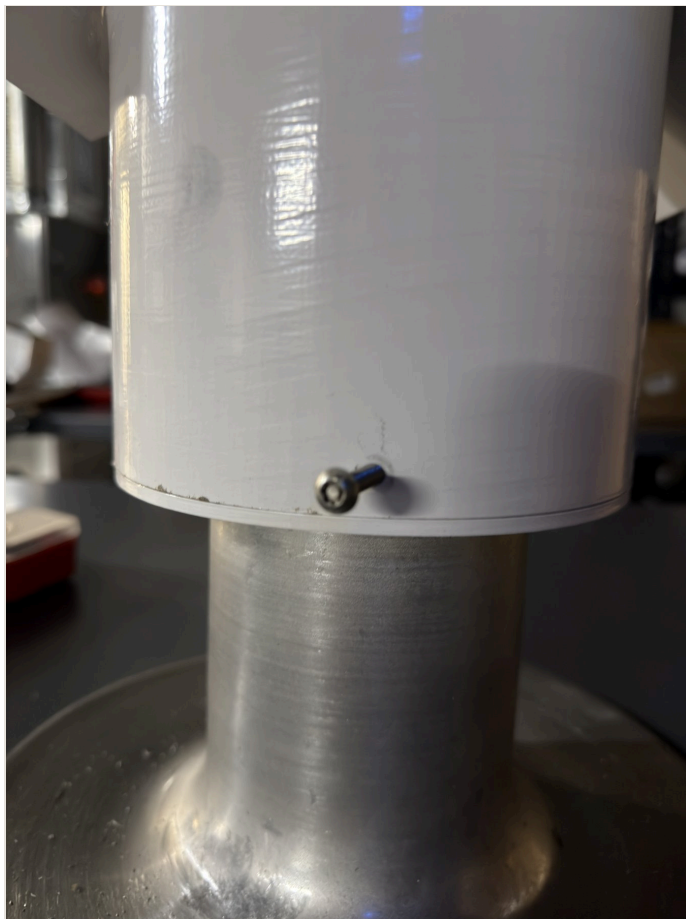

7 Set the elbow hood and screw it at the seam

Set the elbow hood over the sleeve, opening facing down. Drive self-tapping screws at the hood-to-sleeve seam (and the second seam screw if the unit calls for it).



Assembly check: body locked (wing nut snug), both seam screws in, fan lead and connector protected inside, nothing rattles.

PART 2 — BOX IT

Take a flat **24×24×12** blank from the pallet and fold it on the conveyor table.



9 Tape the bottom — H pattern

At the tape machine: set the length on the dial, press the lever, and it feeds wetted gummed tape. One strip down the center seam first, then the edge strips to finish the **H**. Keep the machine's water tank filled so the tape sticks.





10 Two vents go in — head to tail

Flip the box upright. Each box gets two vents, laid head to tail — the second turned opposite to the first, so each hood sits beside the other vent's flange.




11 Pack it with kraft paper

Pull kraft paper from the dispenser, crumple it, and pack it around the vents so nothing shifts. Lay the white foam strips along the vents.



12 Add the installation guide and the trim ring

Every box gets **one printed Vent Installation Guide** and **one ReDry trim ring**, on top of the packed vents.

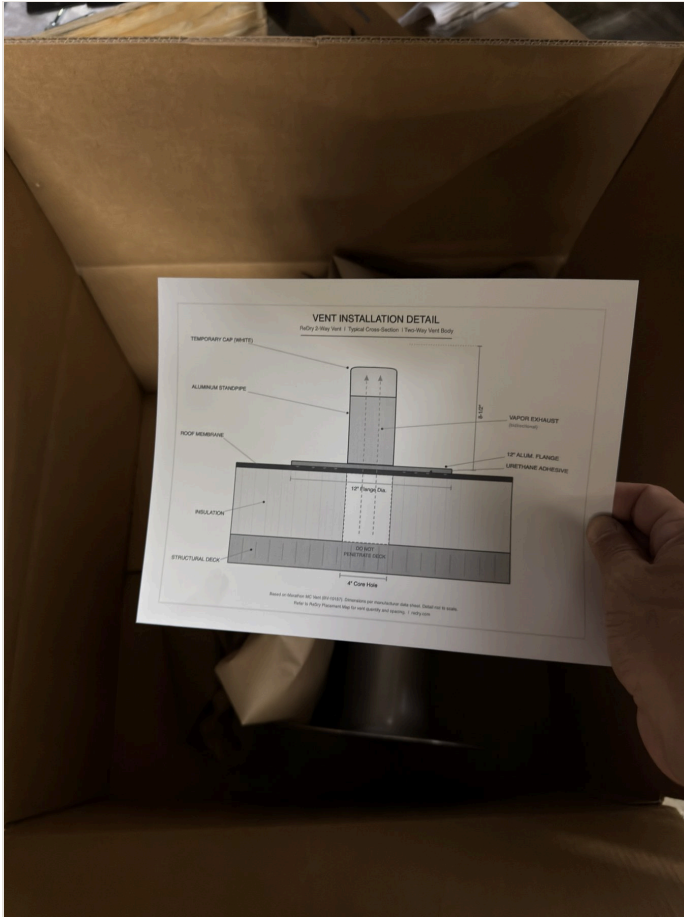



13 Close and seal with ReDry tape

Fold the flaps and seal the top with the **ReDry-printed gummed tape** strip.



FINAL CHECK BEFORE IT LEAVES YOUR STATION

- ☐ Wing nut snug — vent body does not twist on the standpipe
- ☐ Seam screws in at sleeve and hood
- ☐ Fan lead and connector tucked and unpinched
- ☐ Box bottom sealed in an H pattern
- ☐ Contents: two vents head to tail + foam strips + trim ring + installation guide + void fill
- ☐ Top sealed with ReDry tape; FRAGILE stickers from the cart if required

To confirm with Adam: Exact screw count per seam (photos show one per seam). Is it one trim ring per box, or one per vent?