

Laser-cut phone stand

Four parts / nominal 6 mm plywood / glued tab-and-slot assembly

SIDE / phone shown dashed

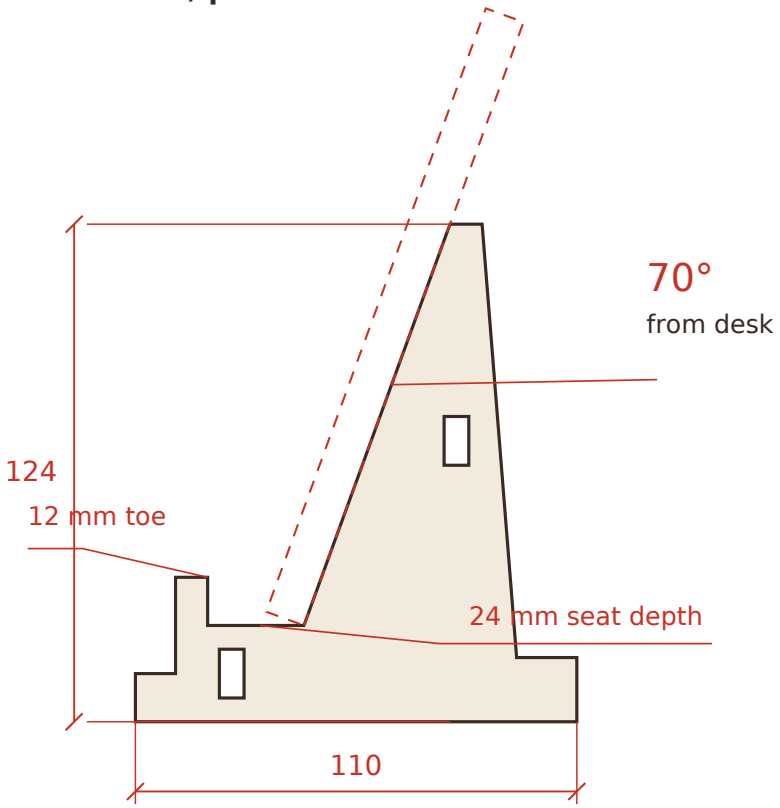

ASSEMBLY / A x 2 + B x 2

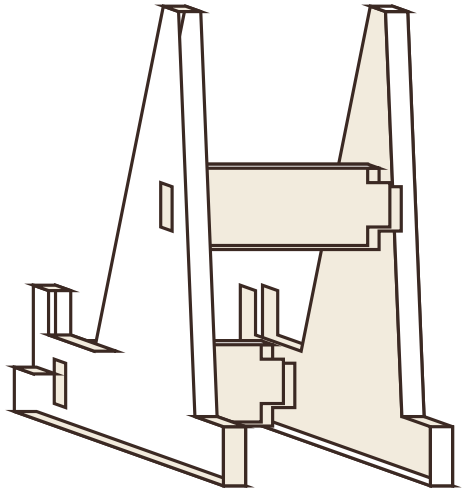

62 mm outside width / 50 mm clear inside

Phone envelope to test

64-90 W x 140-180 H x 6-14 thick

Centered, upright; check the actual case and cable.

What keeps it together

Two crossbars fix the spacing and resist racking.

Both side supports include the seat and front toe.


Glue the four joints; round and sand phone contacts.

Geometry checked. Physical fit and stability have not yet been tested.


Phone stand / parts and joints

All pieces cut flat / nominal 6 mm plywood / no bent or floating components

A / SIDE SUPPORT / CUT 2

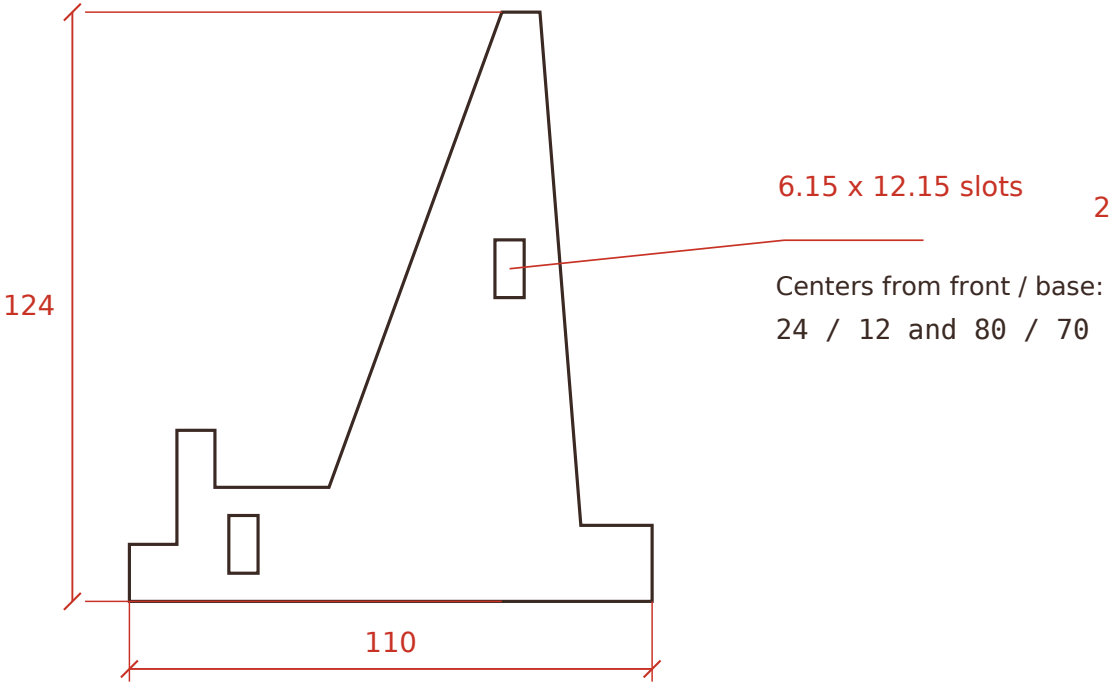

B / CROSSBAR / CUT 2

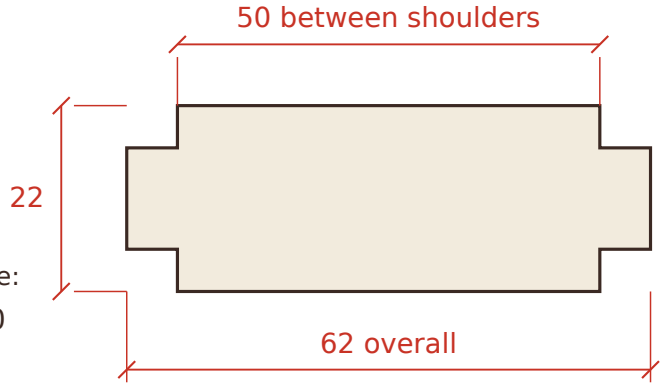

Tabs: 6 long x 12 high

Full 6 mm sheet thickness passes through each slot.

0.15 mm total nominal clearance, before kerf setup.

Re-size slots and tabs to measured sheet thickness.

Assembly

1. Cut a joint coupon and adjust kerf / clearance.
2. Fit both crossbars into one side support.
3. Add the other side; glue, square and clamp.
4. Sand contacts; add thin felt if the phone needs it.

Release checks

Test the smallest and largest intended phones.

Confirm case fit, front retention and cable access.


Push lightly from front, rear and both sides.

Do not treat this drawing as a tested load rating.

CNC hardwood tray

Single solid blank / 180 x 100 x 20 finished / 14 deep pocket / 6 mm floor

PLAN / grain along the 180 mm length

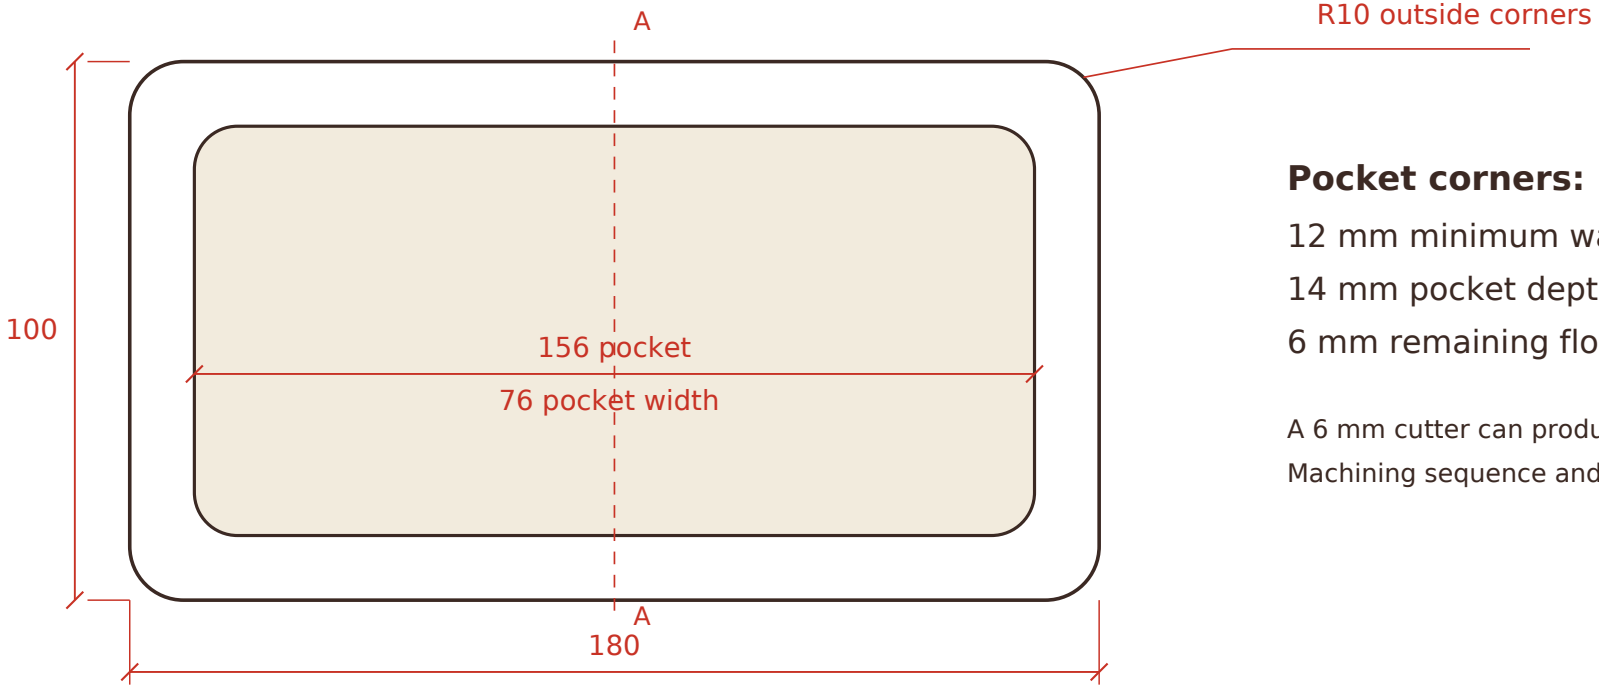

Pocket corners: R8

12 mm minimum wall


14 mm pocket depth

6 mm remaining floor

A 6 mm cutter can produce the R8 pocket.

Machining sequence and feeds are shop-set.

SECTION A-A / across the 100 mm width

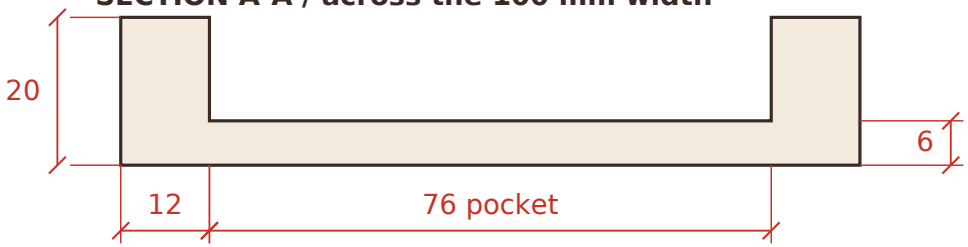

Machining + finishing

Surface stock to 20 mm before pocketing.

Pocket first; profile last with secure workholding.

Ease the rim and underside edges by hand.

Engrave the number on the underside, max 0.5 deep.

Check the floor for movement after machining.