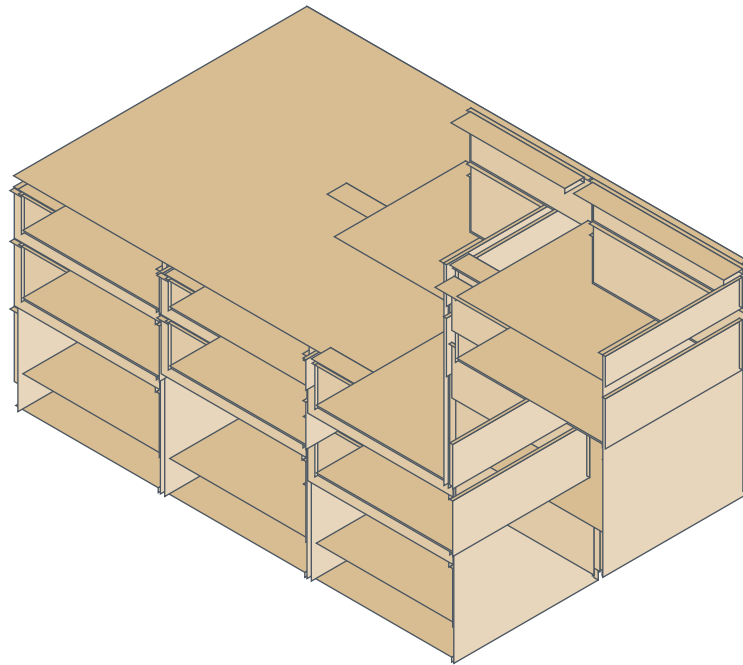


Assembly manual

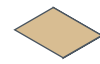
Mobile Storage Workbench · double-sided island · 18 drawers



Time	~33 h over several sessions	People	2 (worktop + island are heavy)
Level	Advanced — dovetails + wood runners	Glue	PVA; have wet rag + clamps ready
Tools	Table saw, router (straight + dovetail), drill, chisels, clamps, square, mallet		

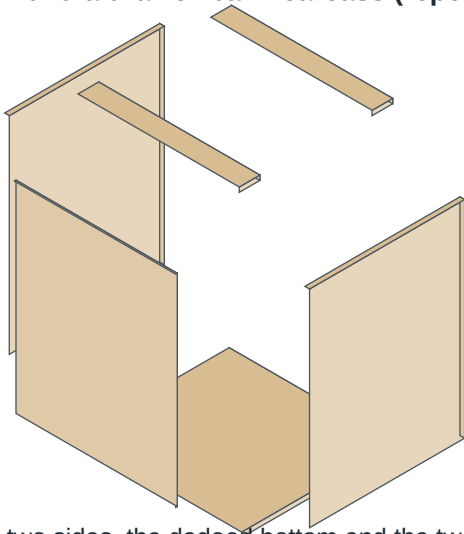
Read every step before you start. Dry-fit (no glue) each sub-assembly first; glue only once it goes together square.

Parts (cut from the sheet layout — see the design sheet)

 A ×36 Drawer box side 569×110×12 mm	 B ×12 Side 800×600×18 mm	 C ×6 Bottom 473×594×18 mm	 D ×18 Drawer box bottom 484×569×6 mm	 E ×12 Top stretcher 473×80×18 mm	 F ×6 Back 782×473×6 mm
 G ×36 Drawer box front/back 460×150×12 mm	 H ×1 Run countertop 1829×1219×40 mm	 I ×18 Drawer front 503×190×18 mm	 J ×36 Drawer wood runner 569×30×18 mm		

Hardware & consumables	
Drawer pull	18 — one per drawer
Wood runner	36 hardwood strips (2 per drawer)
Assembly screw	~24 — carcass
Back panel screw	~60
Locking castor	4 — heavy-duty, ≥200 kg each (buy separately)
Edge banding	~50 m to match shown edges
Wood glue (PVA)	~1 L
Sandpaper	120–220 grit
Finish	hard-wax oil / poly for the maple top

1

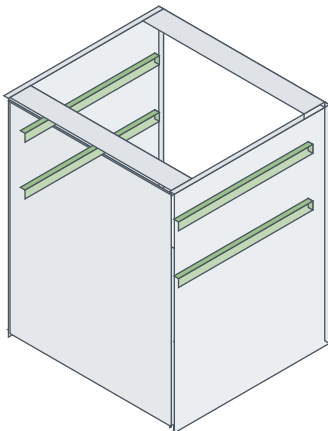
Build a drawer-bank carcass (repeat ×6)

Dry-fit two sides, the dadoed bottom and the two top stretchers into a box; the back sits in the rear rabbet. Check it is square, then glue and clamp. Groove/dado already cut.

Parts: B C E F

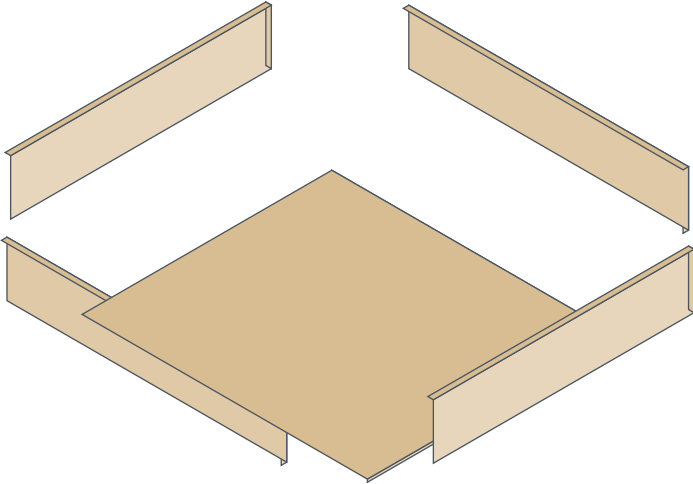
Hardware/tools: PVA glue, bar clamps, square

2

Fit the hardwood drawer runners

Screw a hardwood runner to each carcass side at every drawer level (two per drawer). The grooved drawer sides will ride on these — no metal slides.

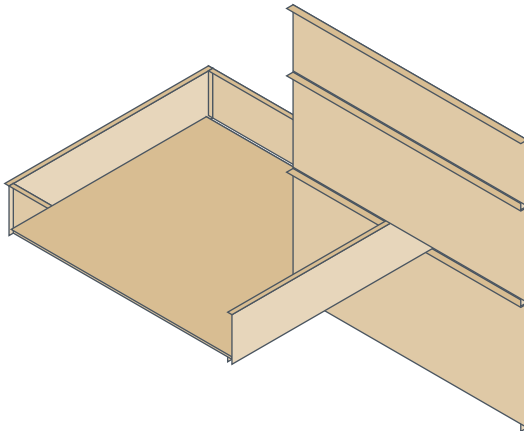
Hardware/tools: 2 screws per runner

3**Build a dovetailed drawer box (repeat ×18)**

Cut the drawer box: dovetail the corners (tails on the SIDES so the front can't pull off). Plough a groove in all four walls for the bottom.

Parts: A G D

Hardware/tools: PVA glue, dovetail jig

4**Fit the bottom & attach the drawer front**

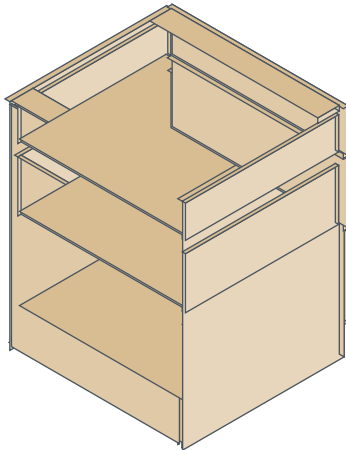
Slide the plywood bottom into its grooves as you glue up the box (don't glue the bottom — let it float). Screw the graduated front to the box from inside; fit the pull.

Parts: I

Hardware/tools: Drawer pull, 4×16 screws

5

Slide the drawers into the bank

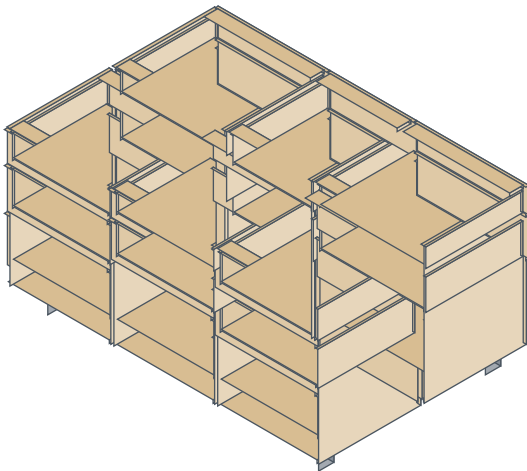


Groove in each drawer side drops onto its runner. Test the action; wax the runners so they glide. Repeat for all three drawers, then all six banks.

Hardware/tools: paste wax

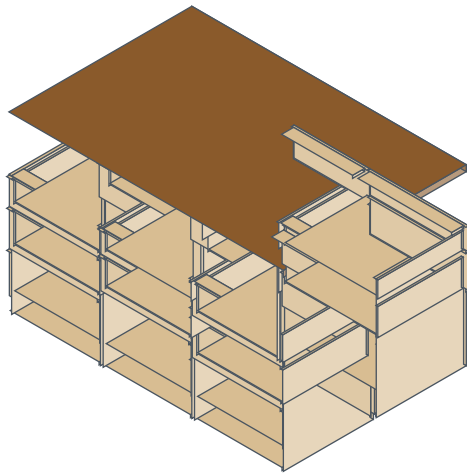
6

Join the two rows & fit the castors



Stand the six banks in two rows of three, backs together, and bolt the rows into one island. Screw a locking castor to each of the four bottom corners (on blocks / a base rail).

Hardware/tools: 4 locking castors, connector bolts



Lower the laminated maple top onto the island, flush to the footprint, and fix it down from inside the top stretchers. Finish the top with hard-wax oil or poly.

Parts: H

Hardware/tools: fasteners into stretchers, finish