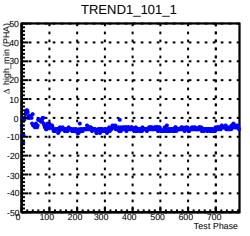
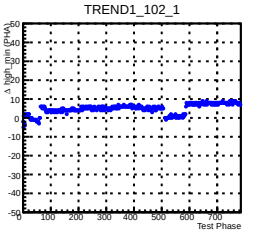
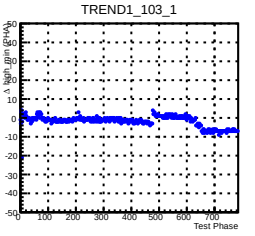
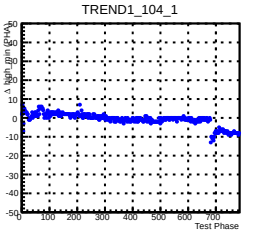
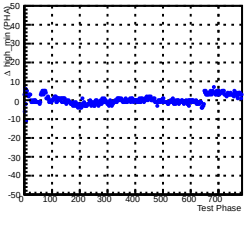

TREND1_100_1
Δ high_gain (PHA)
Test Phase

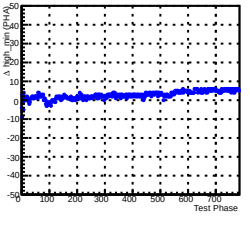

TREND1_101_1
Δ high_gain (PHA)
Test Phase

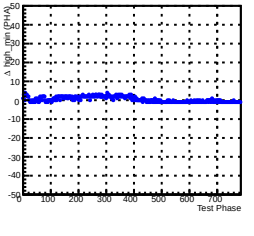

TREND1_102_1
Δ high_gain (PHA)
Test Phase

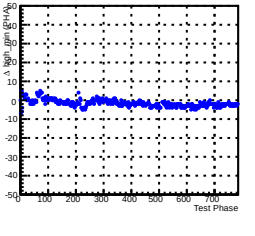

TREND1_103_1
Δ high_gain (PHA)
Test Phase

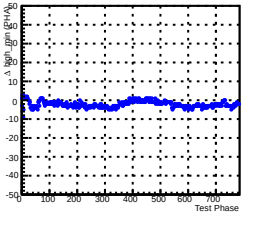

TREND1_104_1
Δ high_gain (PHA)
Test Phase

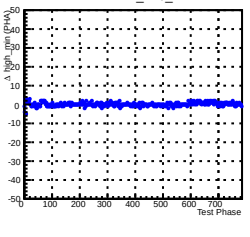

TREND1_110_1
Δ high_gain (PHA)
Test Phase

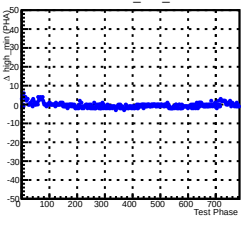

TREND1_111_1
Δ high_gain (PHA)
Test Phase

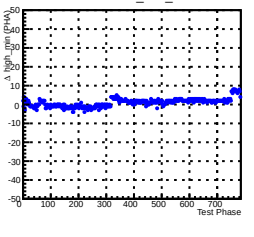

TREND1_112_1
Δ high_gain (PHA)
Test Phase

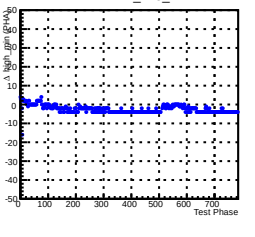

TREND1_113_1
Δ high_gain (PHA)
Test Phase

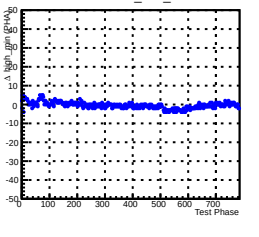

TREND1_114_1
Δ high_gain (PHA)
Test Phase

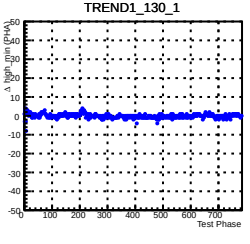

TREND1_120_1
Δ high_gain (PHA)
Test Phase


TREND1_121_1
Δ high_gain (PHA)
Test Phase


TREND1_122_1
Δ high_gain (PHA)
Test Phase


TREND1_123_1
Δ high_gain (PHA)
Test Phase


TREND1_124_1
Δ high_gain (PHA)
Test Phase


TREND1_130_1
Δ high_gain (PHA)
Test Phase