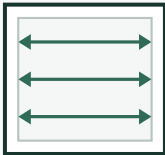
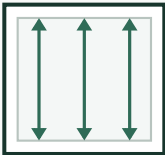


Honeycomb / Cellular Shades Measuring Guide


Measure each window separately. Use a steel tape measure and record measurements in inches to the nearest 1/8 inch.

INSIDE MOUNT (IB)

	
INSIDE MOUNT WIDTH • Measure the exact inside width of the window frame. • Measure top, middle and bottom. • Round DOWN to the nearest 1/8 inch. • Order the SMALLEST of the 3 widths. • Do not make your own factory deduction.	INSIDE MOUNT HEIGHT • Measure from the top inside edge to the window sill. • Measure left, middle and right. • Round UP to the nearest 1/8 inch. • Order the TALLEST of the 3 heights.

FACTORY DEDUCTION: For an Inside Mount, the factory will deduct 1/8 inch to 3/16 inch from the total width. Enter the opening size as measured above - do not deduct this yourself.

OUTSIDE MOUNT (OB)

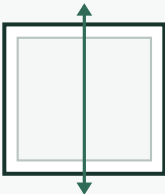	
OUTSIDE MOUNT WIDTH • Measure the exact width of the window frame, or how wide you want the shade to cover. • Allow enough width to cover the entire window and trim if desired. • Guide example: a 36 inch opening can use a 40 inch shade for about 2 inches overlap each side. • Order the exact finished width wanted. No factory deduction/addition.	OUTSIDE MOUNT HEIGHT • Measure the exact height you want the shade to cover from top to bottom. • Allow enough height to cover the entire window and trim if desired. • Guide example: a 60 inch opening can use a 64 inch shade for about 2 inches above and below. • Order the exact finished height wanted. No factory deduction/addition.

OUTSIDE MOUNT PRODUCTION NOTE: The factory will manufacture to the exact measurements provided. Standard production tolerance may be approximately +/- 1/8 inch.

BEFORE YOU ORDER Check all measurements twice. Inside Mount: smallest width + tallest height. Outside Mount: exact finished shade size including your chosen overlap.	YOUR NEXT FIT GUARANTEE™ Once available on the website, eligible purchases can receive added peace of mind against genuine measuring mistakes, subject to the guarantee terms.
--	---