

MATRIX G7-S73 OWNER'S MANUAL



Quick Links

- [Assembly Information](#)
- [Part 1 Weight Stack & Frame Assembly](#)
- [Part 4 Pad Assembly](#)

Table of Contents

- [Table of Contents](#)
- [Safety, General Care & Maintenance](#)
- [Getting Started \(Product Specifications\)](#)
- [Assembly Information](#)
- [Markings](#)
- [Parts List](#)
- [Part 1 Weight Stack & Frame Assembly](#)
- [Part 2 CAM & Cable Assembly](#)
- [Part 3 Arm Assembly](#)
- [Part 4 Pad Assembly](#)
- [Part 5 Plastics Assembly](#)
- [Other ManualsLib Projects](#)



OWNERS MANUAL

ULTRA Single-Station Strength
G7-S73 Prone Leg Curl

Table Of Contents

Safety, General Care & Maintenance	3
Getting Started (Product Specifications)	5
Assembly Information	6
Markings	7
Parts List	8

Installation & Assembly: Value Line

Part 1 Weight Stack & Frame Assembly	10
Part 2 CAM & Cable Assembly	15
Part 3 Arm Assembly	18
Part 4 Pad Assembly	22
Part 5 Plastics Assembly	24

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY INFORMATION

It is the sole responsibility of the purchaser of Matrix products to instruct all individuals, whether they are the end user or supervising personnel on proper usage of the equipment.

It is recommended that all users of Matrix exercise equipment be informed of the following information prior to its use.

PROPER USAGE

Do not use any equipment in any way other than designed or intended by the manufacturer. It is imperative that Matrix equipment be used properly to avoid injury.

Keep hands and feet clear at all times from moving parts to avoid injury.

CHECK FOR DAMAGED PARTS

1. DO NOT use any equipment that is damaged and or has worn or broken parts. Use only replacement parts supplied by your country's local Matrix dealer.
2. MAINTAIN LABELS AND NAMEPLATES: Do not remove labels for any reason. They contain important information. If unreadable or missing, contact your Matrix dealer for a replacement.
3. SECURING EQUIPMENT: All equipment MUST be secured to the floor to stabilize and eliminate rocking or tipping over. This must be performed by a licensed contractor.
4. MAINTAIN ALL EQUIPMENT: Preventative maintenance is the key to smooth operating equipment as well as keeping your liability to a minimum. Equipment needs to be inspected at regular intervals.
5. Ensure that any person(s) making adjustments or performing maintenance or repair of any kind is qualified to do so. Matrix dealers will provide service and maintenance training at our corporate facility upon request.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.


WARNING: SERIOUS INJURY CAN OCCUR ON THIS EQUIPMENT. FOLLOW THESE PRECAUTIONS TO AVOID INJURY!

1. Never allow children on strength training equipment. Teenagers must be supervised at all times while using this equipment.
2. All warnings and instructions should be read and proper instruction obtained prior to use.
3. Use this equipment for its intended purposes only.
4. NEVER allow resistance straps, ropes or other means be attached to this equipment, as this may result in serious injury.
5. NEVER use this equipment for support during stretching, as this may result in serious injury.
6. Cease exercise if you feel faint or dizzy. Obtain a medical exam before beginning an exercise program.
7. Keep body, hair, clothing and accessories free and clear of all moving parts.
8. Inspect the machine before use. DO NOT use machine if it appears damaged or inoperable.
9. Check to see that the selector pin is completely inserted into the weight stack.
10. NEVER use this machine with the weight stack pinned in an elevated position.
11. NEVER use dumbbells or other means to incrementally increase the weight resistance. Only use the means provided directly from the manufacturer.
12. This equipment should only be used in supervised areas where access and control are regulated by the owner.

GETTING STARTED

EXERCISE PLACARD | PRODUCT SPECIFICATIONS | MAINTENANCE CHECKLIST

EXERCISE PLACARD

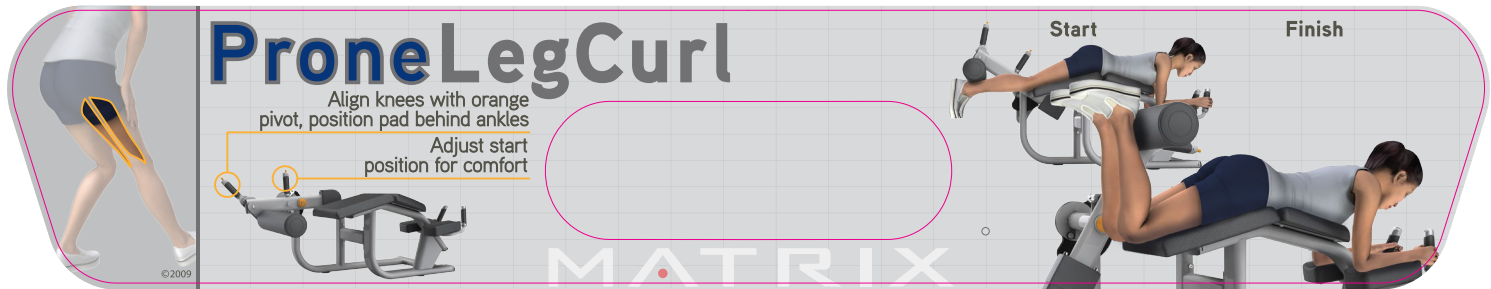

PRODUCT SPECIFICATIONS

TECH SPECS	
Maximum User Weight	136 kg / 300 lbs.
Maximum Training Weight	91 kg / 200 lbs.
Product Weight	264 kg / 581 lbs.
Overall Dimensions (L x W x H)	173.2 x 110.5 x 129.6 cm / 68.2" x 43.5" x 51.0"

WARRANTY (Valid in USA only)	
Frame (not coatings)	10 years
Weight stacks	5 years
Pulleys	5 years
Pivot bearings	5 years
Any items not specified	3 years
Labor (excluding upholstery/cables/grips)	3 years
Upholstery/cables/grips/springs	1 year
Accessories	6 months

MAINTENANCE CHECKLIST

ACTION	FREQUENCY
Clean Upholstery	Daily
Inspect Cables	Daily
Clean Guide Rods	Monthly
Inspect Hardware	Monthly
Inspect Frame	Bi-Annually
Clean Machine	As Needed
Clean Grips	As Needed
Lubricate Guide Rods	As Needed

Upholstery & Grips should be cleaned with a non-ammonia based cleaner or a mild soap and water. Guide rods should be lubricated with Teflon based lubricant. Apply the lubricant to a cotton cloth and then apply up and down the guide rods.

UNPACKING | TOOLS REQUIRED

UNPACKING


Thank you for purchasing a Matrix product. This machine is an EN957-1 and EN957-2 compliant Class S product. Your Matrix product is inspected before it is packaged. It is shipped in multiple pieces to facilitate the compact packaging of the machine. Prior to assembly, confirm all the components by matching them with the exploded diagrams. Carefully unpack the unit from this box and dispose of the packing materials in accordance with your local laws.

CAUTION


The weight of the product is 581 lbs. (264 kg) not including the weight stack. The weight stack for this machine is 240 lbs. (109 kg). To avoid injury to yourself and prevent damage to the frame components, be sure to have proper assistance removing the frame pieces from this box. Please be sure to install the equipment on a stable base, properly level the machine and leave at least two feet of clearance to enter and exit the machine. Maximum user weight for this machine is 300 lbs.

TOOLS REQUIRED FOR ASSEMBLY

3MM L-Shaped Allen Wrench
 4MM L-Shaped Allen Wrench
 5MM L-Shaped Allen Wrench
 6MM L-Shaped Allen Wrench
 8MM L-Shaped Allen Wrench
 10MM L-Shaped Allen Wrench
 Phillips & Standard Screwdrivers
 8MM Open-End Wrench
 13MM Open-End Wrench
 17MM Open-End Wrench.
 19MM Open-End Wrench
 Adjustable Wrench

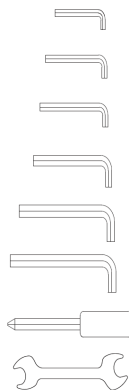

Blue Locktite 242 must be used on all fasteners that are not assembled with Nylock Nuts.

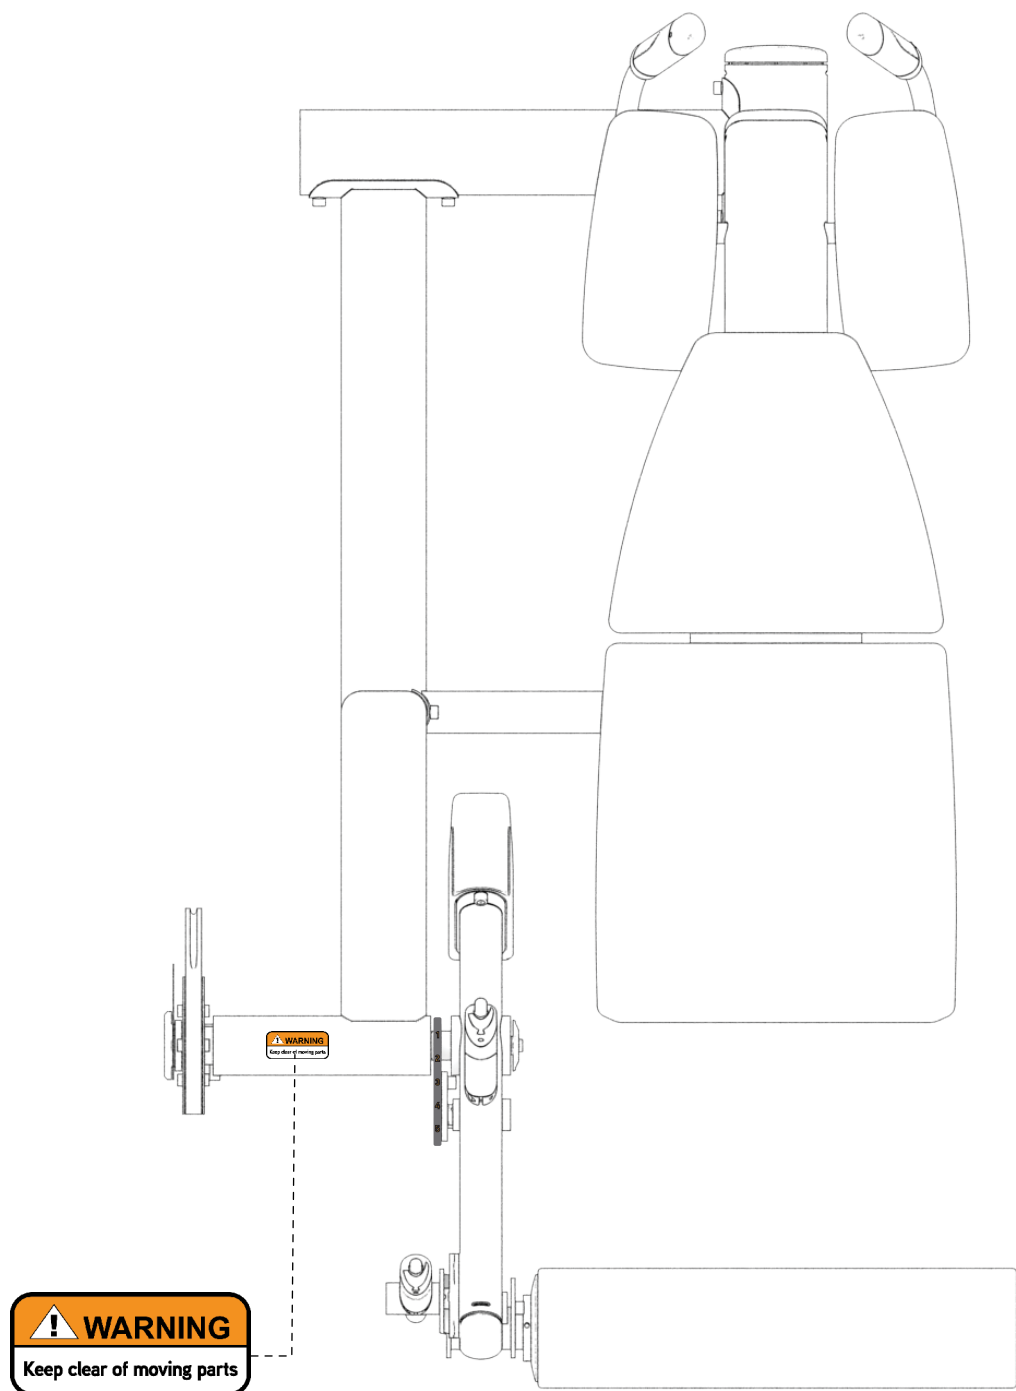


Hazard warning sticker
(faces rear)

ID	DESCRIPTION	QTY
1	Weight Stack	1
2	M10 Flat Washer	18
3	M10 X 30L Socket Head Cap Screw	12
4	Lower Connecting Tube	1
5	Inner Frame Assembly	1
6	M10 X 75L Socket Head Cap Screw	6
7	M10 Nylock Nut	7
8	M10 Saddle Washer	8
9	Mid Connecting Tube	1
10	User Frame	1
11	Pulley Bracket	1
12	CAM	1
13	Wave (Spring) Washer	2
14	Washer (45 OD X 30.3 ID)	1
15	Axle/ROM Assembly	1
16	M10 X 20L Socket Head Cap Screw	1
17	Black Pivot Cap	1
18	Ring	1
19	M8 X 15L Socket Head Cap Screw	1
20	M8 Flat Washer	3
21	Guard	1
22	Spacer	1
23	Exercise Arm	1
24	M10 Flat Washer (42 mm Diameter)	1
25	Orange Pivot Cap	1
26	Axle	1
27	ROM/Pad Assembly	1
28	M10 X 130L Socket Head Cap Screw	1
29	M8 X 20L Socket Head Cap Screw	2
30	Counter Weight	1
31	Arm Pad	2

ID	DESCRIPTION	QTY
32	M10 X 20L Button Head Cap Screws	14
33	Torso Pad	1
34	Chest Pad	1
35	Left Front Shroud	1
36	Rear Shroud	1
37	Right Front Shroud	1
38	M8 X 60L Socket Head Cap Screw	4
39	Top Cap	1

STEP 1 | WEIGHT STACK INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
1	Weight Stack	1
2	M10 Flat Washer	4
3	M10 X 30L SHC	4
4	Lower Connecting Tube	1

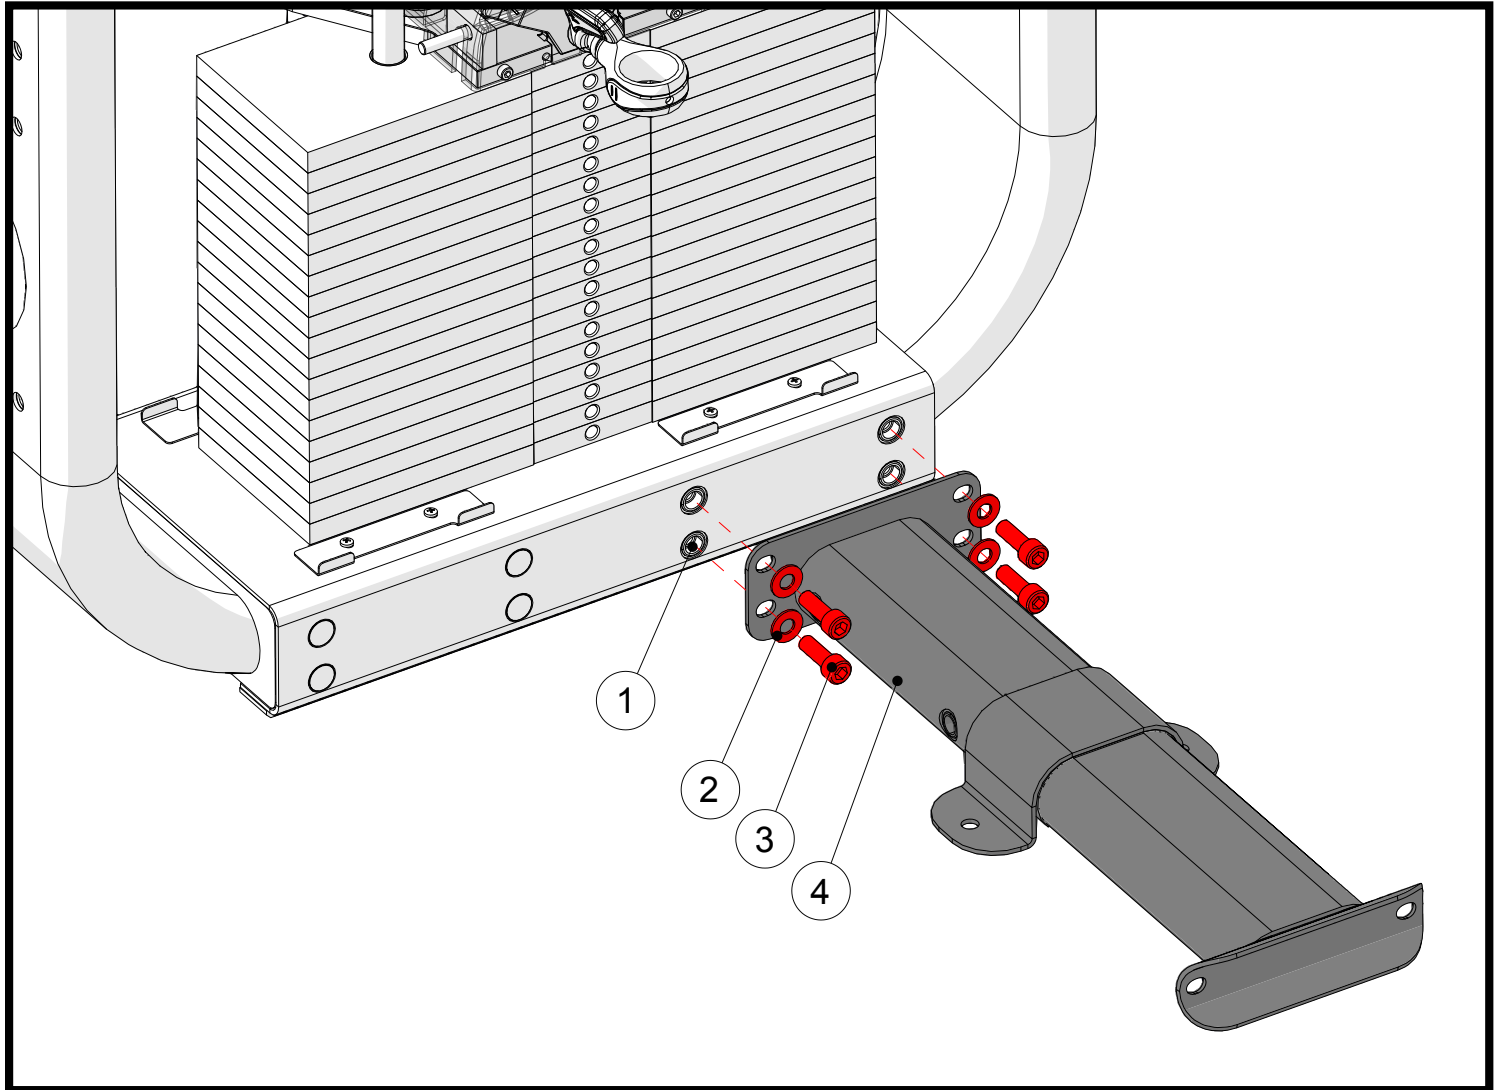

Install the user frame hardware as shown, but **DO NOT FULLY TIGHTEN** .

STEP 2 | USER FRAME INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
2	M10 Flat Washer	4
3	M10 X 30L SHC	2
5	Inner Frame Assembly	1
6	M10 X 75L SHC	2
7	M10 Nylock Nut	2
8	M10 Saddle Washer	2

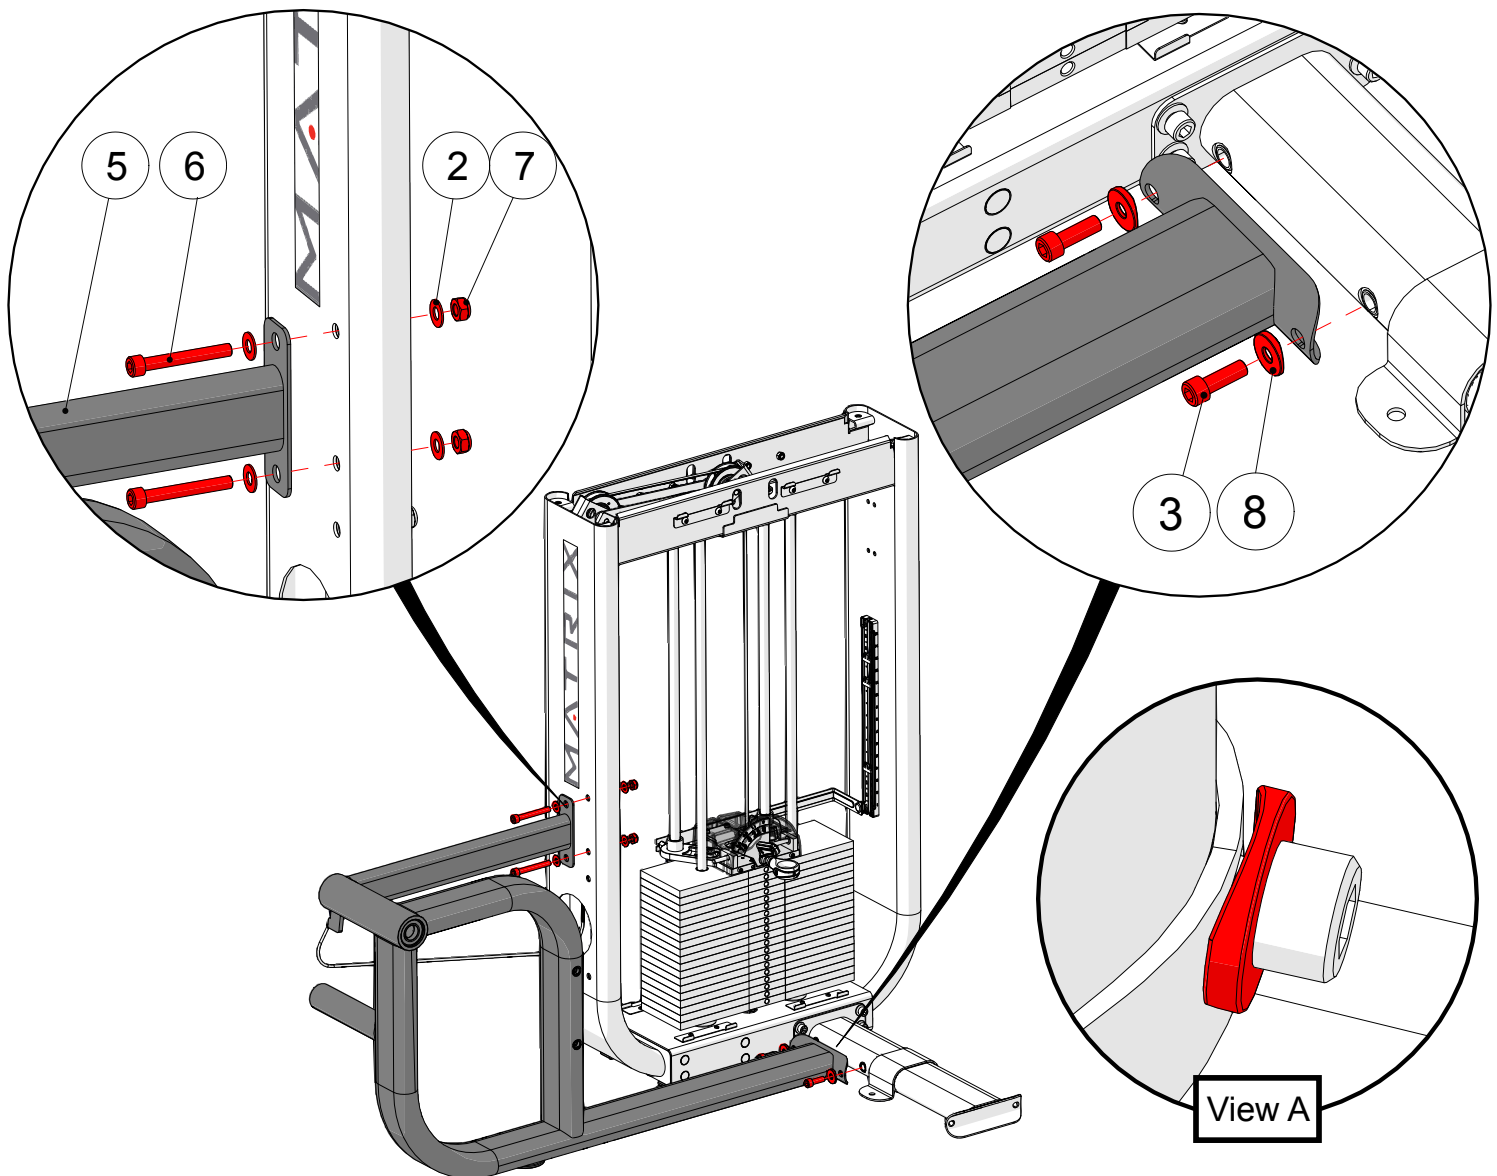

- Ensure that the frame is level and that all floor pads contact the floor equally
- Install the frame hardware as shown, orienting the saddle washers as shown in View A.

STEP 3 | FOOT PLATE ASSEMBLY INSTRUCTIONS & NOTES





ID	DESCRIPTION	QUANTITY
3	M10 X 30L SHC	2
8	M10 Saddle Washer	2
9	Mid Connecting Tube	1

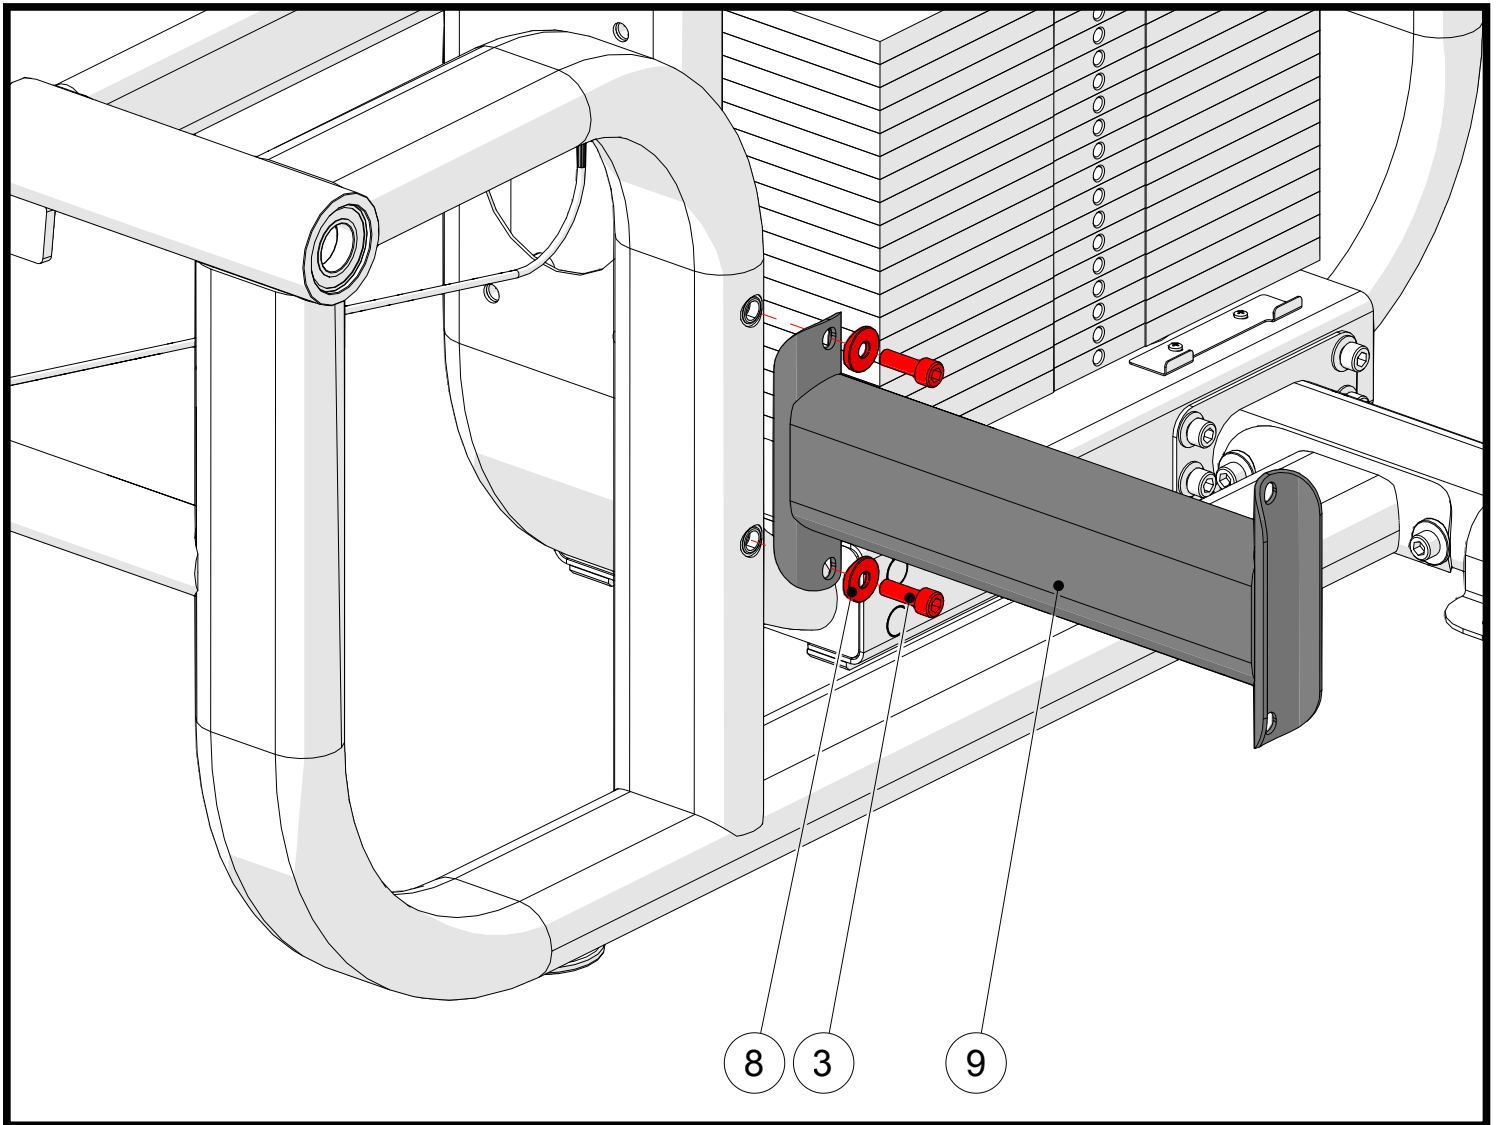

Install the user frame hardware as shown, but **DO NOT FULLY TIGHTEN** .

STEP 4 | FOOT PLATE COVER ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
3	M10 X 30L SHC	4
8	M10 Saddle Washer	4
10	User Frame	1

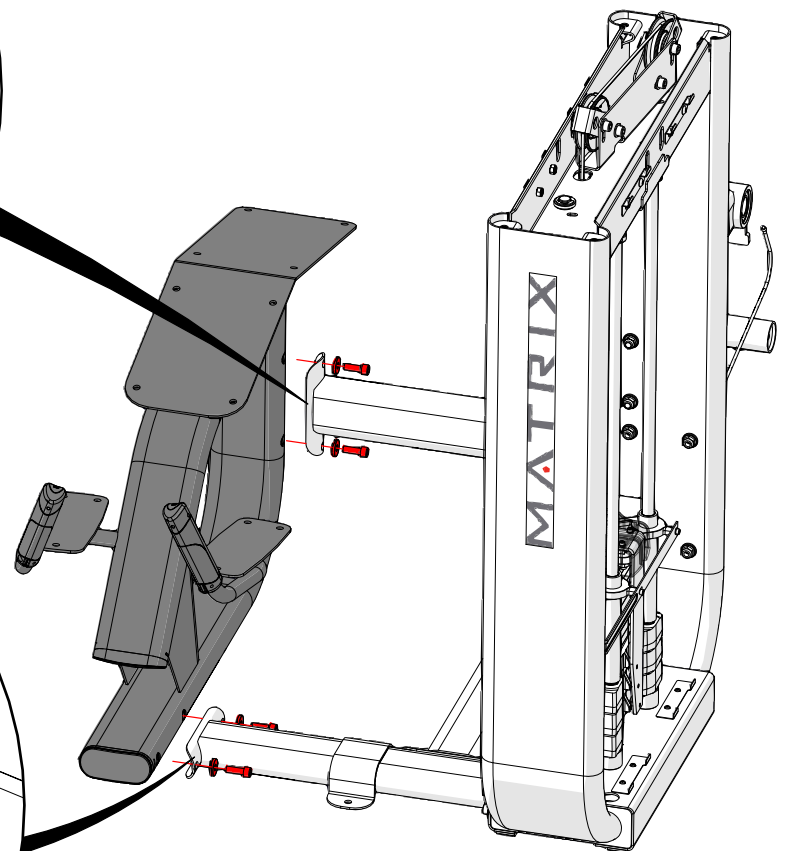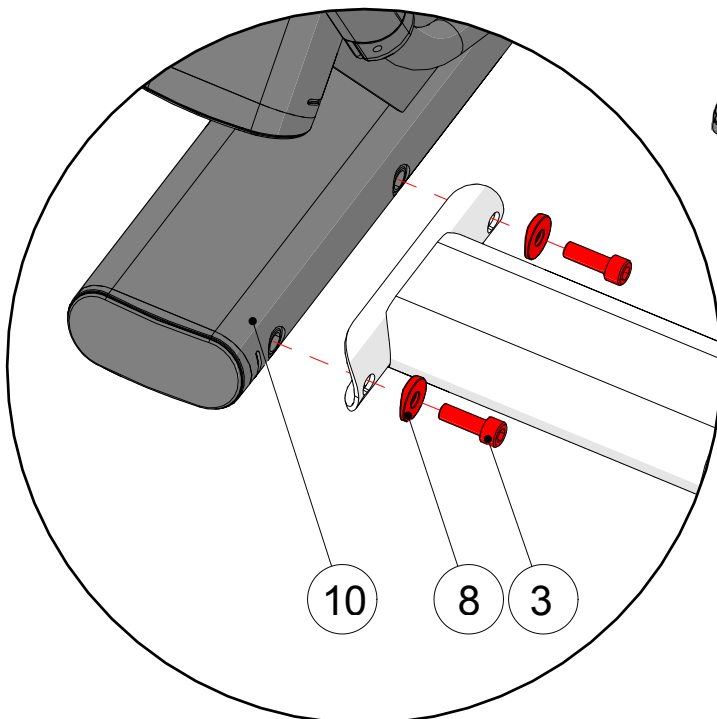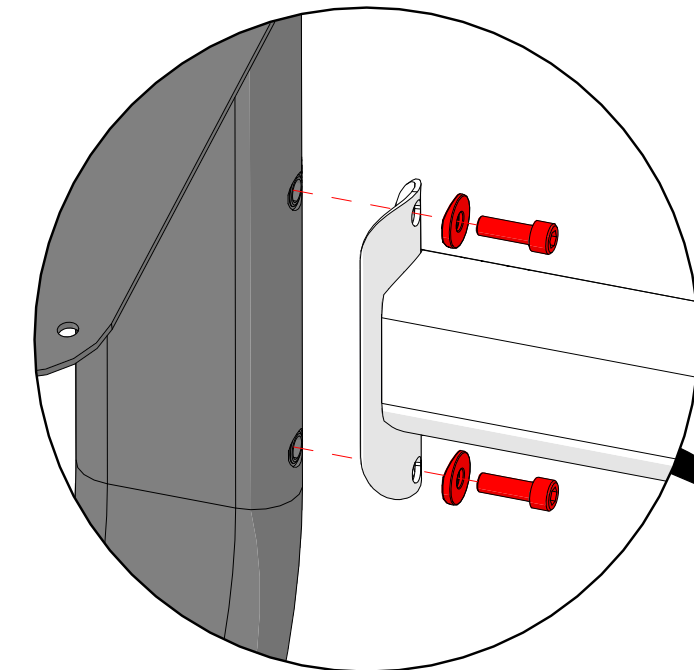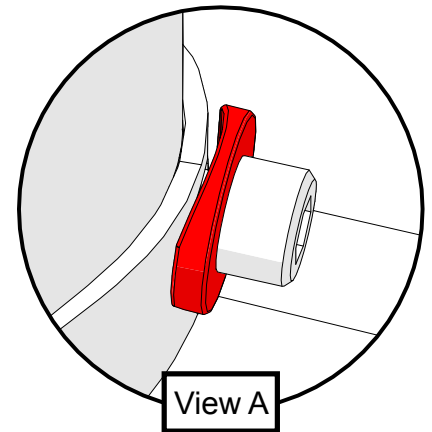

- Ensure that the frame is level and that all floor pads contact the floor equally
- Install the frame hardware as shown, orienting the saddle washers as shown in View A.
- Torque all M10 Frame Hardware on pages 9 thru 12 to: 77 N-m/57 ft/lbs.

STEP 4 | FOOT PLATE COVER ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
2	M10 Flat Washer	8
6	M10 X 75L SHC	4
7	M10 Nylock Nut	4
11	Pulley Bracket	1

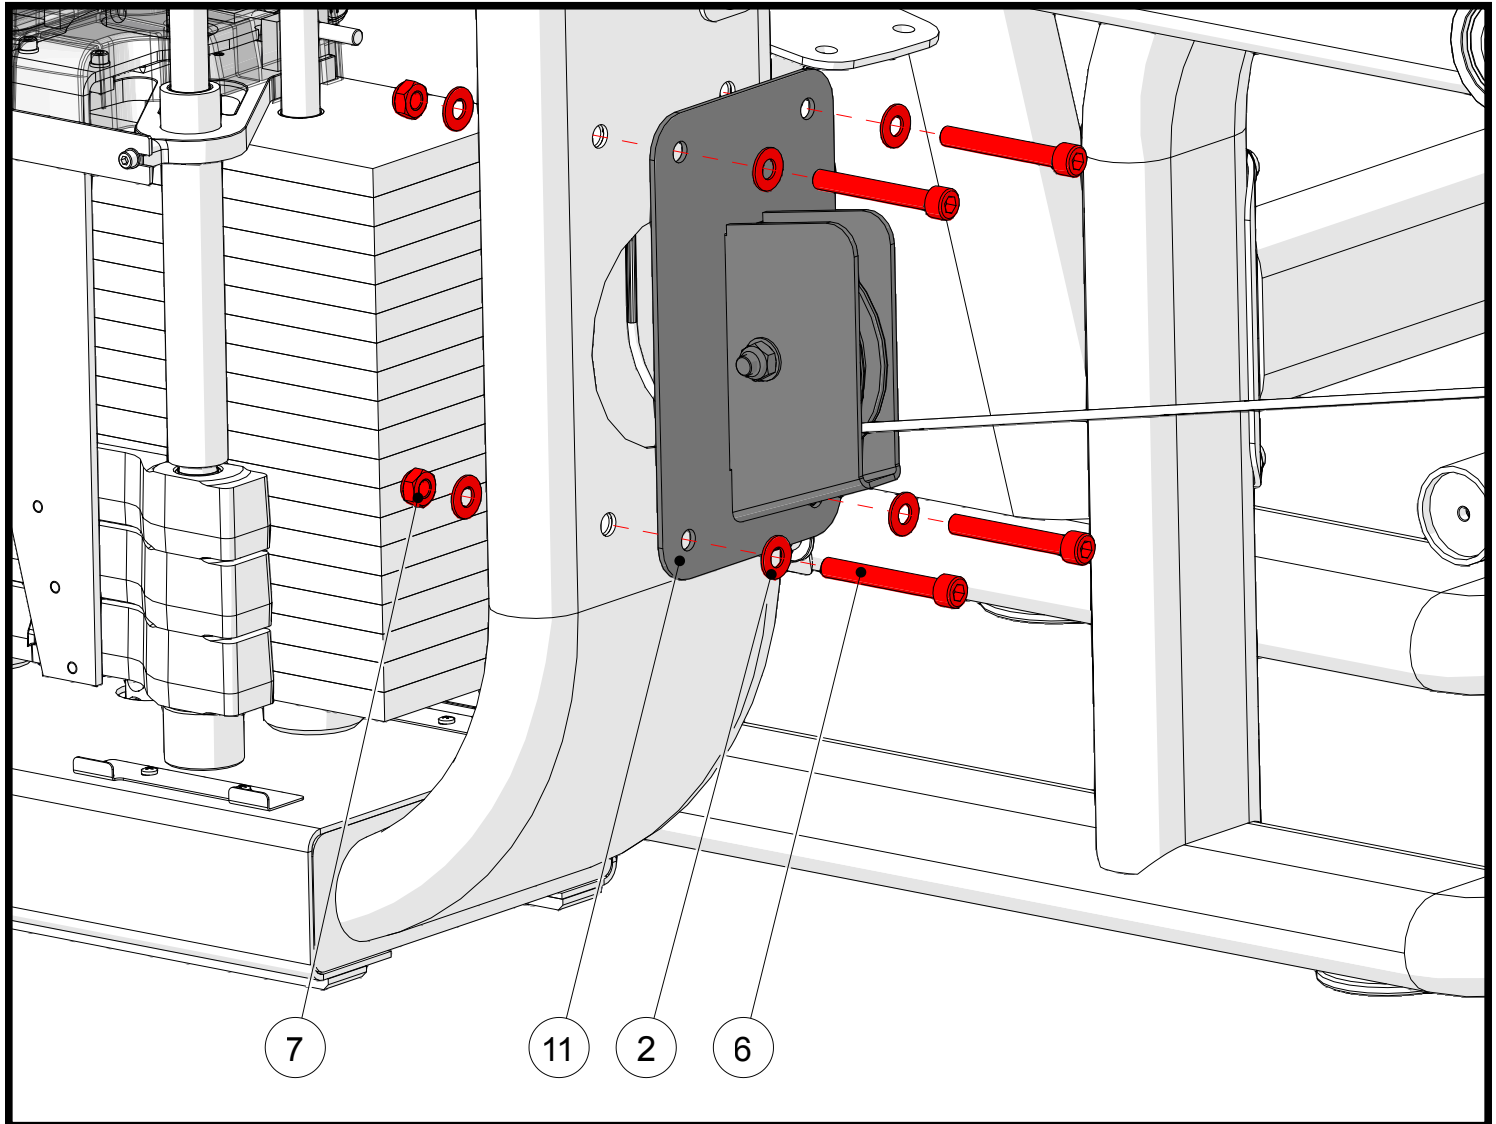

Torque to 77 N-m/57 ft-lbs.


STEP 1 | CAM ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
12	CAM	1
13	Wave (Spring) Washer	2
14	Washer (45 mm OD X 30.3 mm ID)	1
15	Axle/RDM Assembly	1

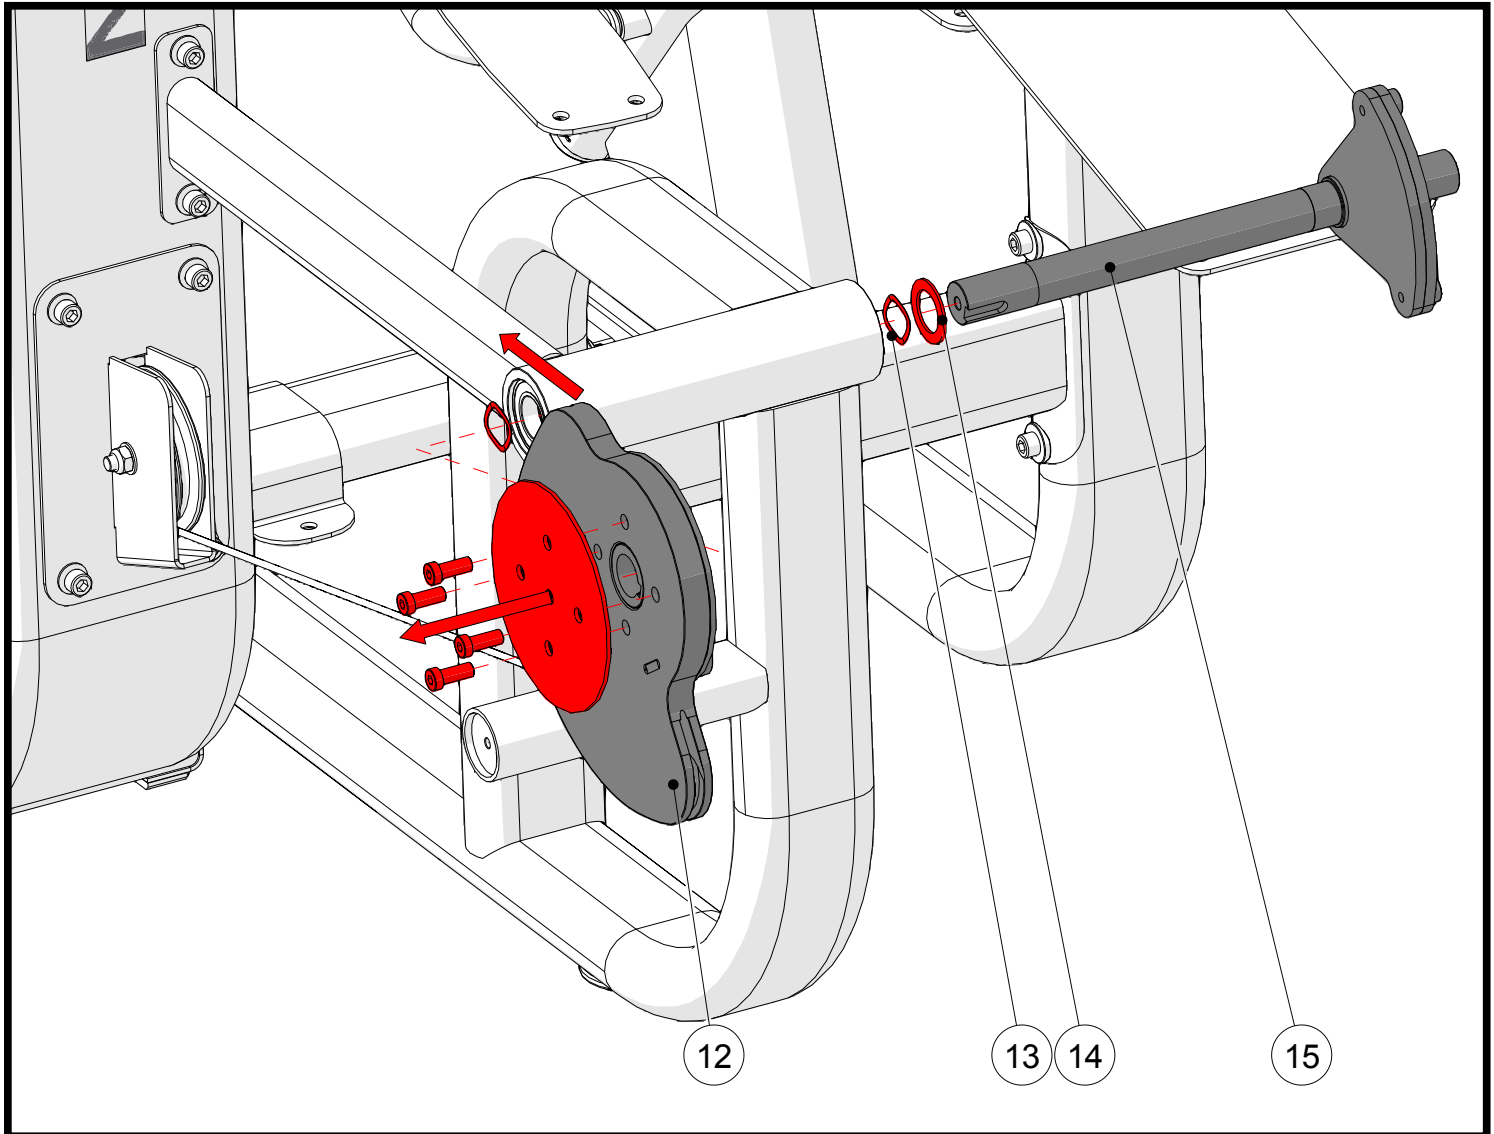

- Remove CAM plate as shown - NOTE: two hex wrenches are required. Set hardware aside to be used later
- Assemble Axle/RDM assembly and CAM; orient CAM as shown
- Assemble cable onto CAM groove


STEP 2 | CABLE ASSEMBLY INSTRUCTIONS & NOTES

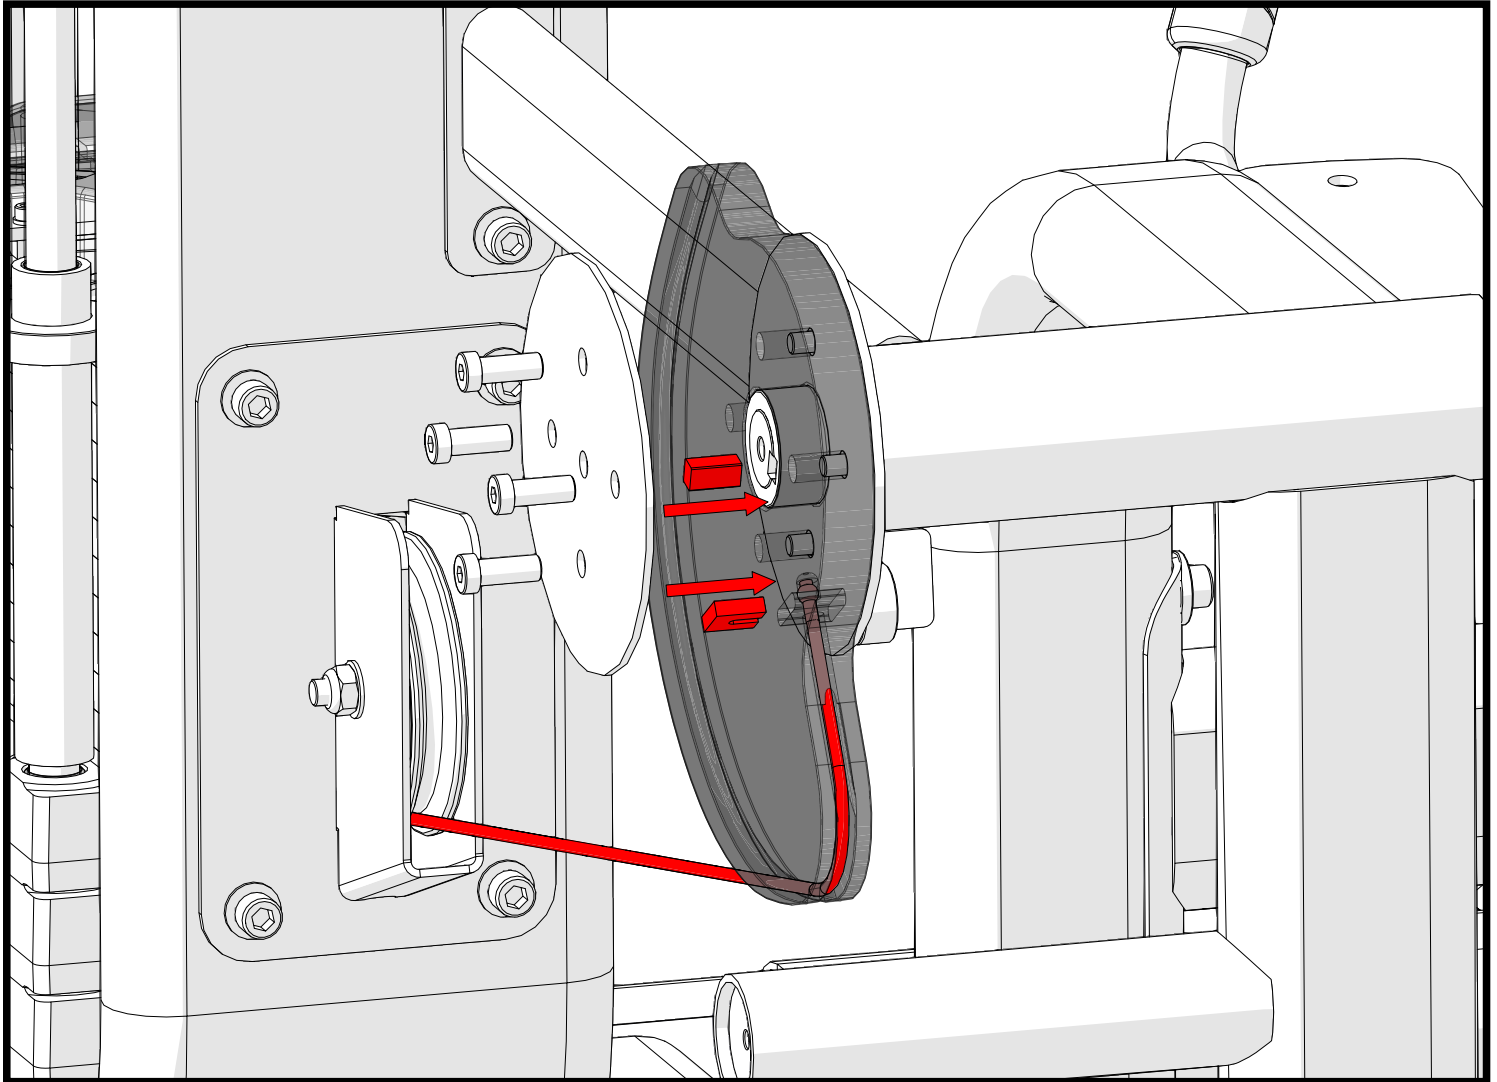

- Capture cable end with retaining clip
- Assemble Key into Axle/ROM as shown
- Using two hex wrenches, reassemble CAM plate and torque fasteners to: 39 N-m/29 ft-lbs.
- Torque M10 center bolt to: 77 N-m/57ft-lbs.

STEP 3 | CAM GUARD ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
16	M10 X 20L SHC	1
17	Black Pivot Cap	1
18	Ring	1
19	M8 X 15L SHC	1
20	M8 Flat Washer	1
21	Guard	1
22	Spacer	1

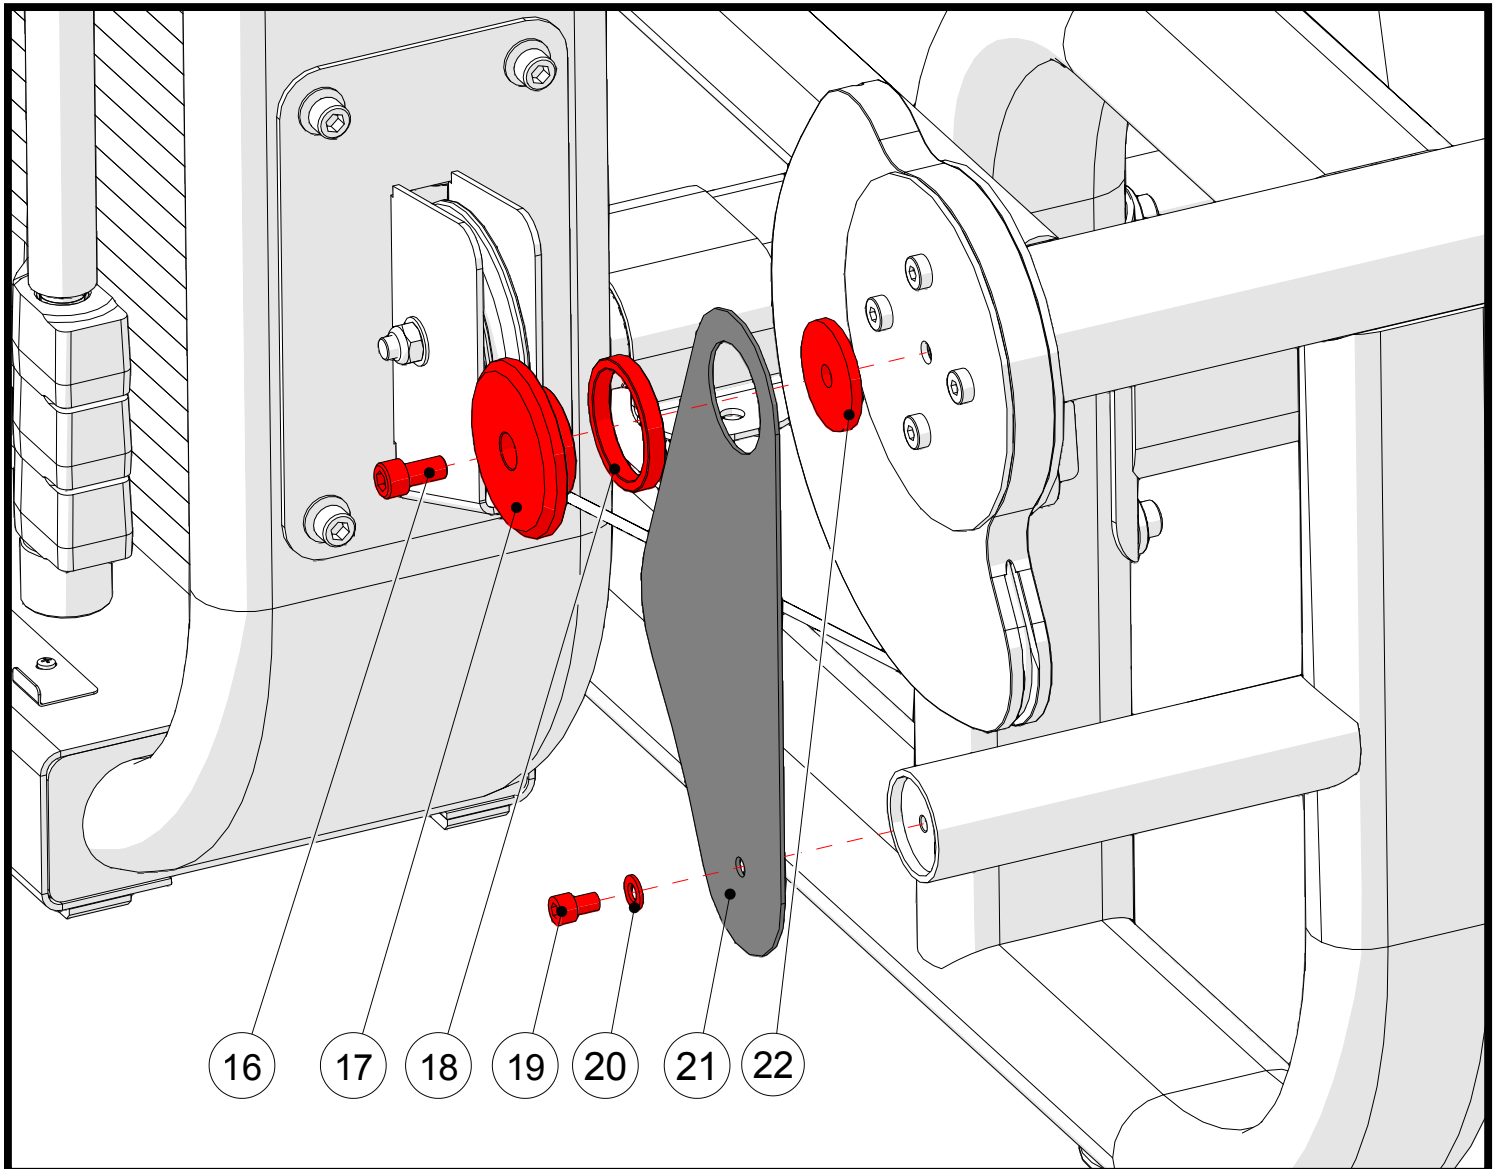

Torque M10 hardware to 77 N-m/57 ft-lbs.
Torque M8 hardware to 39 N-m/29 ft-lbs.

STEP 1 | ARM ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
16	M10 X 20L SHC	1
23	Exercise Arm	1
24	M10 Flat Washer (42 mm Dia.)	1
25	Orange Pivot Cap	1

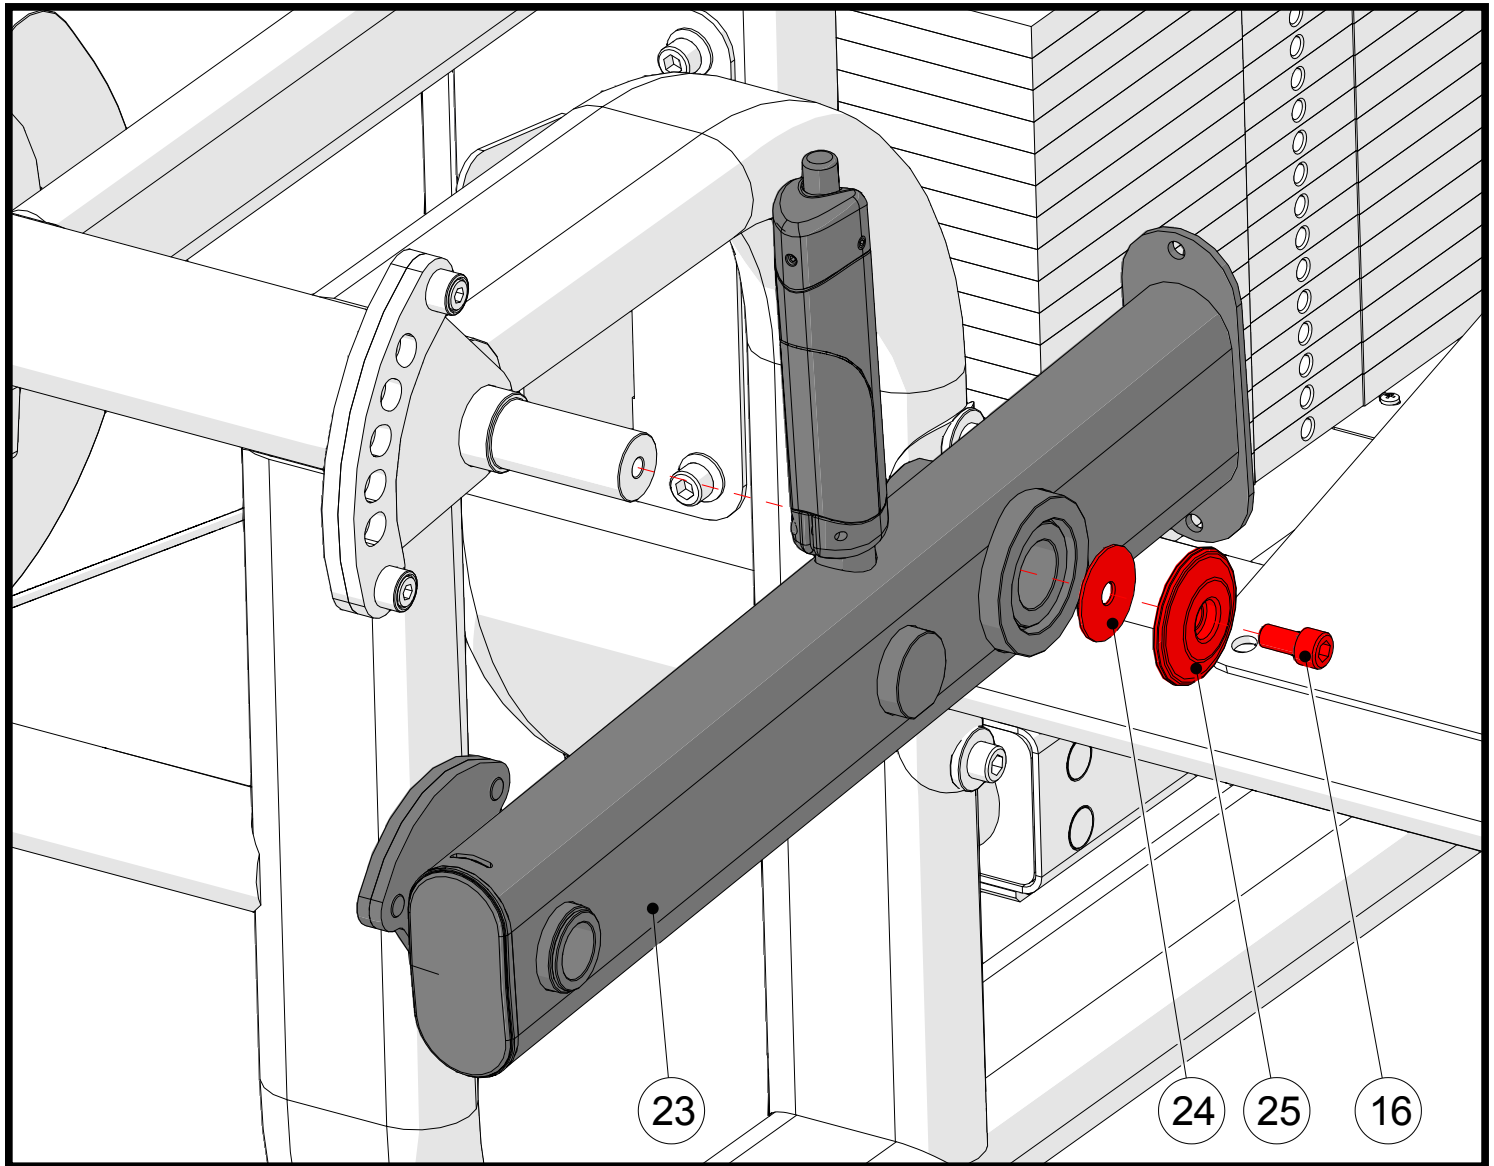

Torque to 77 N-m/57 ft-lbs.


STEP 2 | AXLE ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
26	Axle	1

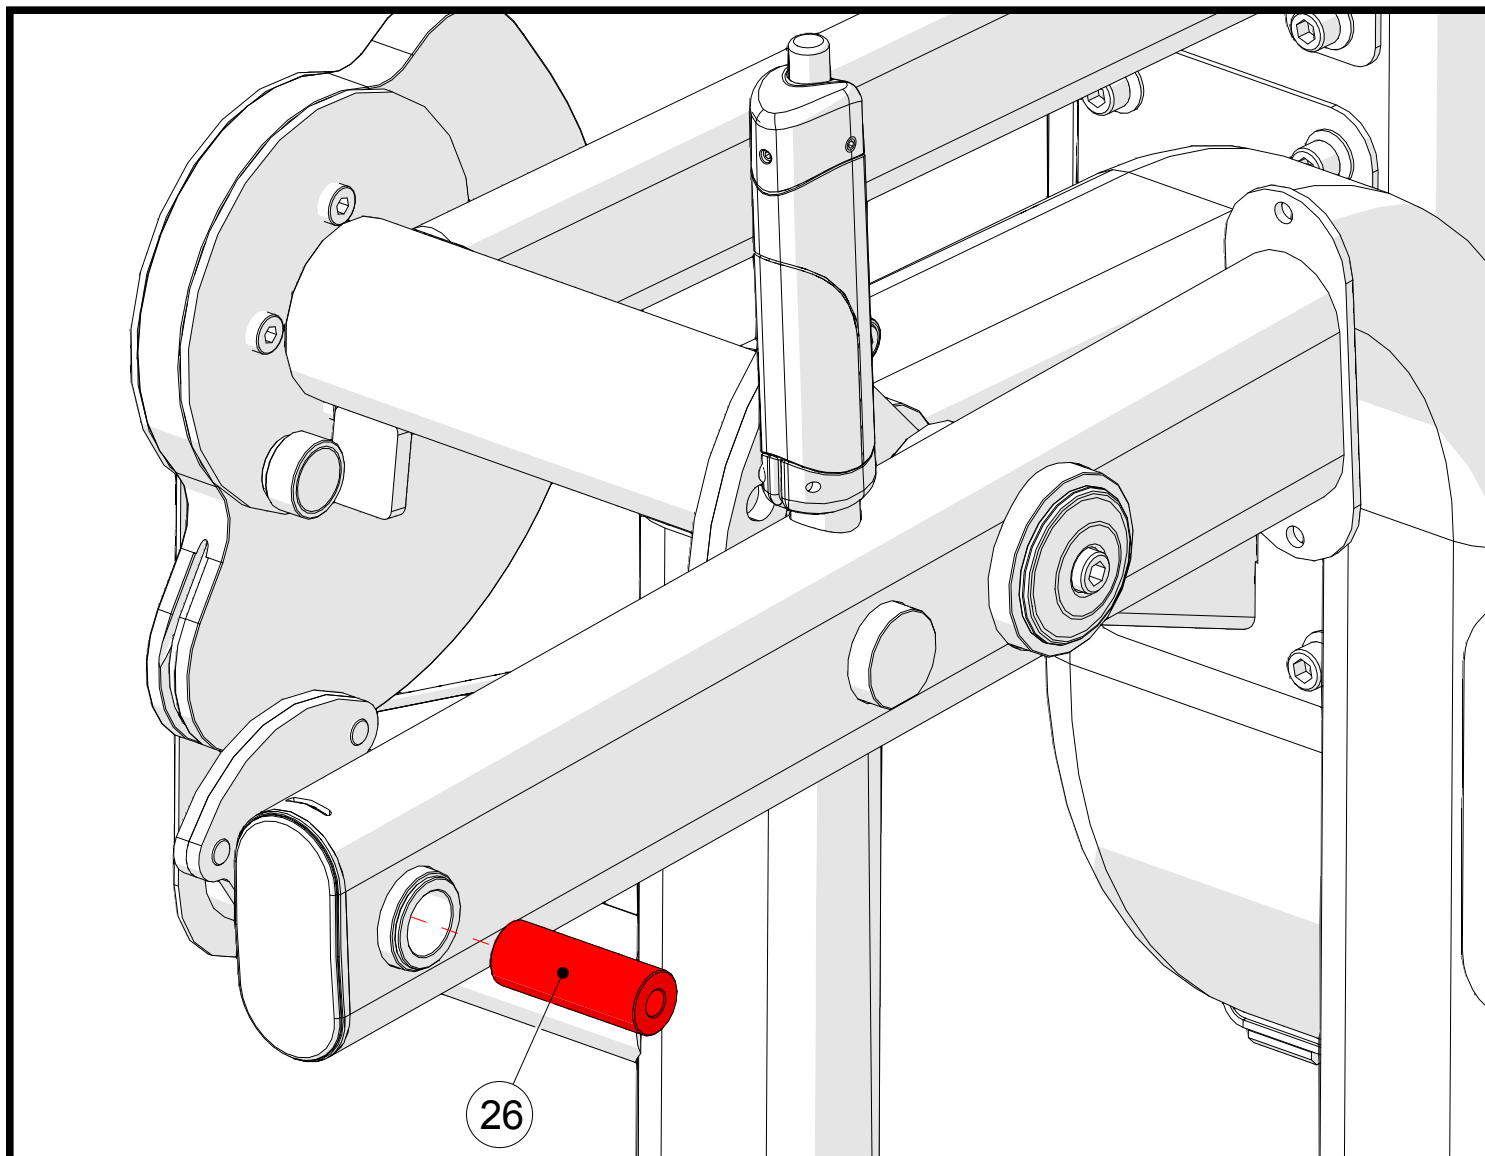

STEP 3 | ROM ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
2	M10 Flat Washer	2
7	M10 Nylock Nut	1
27	ROM/Pad Assembly	1
28	M10 X 130L SHC	1

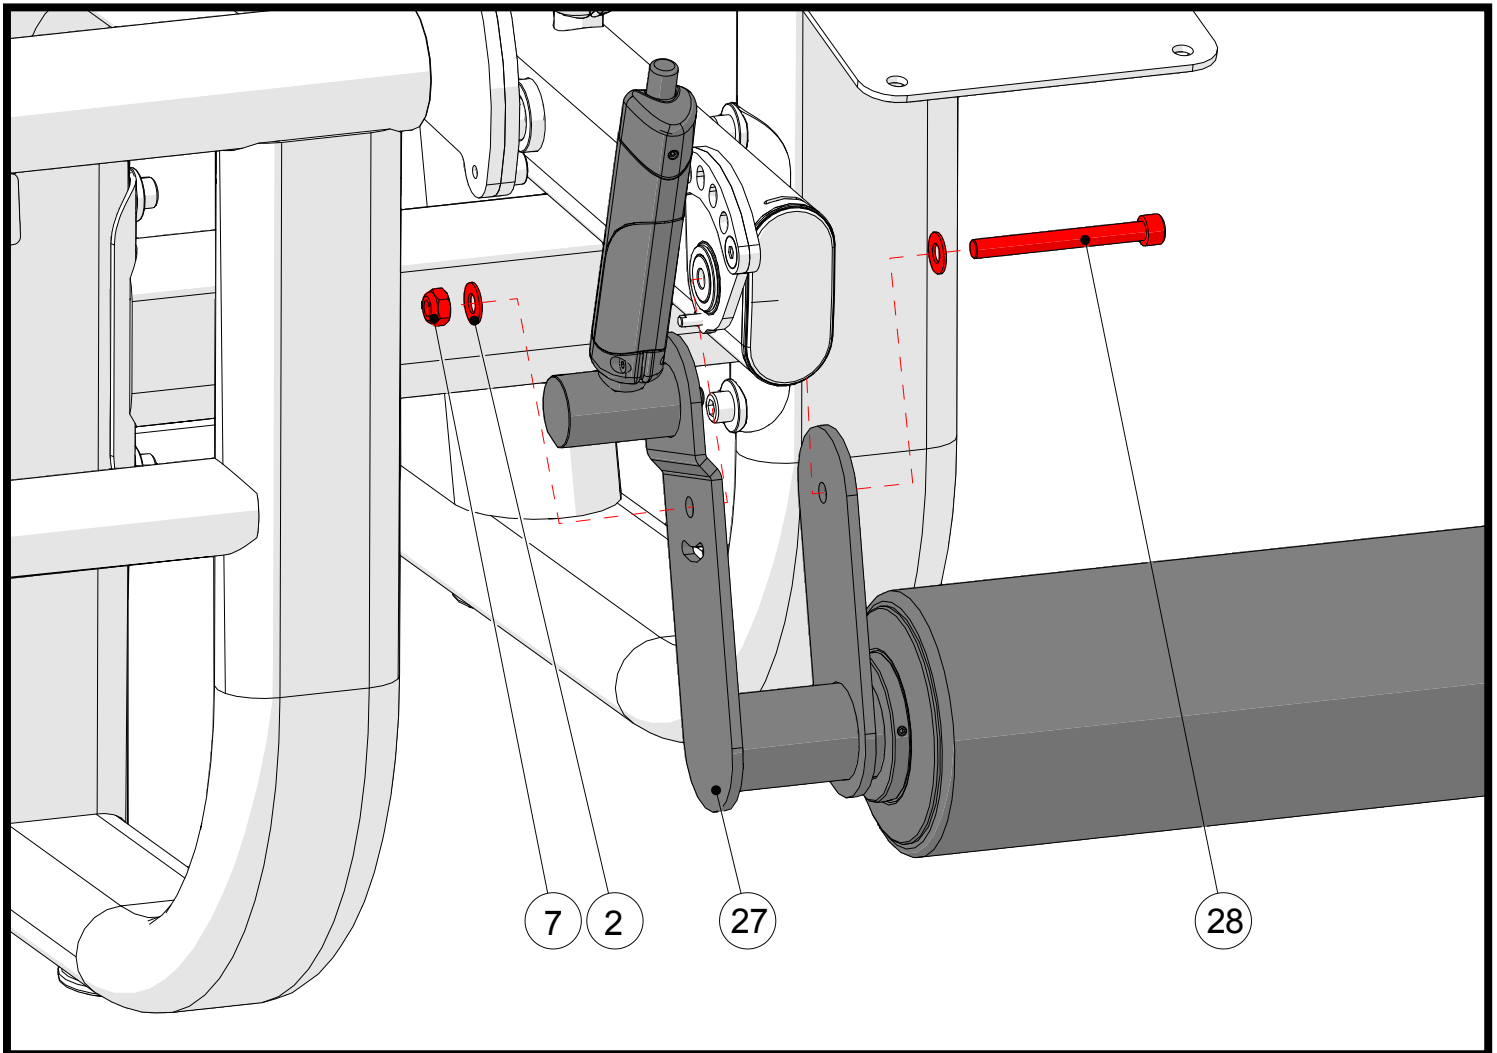

Torque to 77 N-m/57 ft-lbs.

STEP 4 | COUNTER WEIGHT ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
20	M8 Flat Washer	2
29	M8 X 20L SHC	2
30	Counter Weight	1

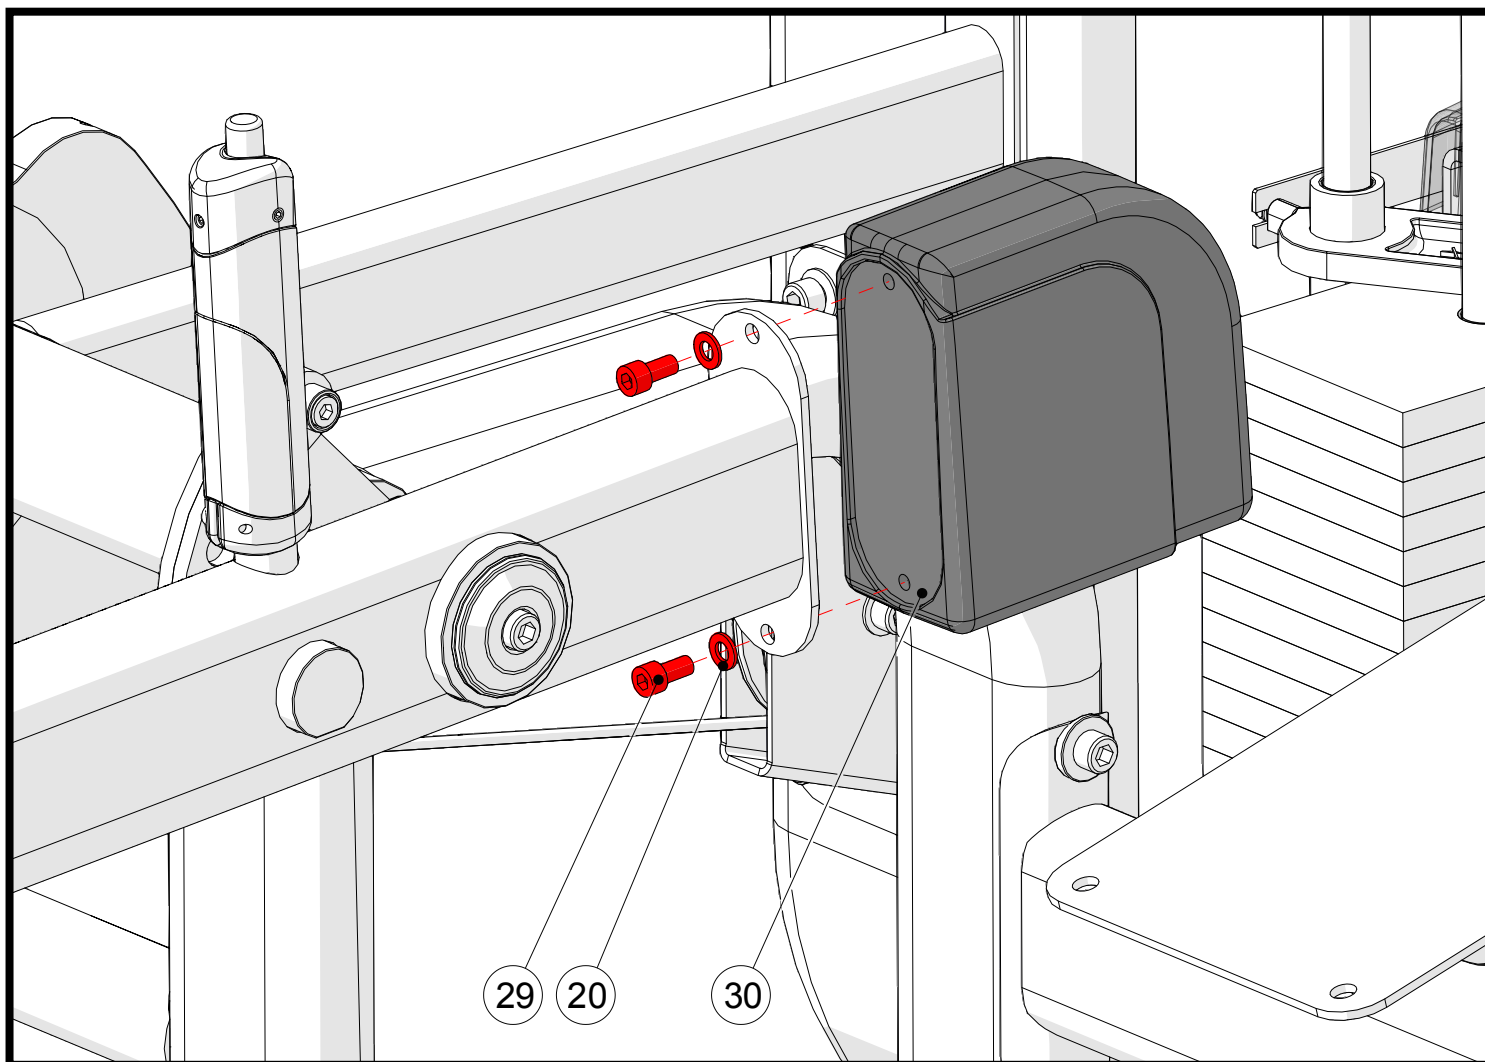

Tighten to 39 N-m/29 ft-lbs.

STEP 1 | ARM PAD ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
31	Arm Pad	2
32	M10 X 20L BHC	6

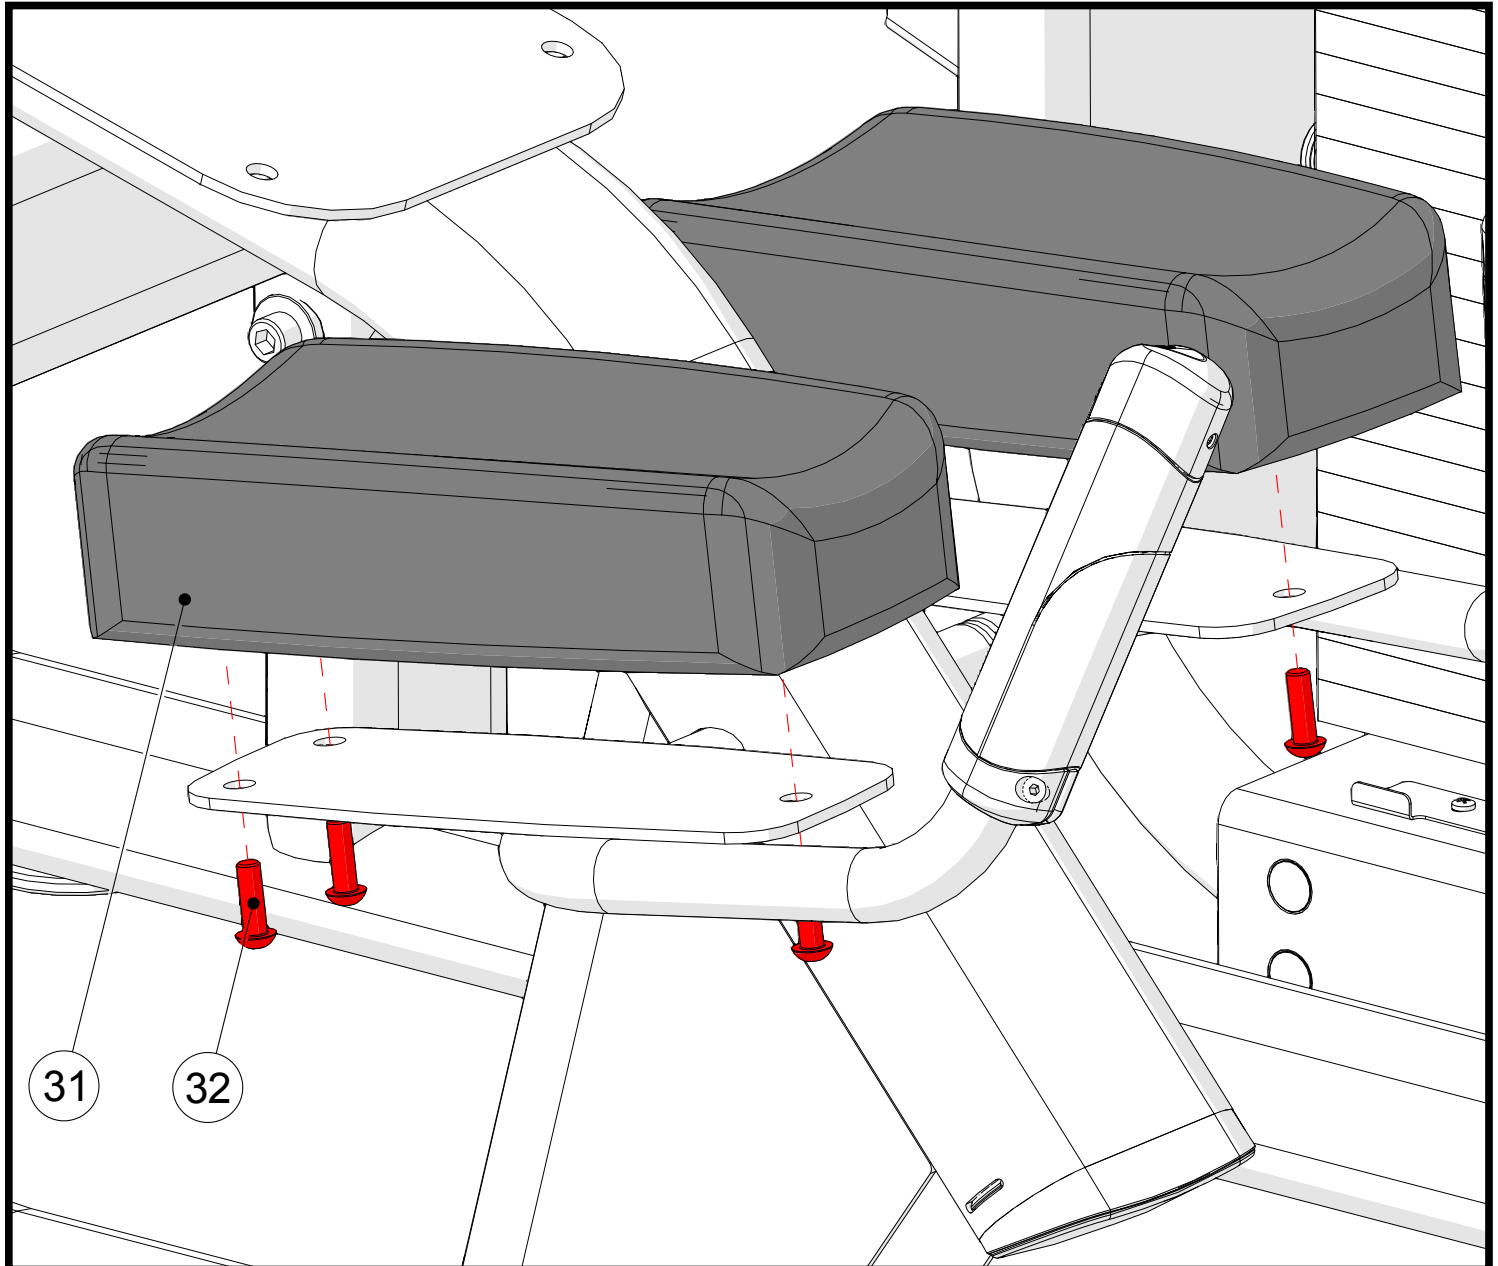

Orient the pads as shown.
Tighten to 27 N-m/20 ft-lbs.

STEP 2 | PAD ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
32	M10 X 20L BHC	8
33	Torso Pad	1
34	Chest Pad	1

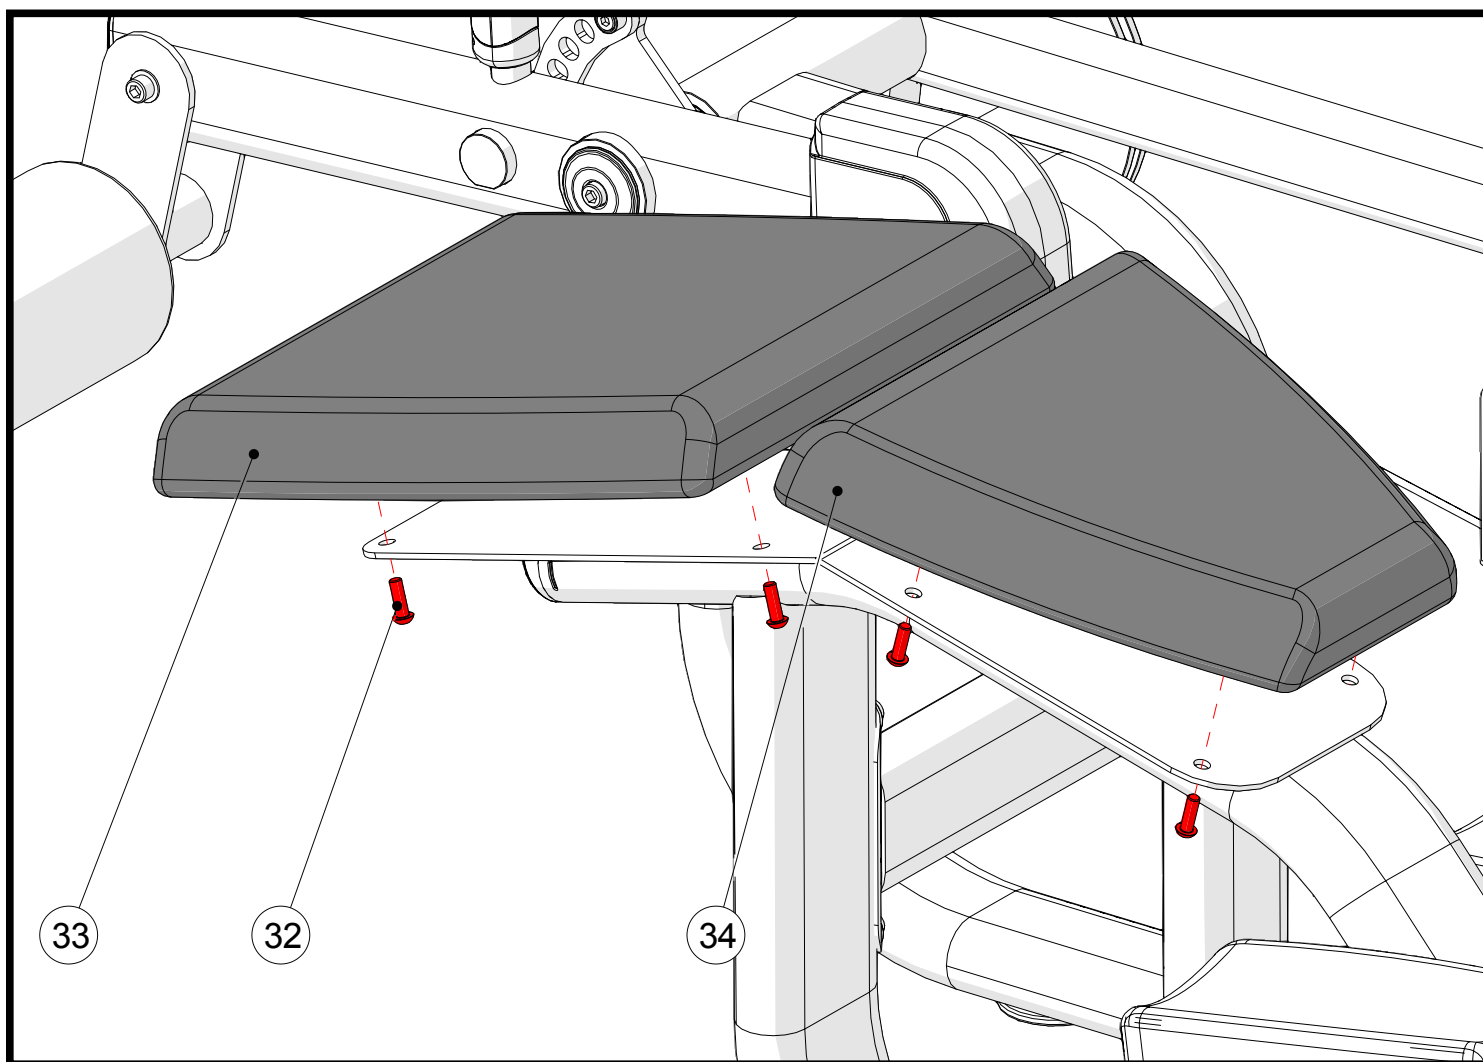

Install the pads as shown.
Tighten to 27 N-m/20 ft-lbs.

STEP 1 | SHROUD ASSEMBLY ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
35	Left Front Shroud	1
36	Rear Shroud	1
37	Right Front Shroud	1

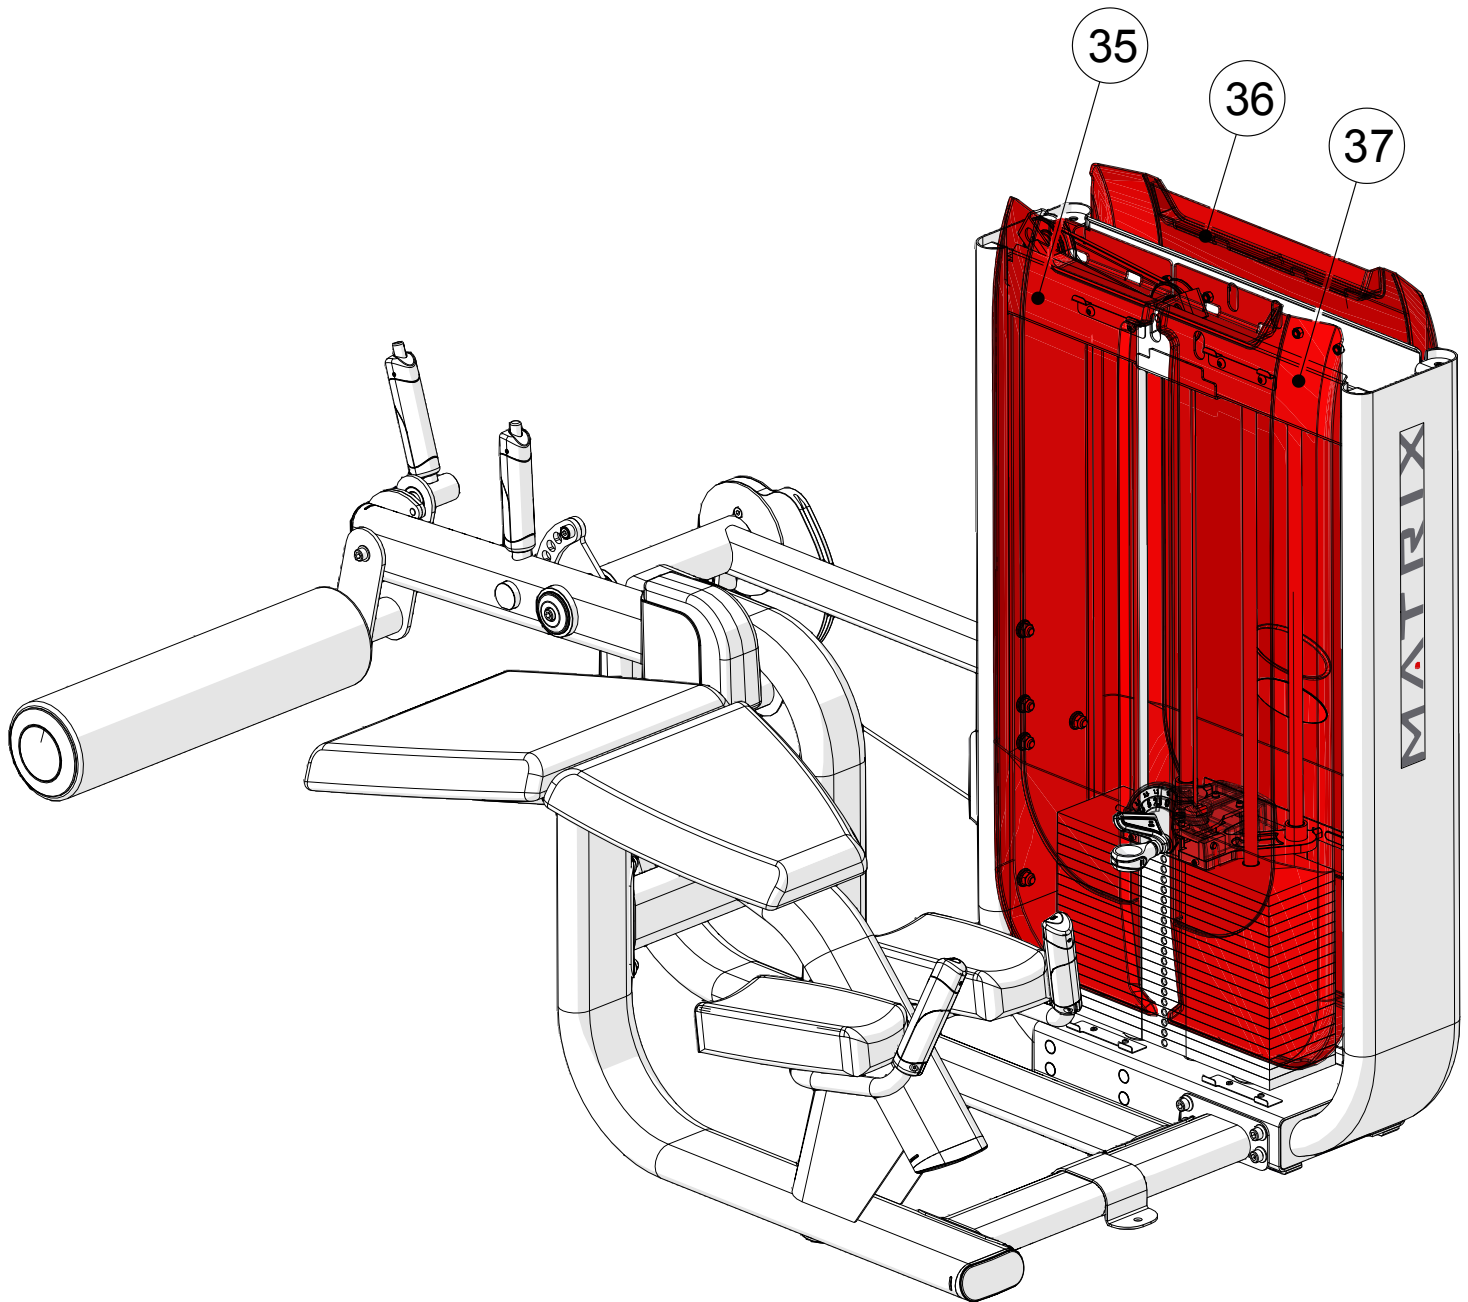


Install the weight stack shrouds as shown.

STEP 2 | TOP CAP ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
38	M8 X 60L SHC	4
39	Top Cap	1

Install the top cap and connect rep counter plug as shown.
Torque to 17 N-m/147 in-lbs.

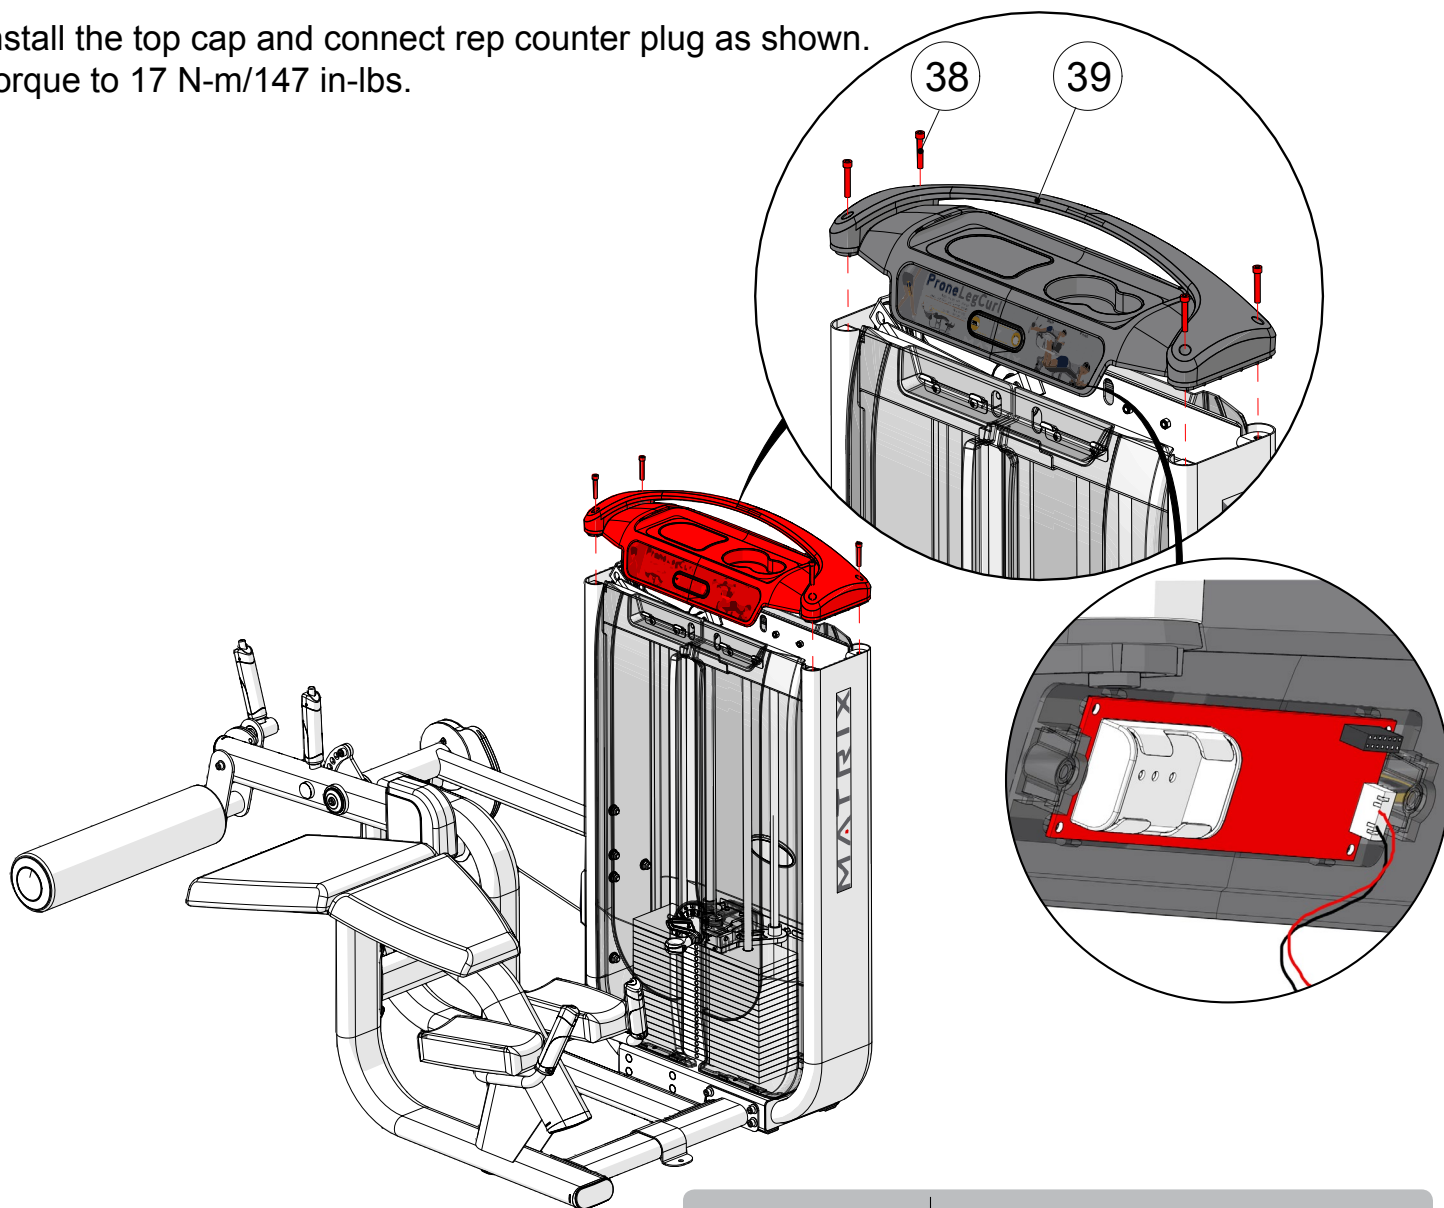

Position top cap so Rep Counter faces the user.

MATRIX® | IMPORTANT NOTICE

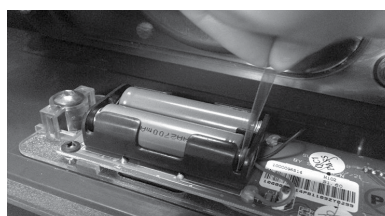

PLEASE NOTE:
Be sure to remove the insulating sheet when installing the Rep Counter.



Matrix Fitness
1600 Landmark Drive
Cottage Grove WI 53527

matrixfitness.com
Toll-free 866.693.4863
Facsimile 608.839.8687

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ Languages