


CARGO COMPARTMENT

R Y R
O C T 10/06

11-37-00
SECTION TITLE
PAGE 1

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

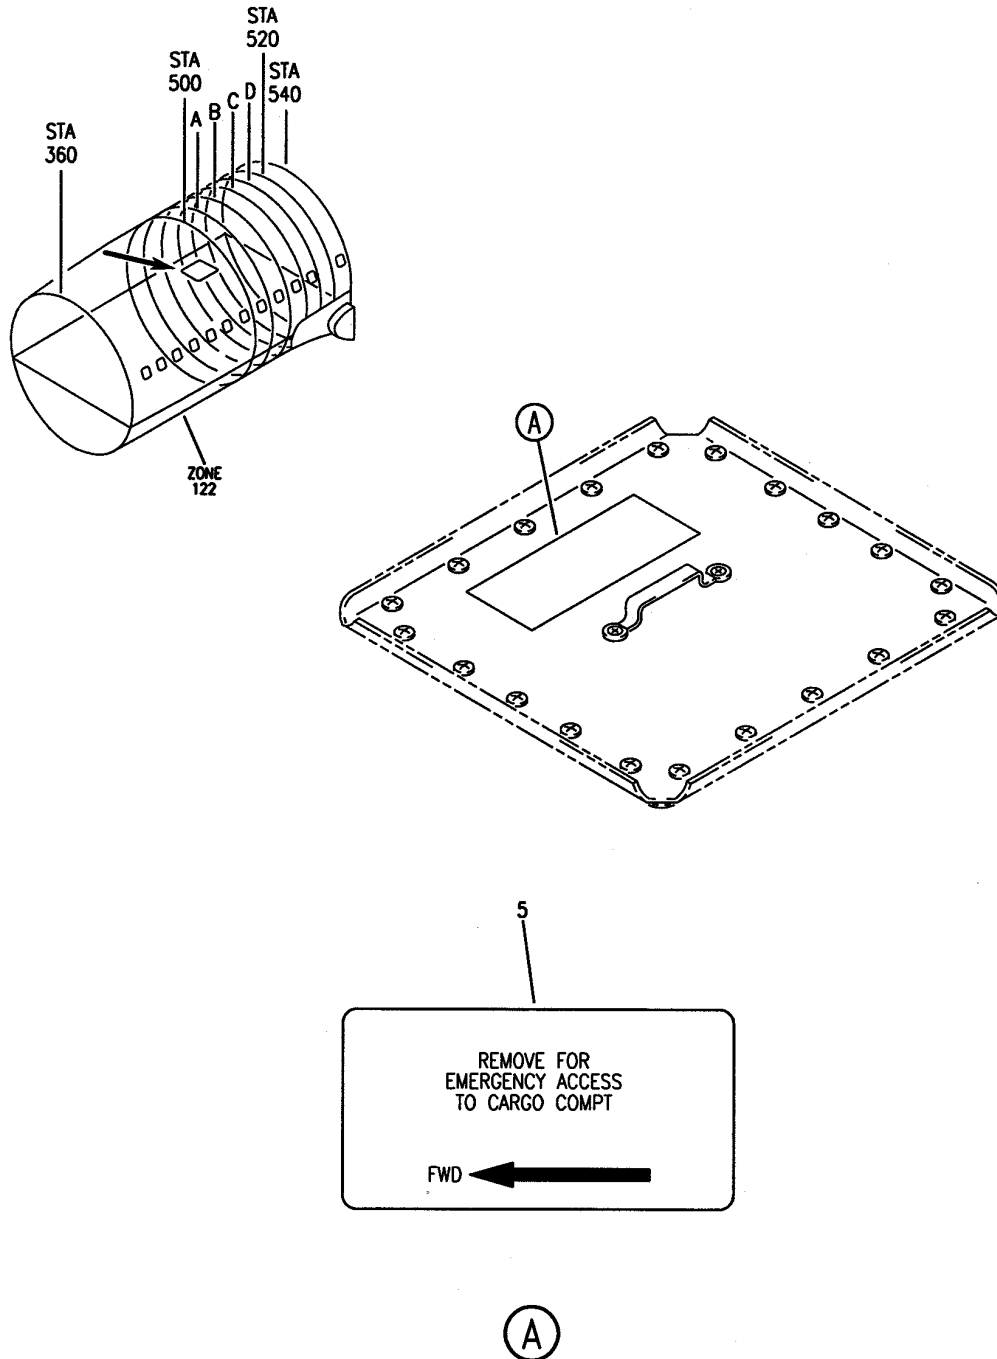

E 11370101A REV 038

DOOR ASSY-CARGO COMPT (PLACARDS AND MARKINGS ONLY)
FIGURE 1A

11-37-01-01A

R Y R
OCT 15/21

11-37-01-01A
PAGE 0

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1 A			DOOR ASSY-CARGO COMPT (PLACARDS AND MARKINGS ONLY)		
- 1	453A1211-46		DOOR ASSY-CARGO COMPT (PLACARDS AND MARKINGS ONLY) QUALIFIED I/W DATA: 453A1214-1 OR 453A1214-4 TOGETHER WITH 453A1211-50 TOGETHER WITH (10) EACH BACB30NM3K9 TOGETHER WITH (20) EACH BACS12FA3K12 CAN REPLACE OR BE REPLACED BY 65C34493-6 TOGETHER WITH 453A1211-46 TOGETHER WITH (10) EACH BACB30NM3K7. 453A1214-1 OR 453A1214-4 TOGETHER WITH 453A1211-54 TOGETHER WITH (10) EACH BACB30NM3K9 TOGETHER WITH (20) EACH BACS12FA3K12 CAN REPLACE OR BE REPLACED BY 65C34493-6 TOGETHER WITH 453A1211-46 TOGETHER WITH (10) EACH BACB30NM3K7. FOR NHA/OTHER SYS DET SEE: 25-52-06-19	056340	RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

RYR

11-37-01-01A

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01
FIG. 01A
PAGE 1
JUN 15/24

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1 A - 1	453A1211-50		DOOR ASSY-CARGO COMPT (PLACARDS AND MARKINGS ONLY) QUALIFIED I/W DATA: 453A1214-1 TOGETHER WITH 453A1211-50 TOGETHER WITH (10) EACH BACB30NM3K9 TOGETHER WITH (20) EACH BACS12FA3K12 CAN REPLACE OR BE REPLACED BY (65C34493-6 OR 65C34493-5) TOGETHER WITH 453A1211-1 TOGETHER WITH (10) EACH BACB30NM3K7. 453A1214-1 OR 453A1214-4 TOGETHER WITH 453A1211-50 TOGETHER WITH (10) EACH BACB30NM3K9 TOGETHER WITH (20) EACH BACS12FA3K12 CAN REPLACE OR BE REPLACED BY 65C34493-6 TOGETHER WITH 453A1211-46 TOGETHER WITH (10) EACH BACB30NM3K7. FOR NHA/OTHER SYS DET SEE: 25-52-06-19	341999	RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

RYR

11-37-01-01A

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01
FIG. 01A
PAGE 2
JUN 15/24

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1 A - 1	453A1211-54		DOOR ASSY-CARGO COMPT (PLACARDS AND MARKINGS ONLY) QUALIFIED I/W DATA: 453A1214-1 TOGETHER WITH 453A1211-54 TOGETHER WITH (10) EACH BACB30NM3K9 TOGETHER WITH (20) EACH BACS12FA3K12 CAN REPLACE OR BE REPLACED BY (65C34493-6 OR 65C34493-5) TOGETHER WITH 453A1211-1 TOGETHER WITH (10) EACH BACB30NM3K7. 453A1214-1 OR 453A1214-4 TOGETHER WITH 453A1211-54 TOGETHER WITH (10) EACH BACB30NM3K9 TOGETHER WITH (20) EACH BACS12FA3K12 CAN REPLACE OR BE REPLACED BY 65C34493-6 TOGETHER WITH 453A1211-46 TOGETHER WITH (10) EACH BACB30NM3K7. FOR NHA/OTHER SYS DET SEE: 25-52-06-19	341999	RF
5	BAC27DCA699		.MARKER		1

ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE

- ITEM NOT ILLUSTRATED


RYR

11-37-01-01A

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01
 FIG. 01A
 PAGE 3
 JUN 15/24

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

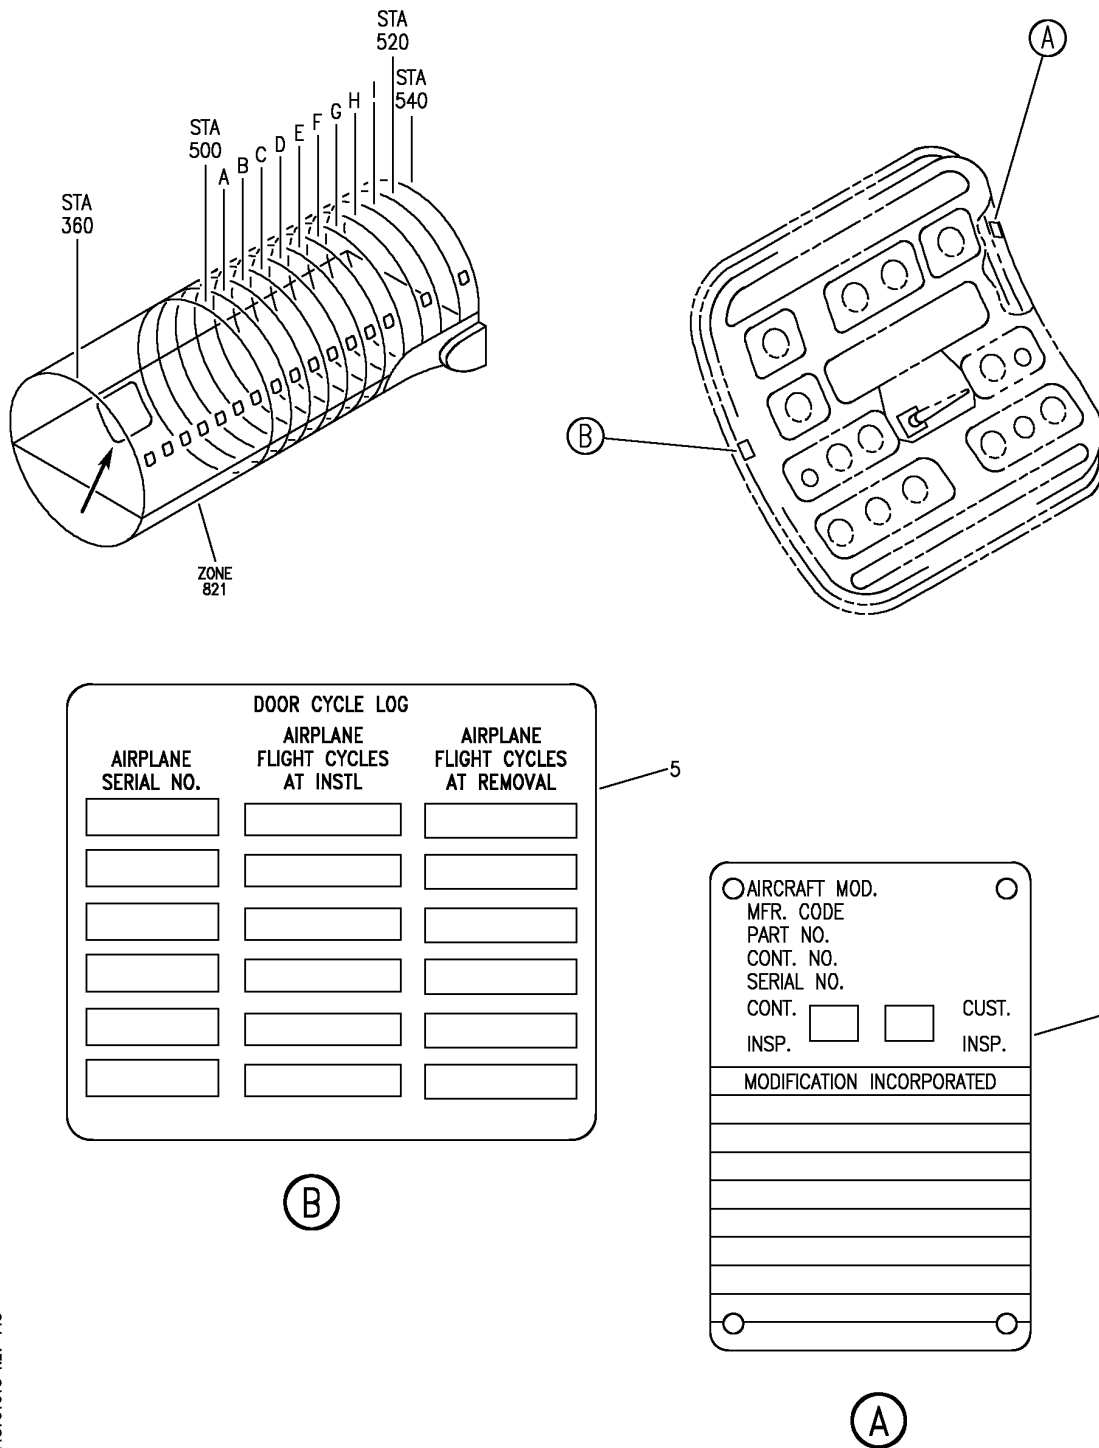

E 11370101C REV 140

DOOR ASSY-FWD CARGO (PLACARDS AND MARKINGS ONLY)
FIGURE 1C

11-37-01-01C

R Y R
O C T 15 / 21

11-37-01-01C
PAGE 0

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1 C			DOOR ASSY-FWD CARGO (PLACARDS AND MARKINGS ONLY)		
- 1	143A6110-28		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-28 CAN REPLACE OR BE REPLACED BY 143A6110-26, 143A6110-27, 143A6110-29, 143A6110-30 OR 143A6110-31. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	056314	RF
- 1	143A6110-29		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-29 CAN REPLACE OR BE REPLACED BY 143A6110-25, 143A6110-27, 143A6110-28, 143A6110-30 OR 143A6110-31. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	315999	RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

RYR

11-37-01-01C

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01
 FIG. 01C
 PAGE 1
 OCT 15/23

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1C					
- 1	143A6110-33		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-33 CAN REPLACE OR BE REPLACED BY 143A6110-29, 143A6110-30, 143A6110-31, 143A6110-34, 143A6110-35 OR 143A6110-36. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	056314	RF
- 1	143A6110-34		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-34 CAN REPLACE OR BE REPLACED BY 143A6110-28, 143A6110-30, 143A6110-31, 143A6110-33, 143A6110-35 OR 143A6110-36. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	315999	RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

RYR

11-37-01-01C

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01
 FIG. 01C
 PAGE 2
 OCT 15/23

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1C					
- 1	143A6110-25		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-25 CAN REPLACE OR BE REPLACED BY 143A6110-22, 143A6110-23, 143A6110-24, 143A6110-26 OR 143A6110-27. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	056314	RF
- 1	143A6110-21		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-21 CAN REPLACE OR BE REPLACED BY 143A6110-18, 143A6110-19, 143A6110-20, 143A6110-22, 143A6110-23 OR 143A6110-24. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	056314	RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

RYR

11-37-01-01C

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

11-37-01
 FIG. 01C
 PAGE 3
 OCT 15/23

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1C - 1	143A6110-17		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-17 CAN REPLACE OR BE REPLACED BY 143A6110-14, 143A6110-15, 143A6110-16, 143A6110-18, 143A6110-19 OR 143A6110-20. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	056314	RF
- 1	143A6110-13		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-13 CAN REPLACE OR BE REPLACED BY 143A6110-10, 143A6110-11, 143A6110-12, 143A6110-14, 143A6110-15 OR 143A6110-16. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	056314	RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

RYR

11-37-01-01C

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01
 FIG. 01C
 PAGE 4
 DEC 15/23

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1C - 1	143A6110-9	DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-9 CAN REPLACE OR BE REPLACED BY 143A6110-8, 143A6110-10, 143A6110-11 OR 143A6110-12. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	056314	RF
- 1	143A6110-7	DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-7 CAN REPLACE OR BE REPLACED BY 143A6110-6 OR 143A6110-8. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	056314	RF
- 1	143A6110-5	DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	056314	RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

- ITEM NOT ILLUSTRATED

R Y R

11-37-01-01C

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01
FIG. 01C
PAGE 5
OCT 15/23

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1C					
- 1	143A6110-26		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-26 CAN REPLACE OR BE REPLACED BY 143A6110-21, 143A6110-23, 143A6110-24, 143A6110-25 OR 143A6110-27. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	315999	RF
- 2	143A6110-22		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-22 CAN REPLACE OR BE REPLACED BY 143A6110-17, 143A6110-19, 143A6110-20, 143A6110-21, 143A6110-23 OR 143A6110-24. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	315999	RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

RYR

11-37-01-01C

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01
 FIG. 01C
 PAGE 6
 OCT 15/23

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1C - 2	143A6110-18		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-18 CAN REPLACE OR BE REPLACED BY 143A6110-13, 143A6110-15, 143A6110-16, 143A6110-17, 143A6110-19 OR 143A6110-20. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	315999	RF
- 2	143A6110-14		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-14 CAN REPLACE OR BE REPLACED BY 143A6110-9, 143A6110-11, 143A6110-12, 143A6110-13, 143A6110-15 OR 143A6110-16. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	315999	RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

RYR

11-37-01-01C

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01
 FIG. 01C
 PAGE 7
 OCT 15/23

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1C - 2	143A6110-10	DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-10 CAN REPLACE OR BE REPLACED BY 143A6110-7, 143A6110-9, 143A6110-11 OR 143A6110-12. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	315999	RF
- 2	143A6110-8	DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-8 CAN REPLACE OR BE REPLACED BY 143A6110-5 OR 143A6110-7. COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	315999	RF
- 2	143A6110-6	DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD COMPONENT MAINT MANUAL REF: 52-31-15 FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	315999	RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

- ITEM NOT ILLUSTRATED

R Y R

11-37-01-01C

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01
FIG. 01C
PAGE 8
OCT 15/23

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1C				
- 2	143A6110-37	DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-37 CAN REPLACE OR BE REPLACED BY 143A6110-34, 143A6110-35, 143A6110-36, 143A6110-38, 143A6110-39 OR 143A6110-40. FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	056314	RF
- 2	143A6110-38	DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-38 CAN REPLACE OR BE REPLACED BY 143A6110-33, 143A6110-35, 143A6110-36, 143A6110-37, 143A6110-39 OR 143A6110-40. FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	315999	RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

- ITEM NOT ILLUSTRATED

RYR

11-37-01-01C

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01
FIG. 01C
PAGE 9
OCT 15/23

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1C - 3	143A6110-42		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE AIRPLANE FORWARD CARGO COMPARTMENT. THE DOOR ASSEMBLY IS A PLUG-TYPE THAT OPENS INWARD OF THE CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-42 CAN REPLACE OR BE REPLACED BY 143A6110-38, 143A6110-39, 143A6110-40, 143A6110-43, 143A6110-44 OR 143A6110-45. FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	056314	RF
- 3	143A6110-43		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-43 CAN REPLACE OR BE REPLACED BY 143A6110-37, 143A6110-39, 143A6110-40, 143A6110-42, 143A6110-44 OR 143A6110-45. FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	315999	RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

RYR

11-37-01-01C

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01
FIG. 01C
PAGE 10
DEC 15/23

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1C - 3	143A6110-46		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. PLUG-TYPE THAT OPENS INWARD OF THE CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-46 CAN REPLACE OR BE REPLACED BY 143A6110-42, 143A6110-43, 143A6110-44 OR 143A6110-45. FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	056314	RF
- 3	143A6110-47		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: FWD FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE FORWARD CARGO COMPARTMENT. MISCELLANEOUS DATA: 143A6110-47 CAN REPLACE OR BE REPLACED BY 143A6110-42, 143A6110-43, 143A6110-44, 143A6110-45 OR 143A6110-46. FOR NHA/OTHER SYS DET SEE: 52-31-00-01B	315999	RF
5 10	BAC27DBY191 MS27253F1		.MARKER-ALUMINUM FOIL .PLATE- TRUE PART NUMBER: MS27253-F1		1 1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					


- ITEM NOT ILLUSTRATED

RYR

11-37-01-01C

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01
 FIG. 01C
 PAGE 11
 DEC 15/23

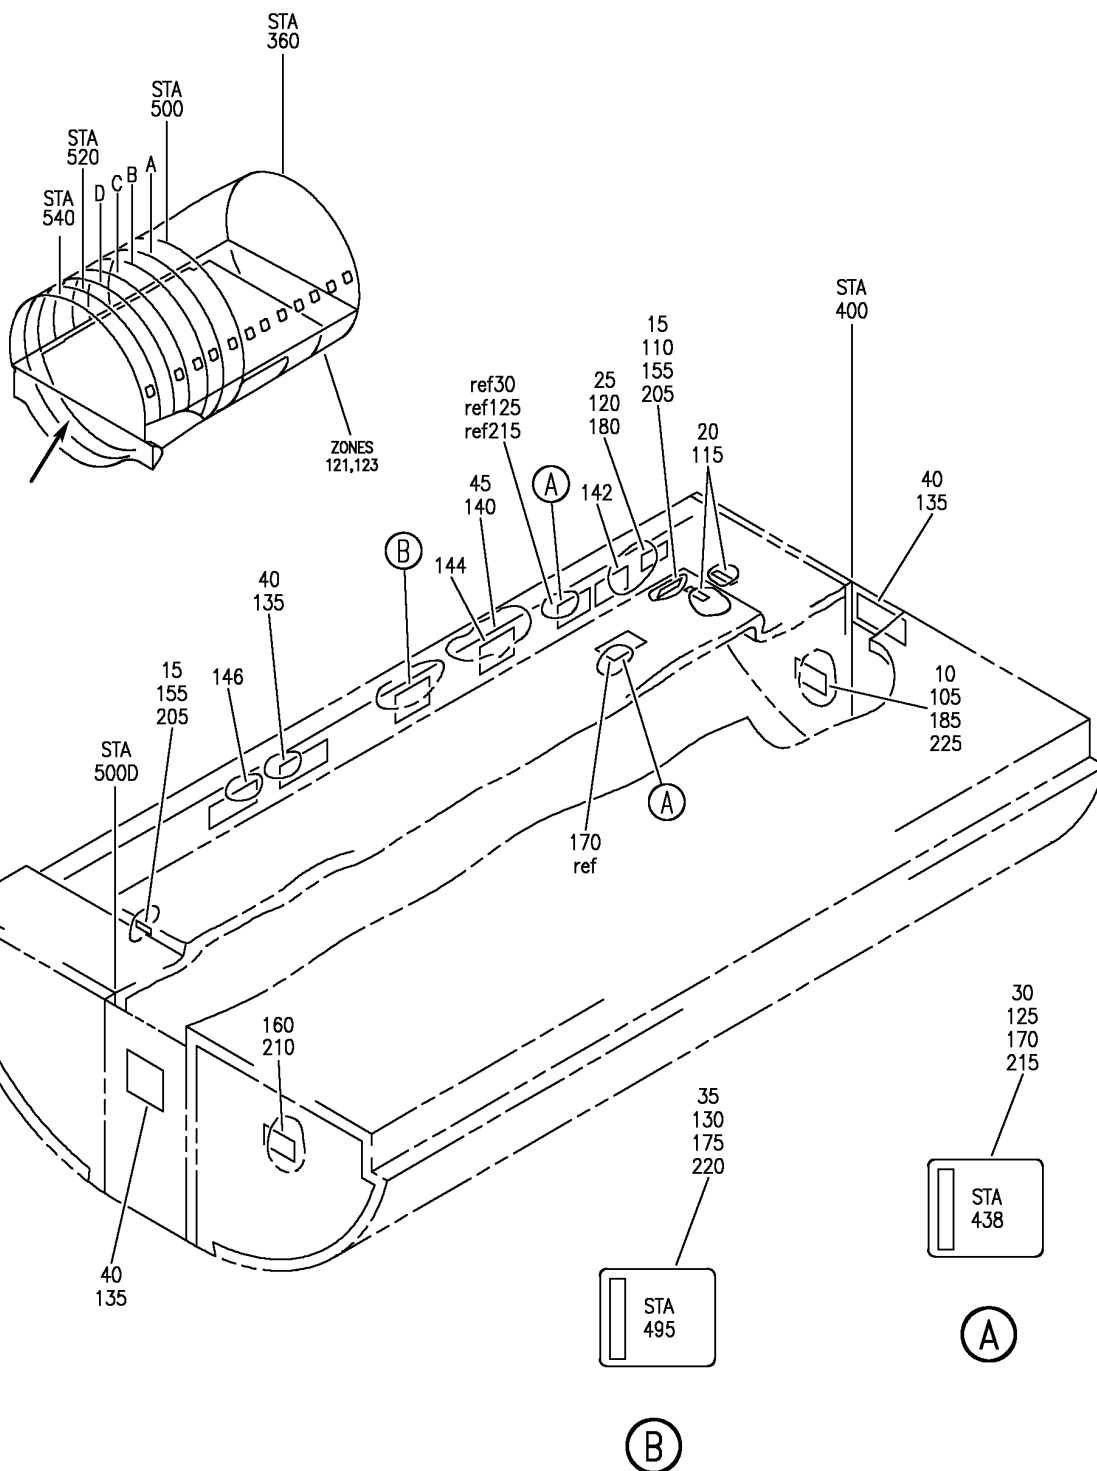

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
2			MARKER INSTL-FWD CARGO COMPT	099350	
- 100	MODREF282663		MARKER INSTL-CARGO COMPT MODULE NUMBER: 453A1700-5 REV E POSITION DATA: FWD	099350	RF
105	BAC27DCA529		.MARKER- PLACARD CONTENT: BHD 396	099350	1
110	BAC27DCA522		.MARKER- PLACARD CONTENT: WASTE TUBE ACCESS	099350	1
115	BAC27WFDE109		.MARKER- PLACARD CONTENT: AIR DATA MODULE (ADM)	099350	2
120	BAC27DCA538		.MARKER- PLACARD CONTENT: PRIMARY STATIC SYSTEM DRAINS ACCESS	099350	1
125	BAC27DCA533		.MARKER	099350	1
130	BAC27DCA534		.MARKER	099350	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					


— ITEM NOT ILLUSTRATED

RYR

11-37-01-02

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

11-37-01
 FIG. 02
 PAGE 1
 JUN 15/23

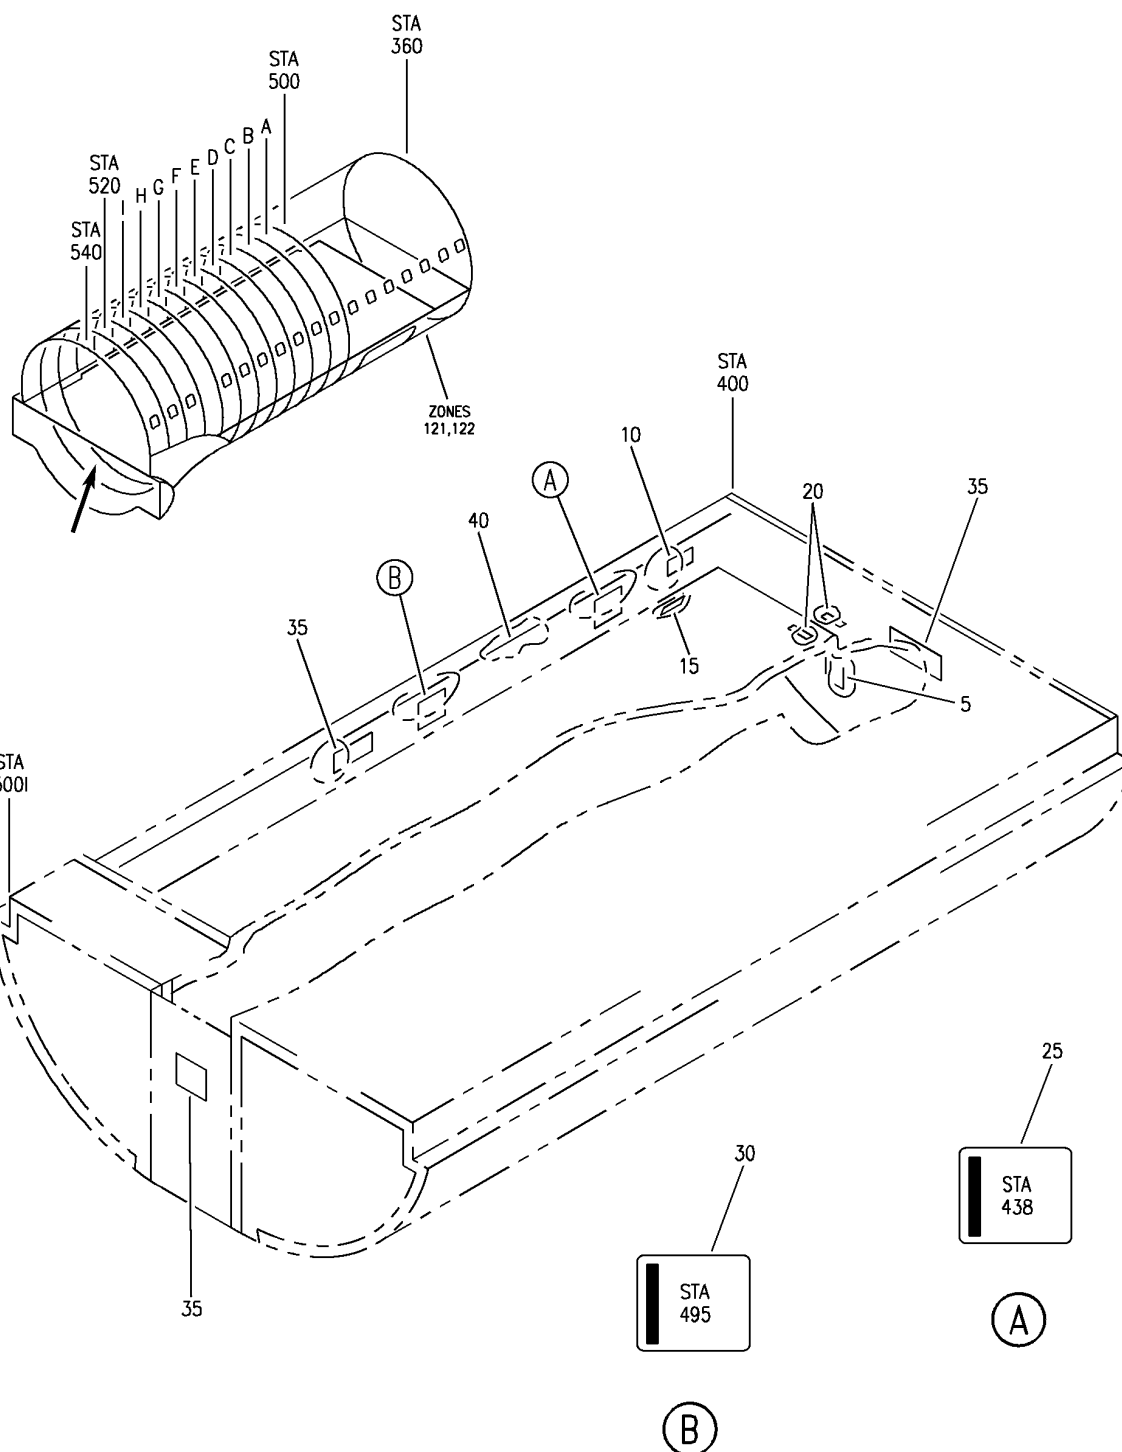

11-37-01-02A

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
2A			MARKER INSTL-FWD CARGO COMPT	056098 351999	
- 1	MODREF222380		MARKER INSTL-CARGO COMPT MODULE NUMBER: 453A1700-5 REV D POSITION DATA: FWD	056098	RF
- 1	MODREF642020		MARKER INSTL-CARGO COMPT MODULE NUMBER: 453A1700-22 REV A POSITION DATA: FWD	351999	RF
5	BAC27DCA529		.MARKER- PLACARD CONTENT: BHD 396	056098	1
5	453A3701-42		.MARKER- PLACARD CONTENT: BHD 402	351999	1
10	BAC27DCA538		.MARKER- PLACARD CONTENT: PRIMARY STATIC SYSTEM DRAINS ACCESS	056098 351999	1
15	BAC27DCA522		.MARKER- PLACARD CONTENT: WASTE TUBE ACCESS	056098 351999	1
20	BAC27WFDE109		.MARKER- PLACARD CONTENT: AIR DATA MODULE (ADM)	056098 351999	2
25	BAC27DCA533		.MARKER	056098 351999	1
30	BAC27DCA534		.MARKER	056098 351999	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED


RYR

11-37-01-02A

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01
 FIG. 02A
 PAGE 1
 JUN 15/23

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

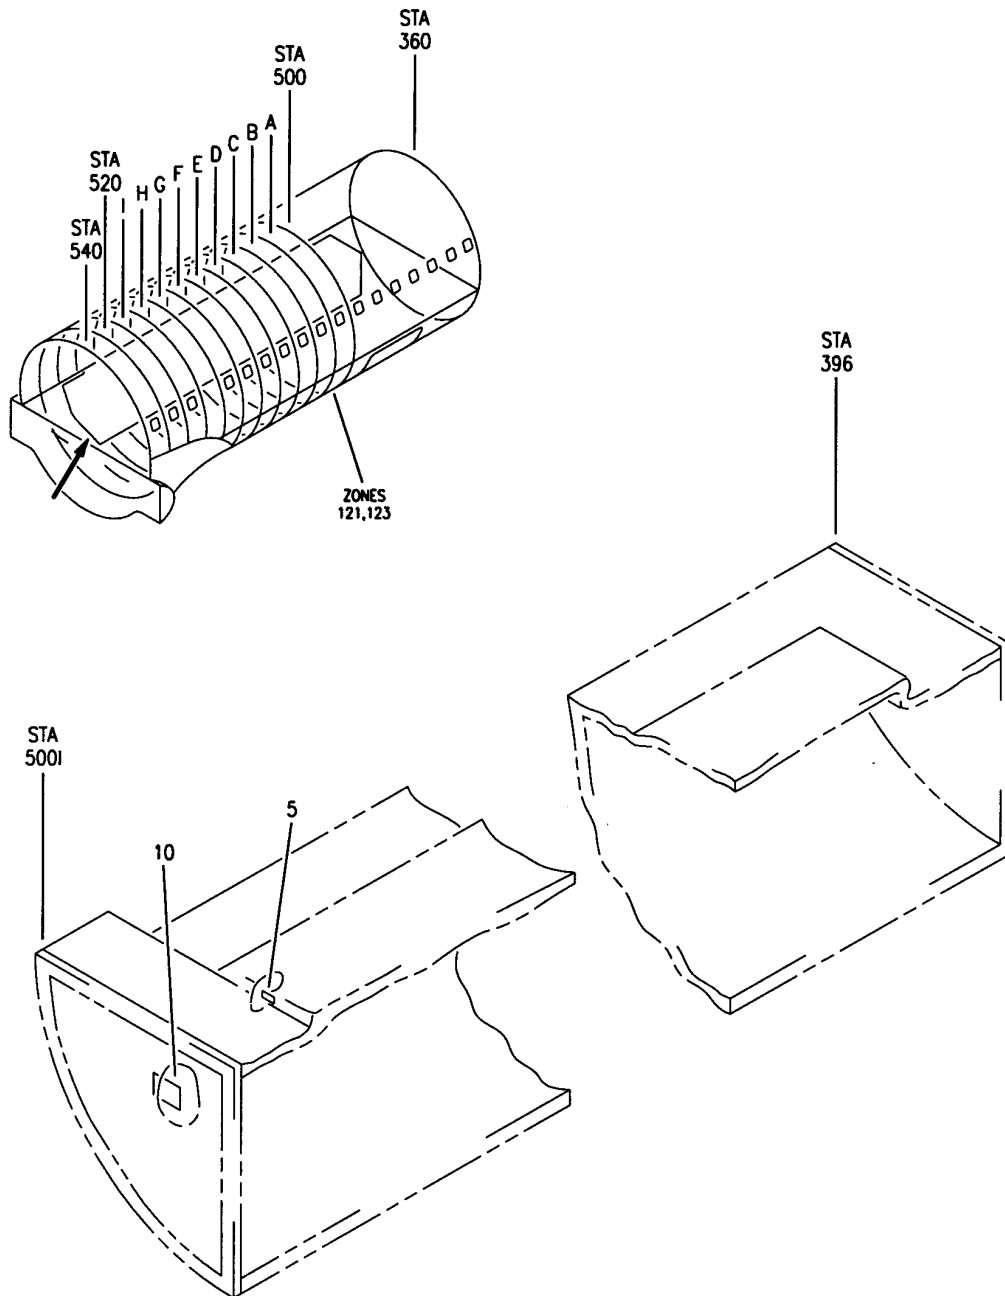

E 11370104 REV 014

MARKER INSTL-FWD CARGO
FIGURE 4

RJR
OCT 10/06

11-37-01-04

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01-04
PAGE 0

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
4					
- 1	MODREF222382		MARKER INSTL-FWD CARGO MARKER INSTL-CARGO COMPT MODULE NUMBER: 453A1700-8 REV B POSITION DATA: FWD		R F
5	BAC27DCA522		.MARKER- PLACARD CONTENT: WASTE TUBE ACCESS		1
10	BAC27DCA545		.MARKER- PLACARD CONTENT: BHD 500 I		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED


R Y R

11-37-01-04

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

11-37-01
 FIG. 04
 PAGE 1
 JUN 15/23

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

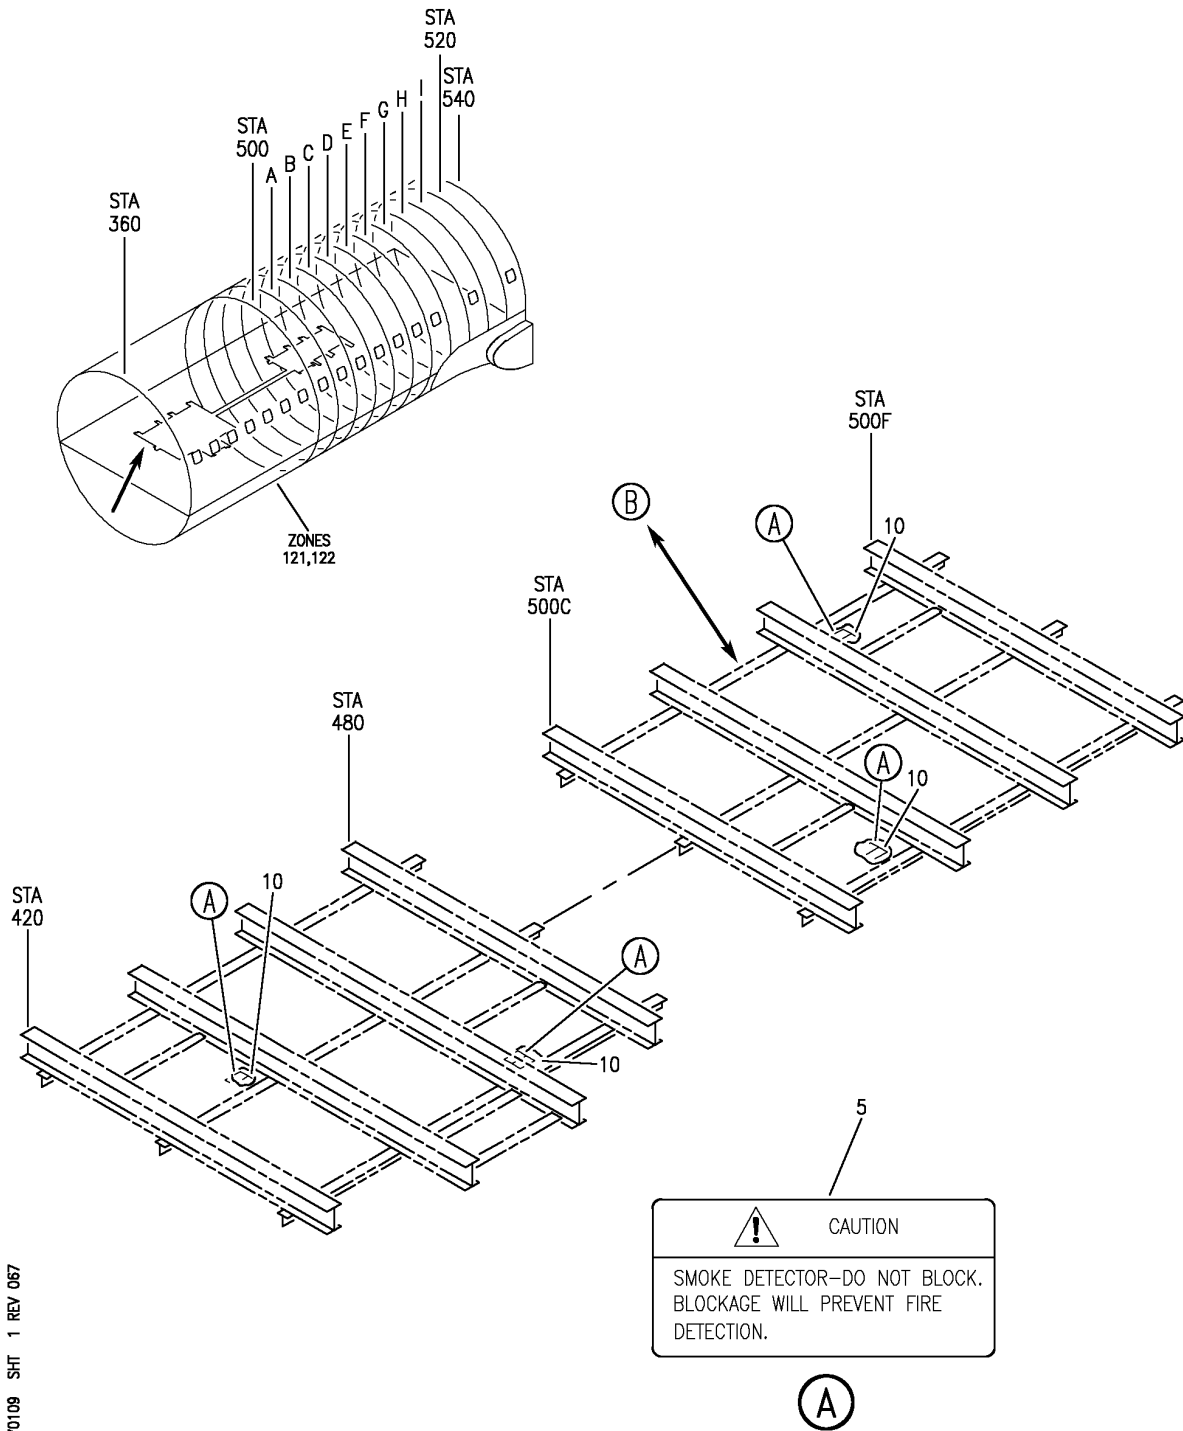

E 11370109 SHT 1 REV 067

DETECTOR INSTL-SMOKE CARGO COMPT (PLACARDS AND MARKINGS ONLY) FWD
FIGURE 9 (SHEET 1)


11-37-01-09

R Y R
O C T 10 / 06

11-37-01-09
PAGE 0

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

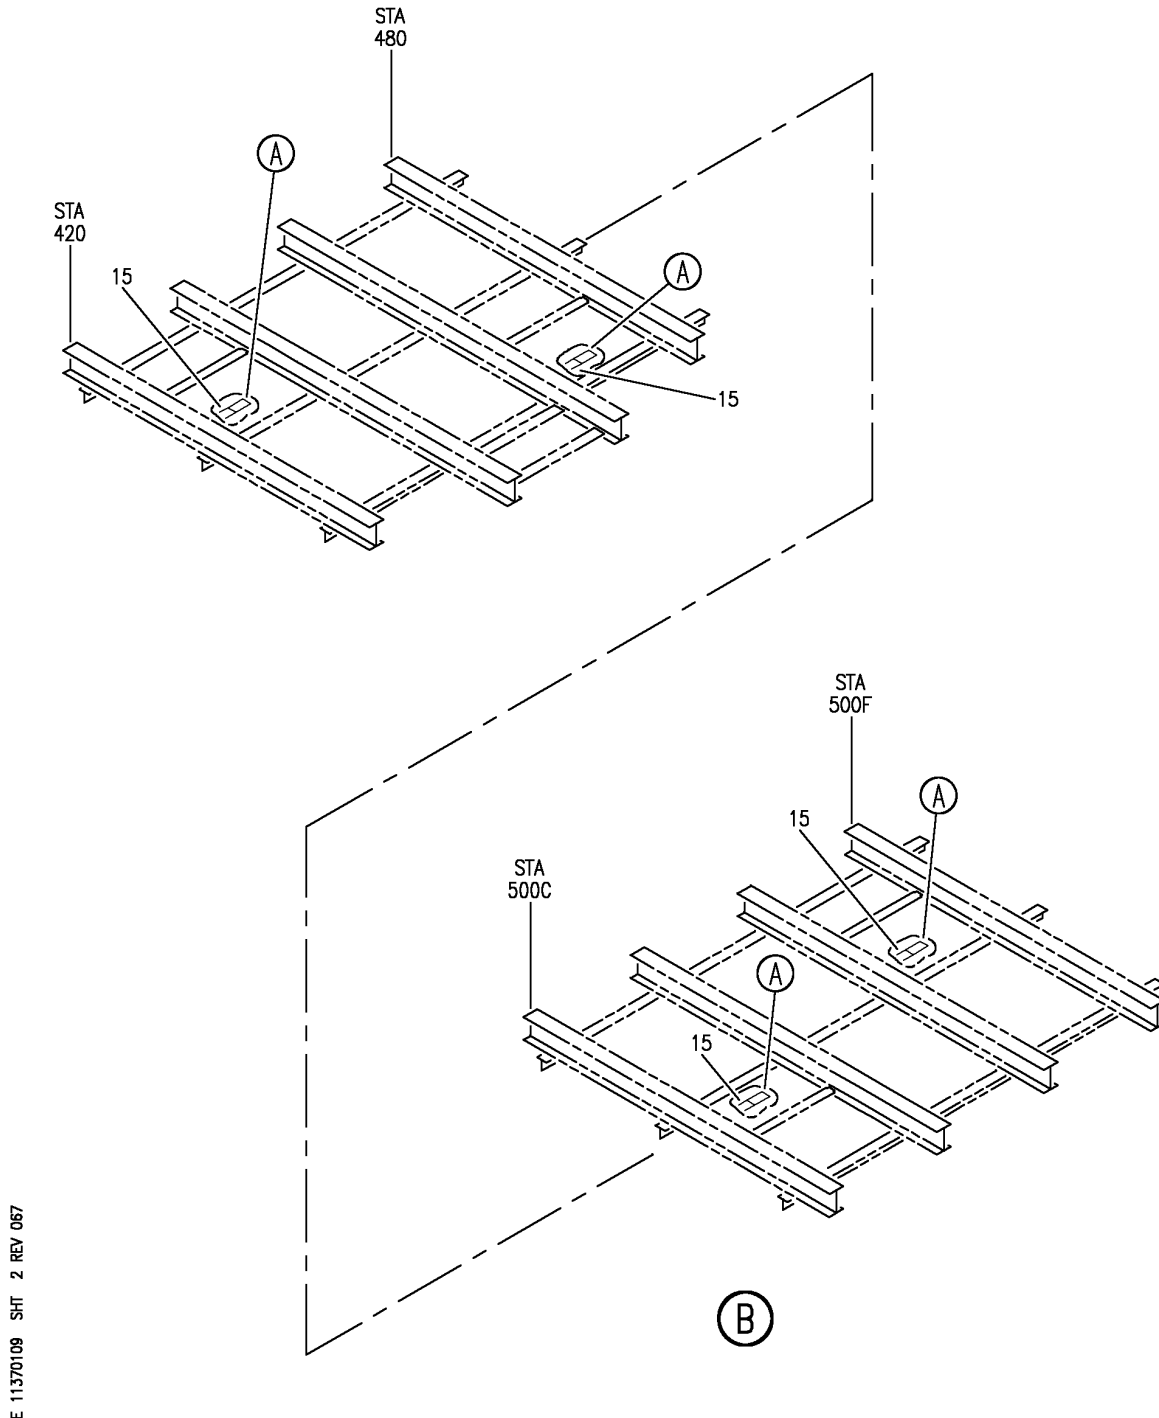

E 11370109 SHT 2 REV 067

DETECTOR INSTL-SMOKE CARGO COMPT (PLACARDS AND MARKINGS ONLY) FWD
FIGURE 9 (SHEET 2)

R/YR
OCT 10/06

11-37-01-09

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

11-37-01-09
PAGE 0A

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
9			DETECTOR INSTL-SMOKE CARGO COMPT (PLACARDS AND MARKINGS ONLY) FWD		
- 1	MODREF101524		DETECTOR INSTL-SMOKE CARGO COMPT (PLACARDS AND MARKINGS ONLY) MODULE NUMBER: 218A4310-8 REV B POSITION DATA: FWD FOR OTHER SYS DETAILS SEE: 26-16-01-05	056082	RF
- 1	MODREF243336		DETECTOR INSTL-SMOKE CARGO COMPT (PLACARDS AND MARKINGS ONLY) MODULE NUMBER: 218A4310-8 REV C POSITION DATA: FWD FOR OTHER SYS DETAILS SEE: 26-16-01-05	083358	RF
- 1	MODREF630348		DETECTOR INSTL-SMOKE CARGO COMPT (PLACARDS AND MARKINGS ONLY) MODULE NUMBER: 218A4310-8 REV D POSITION DATA: FWD FOR OTHER SYS DETAILS SEE: 26-16-01-05	359388	RF
- 1	MODREF692517		DETECTOR INSTL-SMOKE CARGO COMPT (PLACARDS AND MARKINGS ONLY) MODULE NUMBER: 218A4310-8 REV E POSITION DATA: FWD FOR OTHER SYS DETAILS SEE: 26-16-01-05	389999	RF
5	BAC27NEC261		.DECAL-		4
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED


RYR

11-37-01-09

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-01
 FIG. 09
 PAGE 1
 JUN 15/23

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

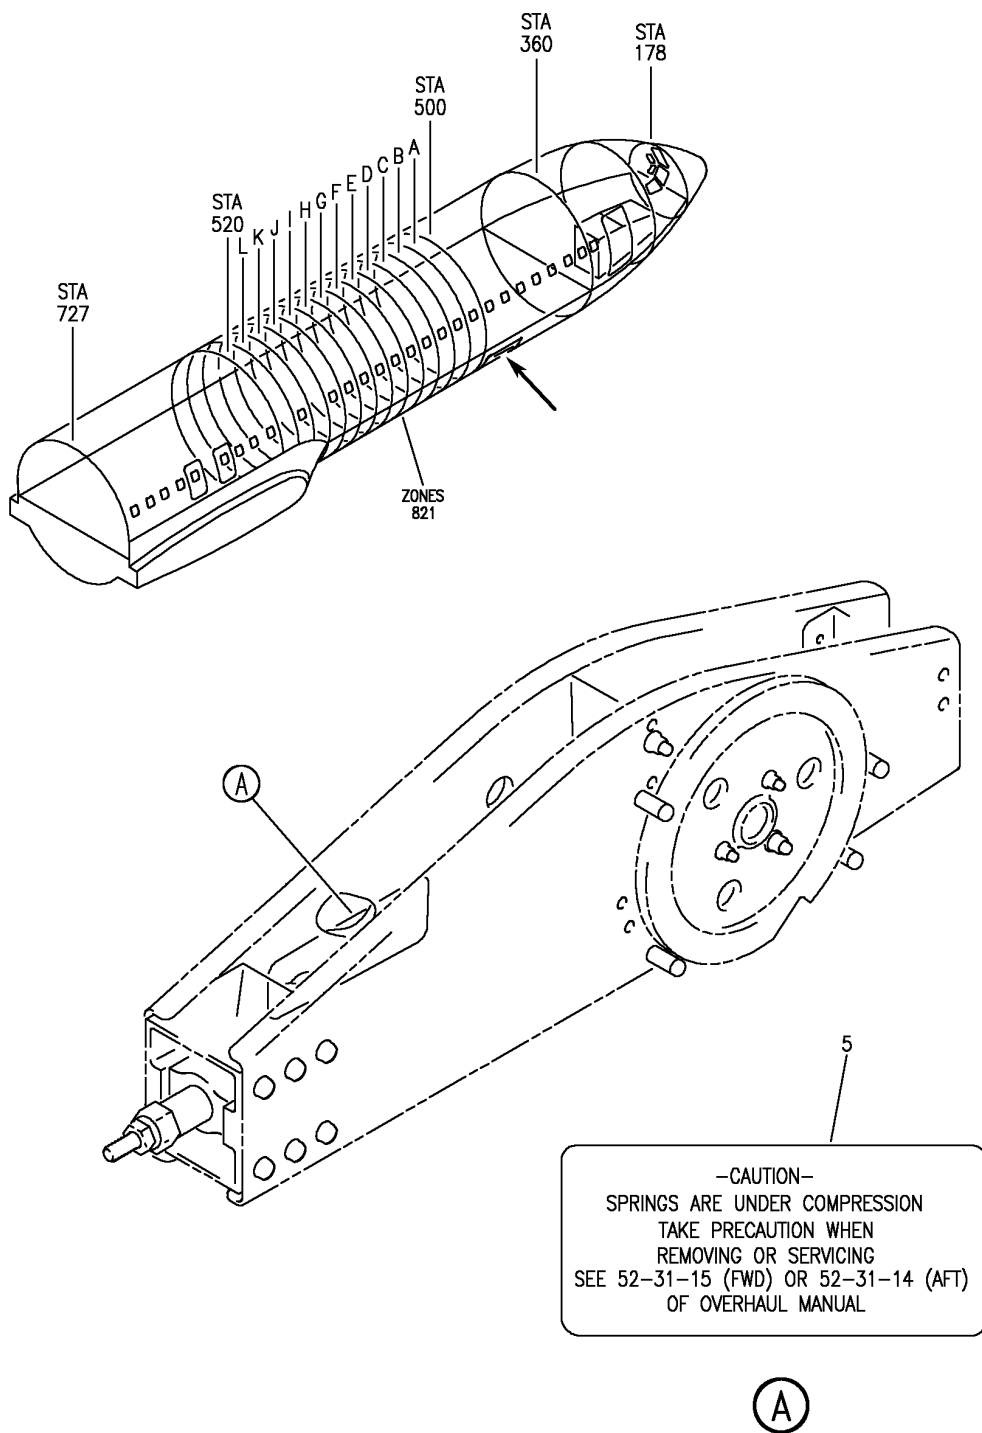

E 11370201B REV 140

COUNTERBALANCE ASSY-FWD CARGO DOOR (PLACARDS MARKINGS ONLY)
FIGURE 1B

11-37-02-01B

R Y R
JUN 15/08

11-37-02-01B
PAGE 0

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1B			COUNTERBALANCE ASSY-FWD CARGO DOOR (PLACARDS MARKINGS ONLY)		
- 1	65C33684-13		COUNTERBALANCE ASSY-FWD CARGO DOOR (PLACARDS AND MARKINGS ONLY)		R F
			QUALIFIED I/W DATA: 65C33684-13 IS FUNCTIONALLY INTERCHANGEABLE WITH 65C33684-12, HOWEVER THE WARNING DECAL BAC27DBY193 ON THE 65C33684-13 REFERS TO THE 737NG MAINTENANCE MANUAL WHILE THE WARNING DECAL BAC27DBY0184 ON THE 65C33684-12 REFERS TO THE CLASSIC MAINTENANCE MANUAL. CHANGE DECAL AND REPARTMARK AS REQUIRED. FOR NHA/OTHER SYS DET SEE: 52-31-00-09B		
5	BAC27DBY193		.MARKER-ALUMINUM FOIL		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

— ITEM NOT ILLUSTRATED


R Y R

11-37-02-01B

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

11-37-02
 FIG. 01B
 PAGE 1
 FEB 15/21

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

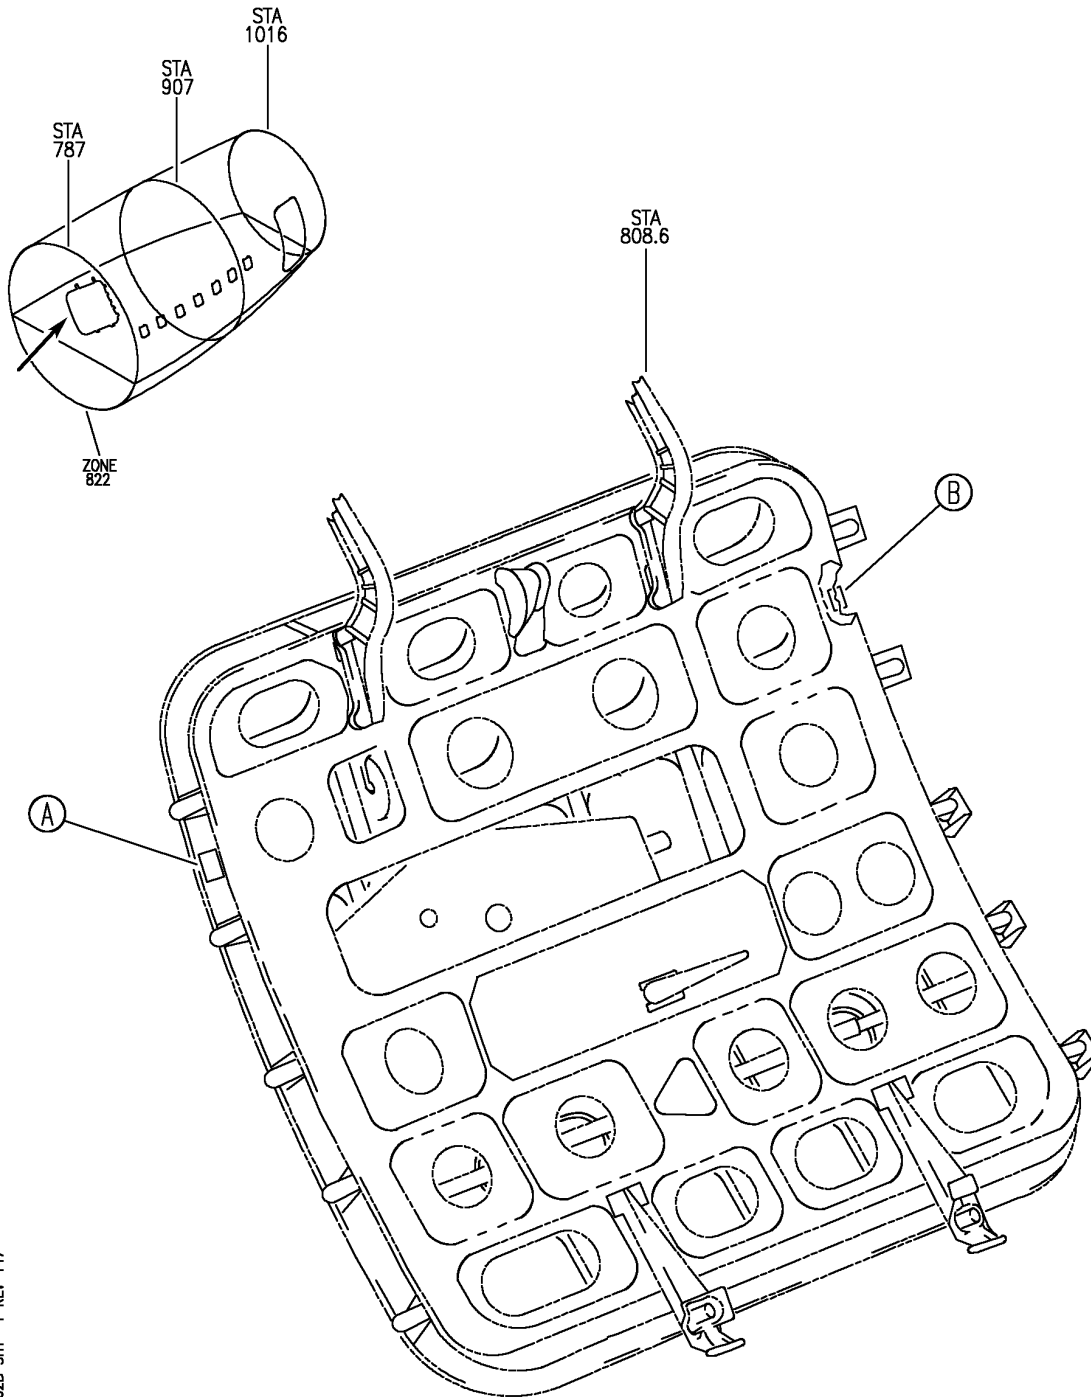

E 11370202B SHT 1 REV 147

DOOR ASSY-AFT CARGO (PLACARDS AND MARKINGS ONLY)
FIGURE 2B (SHEET 1)

11-37-02-02B

R/YR
OCT 15/08

11-37-02-02B
PAGE 0

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

5

DOOR CYCLE LOG		
AIRPLANE SERIAL NO.	AIRPLANE FLIGHT CYCLES AT INSTL	AIRPLANE FLIGHT CYCLES AT REMOVAL

A

10

○ AIRCRAFT MOD. _____ ○	
MFR. CODE _____	
PART NO. _____	
CONT. NO. _____	
SERIAL NO. _____	
CONT. ☐	CUST. ☐
INSP. ☐	INSP. ☐
_____ MODIFICATION INCORPORATED	
○ _____ ○	

B

E 11370202B SHT 2 REV 147

DOOR ASSY-AFT CARGO (PLACARDS AND MARKINGS ONLY)
FIGURE 2B (SHEET 2)

11-37-02-02B

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
2B			DOOR ASSY-AFT CARGO (PLACARDS AND MARKINGS ONLY)		
- 1	146A6110-28		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: AFT MISCELLANEOUS DATA: 146A6110-28 CAN REPLACE OR BE REPLACED BY 146A6110-26, 146A6110-27, 146A6110-29, 146A6110-30 OR 146A6110-31. COMPONENT MAINT MANUAL REF: 52-31-14 FOR NHA/OTHER SYS DET SEE: 52-31-00-14		RF
- 1	146A6110-25		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: AFT MISCELLANEOUS DATA: 146A6110-25 CAN REPLACE OR BE REPLACED BY 146A6110-22, 146A6110-23, 146A6110-24, 146A6110-26 OR 146A6110-27. COMPONENT MAINT MANUAL REF: 52-31-14 FOR NHA/OTHER SYS DET SEE: 52-31-00-14		RF
- 1	146A6110-21		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: AFT MISCELLANEOUS DATA: 146A6110-21 CAN REPLACE OR BE REPLACED BY 146A6110-18, 146A6110-19, 146A6110-20, 146A6110-22, 146A6110-23 OR 146A6110-24. COMPONENT MAINT MANUAL REF: 52-31-14 FOR NHA/OTHER SYS DET SEE: 52-31-00-14		RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

R Y R

11-37-02-02B

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-02
 FIG. 02B
 PAGE 1
 AUG 15/23

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
2B - 1	146A6110-17		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: AFT MISCELLANEOUS DATA: 146A6110-17 CAN REPLACE OR BE REPLACED BY 146A6110-14, 146A6110-15, 146A6110-16, 146A6110-18, 146A6110-19 OR 146A6110-20. COMPONENT MAINT MANUAL REF: 52-31-14 FOR NHA/OTHER SYS DET SEE: 52-31-00-14		RF
- 1	146A6110-13		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: AFT MISCELLANEOUS DATA: 146A6110-13 CAN REPLACE OR BE REPLACED BY 146A6110-5, 146A6110-14, 146A6110-15 OR 146A6110-16. COMPONENT MAINT MANUAL REF: 52-31-14 FOR NHA/OTHER SYS DET SEE: 52-31-00-14		RF
- 2	146A6110-32		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: AFT FUNCTIONAL DESCRIPTION: PROVIDES ACCESS TO THE AFT CARGO COMPARTMENT. MISCELLANEOUS DATA: 146A6110-32 CAN REPLACE OR BE REPLACED BY 146A6110-29, 146A6110-30, 146A6110-31, 146A6110-33, 146A6110-34 OR 146A6110-35. COMPONENT MAINT MANUAL REF: 52-31-14 FOR NHA/OTHER SYS DET SEE: 52-31-00-14		RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

RYR

11-37-02-02B

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-02
FIG. 02B
PAGE 2
OCT 15/24

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
2B					
- 2	146A6110-4		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: AFT MISCELLANEOUS DATA: 146A6110-4 CAN REPLACE OR BE REPLACED BY 146A6110-5, 146A6110-12 OR 146A6110-16. COMPONENT MAINT MANUAL REF: 52-31-14 FOR NHA/OTHER SYS DET SEE: 52-31-00-14		RF
- 2	146A6110-6		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: AFT MISCELLANEOUS DATA: 146A6110-6 CAN REPLACE OR BE REPLACED BY 146A6110-7 OR 146A6110-8. COMPONENT MAINT MANUAL REF: 52-31-14 FOR NHA/OTHER SYS DET SEE: 52-31-00-14		RF
- 2	146A6110-11		DOOR ASSY-CARGO (PLACARDS AND MARKINGS ONLY) POSITION DATA: AFT MISCELLANEOUS DATA: 146A6110-11 CAN REPLACE OR BE REPLACED BY 146A6110-6, 146A6110-8 OR 146A6110-12. COMPONENT MAINT MANUAL REF: 52-31-14 FOR NHA/OTHER SYS DET SEE: 52-31-00-14		RF
5	BAC27DBY191		.MARKER-ALUMINUM FOIL		1
10	MS27253F1		.PLATE- TRUE PART NUMBER: MS27253-F1		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED


RYR

11-37-02-02B

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-02
FIG. 02B
PAGE 3
DEC 15/23

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

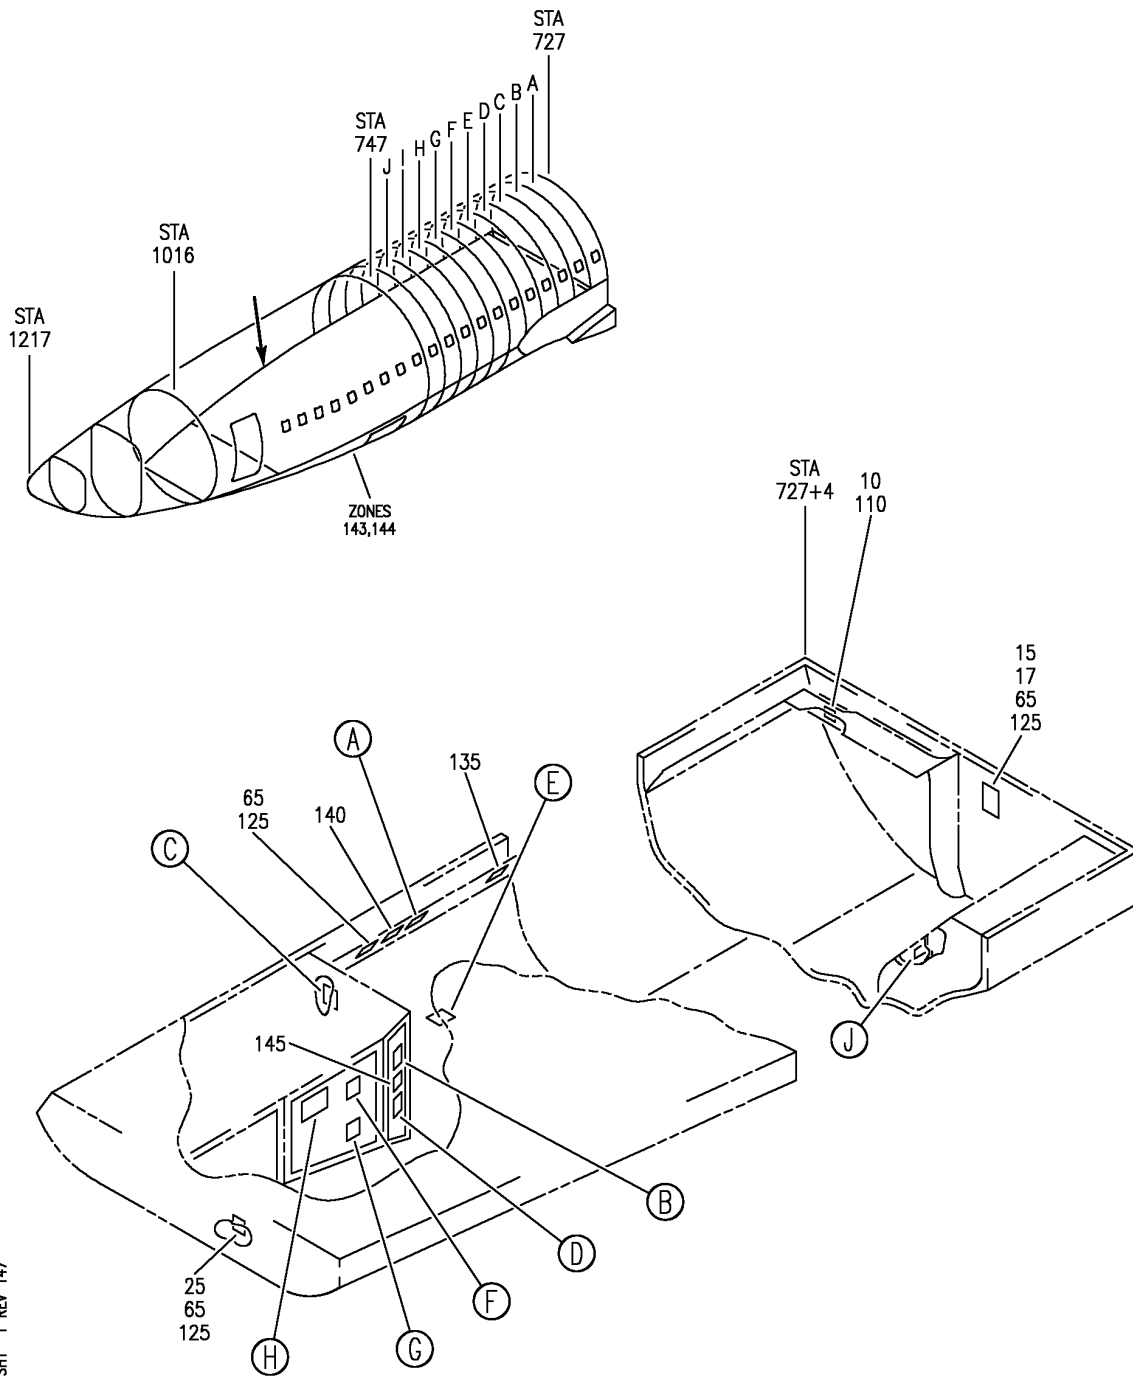

E 11370203 SHT 1 REV 147

MARKER INSTL-CARGO COMPT AFT
FIGURE 3 (SHEET 1)


11-37-02-03

RJR
OCT 15/08

11-37-02-03
PAGE 0

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

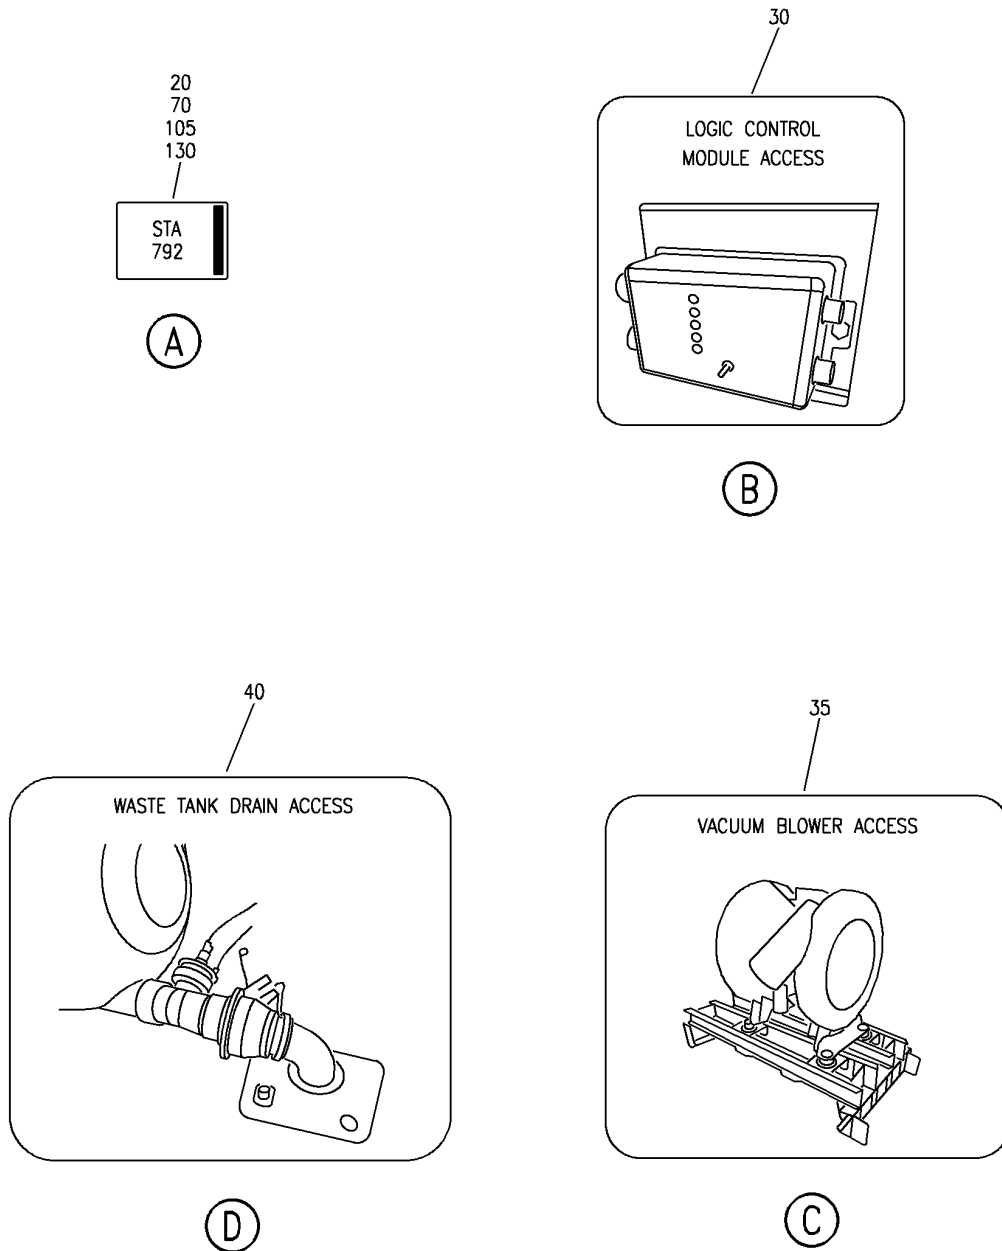

E 11370203 SHT 2 REV 126

MARKER INSTL-CARGO COMPT AFT
FIGURE 3 (SHEET 2)


11-37-02-03

R Y R
F E B 10 / 07

11-37-02-03
PAGE 0A

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

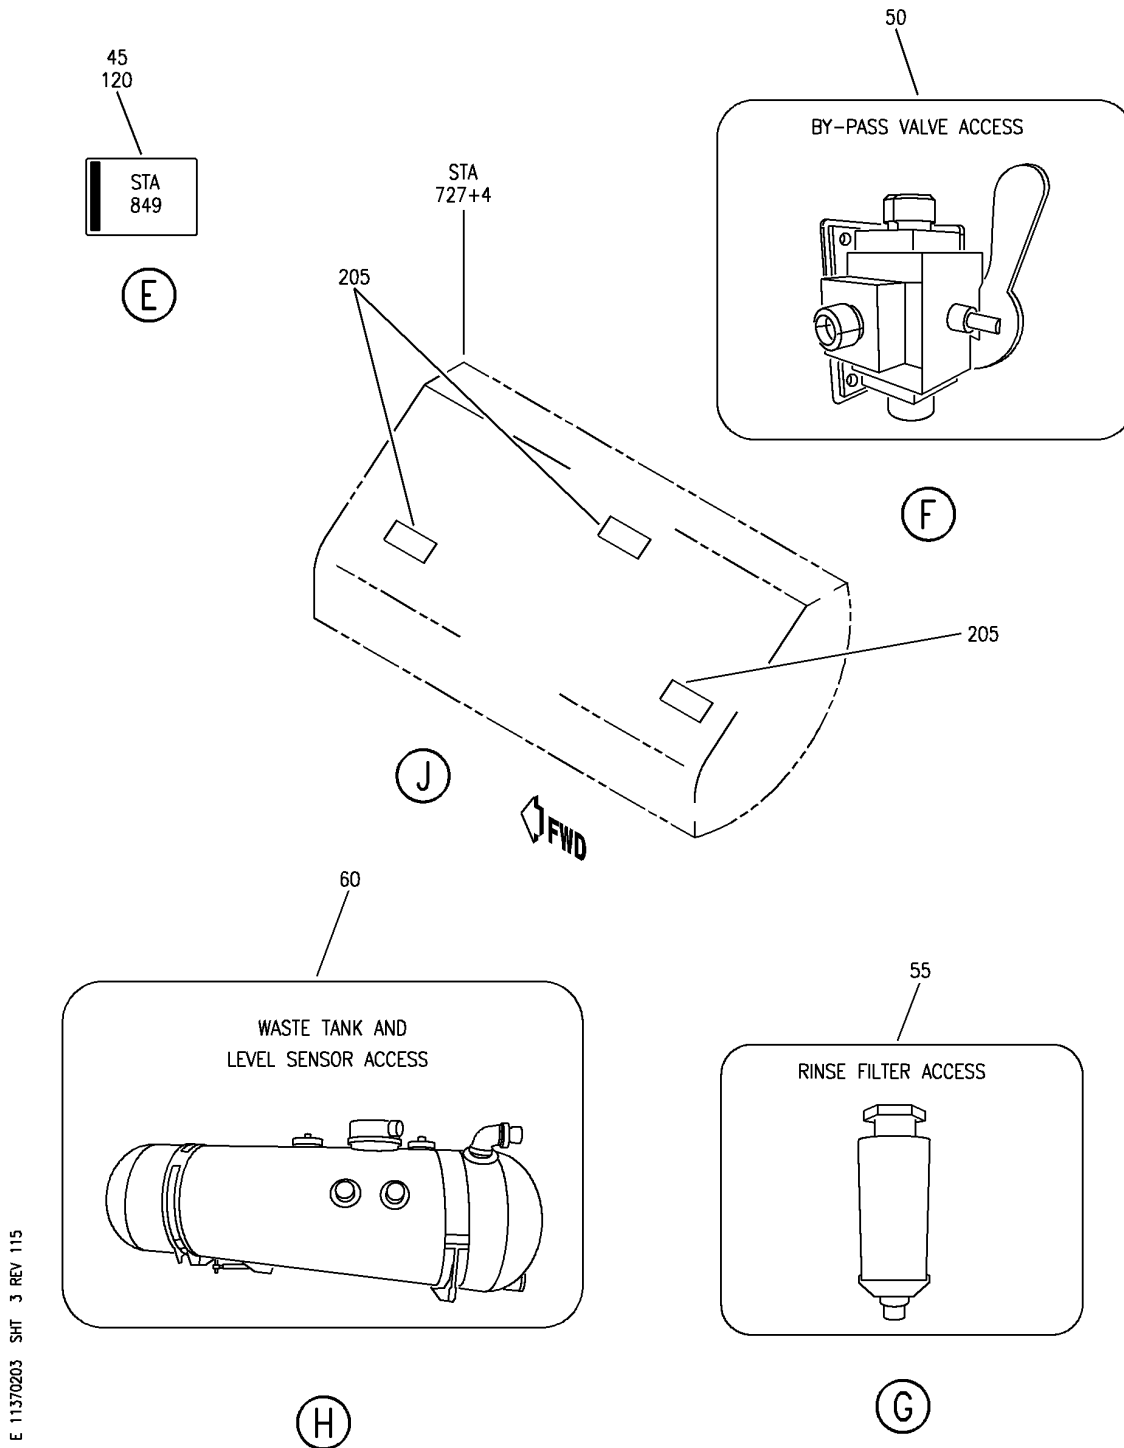

E 11370203 SHT 3 REV 115

MARKER INSTL-CARGO COMPT AFT
FIGURE 3 (SHEET 3)

11-37-02-03

R/YR
OCT 10/06

11-37-02-03
PAGE 08

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
3			MARKER INSTL-CARGO COMPT AFT	056168 174999	
- 100	MODREF222384		MARKER INSTL-CARGO COMPT MODULE NUMBER: 453A2700-8 REV B POSITION DATA: AFT	056168 174446	RF
- 100	MODREF727414		MARKER INSTL-CARGO COMPT MODULE NUMBER: 453A2700-8 REV C POSITION DATA: AFT	447999	RF
105	BAC27DCA535		.MARKER	056168 174999	1
110	BAC27DCA522		.MARKER- PLACARD CONTENT: WASTE TUBE ACCESS	056168 174999	1
115	BAC27DCA577		.MARKER- PLACARD CONTENT: BHD 727+4	056168 174999	1
120	BAC27DCA536		.MARKER	056168 174999	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

— ITEM NOT ILLUSTRATED


RYR

11-37-02-03

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

11-37-02
 FIG. 03
 PAGE 1
 JUN 15/23

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

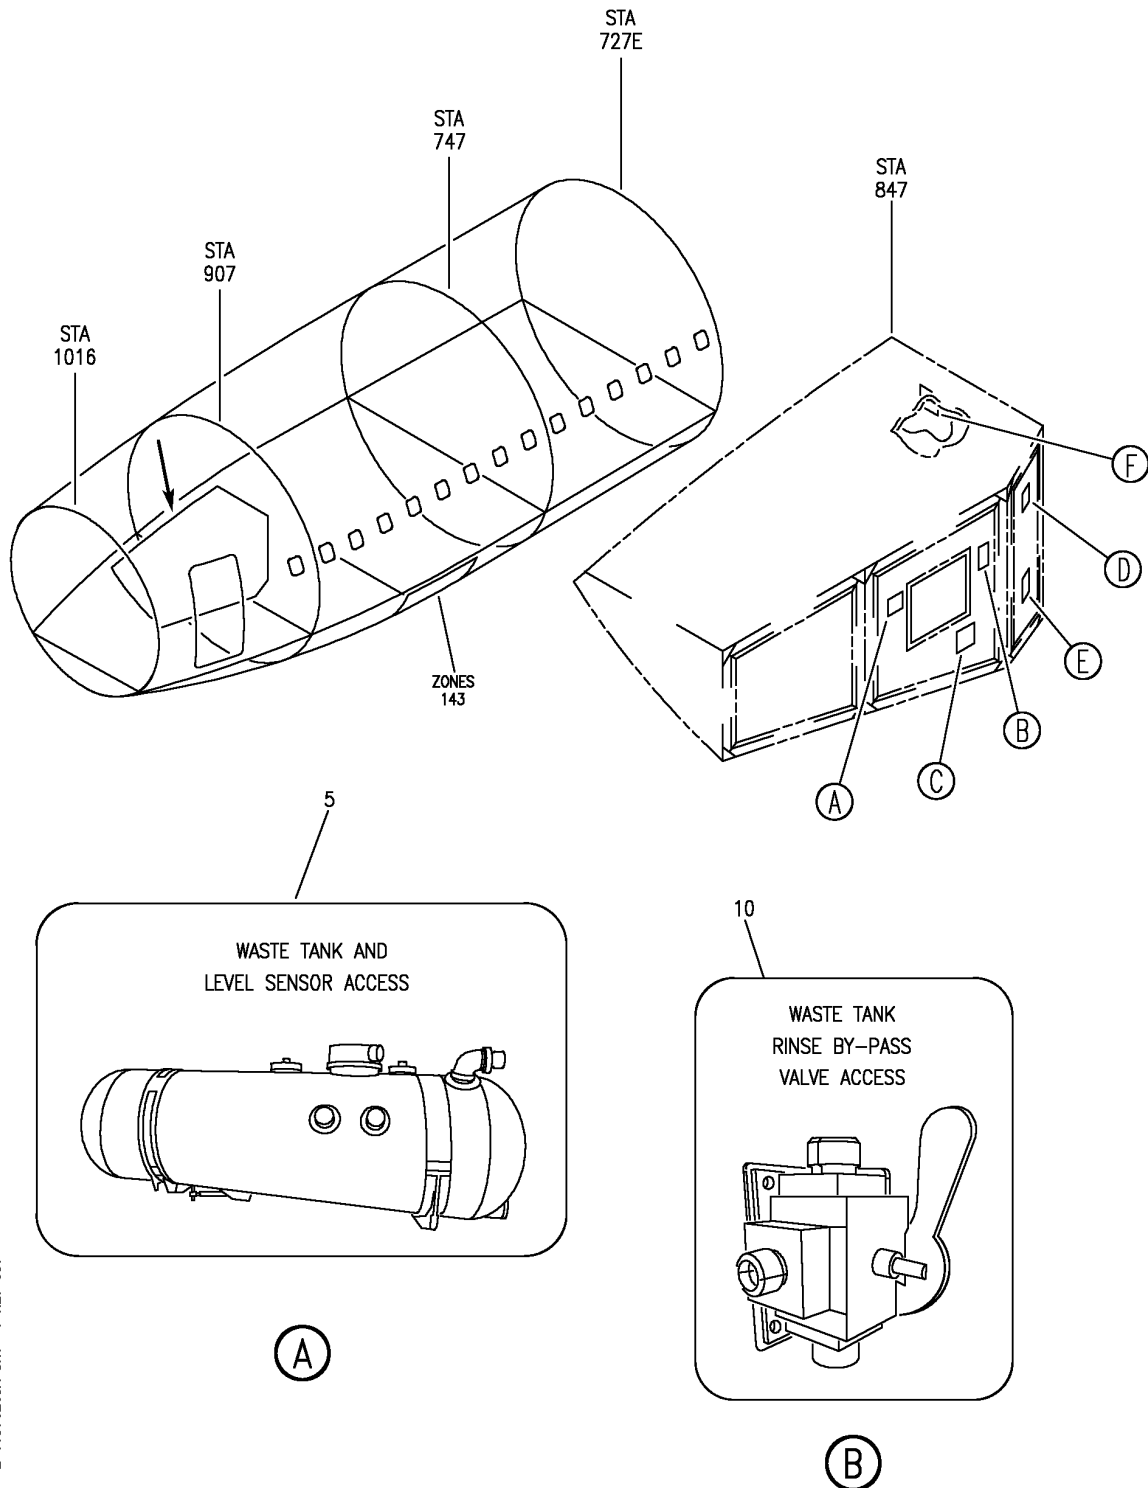

E 11370203A SHT 1 REV 097

PANEL ASSY-BHD (PLACARDS AND MARKINGS ONLY)
FIGURE 3A (SHEET 1)


11-37-02-03A

R/YR
OCT 10/06


11-37-02-03A
PAGE 0

ECCN 9E991 BOEING PROPRIETARY – See title page for details.


BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

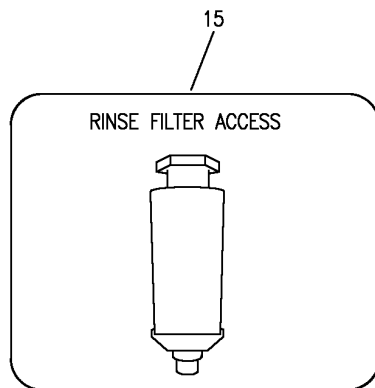


(C)

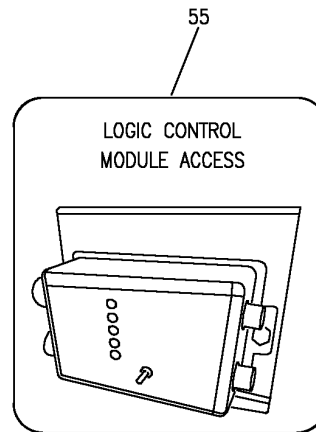

(D)

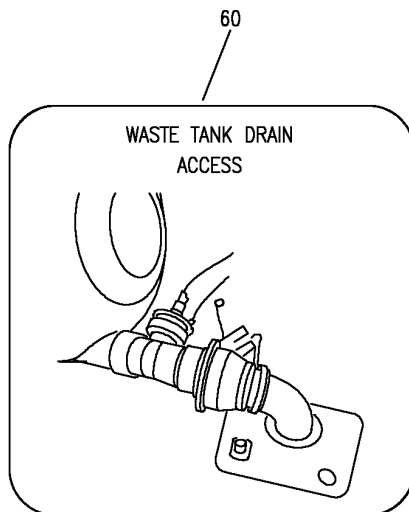

(E)

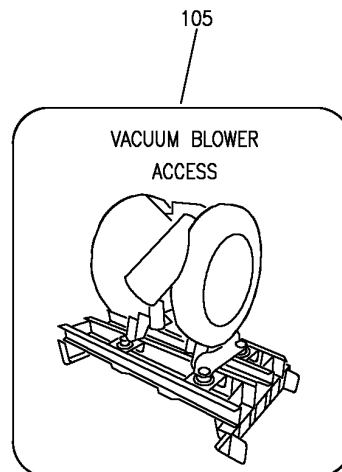

(F)

E 11370203A SHT 2 REV 097

PANEL ASSY-BHD (PLACARDS AND MARKINGS ONLY)
FIGURE 3A (SHEET 2)

11-37-02-03A

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

R Y R
O C T 10 / 06

11-37-02-03A
PAGE 0A

 BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
3A					
- 1	453A2910-20		PANEL ASSY-BHD (PLACARDS AND MARKINGS ONLY)	056249	RF
- 1	453A2910-26		PANEL ASSY-BHD (PLACARDS AND MARKINGS ONLY) FOR NHA/OTHER SYS DET SEE: 25-52-20-01B	250345	RF
- 1	453A2910-26		PANEL ASSY-BHD (PLACARDS AND MARKINGS ONLY) QUALIFIED I/W DATA: 453A2910-26 IS REPLACED BY 453A2910-32 TOGETHER WITH (1) BAC27DCA546 MARKER FULLY INTERCHANGEABLE FOR NHA/OTHER SYS DET SEE: 25-52-20-01B	346348	RF
- 1	453A2910-32		PANEL ASSY-BHD (PLACARDS AND MARKINGS ONLY) MISCELLANEOUS DATA: NCR-N1490232191 QUALIFIED I/W DATA: 453A2910-26 IS REPLACED BY 453A2910-32 TOGETHER WITH (1) BAC27DCA546 MARKER FULLY INTERCHANGEABLE LIAISON CHANGE PART NUMBER: 453A2910-26MN1490232191 SPARES SUPPORT PART NUMBER: 453A2910-26MN1490232191 FOR NHA/OTHER SYS DET SEE: 25-52-20-01B	349999	RF
5	BAC27DCA526		.MARKER	056345	1
10	BAC27DCA546		.MARKER		1
15	BAC27DCA528		.MARKER		1
- 50	453A2910-19		PANEL ASSY-BHD (PLACARDS AND MARKINGS ONLY) FOR NHA/OTHER SYS DET SEE: 25-52-20-01B		RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

— ITEM NOT ILLUSTRATED

RYR

11-37-02-03A

ECCN 9E991 BOEING PROPRIETARY — See title page for details.

11-37-02
FIG. 03A
PAGE 1
JUN 15/23

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
3A					
- 50	453A2910-24		PANEL ASSY-BHD (PLACARDS AND MARKINGS ONLY) FOR NHA/OTHER SYS DET SEE: 25-52-20-01B		RF
55	BAC27DCA523		.MARKER		1
60	BAC27DCA525		.MARKER		1
- 100	453A2910-21		PANEL ASSY-BHD (PLACARDS AND MARKINGS ONLY) FOR NHA/OTHER SYS DET SEE: 25-52-20-01B		RF
- 100	453A2910-28		PANEL ASSY-BHD (PLACARDS AND MARKINGS ONLY) FOR NHA/OTHER SYS DET SEE: 25-52-20-01B		RF
105	BAC27DCA524		.MARKER		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

— ITEM NOT ILLUSTRATED


RYR

11-37-02-03A

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

11-37-02
 FIG. 03A
 PAGE 2
 JUN 15/23

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

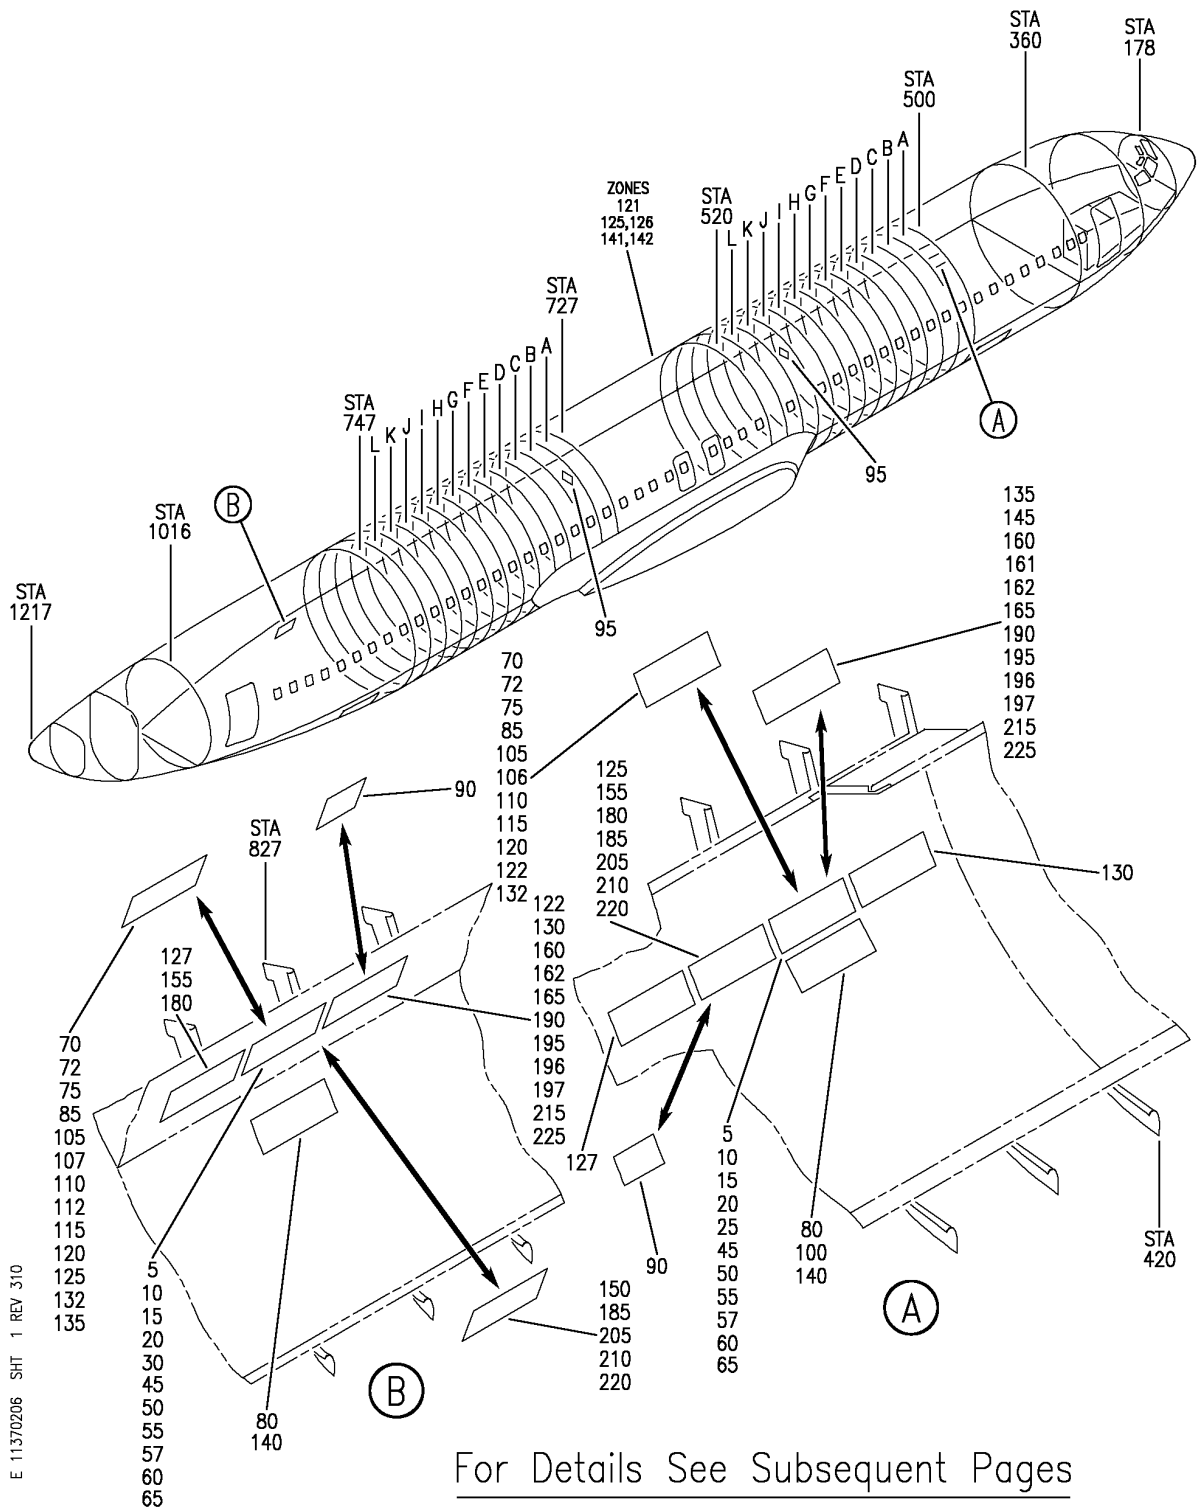

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
FIGURE 6 (SHEET 1)


11-37-02-06

RJR
JUN 15/22


11-37-02-06
PAGE 0

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

5

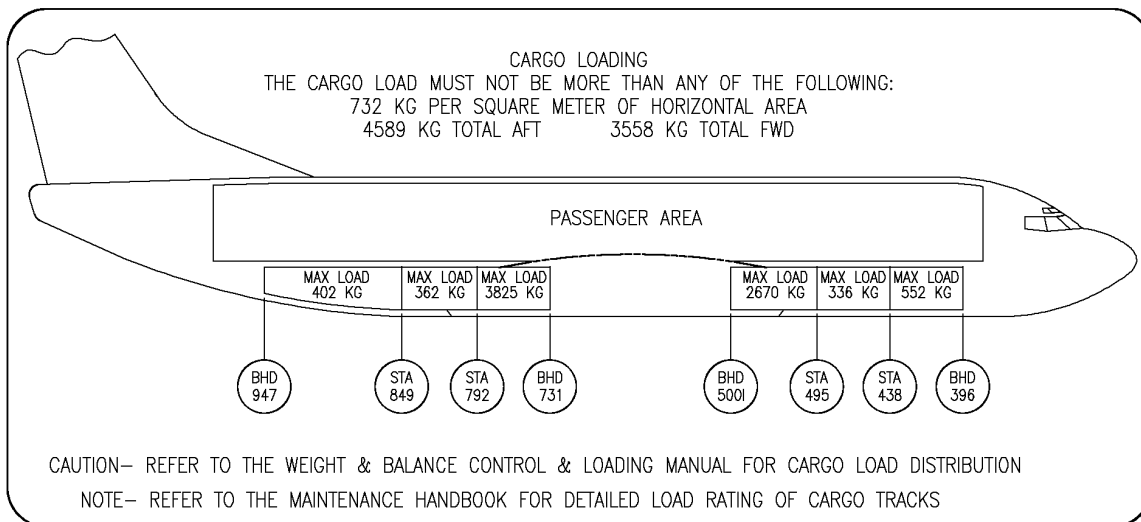

10

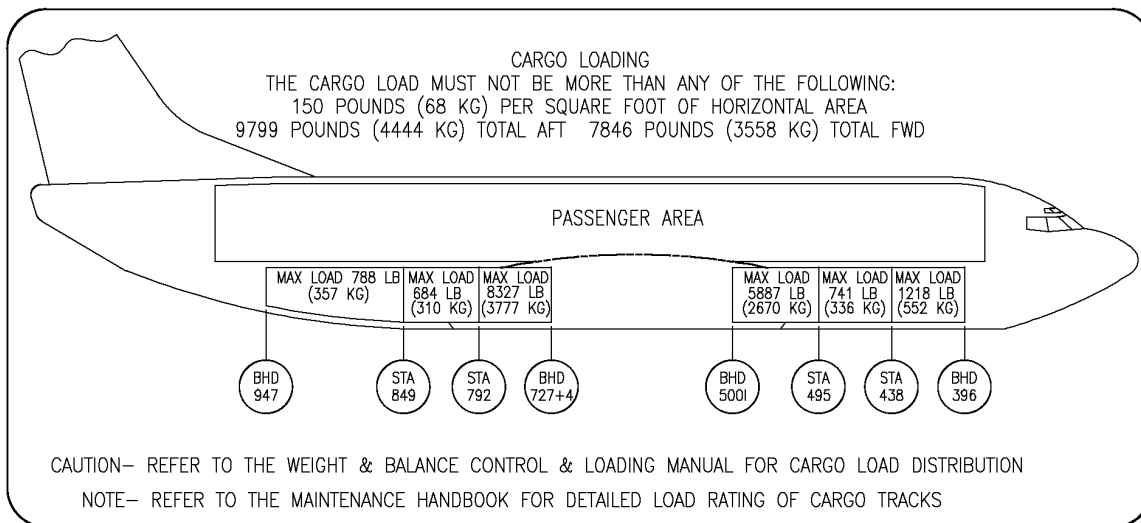

E 11370206 SHT 2 REV 069

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 2)

11-37-02-06


R Y R
 OCT 10/06

11-37-02-06
 PAGE 0A


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

15

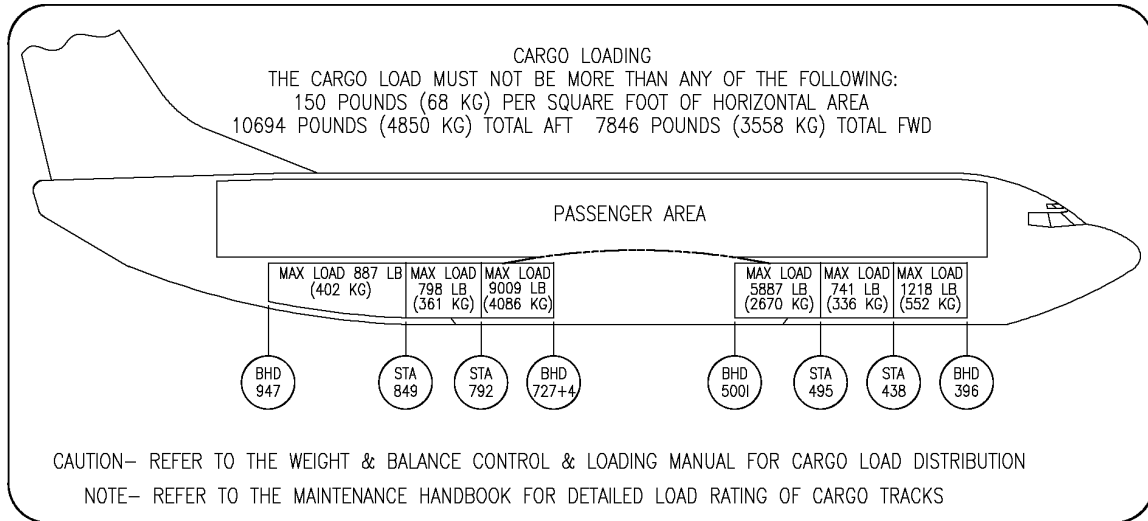

20

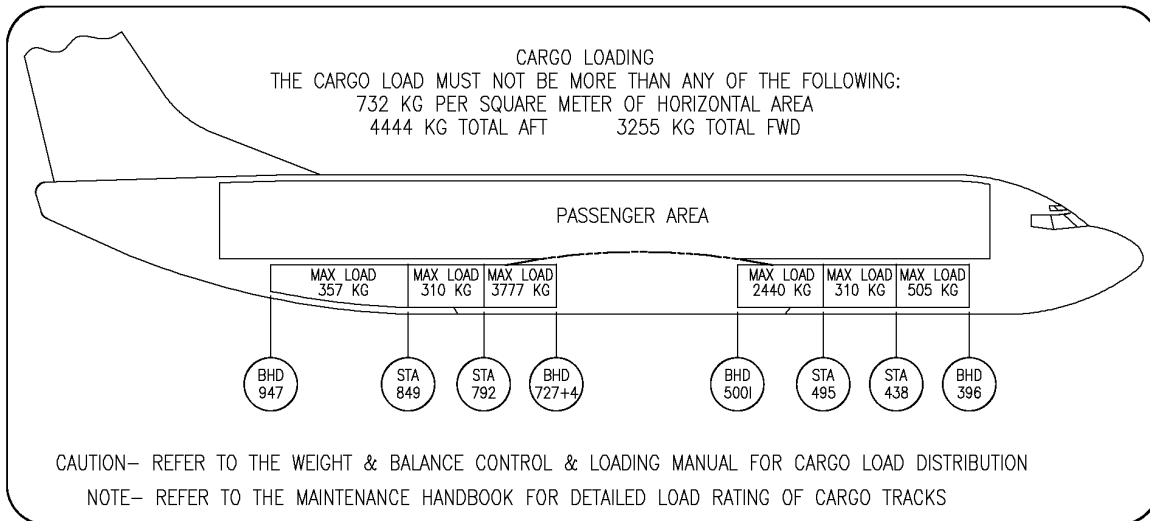

E 11370206 SHT 3 REV 069

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 3)

11-37-02-06


R/YR
 OCT 10/06

11-37-02-06
 PAGE 08


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

25

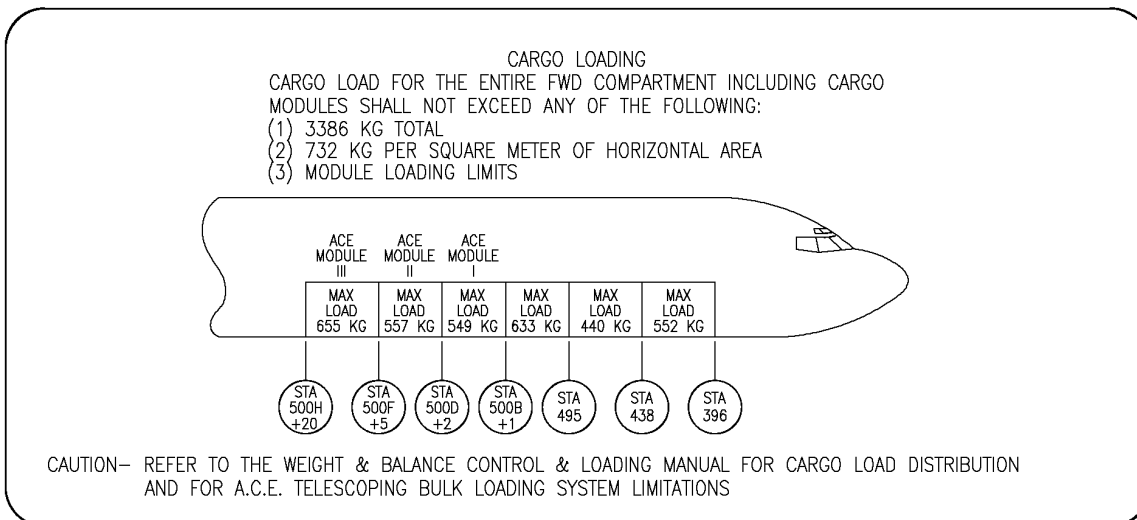

30

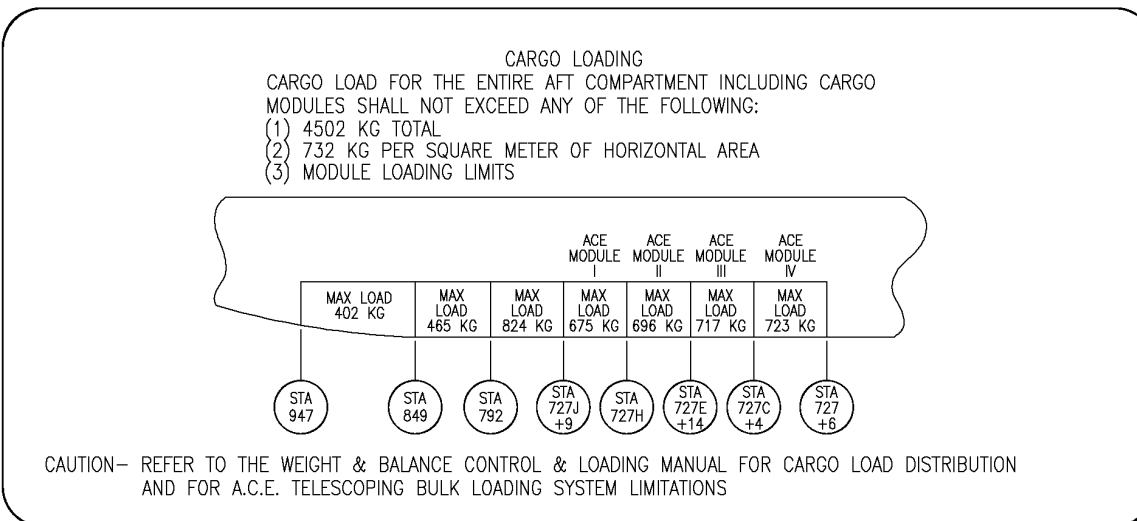

E 11370206 SHT 4 REV 069

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 4)

11-37-02-06


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

R Y R
 OCT 10/06


11-37-02-06
 PAGE 0C

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

45

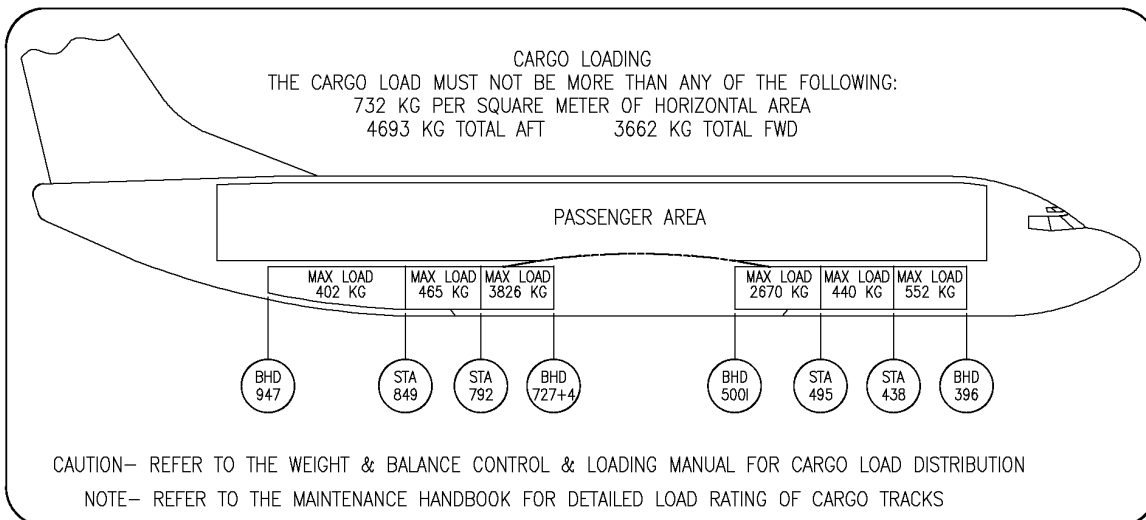

50

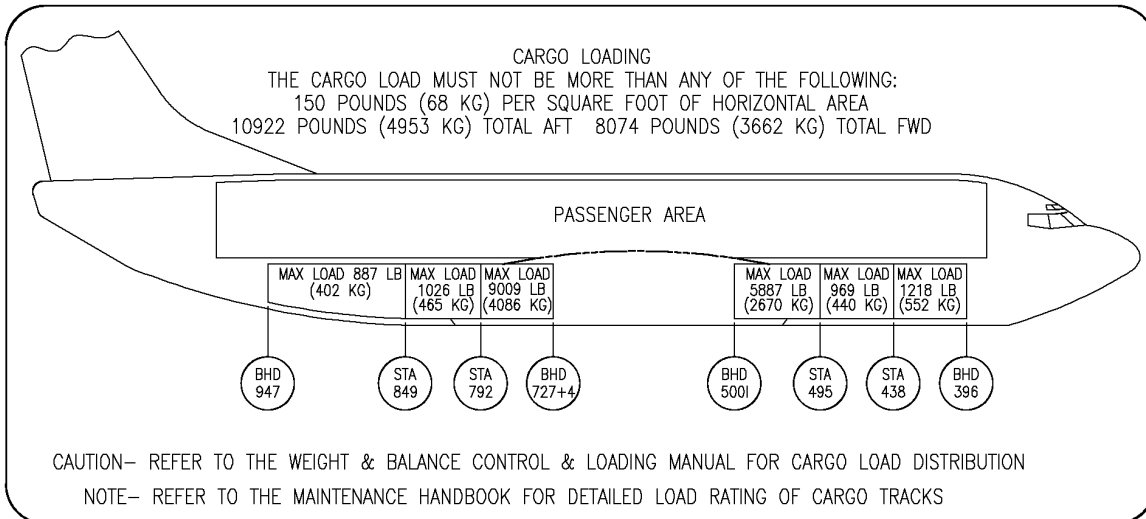

E 11/370206 SHT 5 REV 071

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 5)

11-37-02-06


R Y R
 OCT 10/06

11-37-02-06
 PAGE 00


ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

55

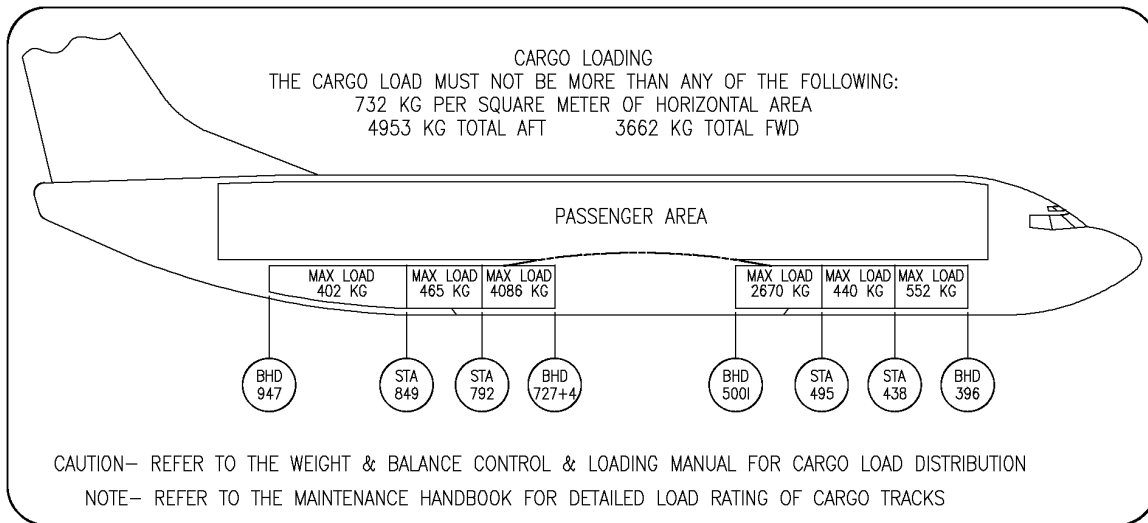

57
125

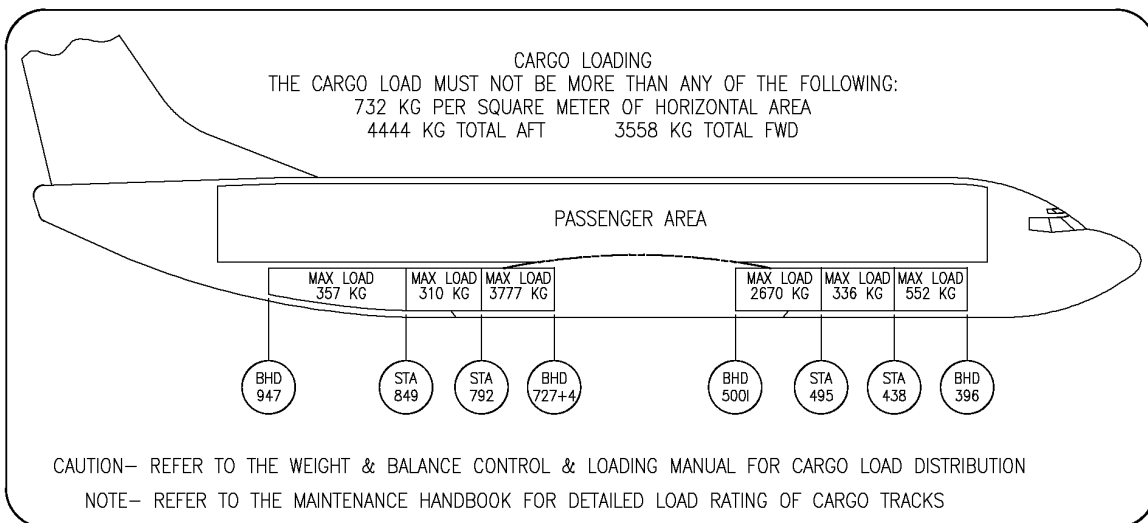

E 11370206 SHT 6 REV 071

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 6)

11-37-02-06


R/YR
OCT 10/06

11-37-02-06
PAGE 0E


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

60

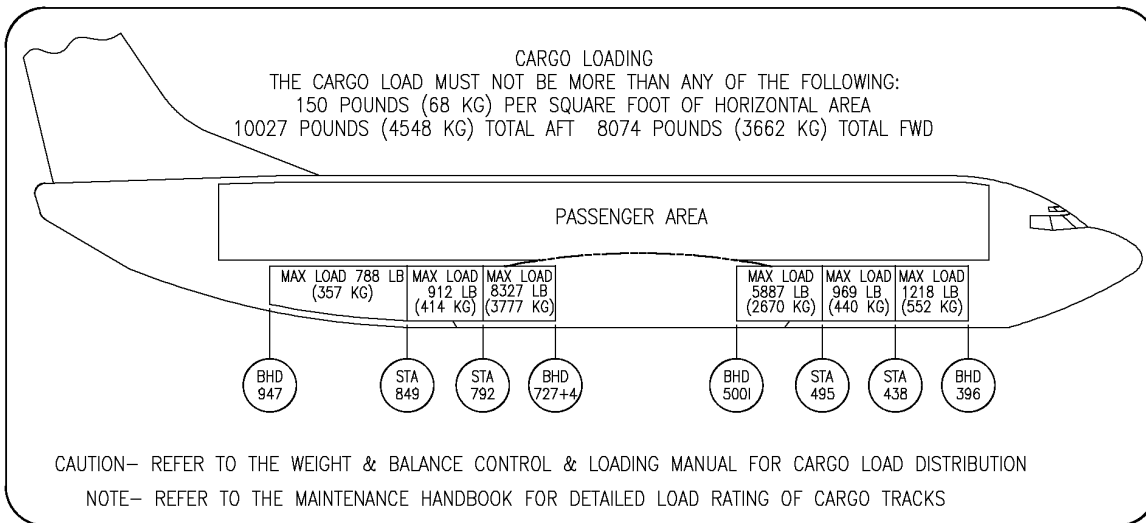

65

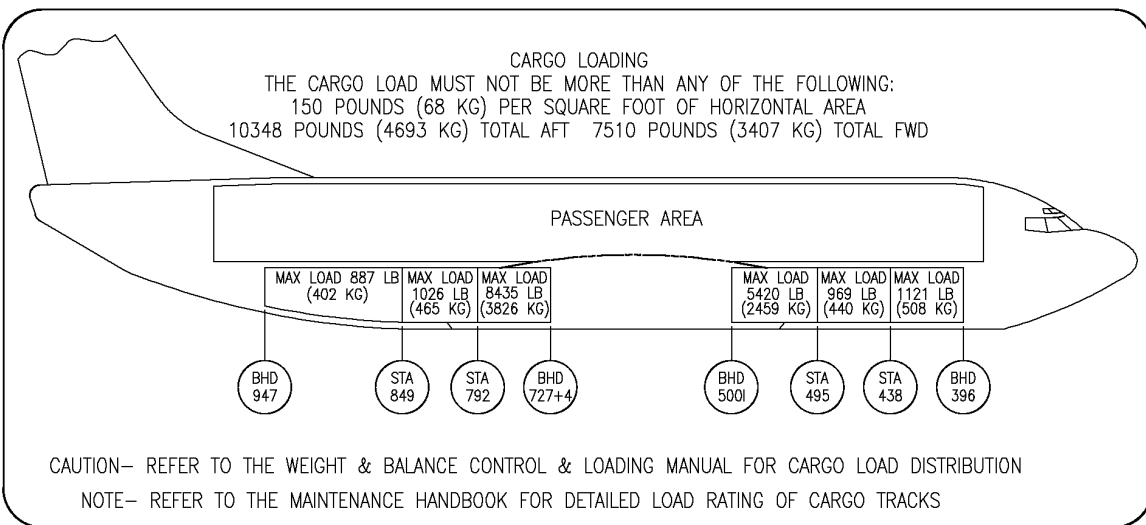

E 11370206 SHT 7 REV 071

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 7)

11-37-02-06


ECCN 9E991 BOEING PROPRIETARY - See title page for details.

R Y R
 OCT 10/06


11-37-02-06
 PAGE 0F

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

70

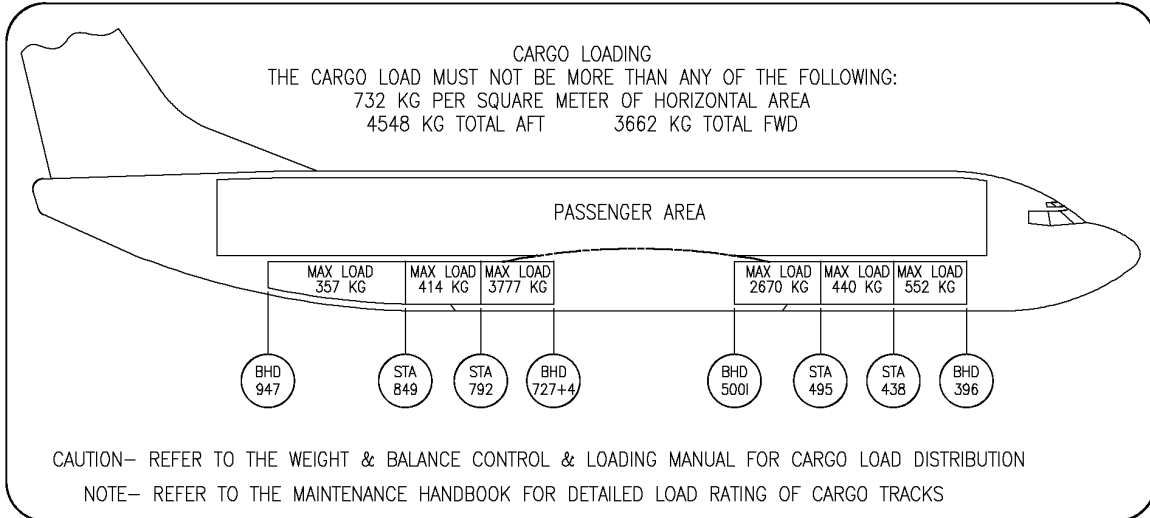

72
 120

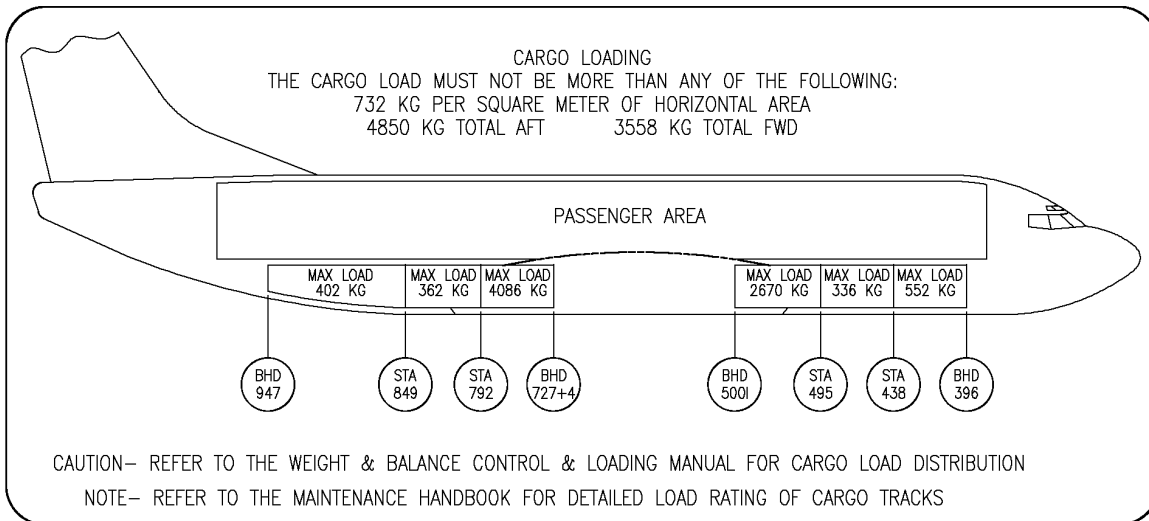

E 11370206 SHT 8 REV 071

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 8)

11-37-02-06


R Y R
 OCT 10/06

11-37-02-06
 PAGE 06


ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

75

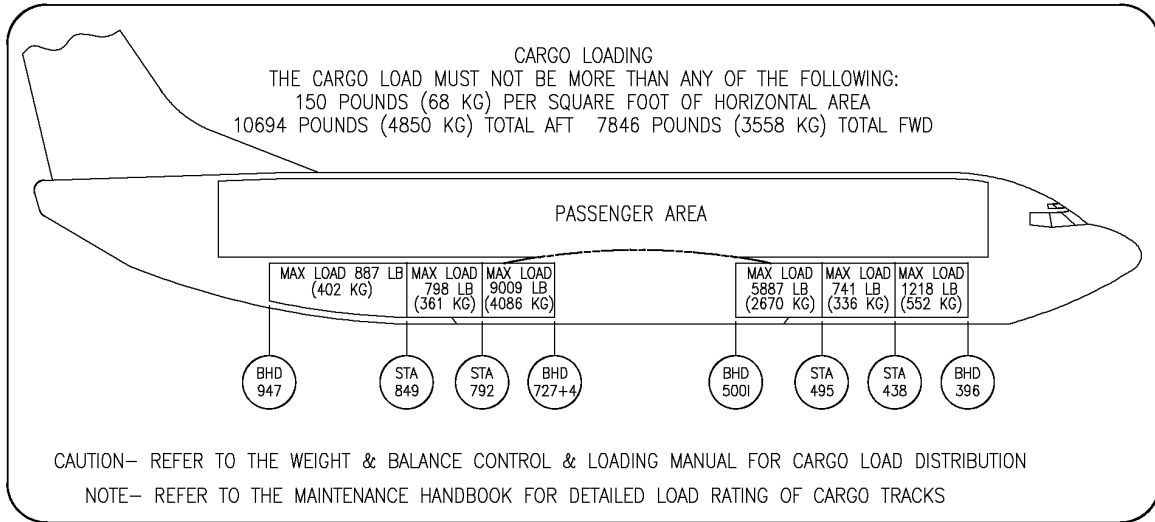

80

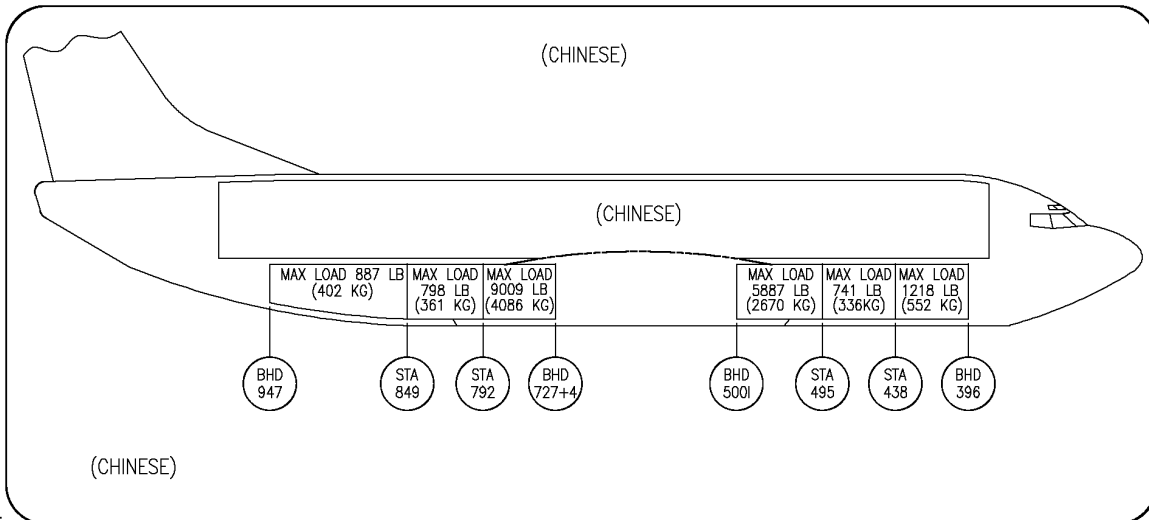

E 11370206 SHT 9 REV 071

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 9)



11-37-02-06

R/YR
 OCT 10/06

11-37-02-06
 PAGE 0H

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

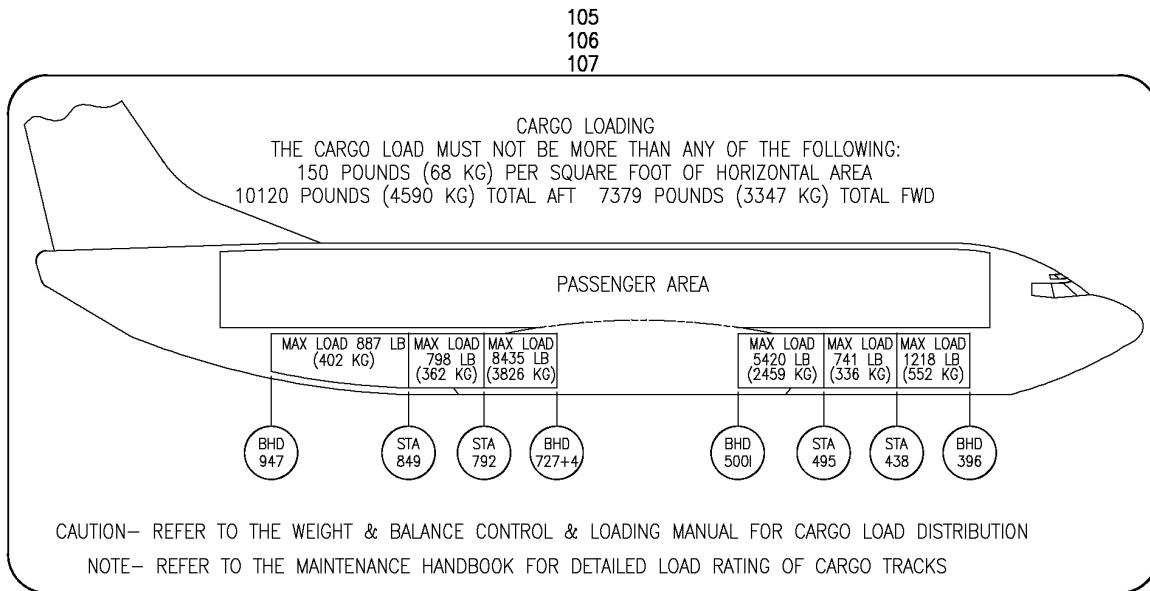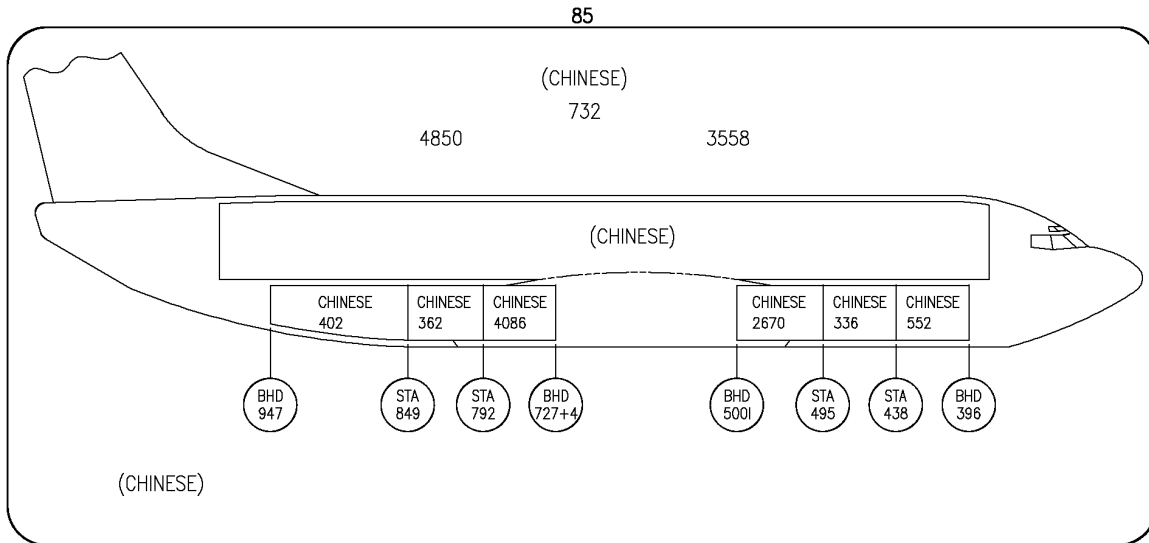

E 11370206 SHT 10 REV 307

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 10)

11-37-02-06


R Y R
 FEB 15/22

11-37-02-06
 PAGE 01


ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

110
112

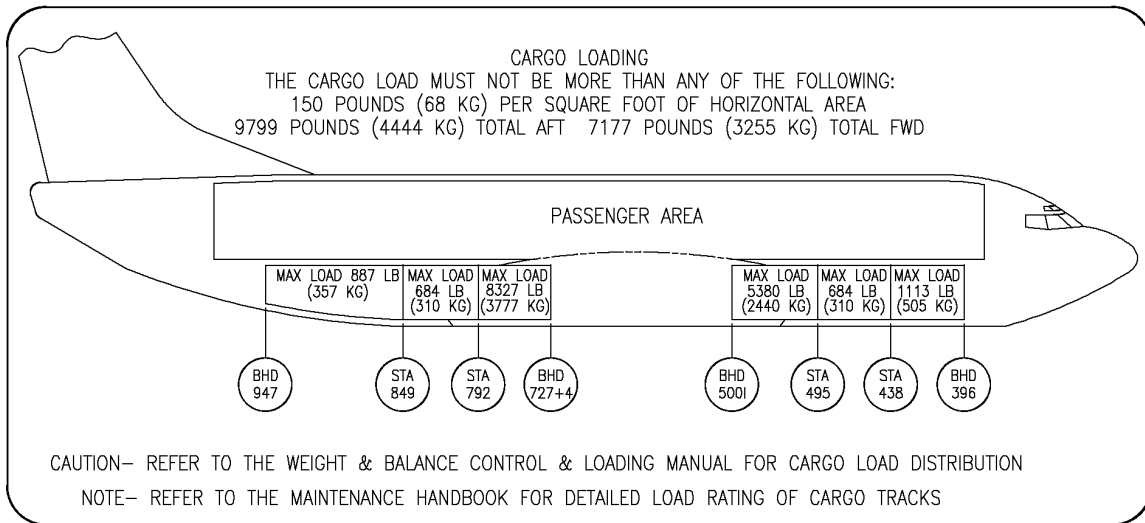

115

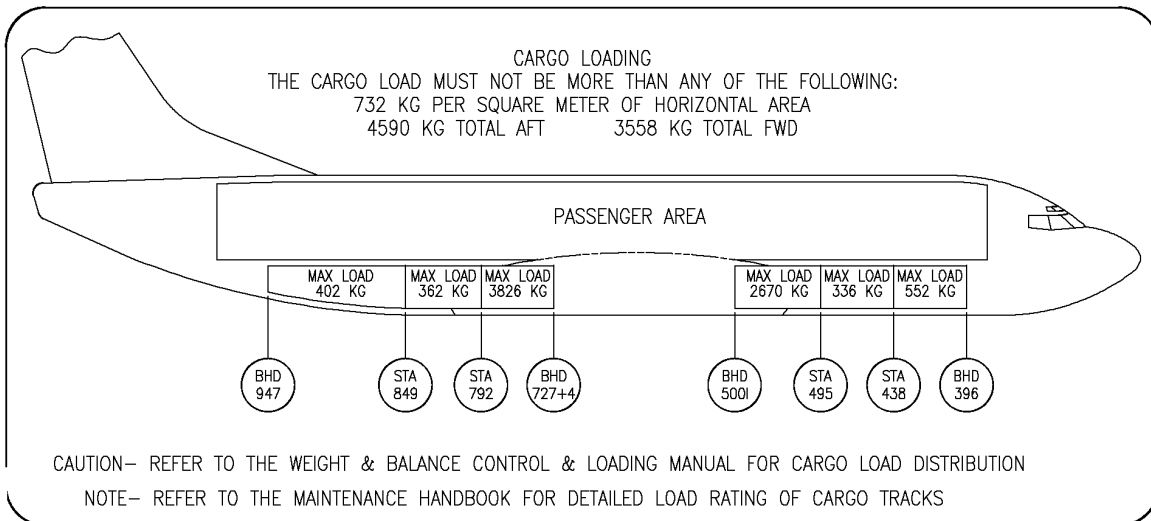

E 11370206 SHT 11 REV 310

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 11)

11-37-02-06


R Y R
JUN 15/22

11-37-02-06
PAGE 0J


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

130

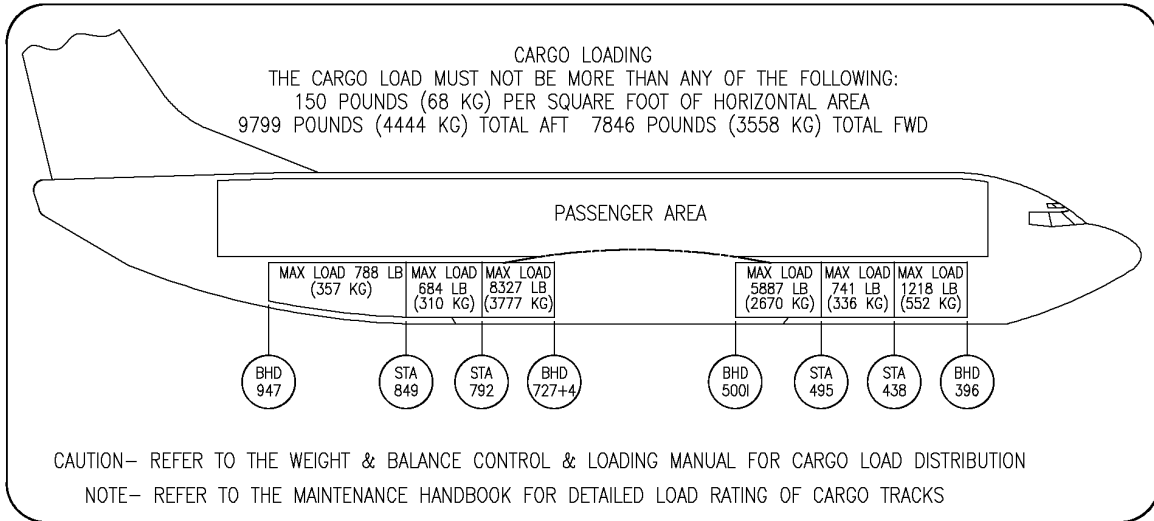

132

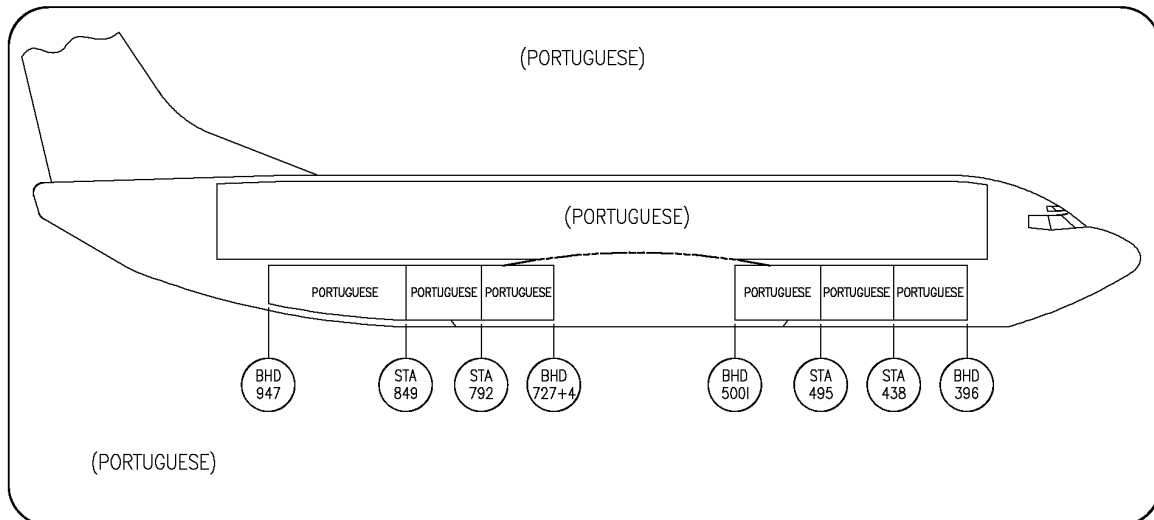

E 11370206 SHT 12 REV 071

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 12)

11-37-02-06


R Y R
 OCT 10/06

11-37-02-06
 PAGE 0K


ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

135
180

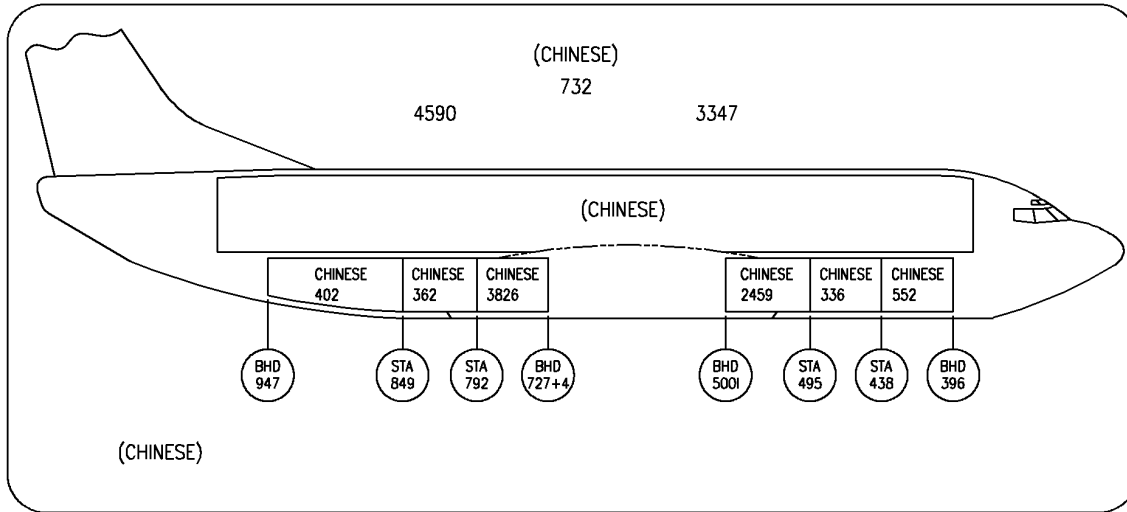

140

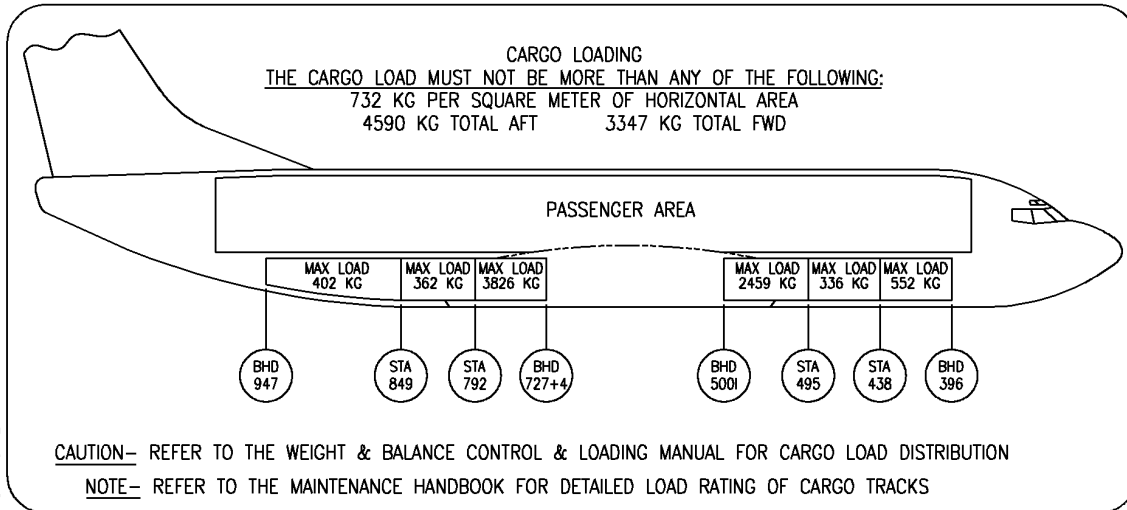

E 11370206 SHT 13 REV 111

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 13)

11-37-02-06


R Y R
OCT 10/06

11-37-02-06
PAGE 01


ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

150

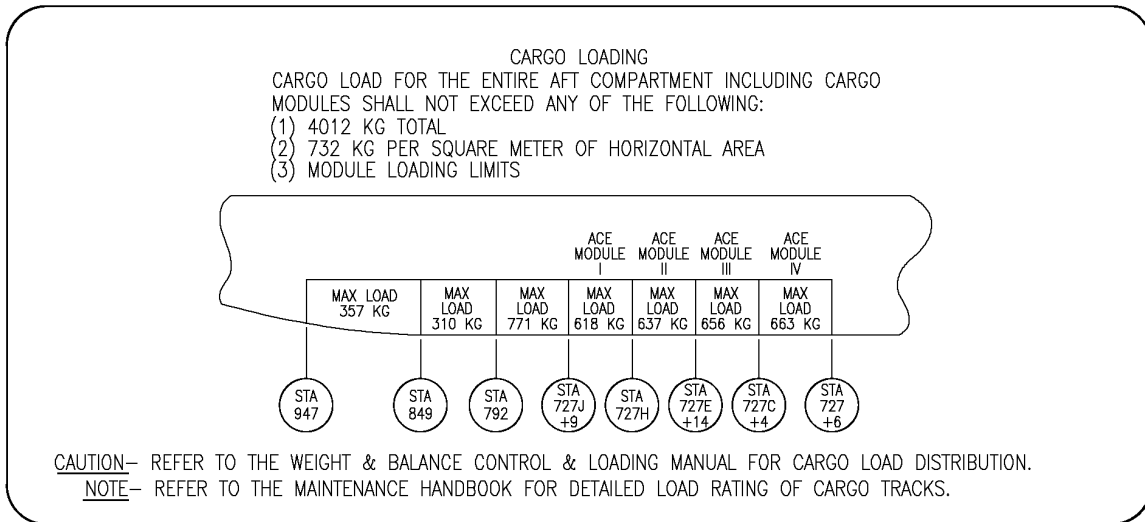

155

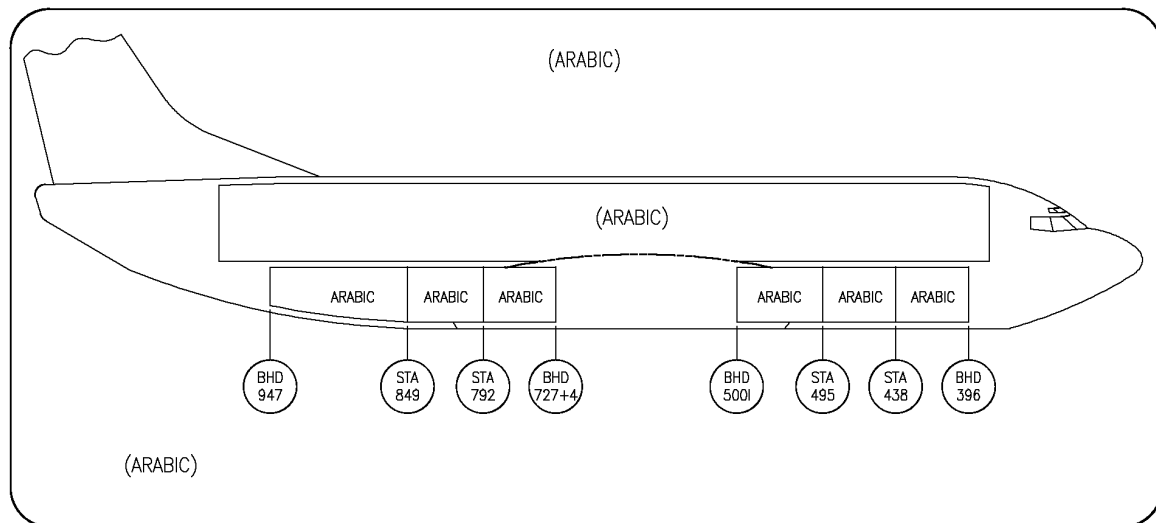

E 11370206 SHT 14 REV 071

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 14)

11-37-02-06


R Y R
 OCT 10/06

11-37-02-06
 PAGE 0M


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

160

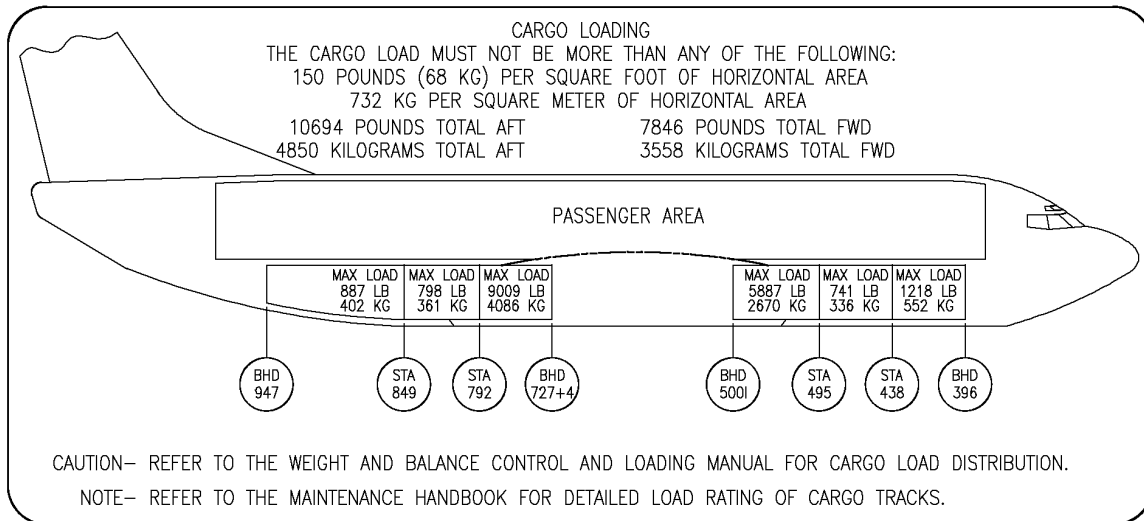

205

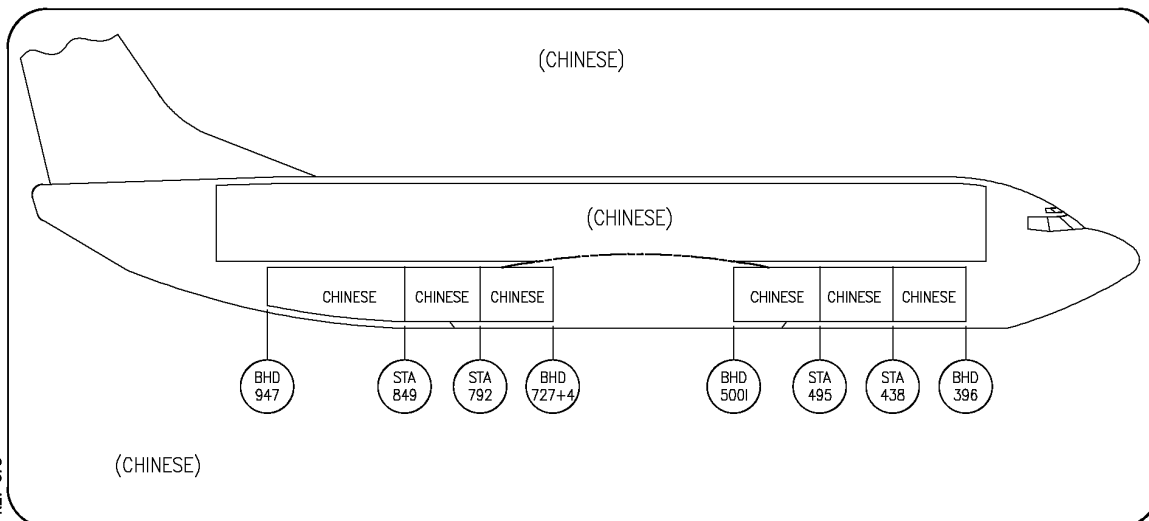

E 11370206 SHT 15 REV 073

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 15)

11-37-02-06


R Y R
 OCT 10/06

11-37-02-06
 PAGE ON


ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

210

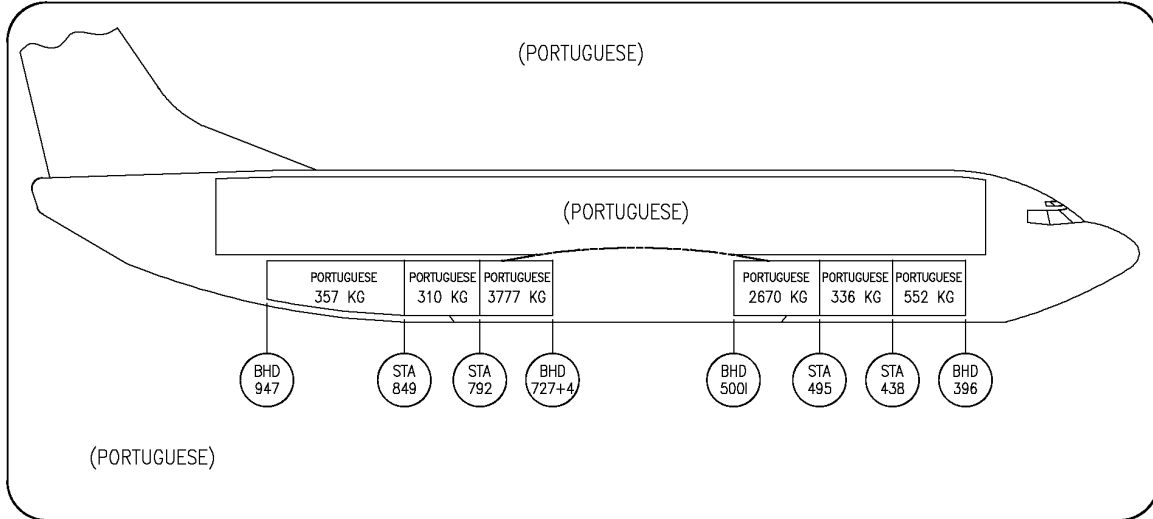

122

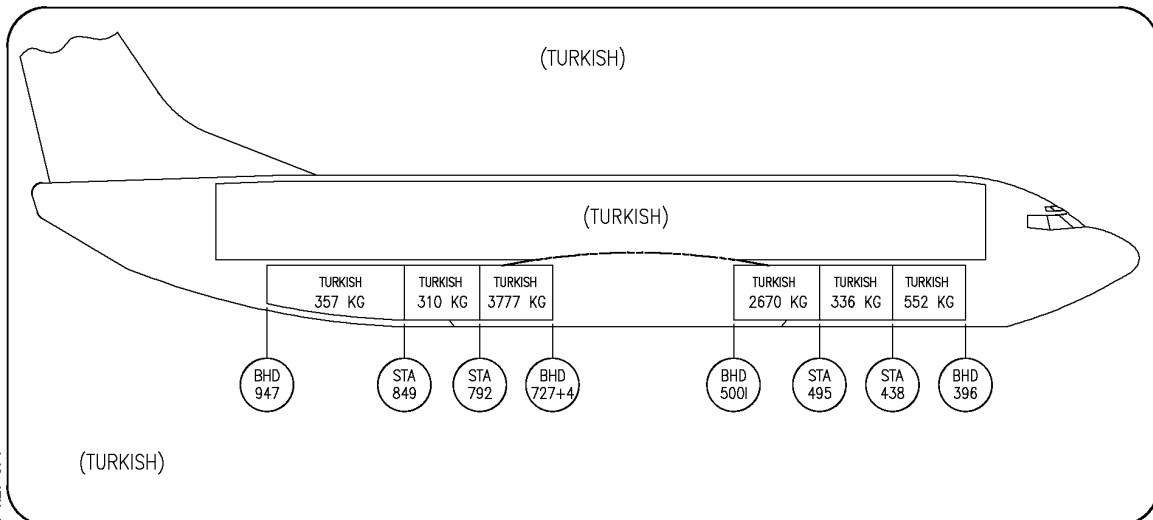

E 11/370206 SHT 16 REV 074

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 16)

11-37-02-06


R Y R
 OCT 10/06

11-37-02-06
 PAGE 00


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

162

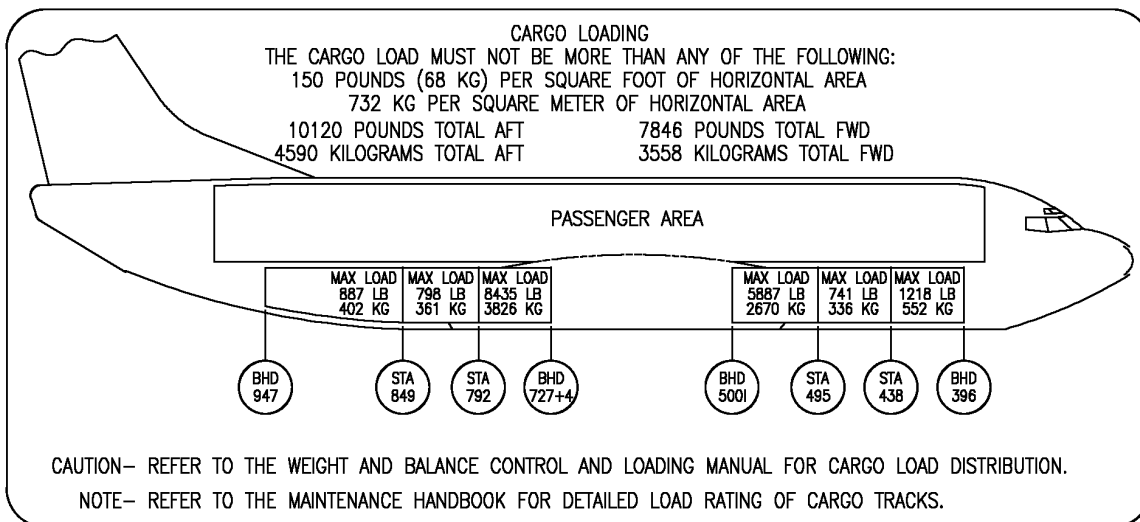

165

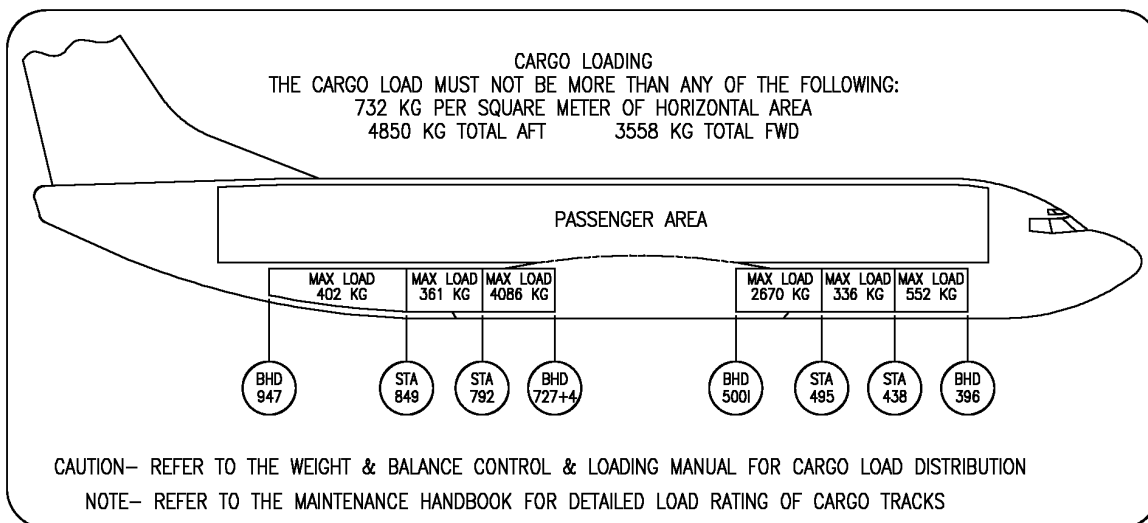

E 11370206 SHT 17 REV 083

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 17)

11-37-02-06


R Y R
 OCT 10/06

11-37-02-06
 PAGE 0P


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

161

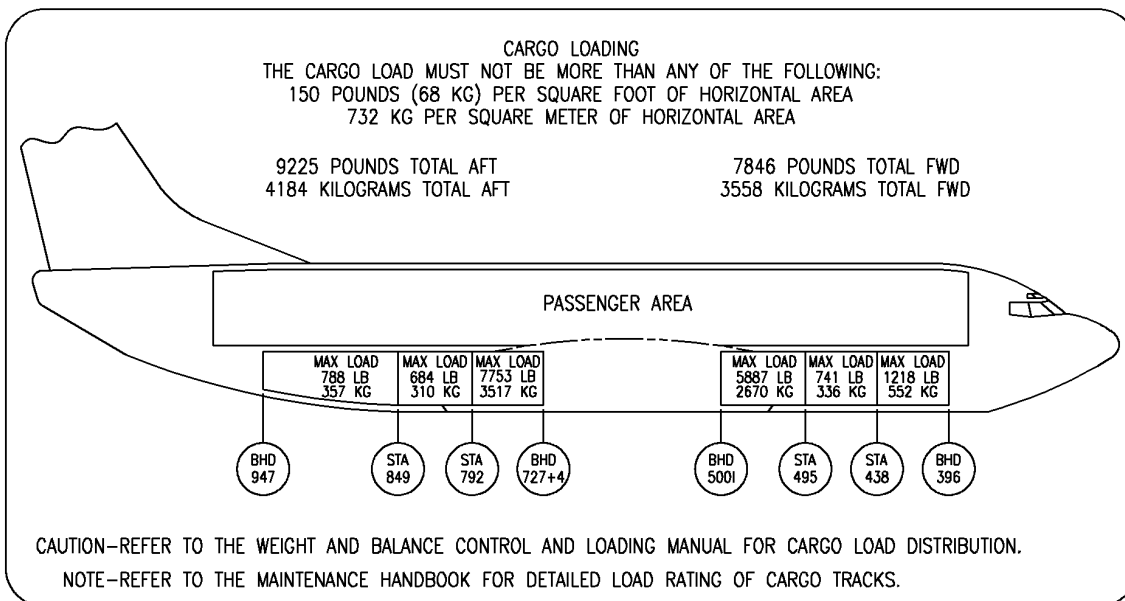

185

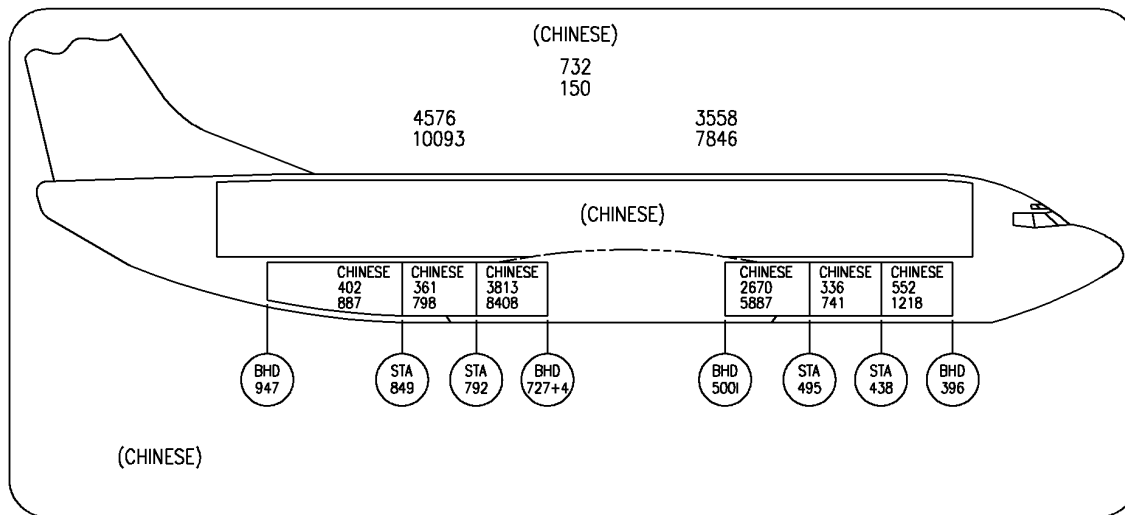

E 11370206 SHT 18 REV 112

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 18)

11-37-02-06


R Y R
 OCT 10/06

11-37-02-06
 PAGE 00


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

190

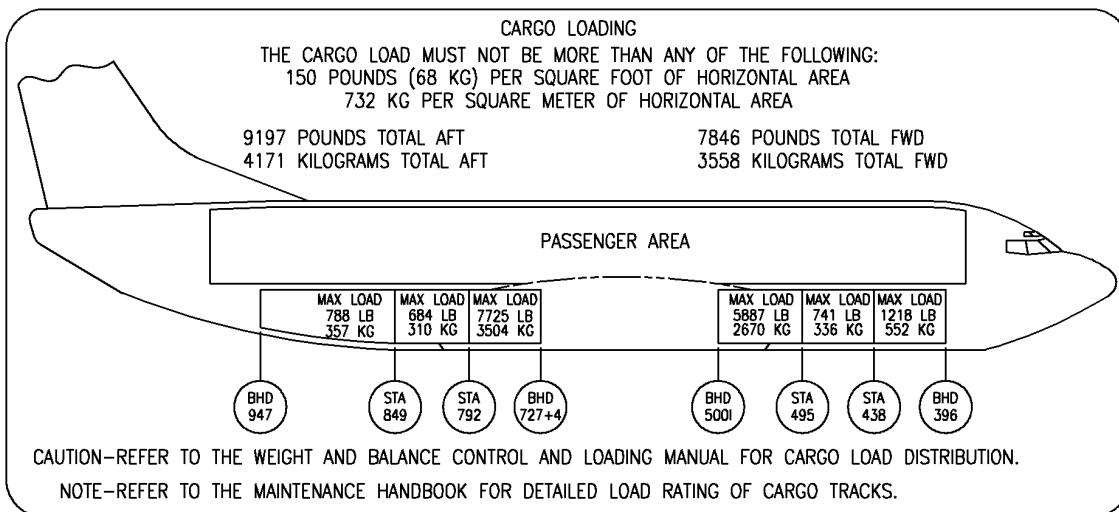

215

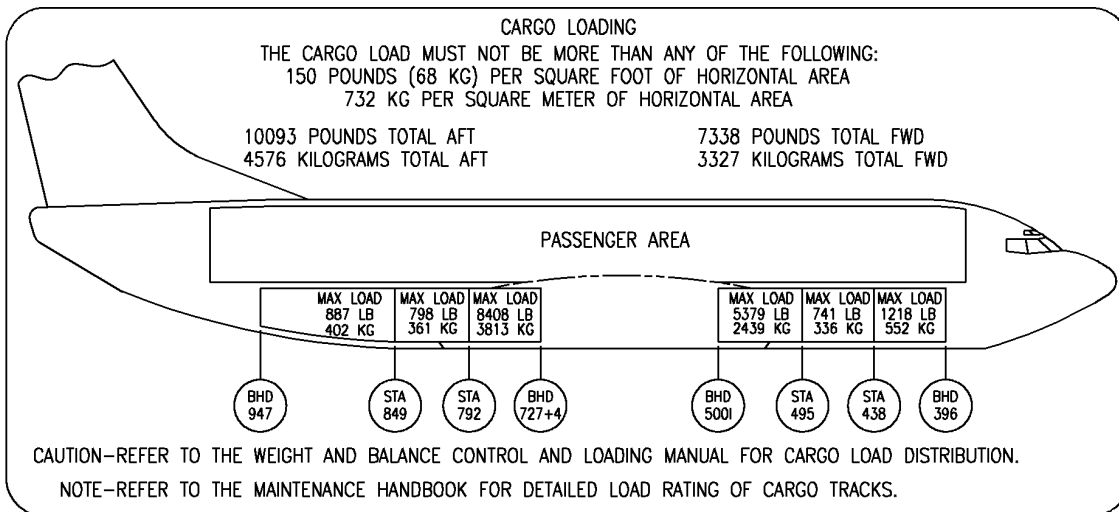

E 11370206 SHT 19 REV 112

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 19)

11-37-02-06


R/YR
 OCT 10/06

11-37-02-06
 PAGE 0R


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

195

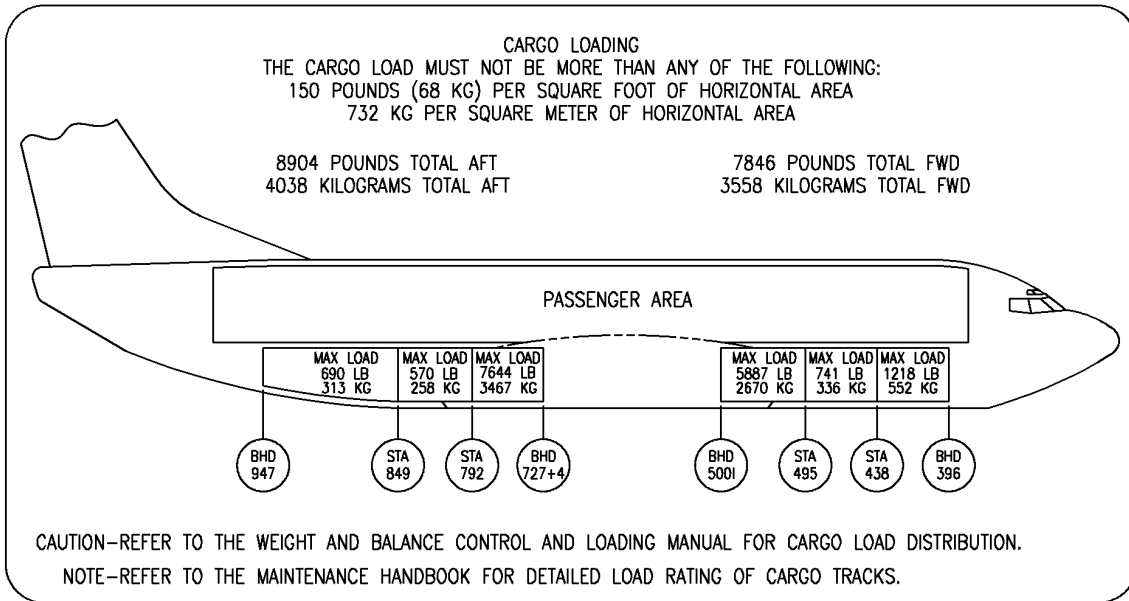

220

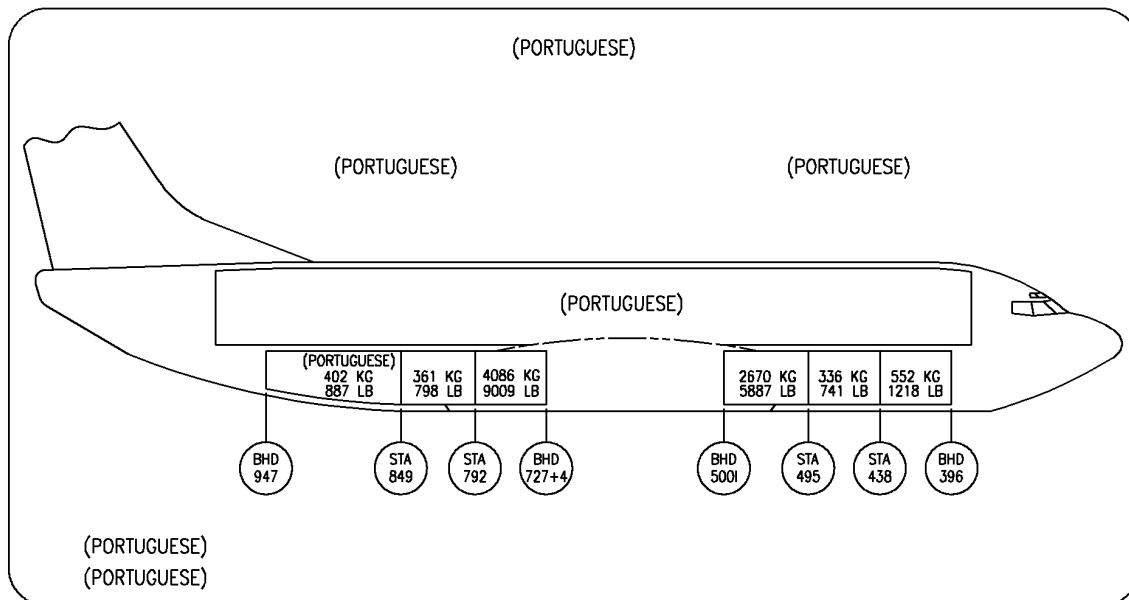

E 11370206 SHT 20 REV 124

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 20)

11-37-02-06


R/YR
 FEB 10/07

11-37-02-06
 PAGE 05


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

197

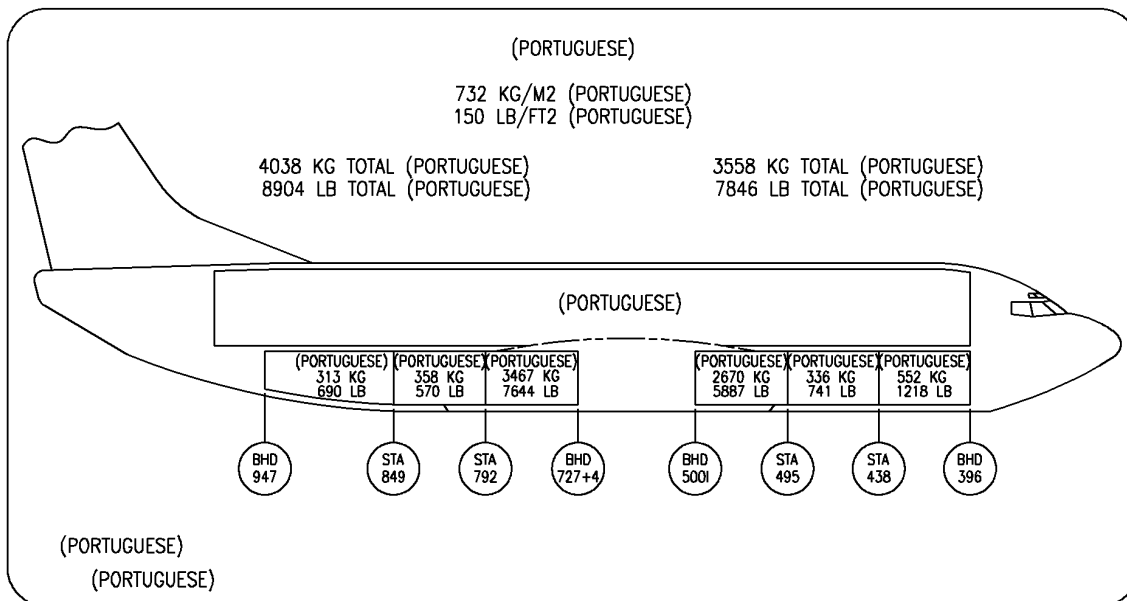

225

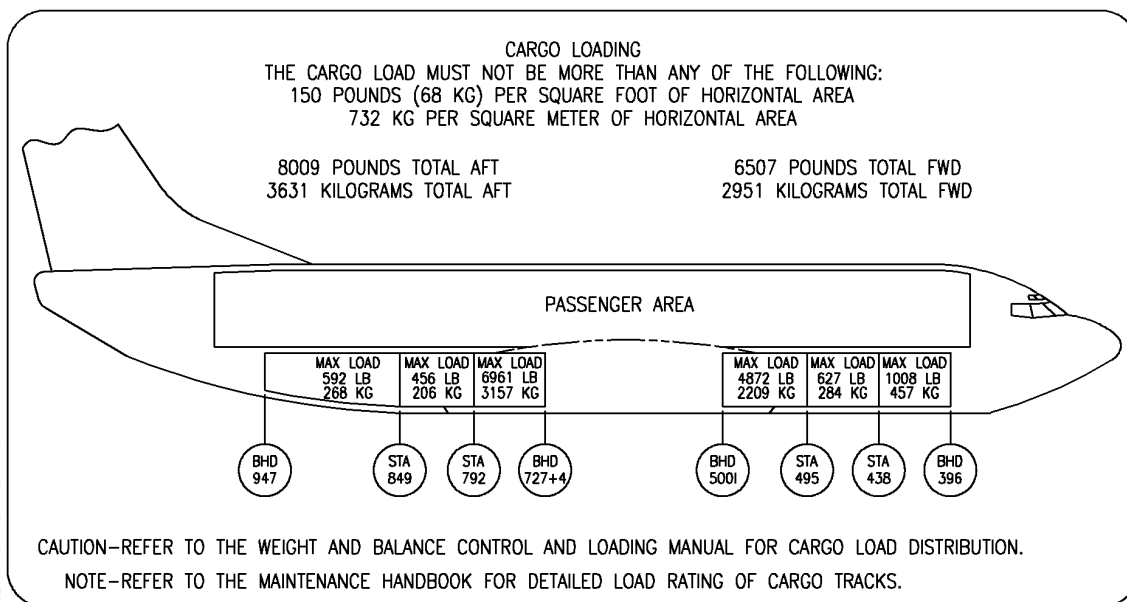

E 11370206 SHT 21 REV 119

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
FIGURE 6 (SHEET 21)


11-37-02-06

R Y R
O C T 10 / 06

11-37-02-06
P A G E 0 T

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
 737-600/700/800/900
 PARTS CATALOG (MAINTENANCE)

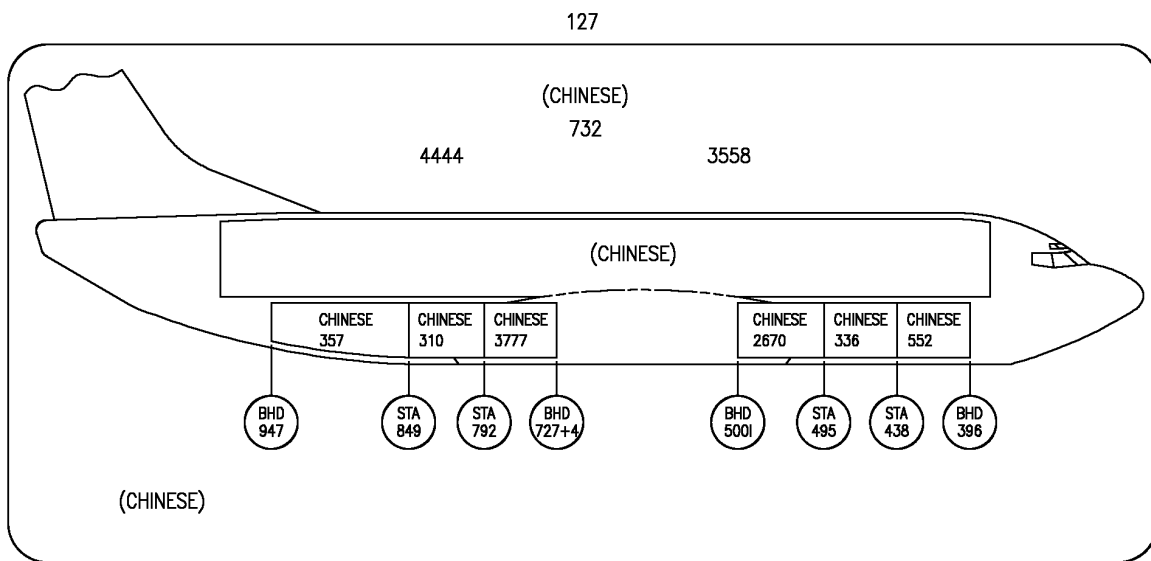

E 11370206 SHT 22 REV 140

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 22)


11-37-02-06

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

R Y R
 JUN 15 / 08

11-37-02-06
 PAGE 00

196

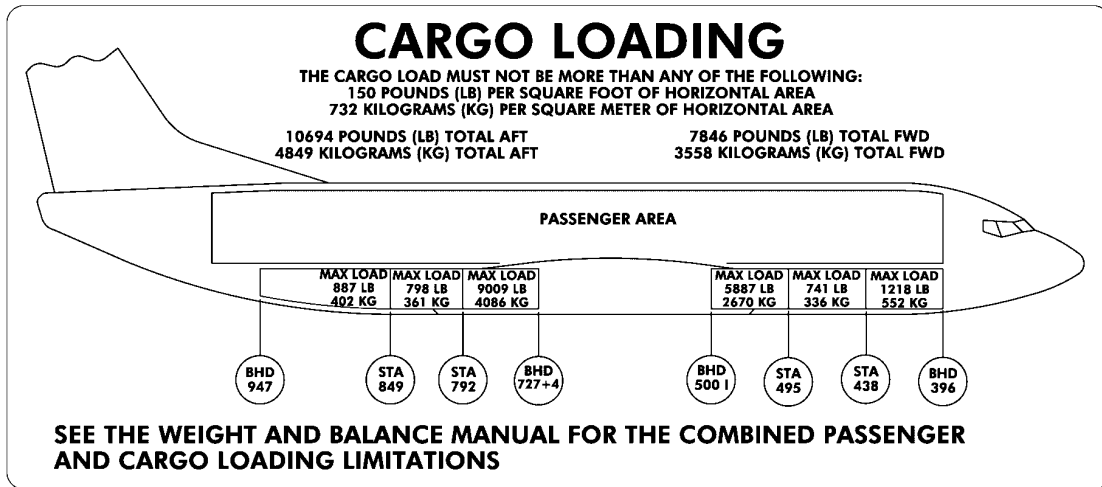

E 11370206 SHT 23 REV 310

MARKER INSTL-CARGO COMPT LOADING 737-800 ONLY
 FIGURE 6 (SHEET 23)

11-37-02-06

R Y R
 JUN 15/22

11-37-02-06
 PAGE 0V

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
6			MARKER INSTL-CARGO COMPT	056350	
- 3	MODREF224099		LOADING 737-800 ONLY		
			MARKER INSTL-CARGO COMPT	056350	R F
			LOADING 737-800		
			MODULE NUMBER:		
			453A3700-32 REV B		
15	BAC27DCA689		.MARKER-	056350	2
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED


R Y R

11-37-02-06

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-02
 FIG. 06
 PAGE 1
 JUN 15/23

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

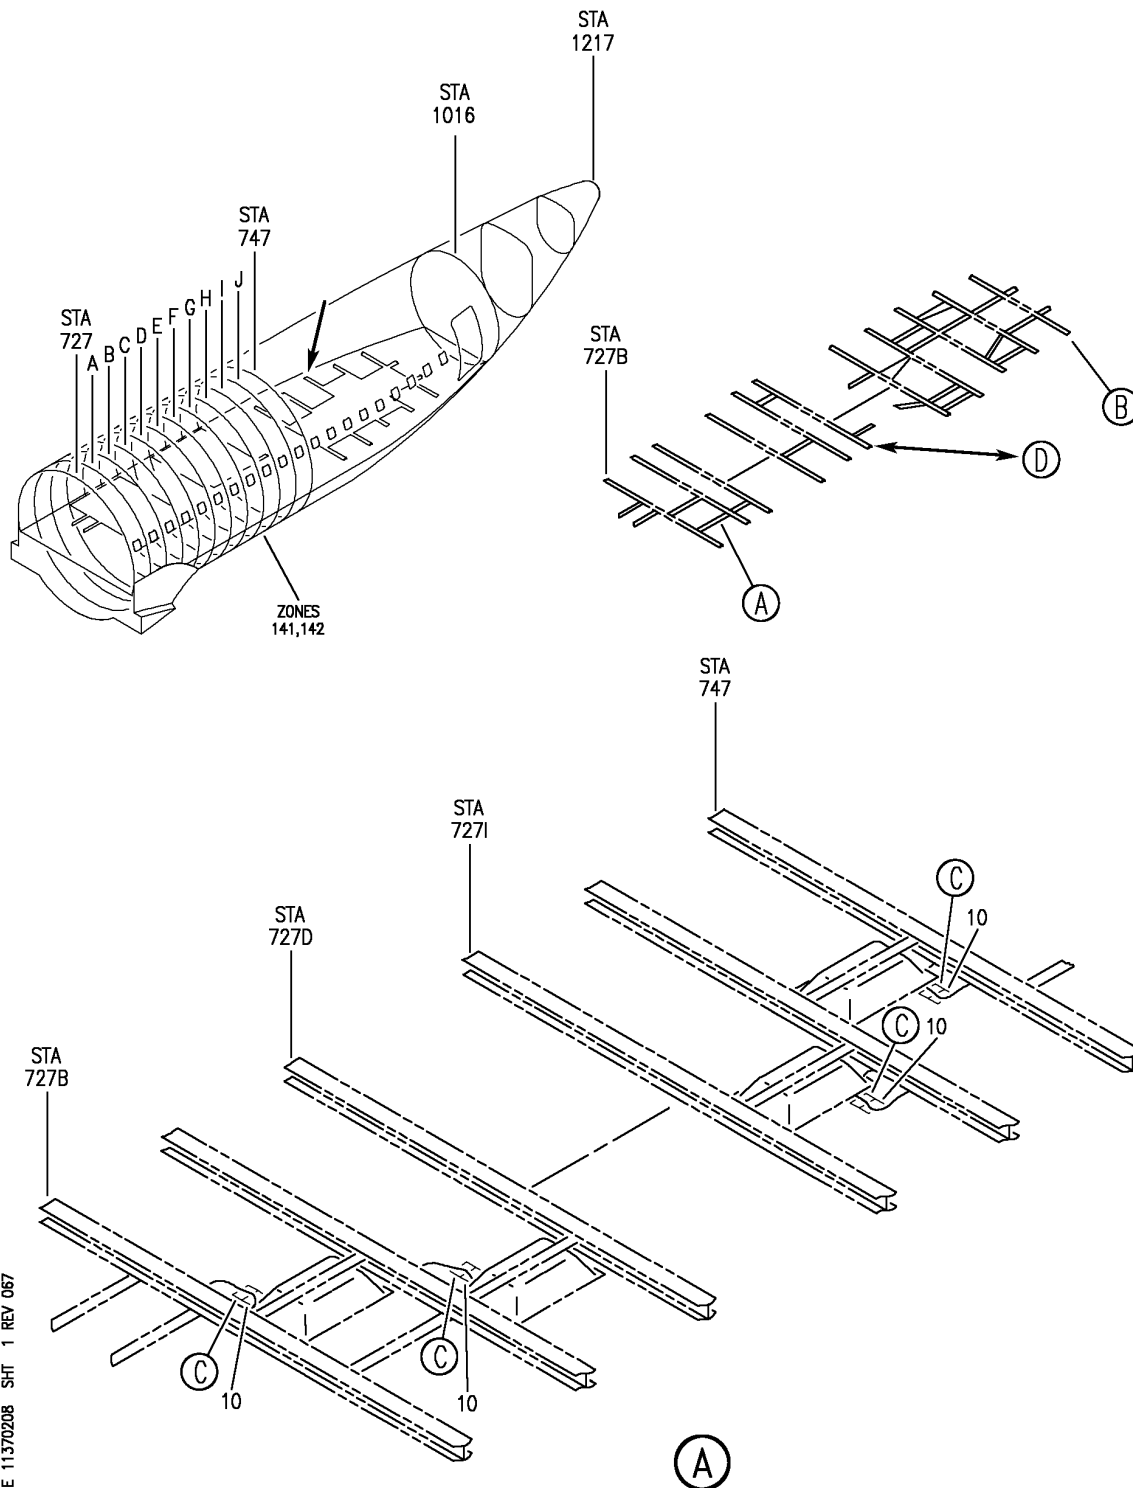

E 11370208 SHT 1 REV 067

DETECTOR INSTL-SMOKE (PLACARDS AND MARKINGS ONLY)
FIGURE 8 (SHEET 1)



11-37-02-08

RJR
JUN 15/10

11-37-02-08
PAGE 0

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

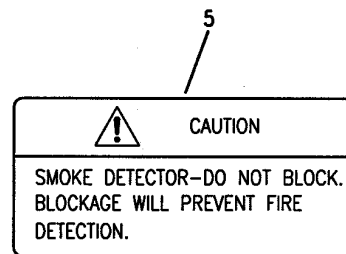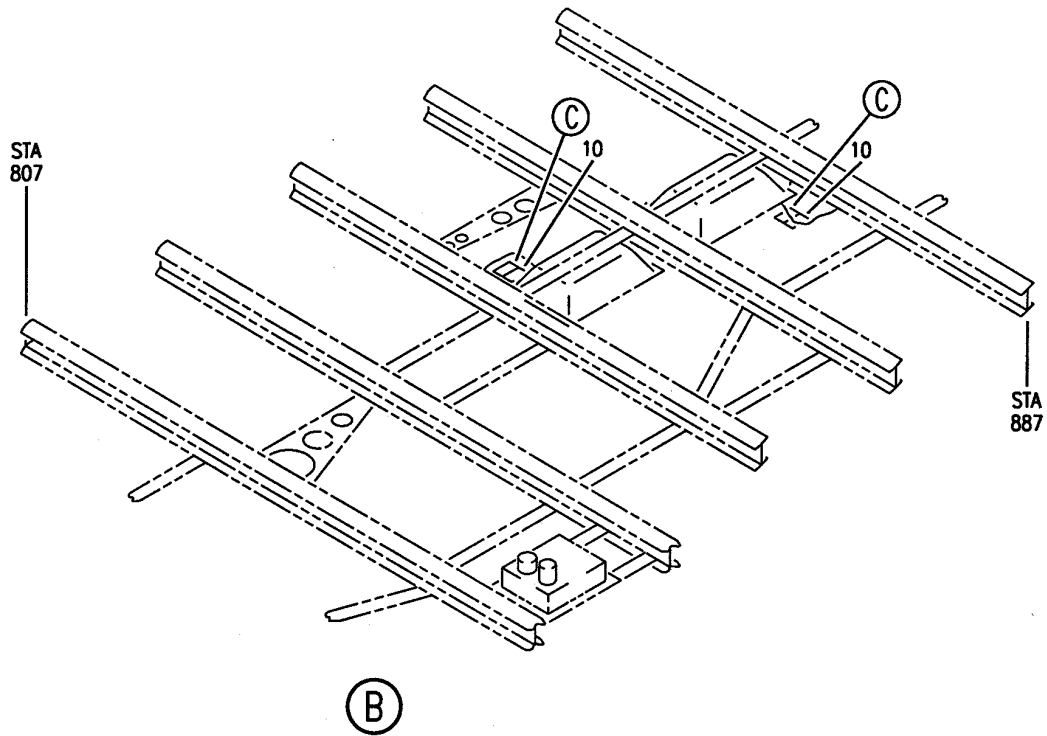

E 11370208 SHT 2 REV 038

DETECTOR INSTL-SMOKE (PLACARDS AND MARKINGS ONLY)
FIGURE 8 (SHEET 2)


11-37-02-08

R Y R
JUN 15/10

11-37-02-08
PAGE 0A

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

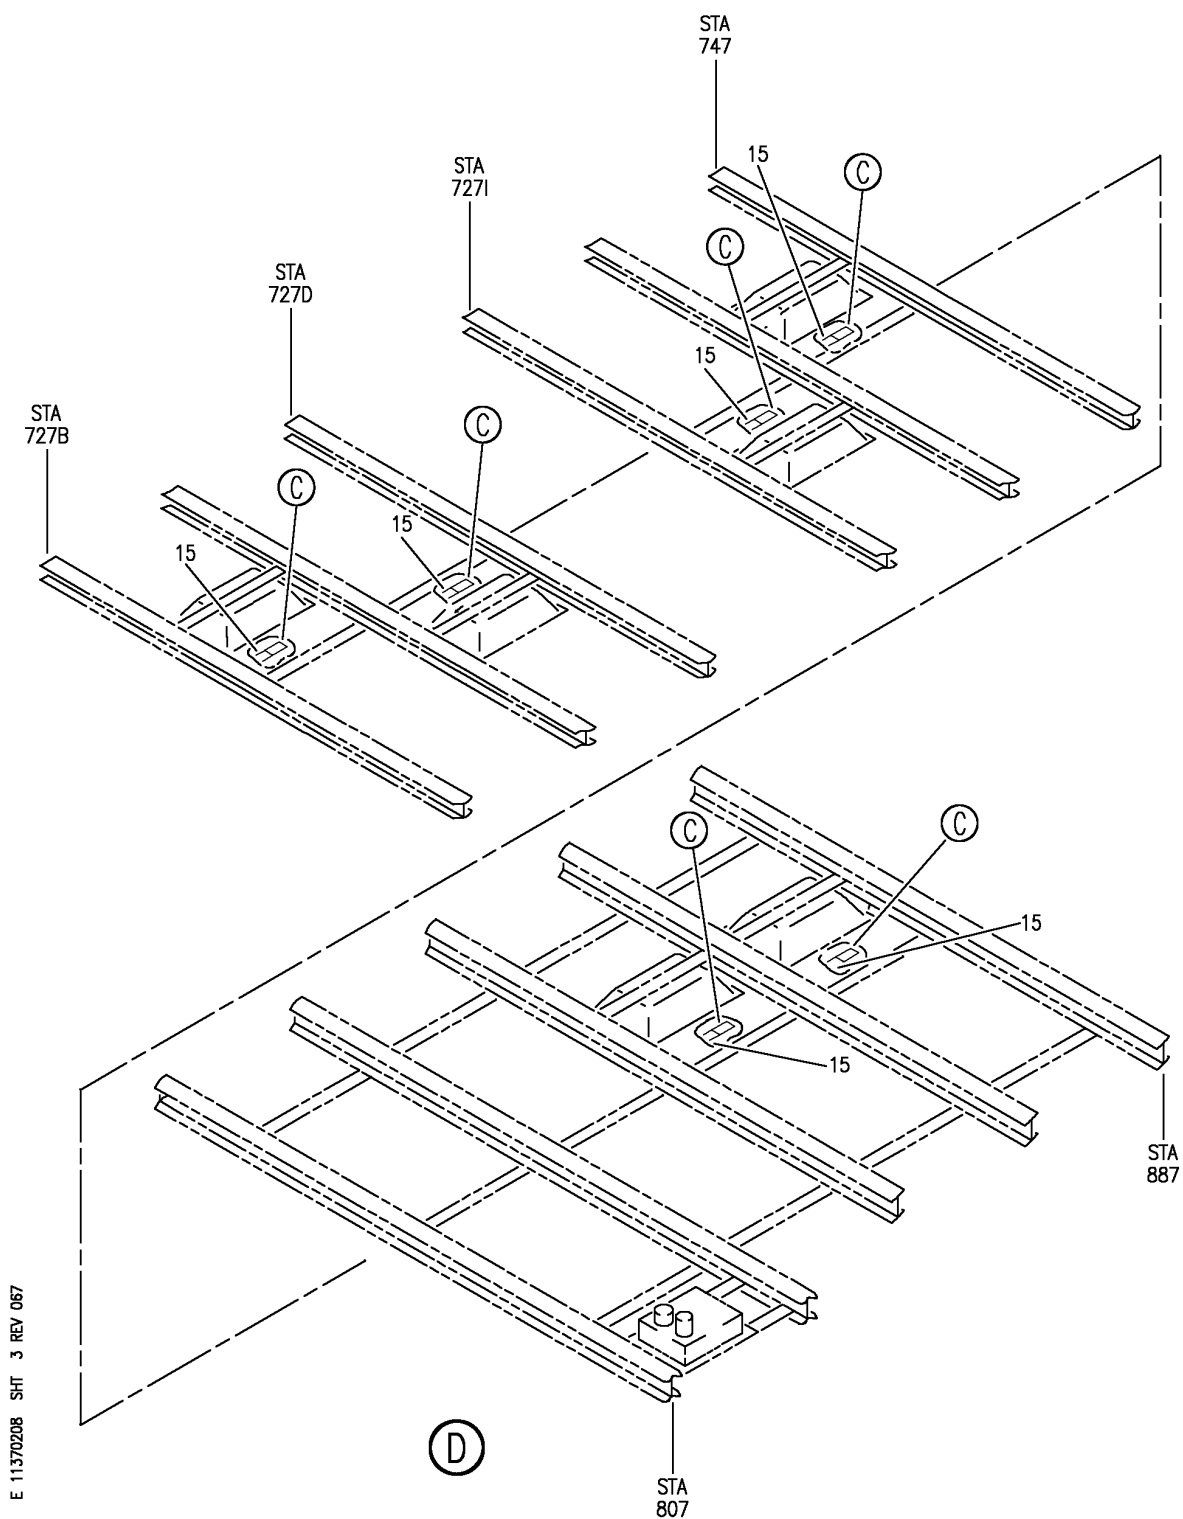

E 11370208 SHT 3 REV 067

DETECTOR INSTL-SMOKE (PLACARDS AND MARKINGS ONLY)
FIGURE 8 (SHEET 3)

11-37-02-08

R Y R
JUN 15/10

11-37-02-08
PAGE 08

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
8			DETECTOR INSTL-SMOKE (PLACARDS AND MARKINGS ONLY)		
- 1	MODREF101519		DETECTOR INSTL-SMOKE (PLACARDS AND MARKINGS ONLY) MODULE NUMBER: 218A4610-8 REV B FOR OTHER SYS DETAILS SEE: 26-16-01-08	056082	RF
- 1	MODREF243997		DETECTOR INSTL-SMOKE (PLACARDS AND MARKINGS ONLY) MODULE NUMBER: 218A4610-8 REV C FOR OTHER SYS DETAILS SEE: 26-16-01-08	083358	RF
- 1	MODREF630341		DETECTOR INSTL-SMOKE (PLACARDS AND MARKINGS ONLY) MODULE NUMBER: 218A4610-8 REV D FOR OTHER SYS DETAILS SEE: 26-16-01-08	359388	RF
- 1	MODREF692518		DETECTOR INSTL-SMOKE (PLACARDS AND MARKINGS ONLY) MODULE NUMBER: 218A4610-8 REV E FOR OTHER SYS DETAILS SEE: 26-16-01-08	389999	RF
5	BAC27NEC261		.DECAL-		6
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED


R Y R

11-37-02-08

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-02
FIG. 08
PAGE 1
JUN 15/23

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

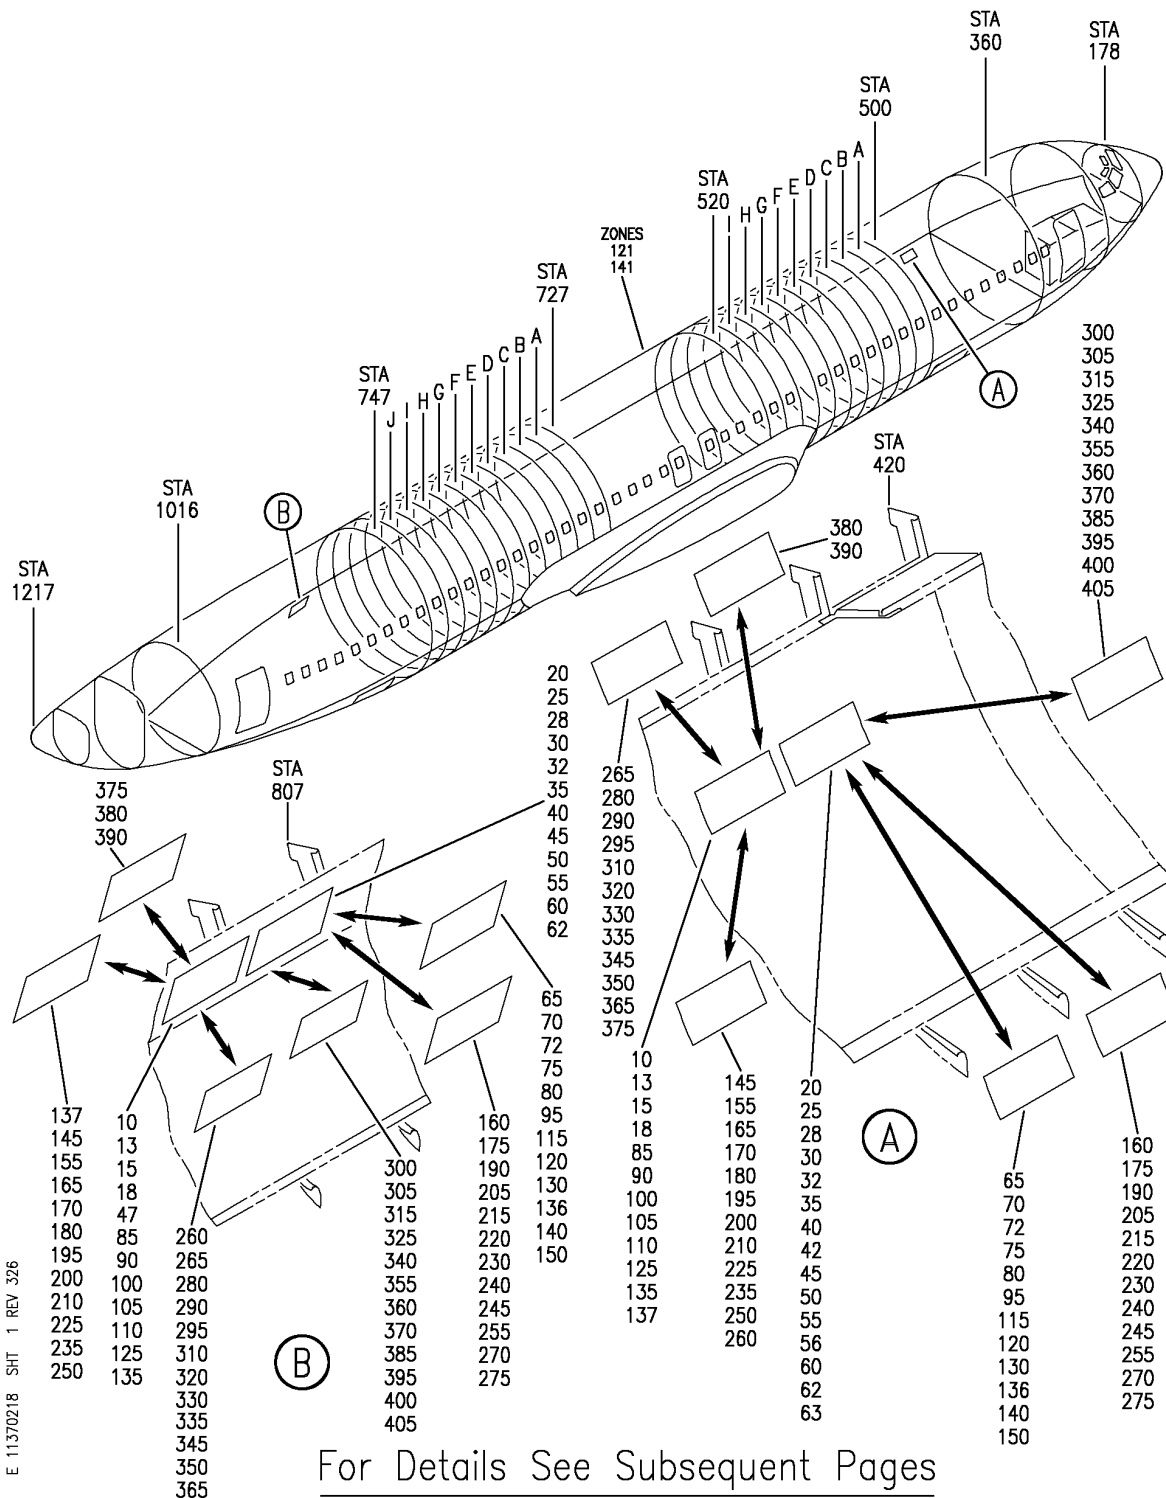

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 1)


11-37-02-18

R/YR
OCT 15/23



11-37-02-18
PAGE 0

BOEING **737-600/700/800/900** **PARTS CATALOG (MAINTENANCE)**

15

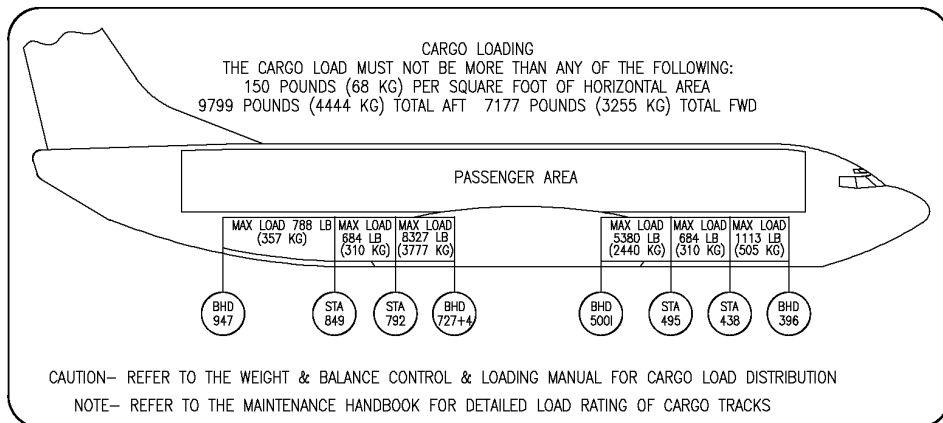

18

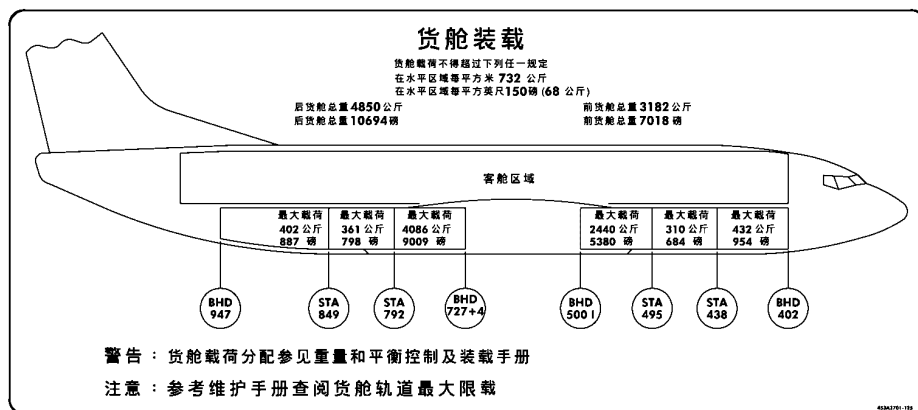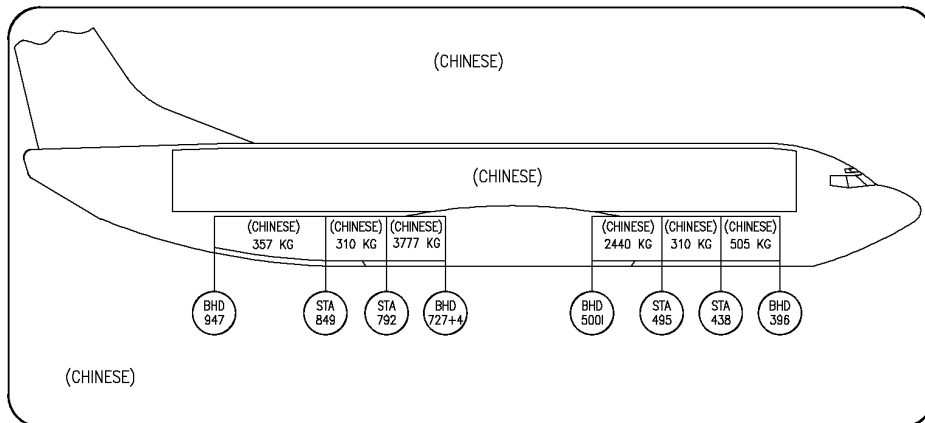

320

MARKER INSTL-LOADING CARGO COMPT 737-800
 FIGURE 18 (SHEET 2)

11-37-02-18

R/YR
 AUG 15/16


11-37-02-18
 PAGE 0A

ECCN 9E991 BOEING PROPRIETARY - See title page for details.


E 11370218 SH 2 REV 241

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


20

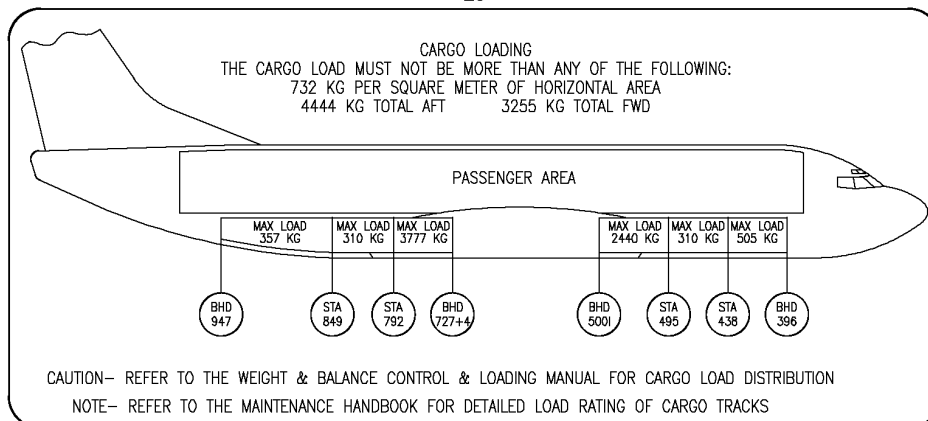

25

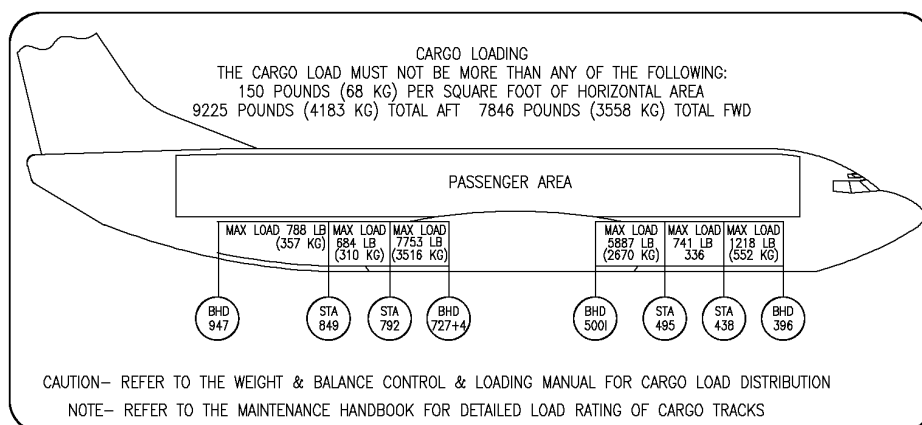

325

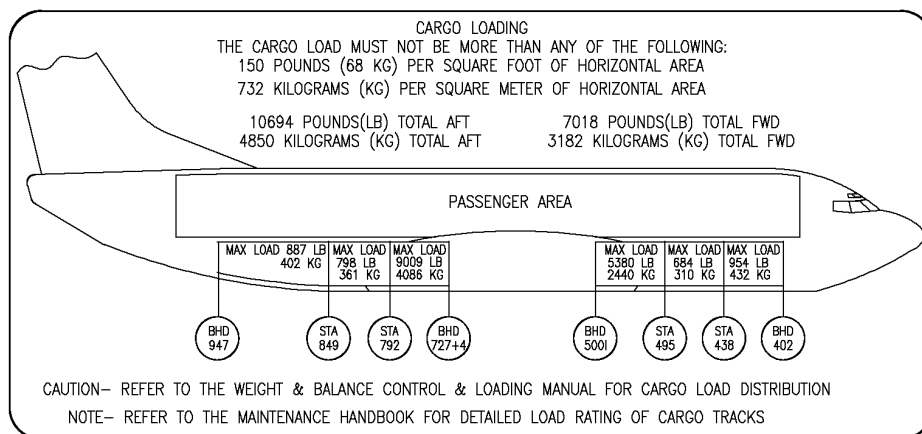

E 11370218 SHT 3 REV 241

MARKER INSTL-LOADING CARGO COMPT 737-800
 FIGURE 18 (SHEET 3)

11-37-02-18


R/YR
 AUG 15/16

11-37-02-18
 PAGE 08


ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

35

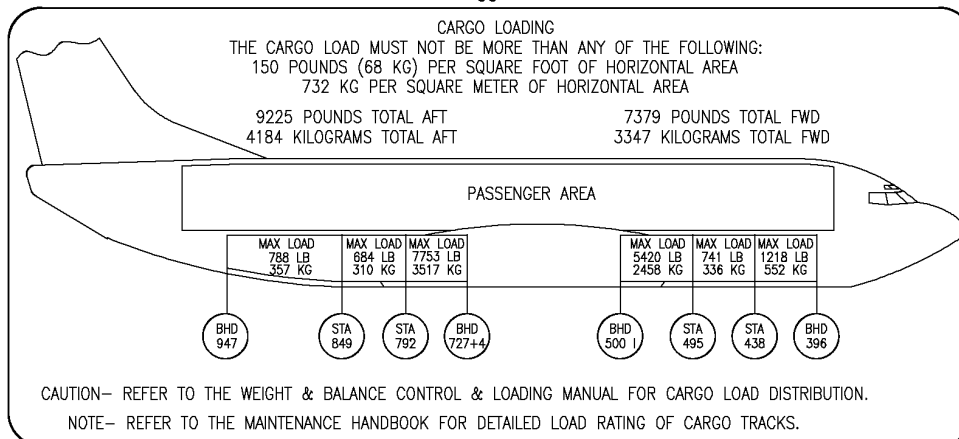

40
42

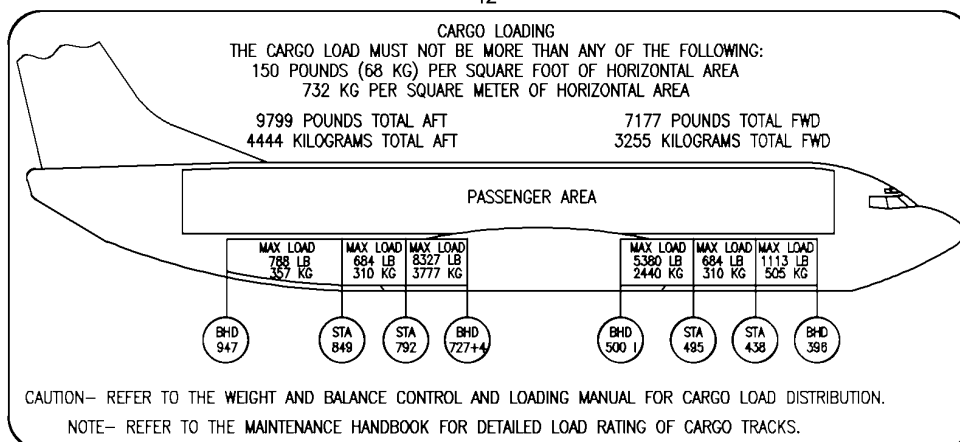

330



E 11370218 SHT 4 REV 313

MARKER INSTL-LOADING CARGO COMPT 737-800
 FIGURE 18 (SHEET 4)

11-37-02-18


R/YR
AUG 15/22

11-37-02-18
PAGE 0C


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


10
45
47
160

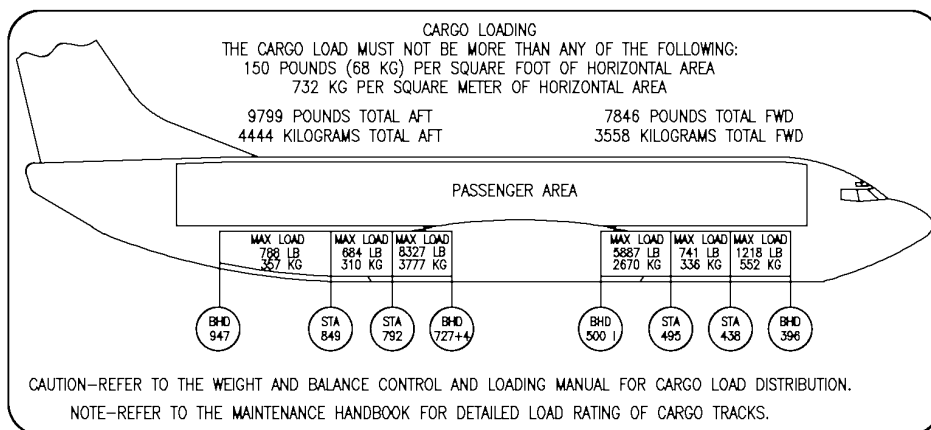

50

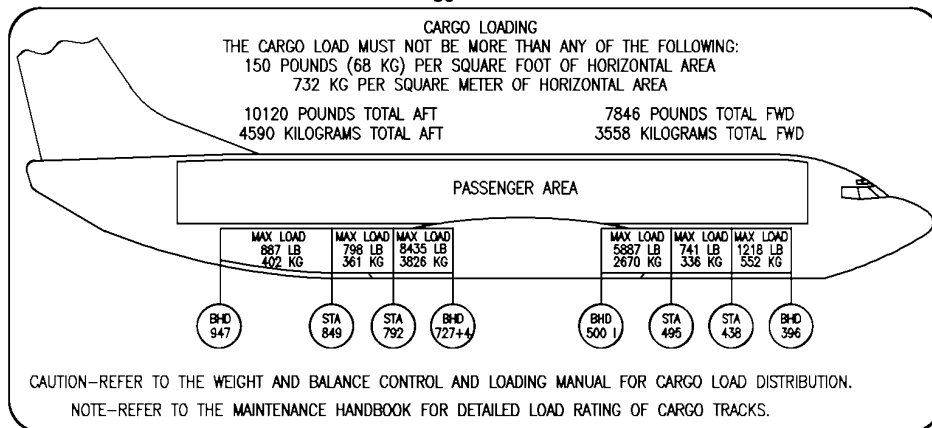

335

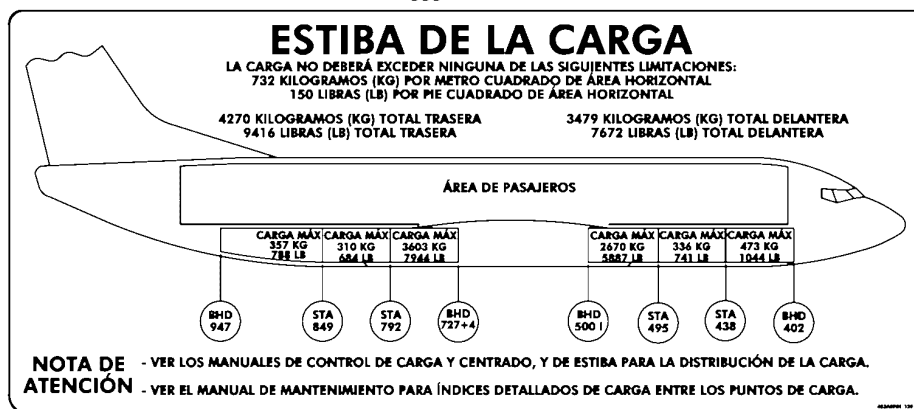

E 11370218 SH 5 REV 326

MARKER INSTL-LOADING CARGO COMPT 737-800
 FIGURE 18 (SHEET 5)

11-37-02-18


R/YR
OCT 15/23

11-37-02-18
PAGE 00


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


55
56

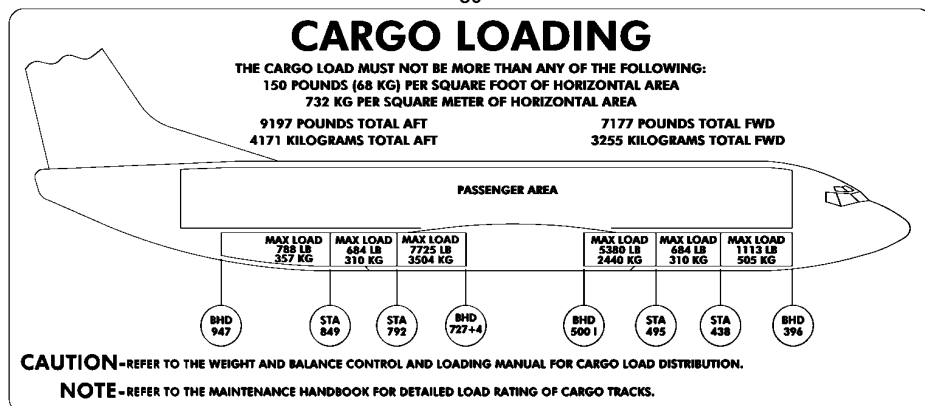

60
62
63

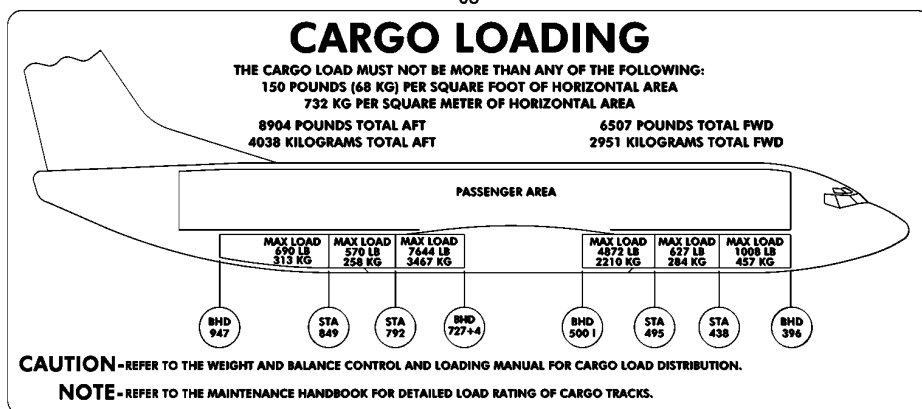

340

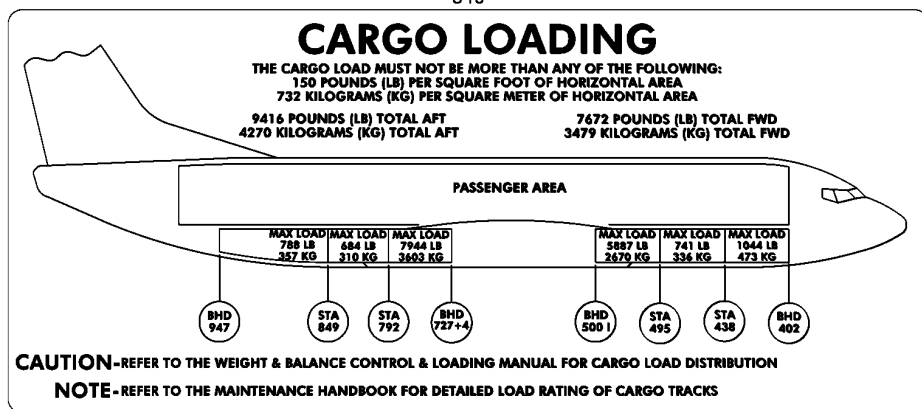

E 11370218 SHT 6 REV 325

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 6)

11-37-02-18


R/YR
AUG 15/23

11-37-02-18
PAGE 0E


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


70

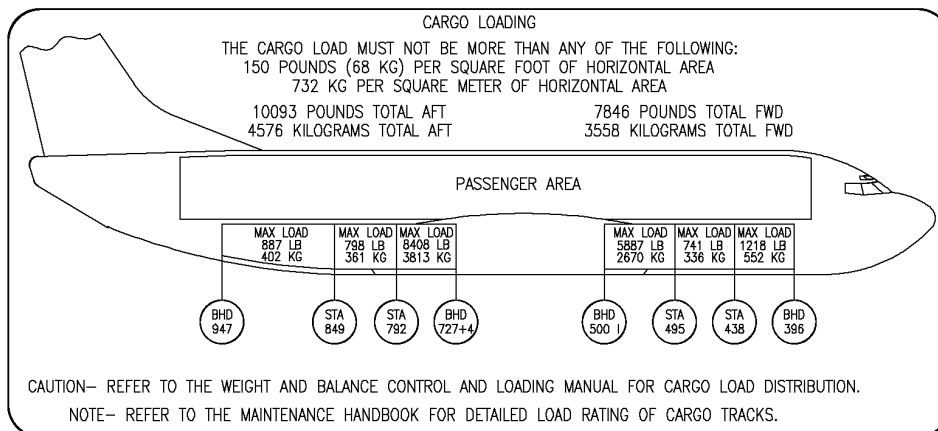

30
75
170

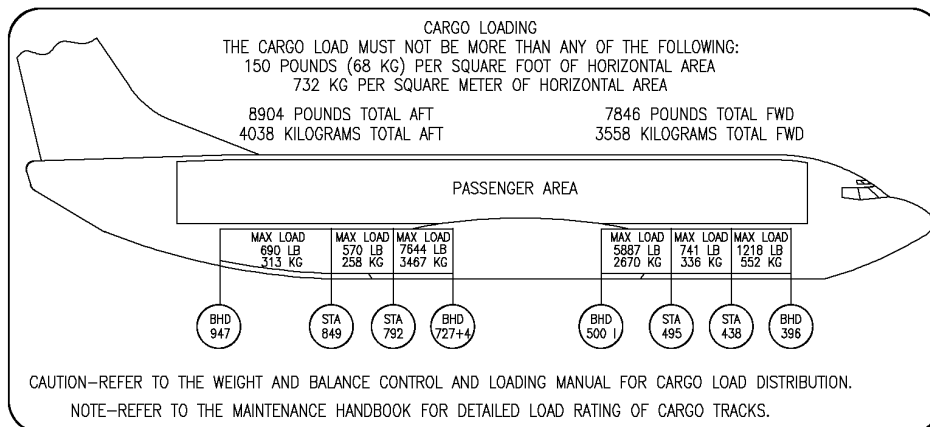

345

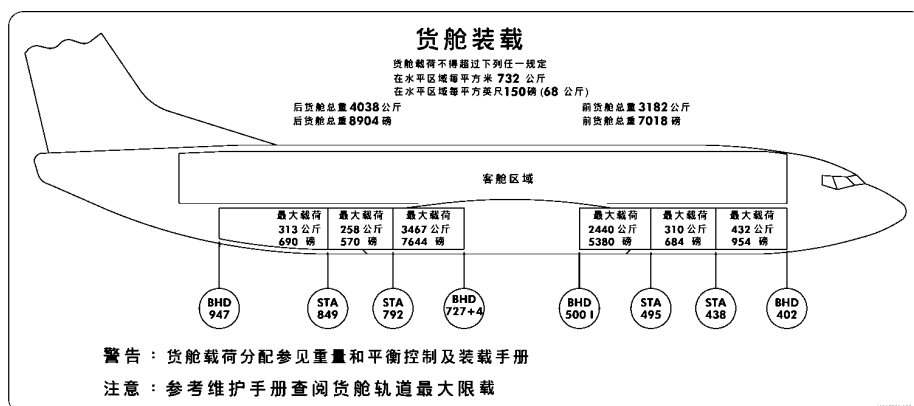

E 11370218 SH 7 REV 303

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 7)

11-37-02-18


R Y R
O C T 15 / 21

11-37-02-18
PAGE 0 F


ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


13
65

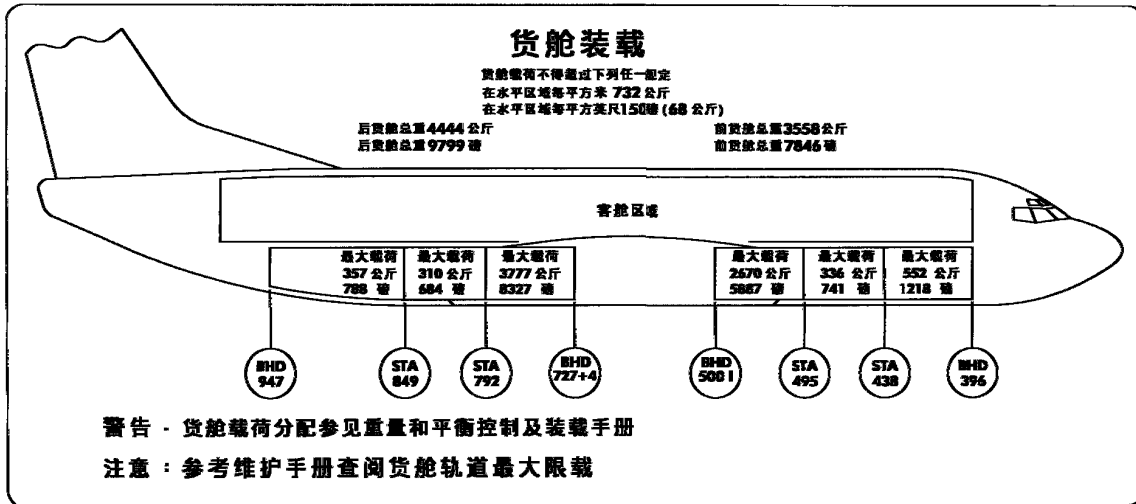

28

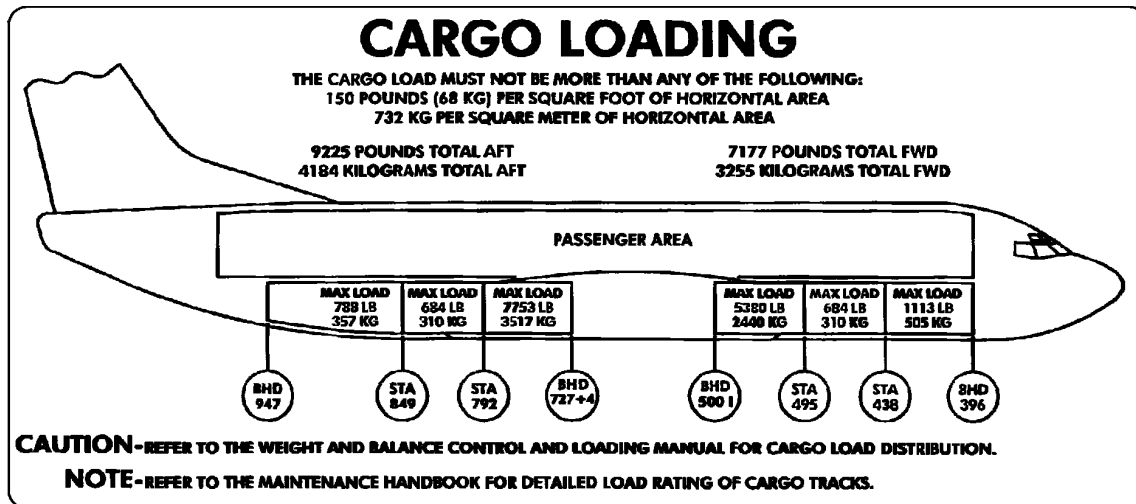

395

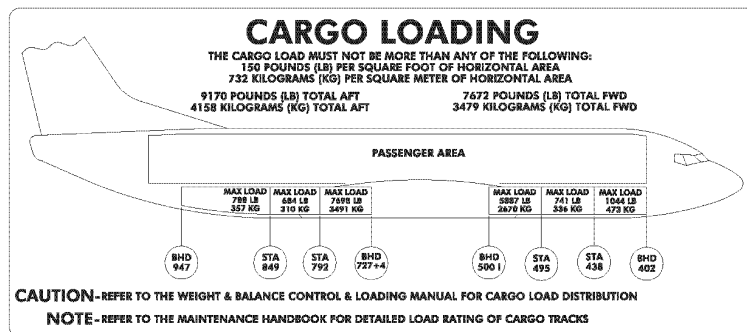

E 11370218 SHT 8 REV 265

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 8)

11-37-02-18


R/YR
AUG 15/18

11-37-02-18
PAGE 06


ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


85

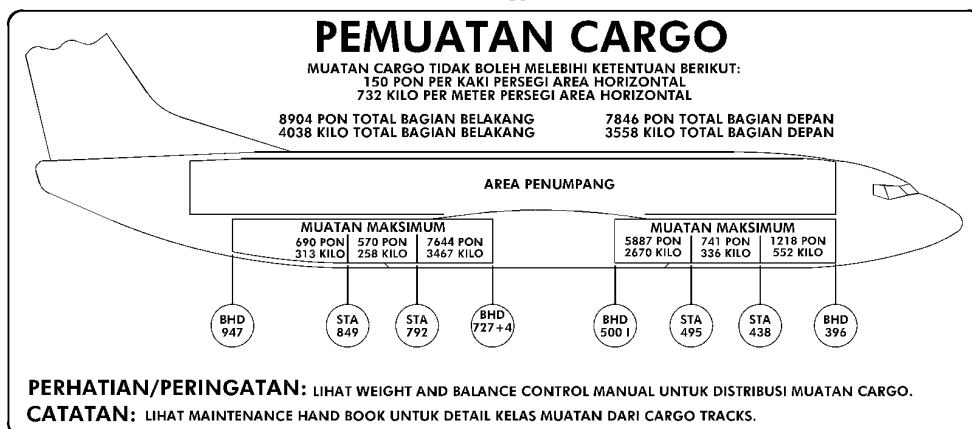

90

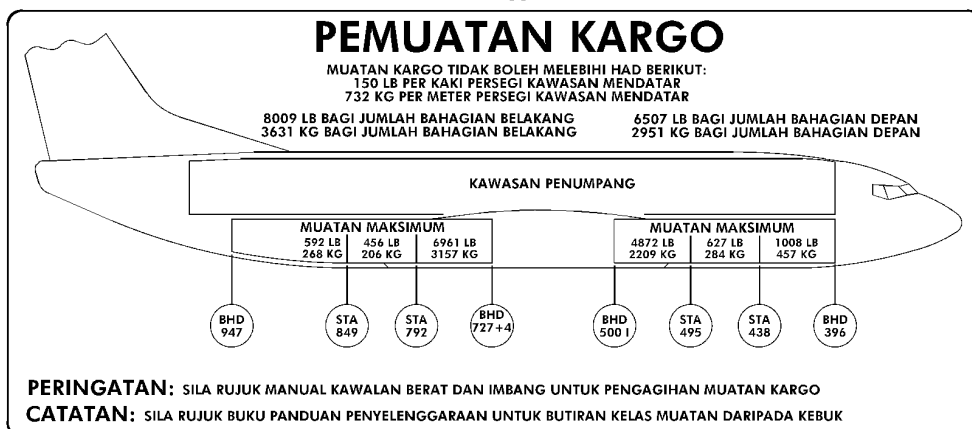

370

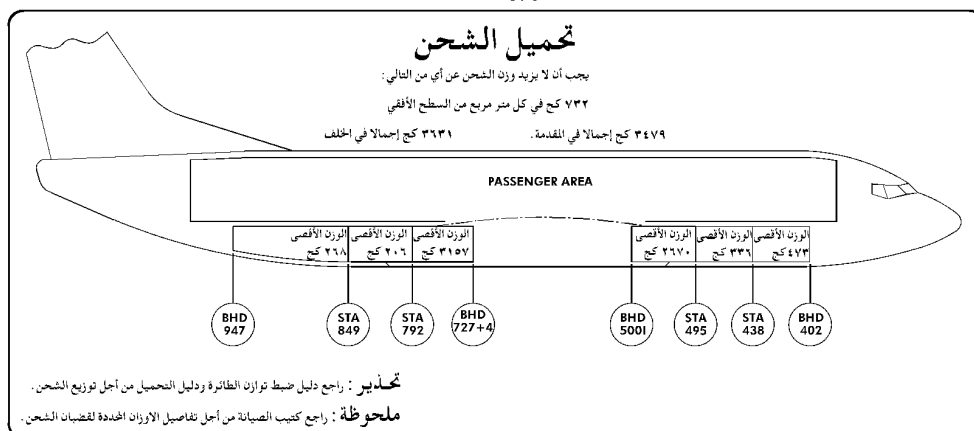

E 11370218 SHT 9 REV 247

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 9)

11-37-02-18


R/YR
FEB 15/17

11-37-02-18
PAGE 0H


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


32

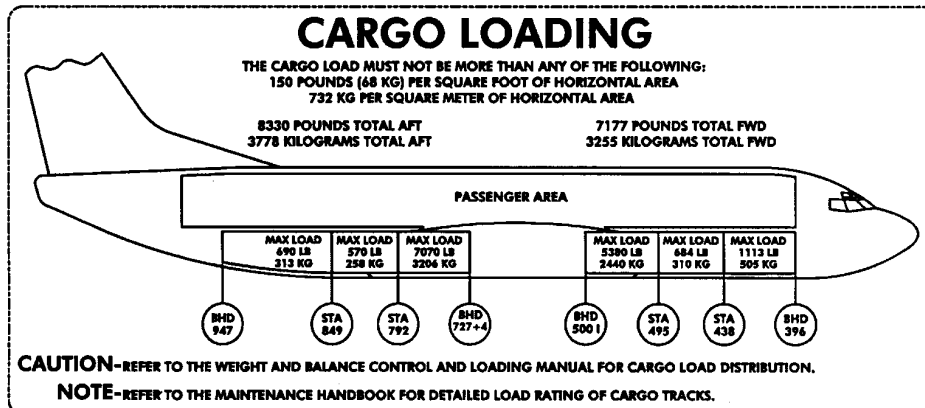

80

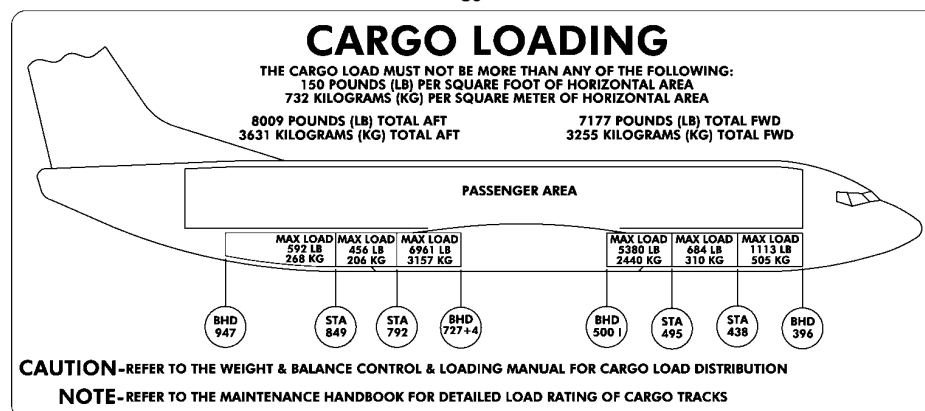

385

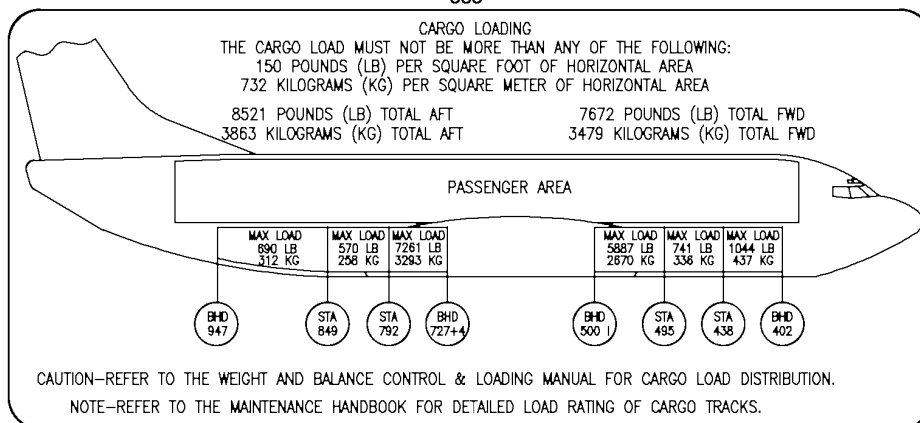

E 11370218 SHT 10 REV 303

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 10)


11-37-02-18

R/YR
OCT 15/21


11-37-02-18
PAGE 01

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

95

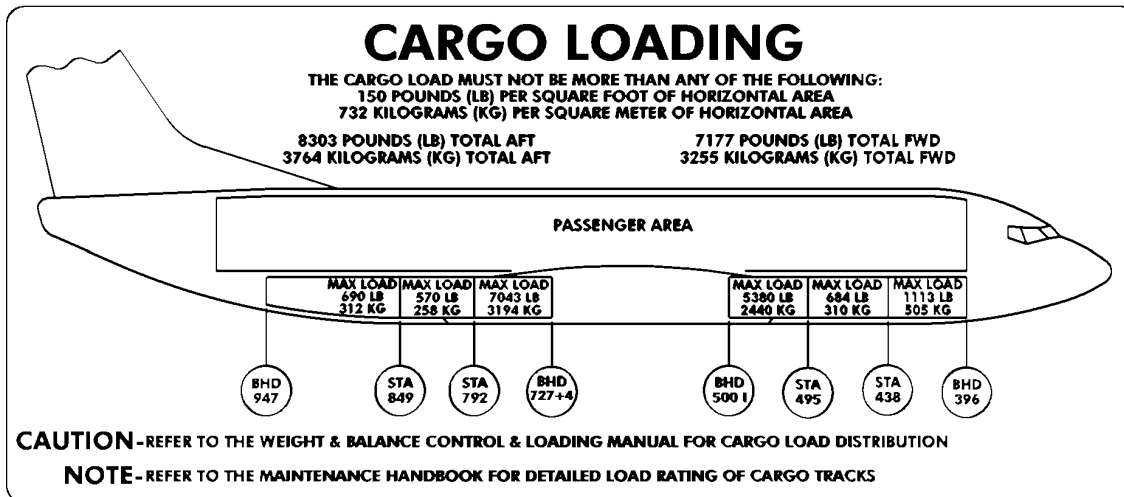

390

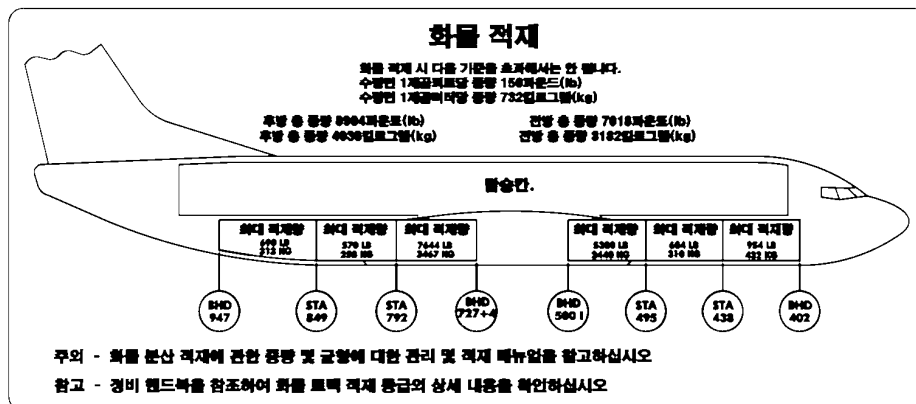

100



E 11370218 SHT 11 REV 257

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 11)


11-37-02-18

R/YR
DEC 15/17


11-37-02-18
PAGE 0J

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


105

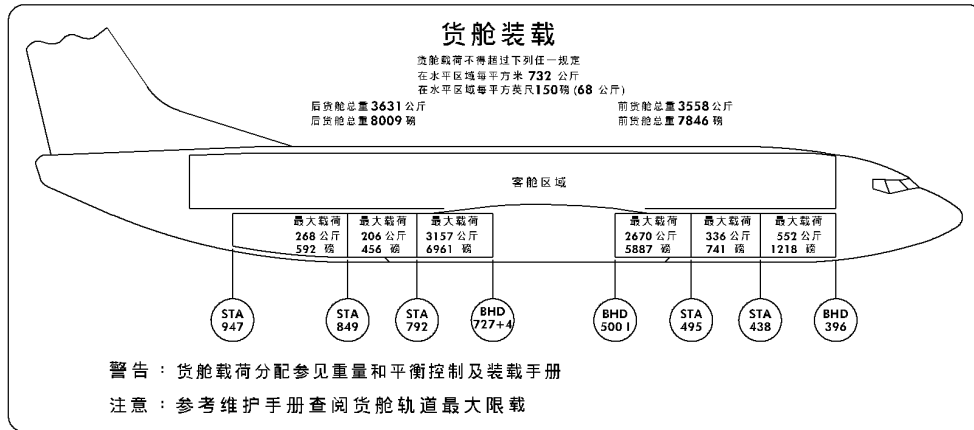

110

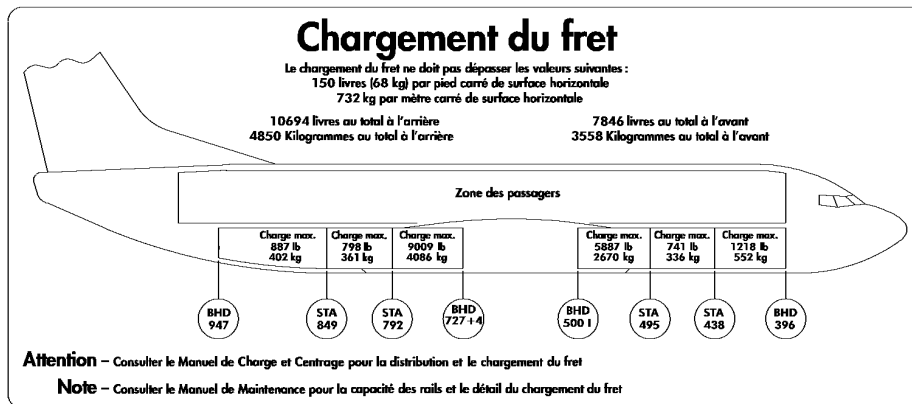

360

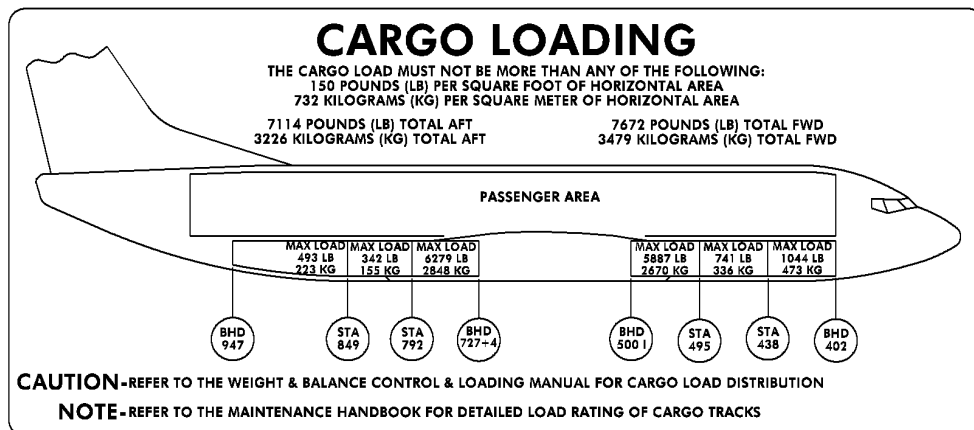

E 11370218 SHT 12 REV 303

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 12)

11-37-02-18


R/YR
OCT 15/21

11-37-02-18
PAGE 0K

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


115

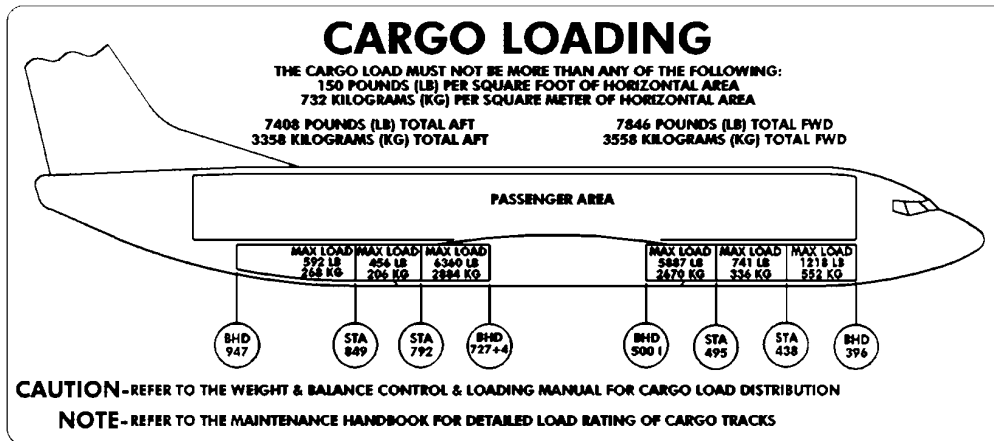

120



310

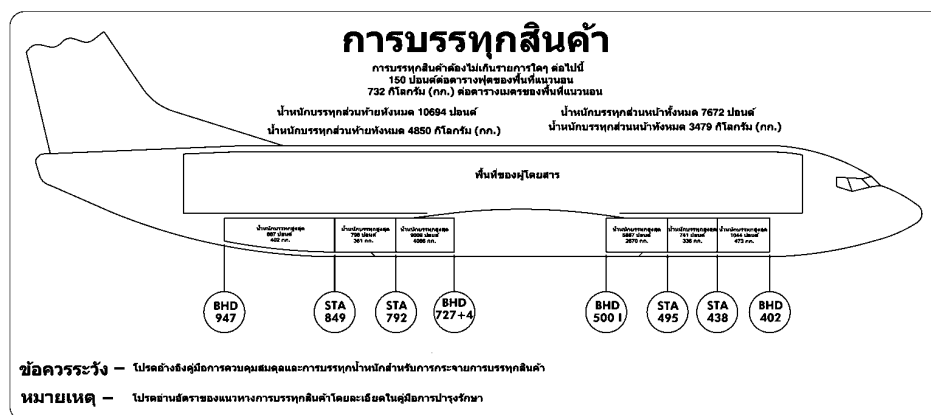

E 11370218 SHT 13 REV 303

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 13)

11-37-02-18

R/YR
OCT 15/21


11-37-02-18
PAGE 01

ECCN 9E991 BOEING PROPRIETARY - See title page for details.


125



130

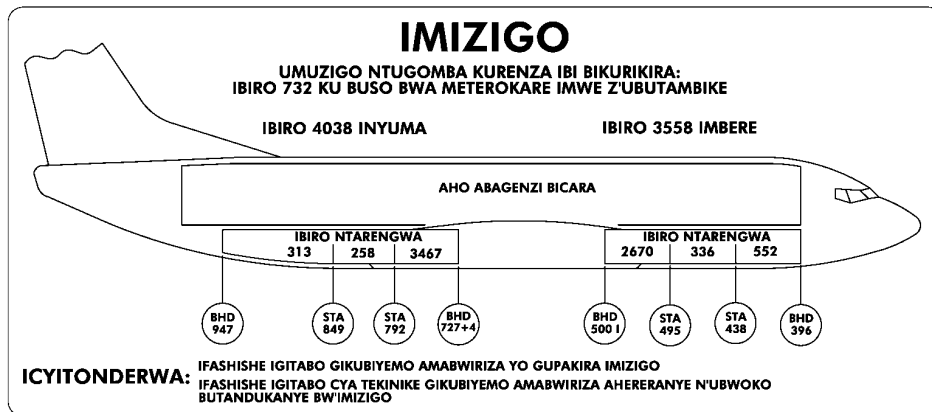

315

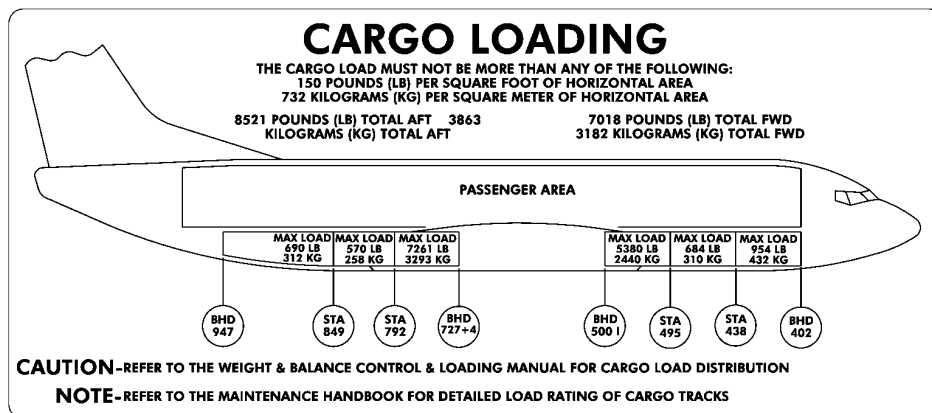

E 11370218 SHT 14 REV 303


MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 14)

11-37-02-18


R/YR
OCT 15/21

11-37-02-18
PAGE 0M


135

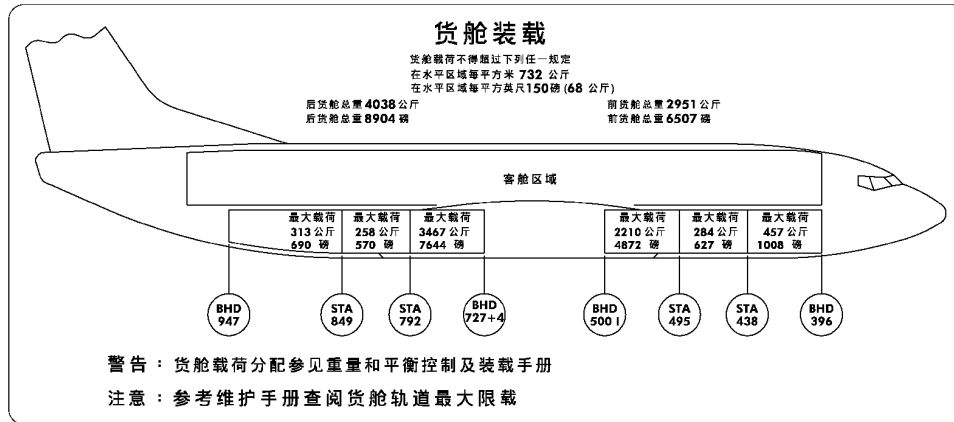

140
145

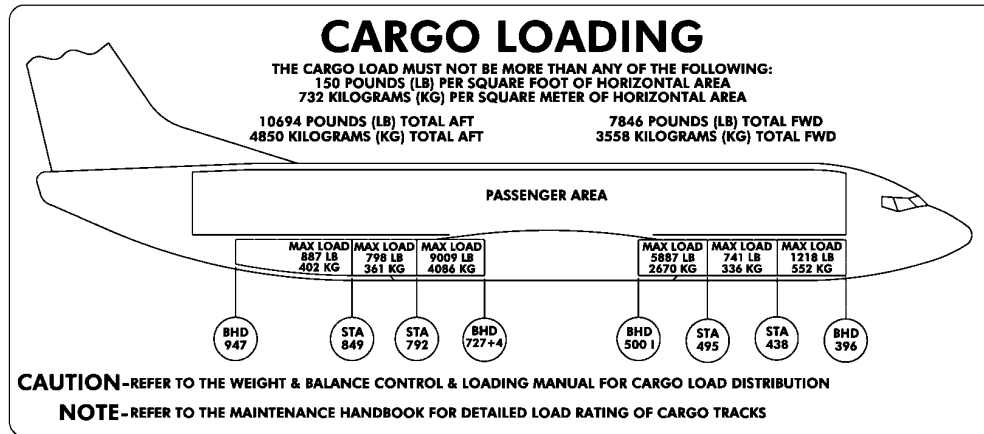

290

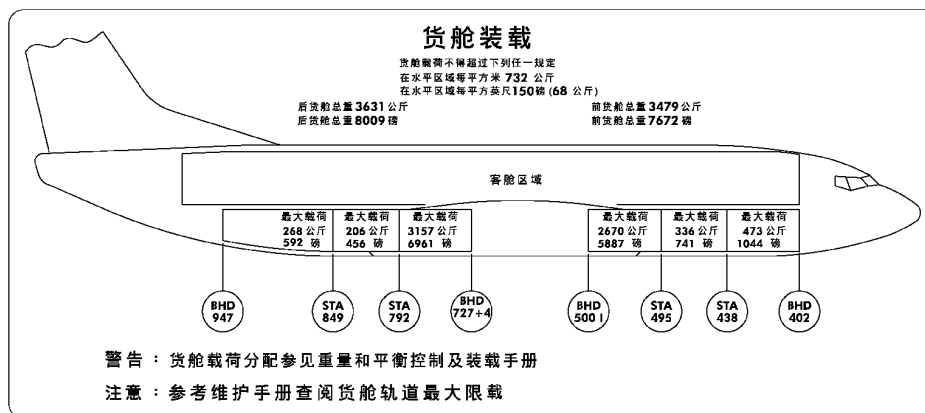

E 11370218 SHT 15 REV 303

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 15)


11-37-02-18

R/YR
OCT 15/21


11-37-02-18
PAGE ON

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


380

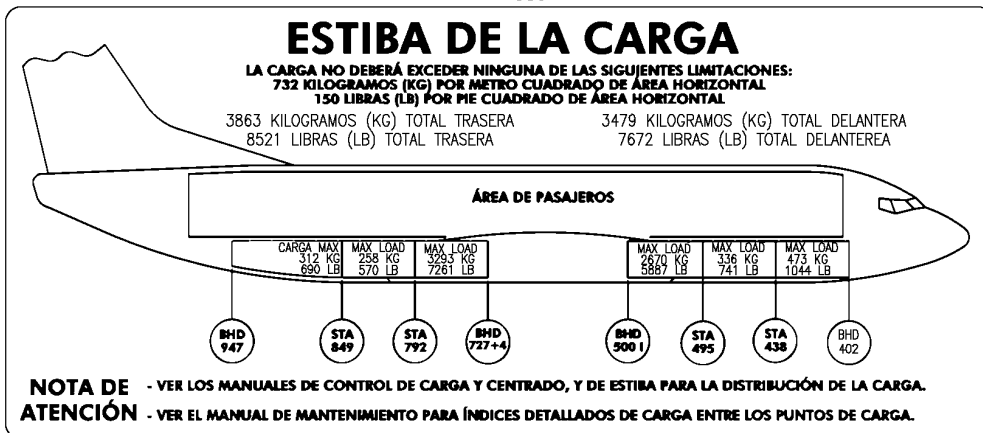

72

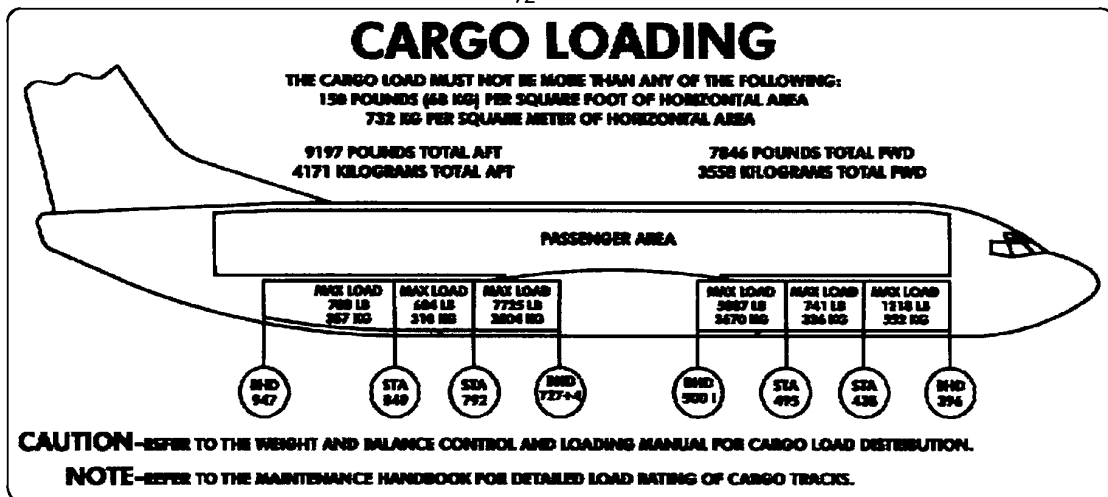

136

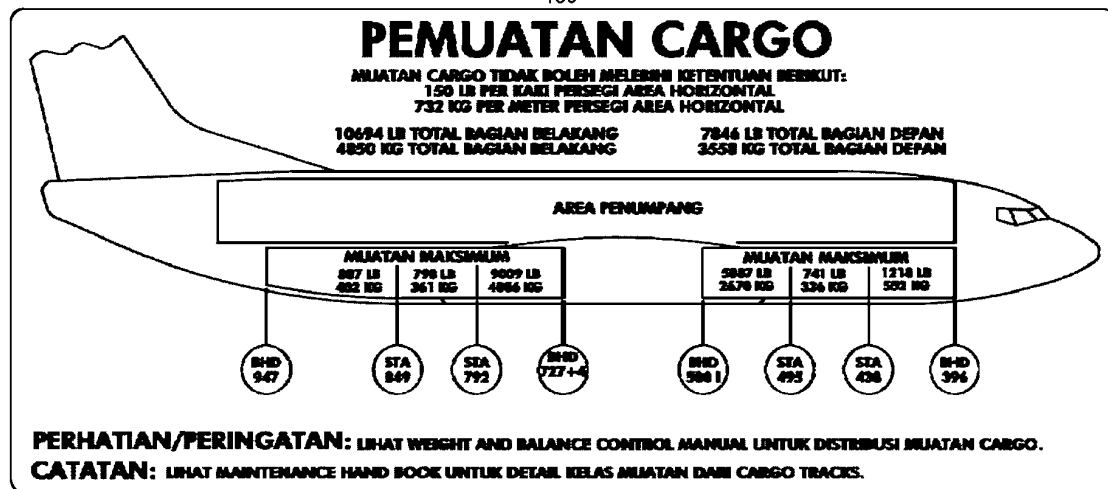

E 11370218 SHT 16 REV 303

MARKER INSTL-LOADING CARGO COMPT 737-800
 FIGURE 18 (SHEET 16)


11-37-02-18

R/YR
OCT 15/21


11-37-02-18
PAGE 00

ECCN 9E991 BOEING PROPRIETARY – See title page for details.


137

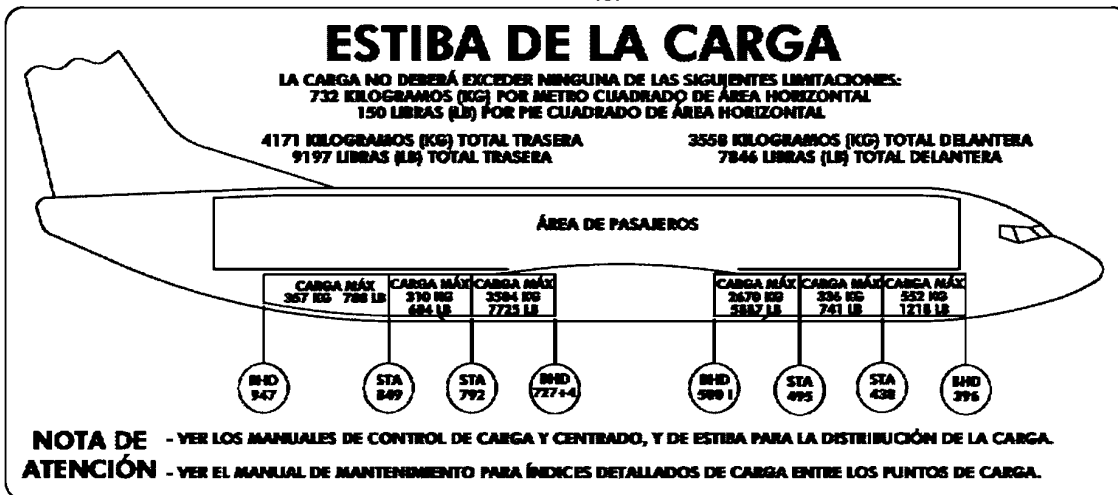

150

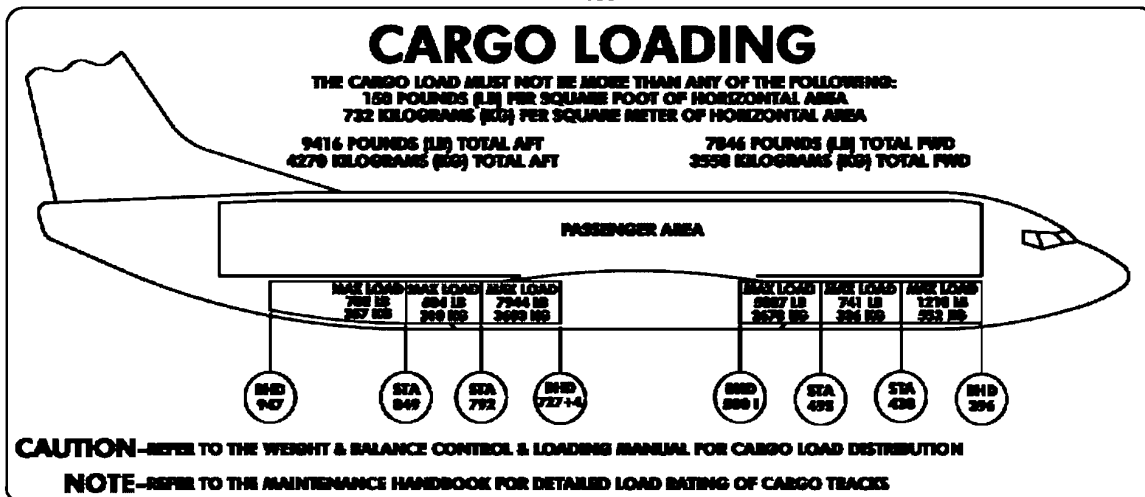

375

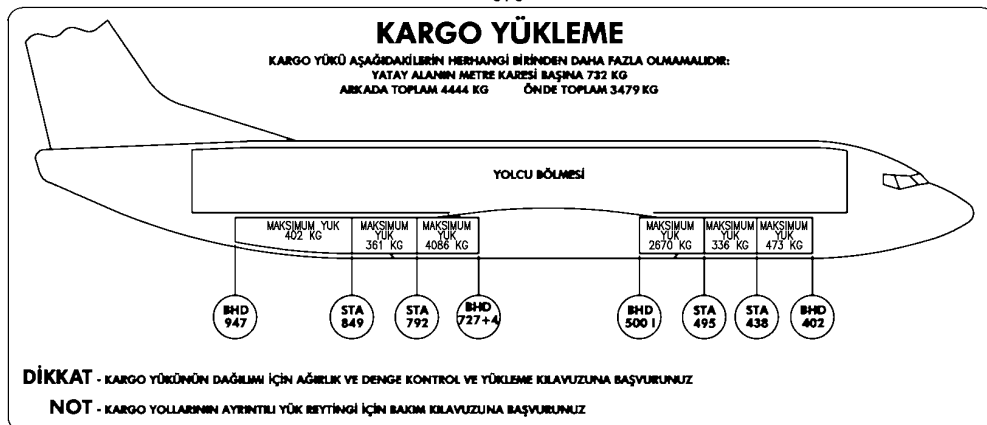

E 11370218 SHT 17 REV 303

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 17)

11-37-02-18

R/YR
OCT 15/21

11-37-02-18
PAGE 0P

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


155

ESTIBA DE LA CARGA

LA CARGA NO DEBERÁ EXCEDER NINGUNA DE LAS SIGUIENTES LIMITACIONES:
732 KILOGRAMOS (KG) POR METRO CUADRADO DE ÁREA HORIZONTAL
150 LIBRAS (LB) POR PIE CUADRADO DE ÁREA HORIZONTAL

4444 KILOGRAMOS (KG) TOTAL TRASERA
9799 LIBRAS (LB) TOTAL TRASERA

3558 KILOGRAMOS (KG) TOTAL DELANTERA
7846 LIBRAS (LB) TOTAL DELANTERA

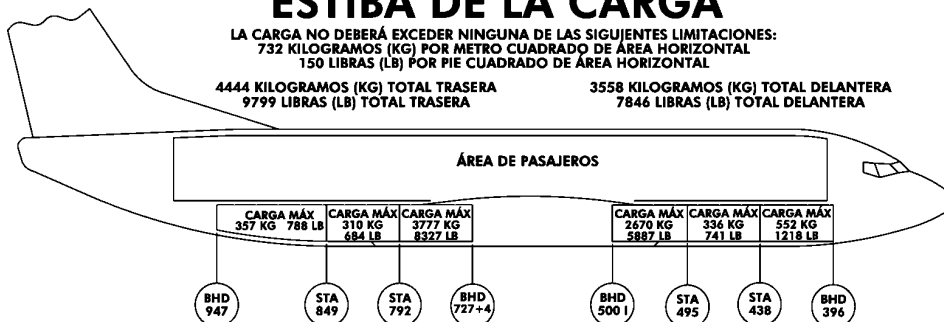

NOTA DE ATENCIÓN - VER LOS MANUALES DE CONTROL DE CARGA Y CENTRADO, Y DE ESTIBA PARA LA DISTRIBUCIÓN DE LA CARGA.
- VER EL MANUAL DE MANTENIMIENTO PARA ÍNDICES DETALLADOS DE CARGA ENTRE LOS PUNTOS DE CARGA.


165

CARREGAMENTO

O CARREGAMENTO NÃO DEVE EXCEDER QUALQUER DOS SEGUINTE VALORES:
732 KG/M2 NA ÁREA HORIZONTAL
150 LB/FT2 NA ÁREA HORIZONTAL

4038 KG TOTAL TRASEIRO
8904 LB TOTAL TRASEIRO

3558 KG TOTAL DIANTEIRO
7846 LB TOTAL DIANTEIRO

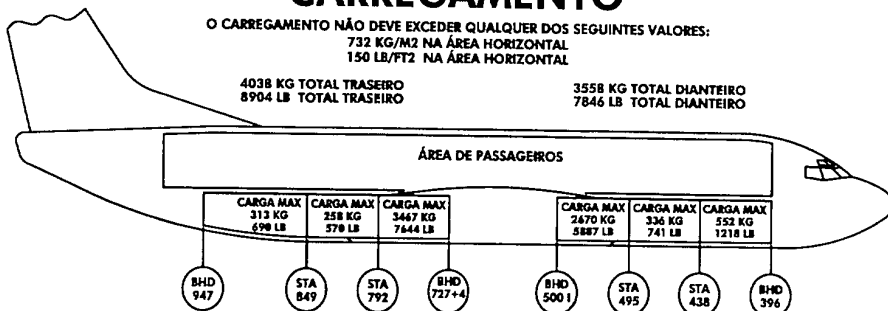


CUIDADO: PARA DISTRIBUIÇÃO DE CARGA, VEJA MANUAL DE PESO E BALANCEAMENTO.

NOTA: VEJA O "MAINTENANCE HANDBOOK" PARA DETERMINAR A CAPACIDADE DE CARGA DOS TRILHOS DE CARGA.

280

KARGO YÜKLEME

KARGO YÜKÜ AŞAĞIDAKİLERİN HERHANGİ BİRİNDEN DAHA FAZLA OLMAMALIDIR:
YATAY ALANIN METRE KARESİ BAŞINA 732 KG
ARKADA TOPLAM 4444 KG ÖNDE TOPLAM 3479 KG

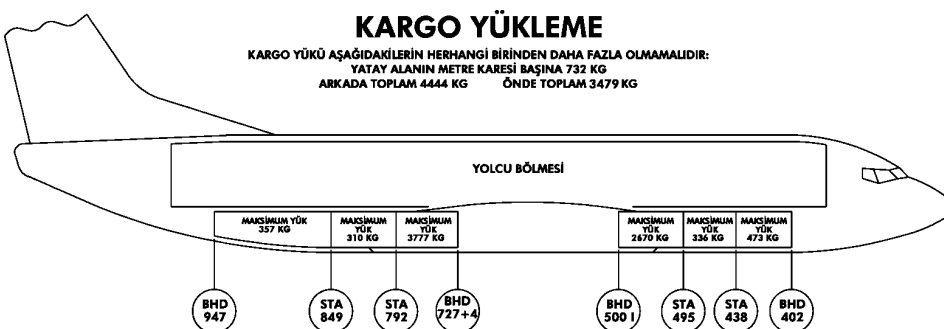

DİKKAT - KARGO YÜKÜNÜN DAĞILIMI İÇİN AĞIRLIK VE DENGİ KONTROL VE YÜKLEME KILAVUZUNA BAŞVURUNUZ

NOT - KARGO YOLLARININ AYRINTILI YÜK REYTINGİ İÇİN BAKIM KILAVUZUNA BAŞVURUNUZ

E 11370218 SHT 18 REV 233

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 18)

11-37-02-18


RJR
FEB 15/16

11-37-02-18
PAGE 0Q


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


175

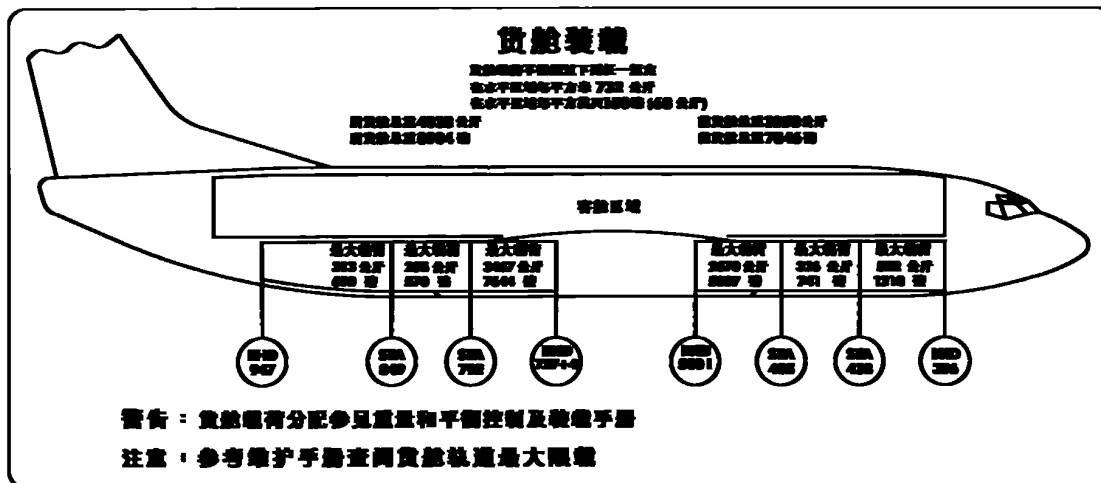

180

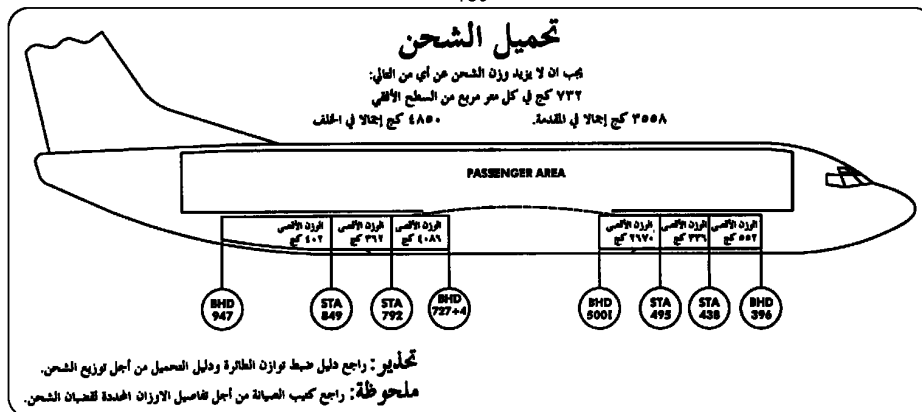

355

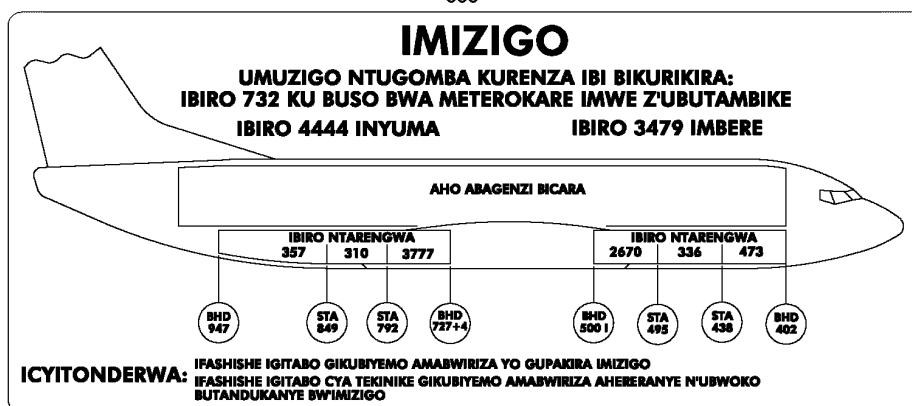

E 11370218 SHT 19 REV 303

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 19)


11-37-02-18

R/YR
OCT 15/21

11-37-02-18
PAGE OR

ECCN 9E991 BOEING PROPRIETARY – See title page for details.


190

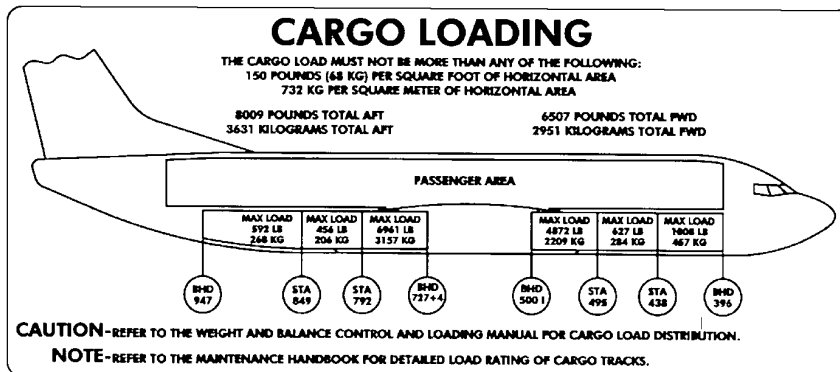

195



275

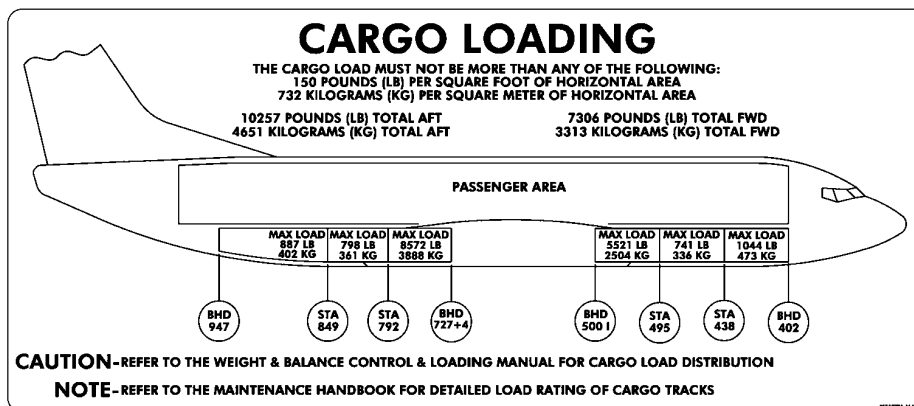

E 11370218 SHT 20 REV 303

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 20)


11-37-02-18

R Y R
O C T 15 / 21


11-37-02-18
PAGE 05

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


200

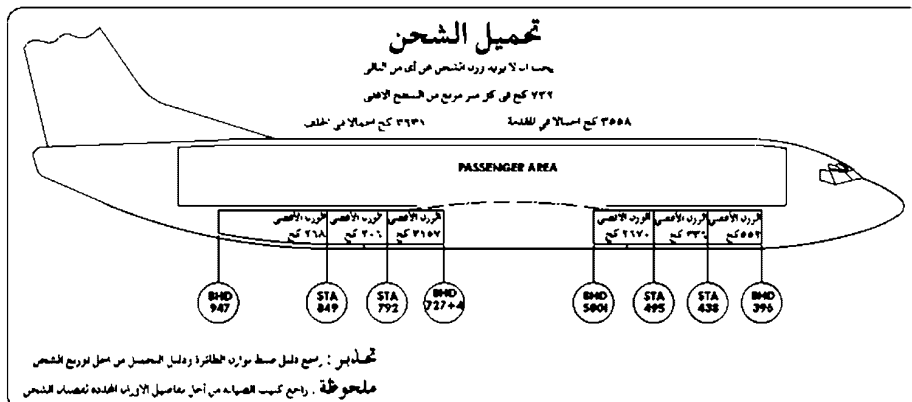

205

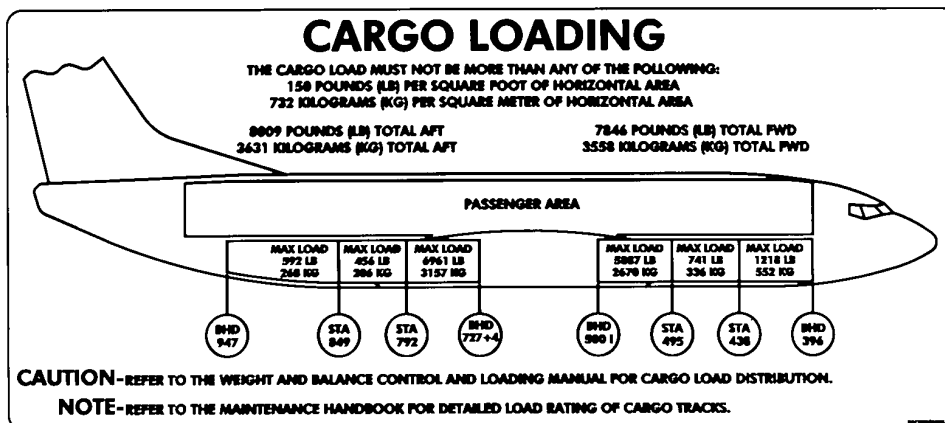

270

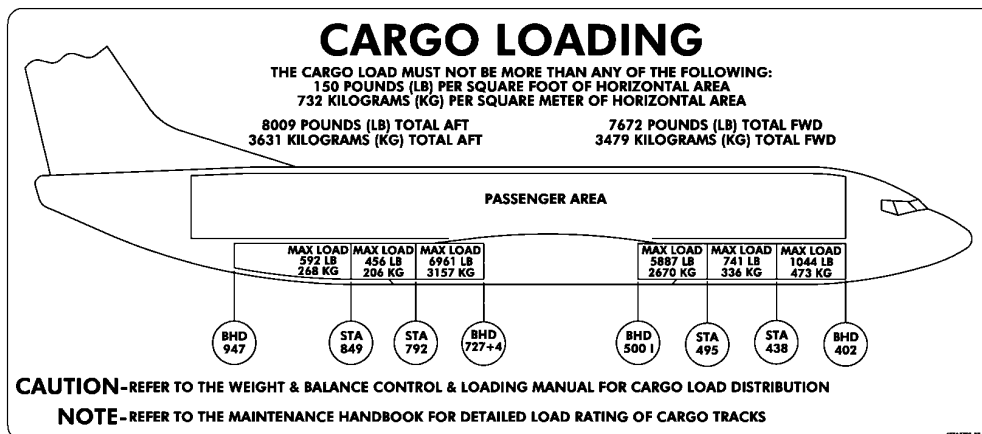

E 11370218 SHT 21 REV 303

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 21)

11-37-02-18

R/YR
OCT 15/21

11-37-02-18
PAGE 0T

ECCN 9E991 BOEING PROPRIETARY – See title page for details.


BOEING

737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


210



215

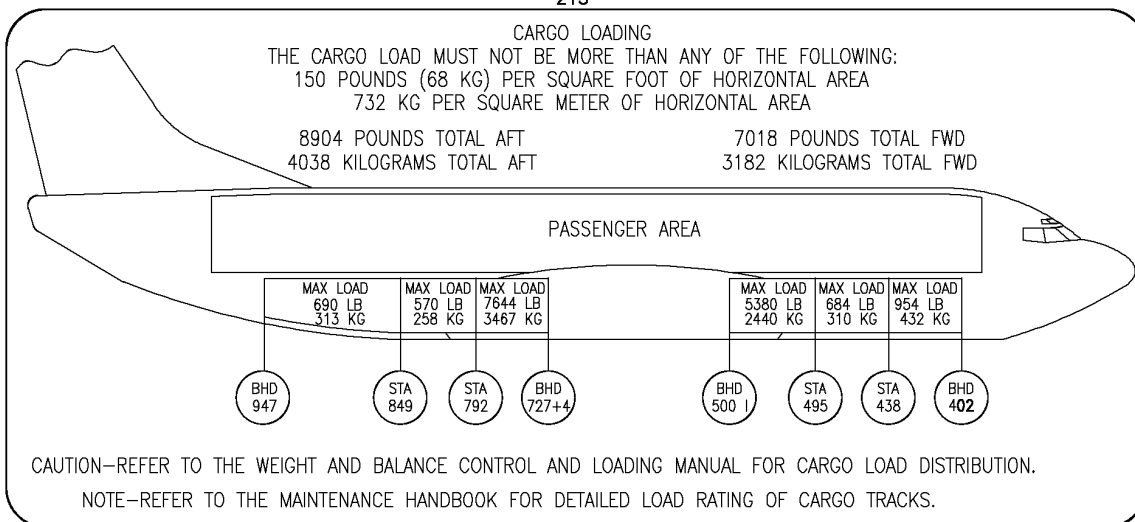

365

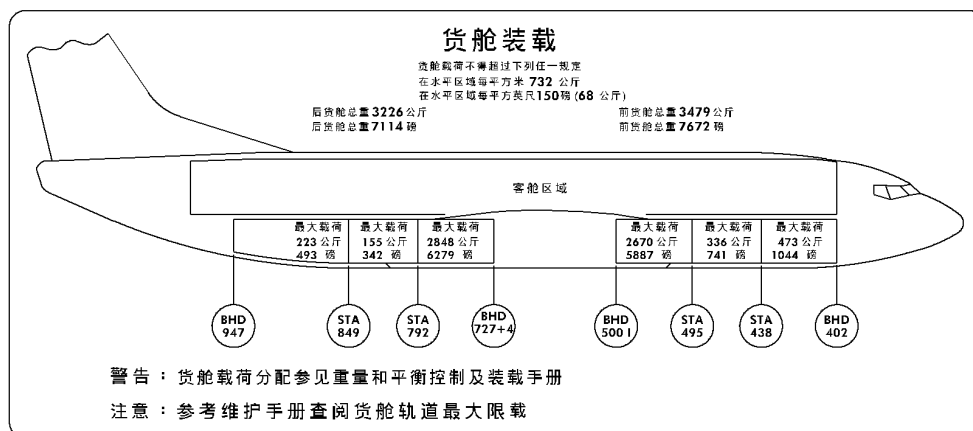

E 11370218 SHT 22 REV 303

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 22)

11-37-02-18


R/YR
OCT 15/21

11-37-02-18
PAGE 00


ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


220
250

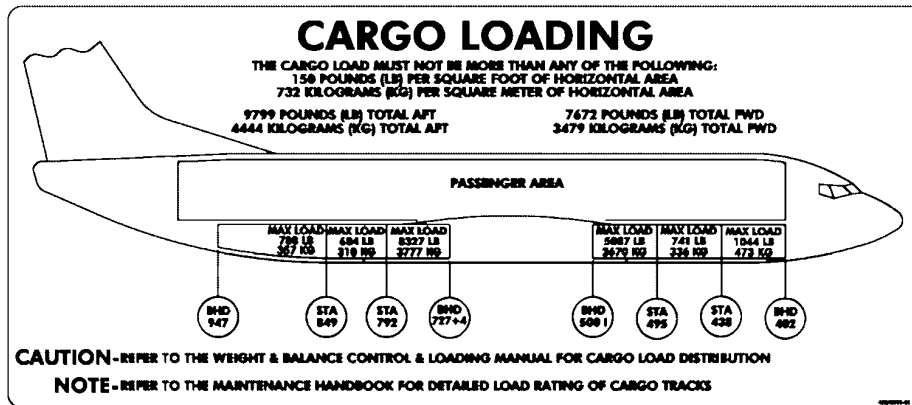

225

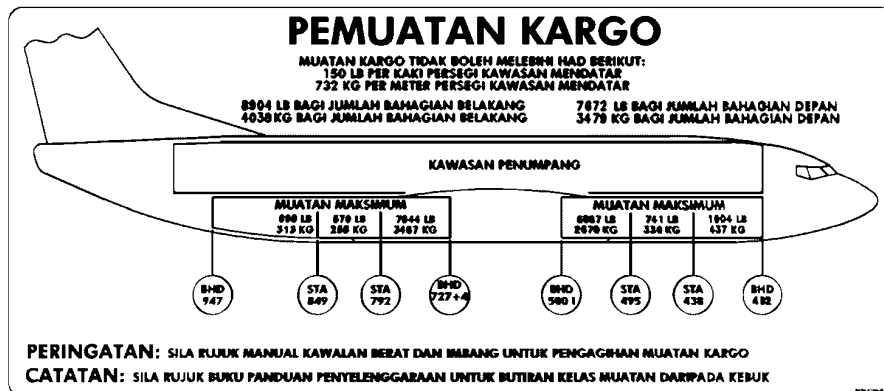

350

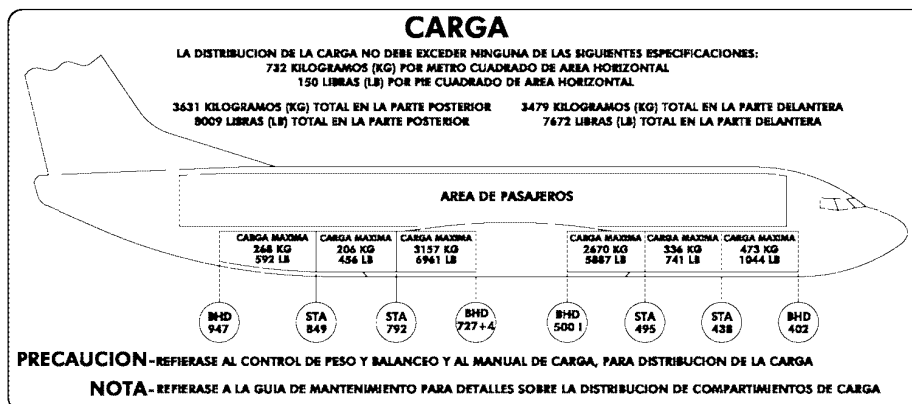

E 11370218 SHT 23 REV 243

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 23)

11-37-02-18


R/YR
OCT 15/16

11-37-02-18
PAGE 0V


ECCN 9E991 BOEING PROPRIETARY - See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


230

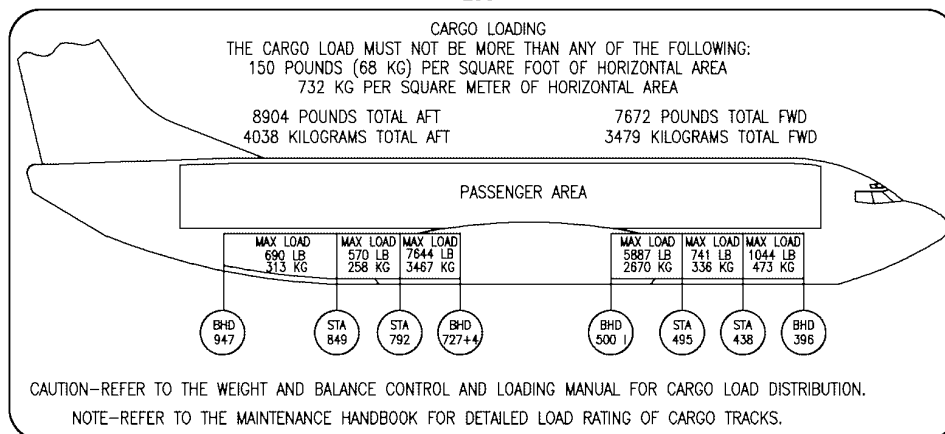

235

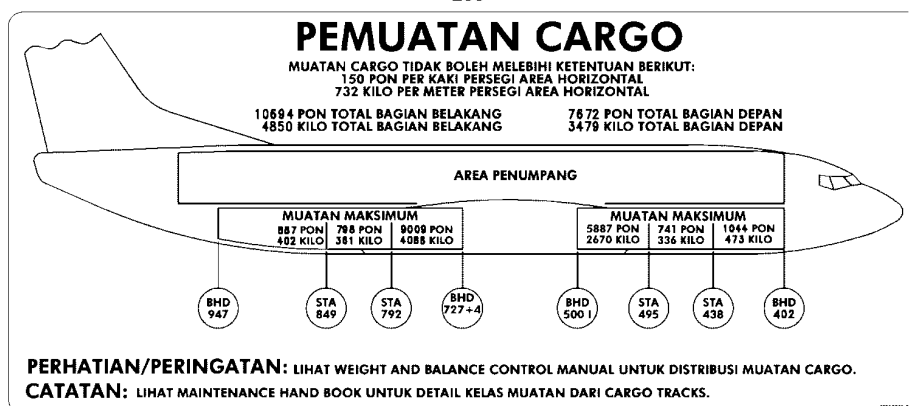

240
305

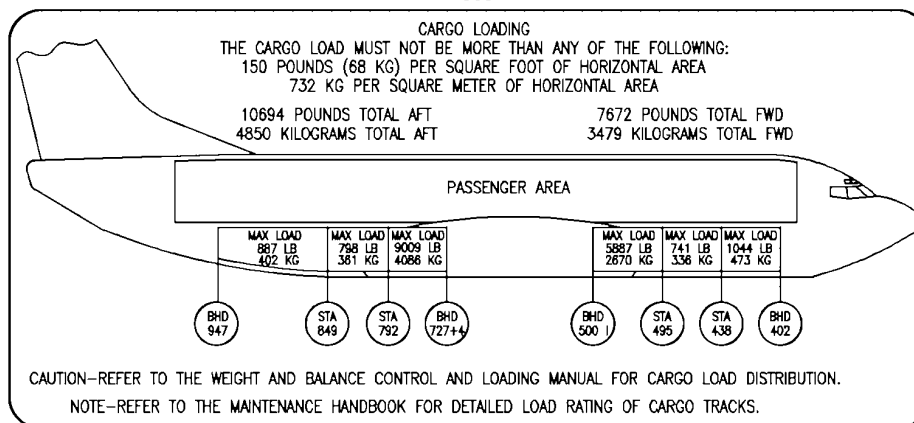

MARKER INSTL-LOADING CARGO COMPT 737-800
 FIGURE 18 (SHEET 24)

11-37-02-18

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

R/YR
OCT 15/21


11-37-02-18
PAGE 0W

E 11370218 SHT 24 REV 303




737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

245

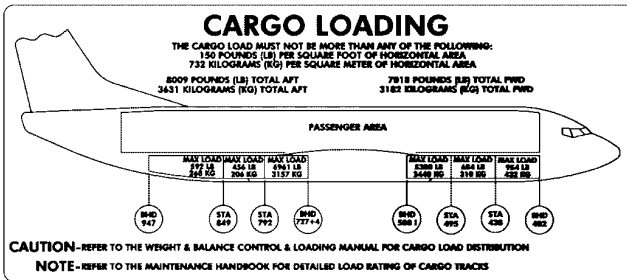


255

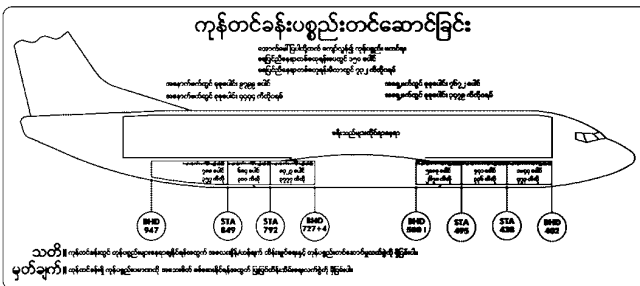

265



405

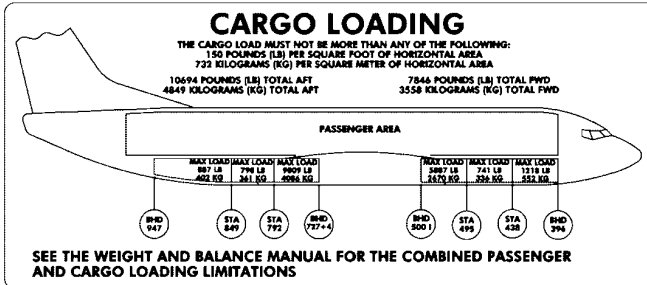

E 11370218 SHT 25 REV 303

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 25)

R Y R
O C T 15 / 21


11-37-02-18

ECCN 9E991 BOEING PROPRIETARY – See title page for details.


11-37-02-18
PAGE 0X

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)


260

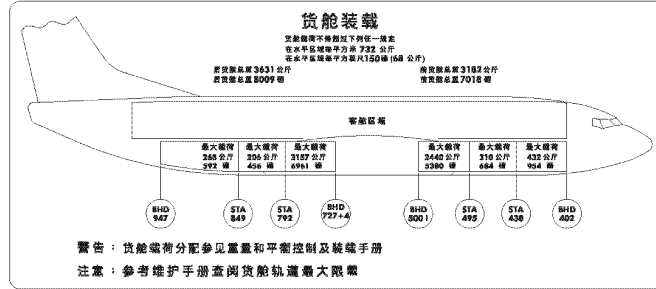


295

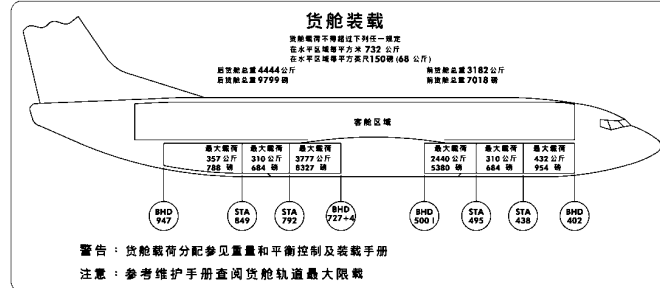

300

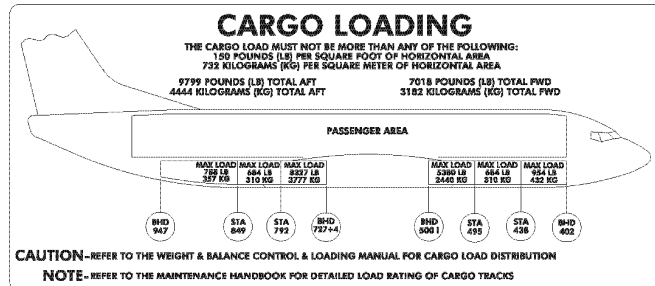

400

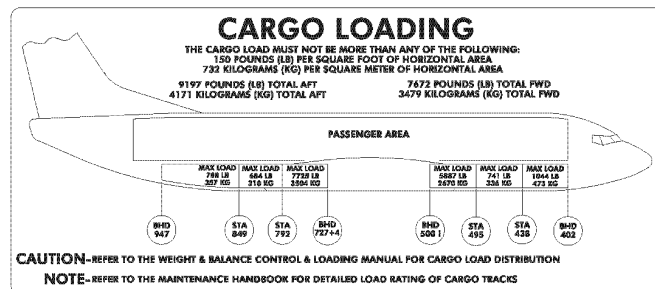

E 11370218 SHT 26 REV 303

MARKER INSTL-LOADING CARGO COMPT 737-800
FIGURE 18 (SHEET 26)

11-37-02-18

R/YR
OCT 15/21

11-37-02-18
PAGE 0Y

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
18			MARKER INSTL-LOADING	351999	
- 3	MODREF644965		CARGO COMPT 737-800		
			MARKER INSTL-LOADING	351999	R F
			CARGO COMPT		
			MODULE NUMBER:		
			453A3700-180 REV A		
240	453A3701-80		.MARKER-	351999	2
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED



R Y R

11-37-02-18

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-02
 FIG. 18
 PAGE 1
 FEB 15/16

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

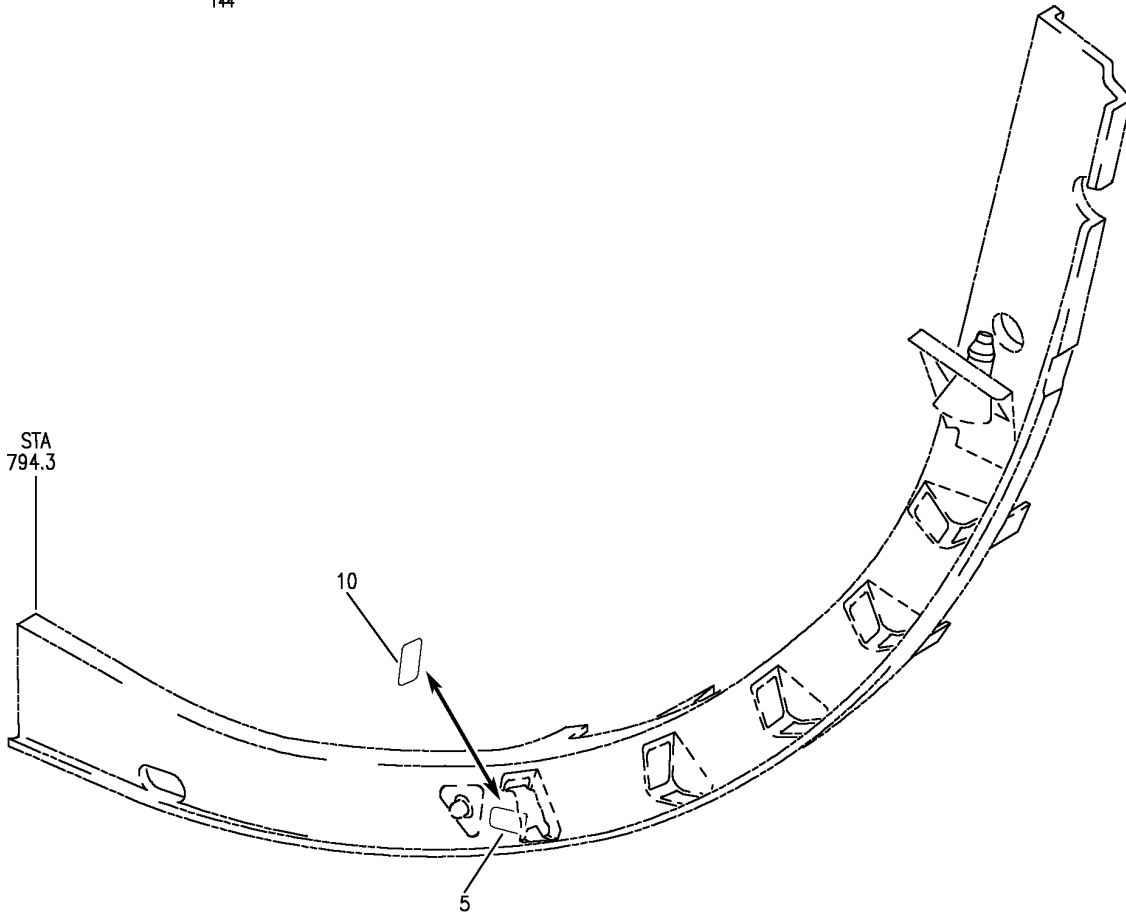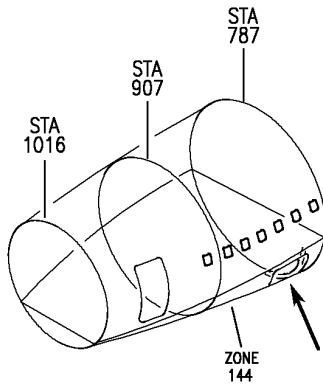

E 11370220 REV 070

DECAL INSTL-E/E EQPT BODY SECT. 46 (PLACARDS AND MARKINGS ONLY)
FIGURE 20

11-37-02-20

R Y R
O C T 10 / 06

11-37-02-20
PAGE 0

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
20			DECAL INSTL-E/E EQPT BODY SECT. 46 (PLACARDS AND MARKINGS ONLY)	056168 174999	
- 1	MODREF86160		DECAL INSTL-E/E EQPT BODY SECT. 46 (PLACARDS AND MARKINGS ONLY) MODULE NUMBER: 284A0835-32 REV A FOR OTHER SYS DETAILS SEE: 33-51-04-05	056111	RF
- 1	MODREF287736		DECAL INSTL-E/E EQPT BODY SECT. 46 (PLACARDS AND MARKINGS ONLY) MODULE NUMBER: 284A0835-32 REV B FOR OTHER SYS DETAILS SEE: 33-51-04-05 33-51-04-07	112168 174242	RF
- 1	MODREF438104		DECAL INSTL-E/E EQPT BODY SECT. 46 (PLACARDS AND MARKINGS ONLY) MODULE NUMBER: 284A0835-32 REV D FOR OTHER SYS DETAILS SEE: 33-51-04-07	243369	RF
- 2	MODREF642213		DECAL INSTL-E/E EQPT BODY SECT. 46 (PLACARDS AND MARKINGS ONLY) MODULE NUMBER: 284A0835-32 REV E FOR OTHER SYS DETAILS SEE: 33-51-04-07	370416	RF
- 2	MODREF700366		DECAL INSTL-E/E EQPT BODY SECT. 46 (PLACARDS AND MARKINGS ONLY) MODULE NUMBER: 284A0835-46 REV A	417999	RF
10	BAC27DEX7000		.MARKER-ALUMINUM FOIL PLACARD CONTENT: S68 CARGO LIGHTS PUSH ON/OFF	056168 174999	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED


RYR

11-37-02-20

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-02
 FIG. 20
 PAGE 1
 JUN 15/23

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

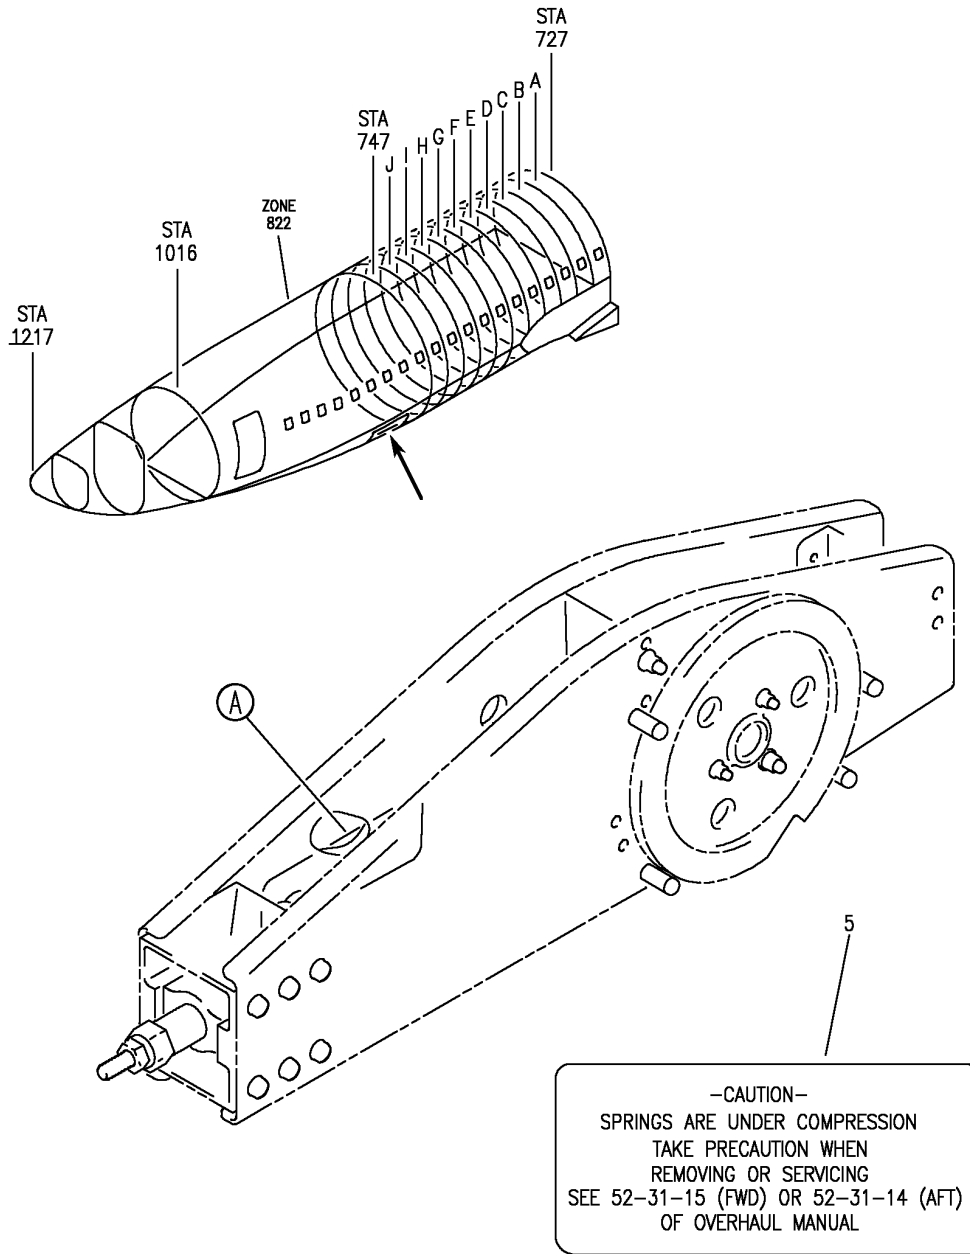

A

E 11370224 REV 147

COUNTERBALANCE ASSY-AFT CARGO DOOR (PLACARDS AND MARKINGS ONLY)
FIGURE 24

11-37-02-24

R Y R
O C T 15 / 08

11-37-02-24
PAGE 0

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
24			COUNTERBALANCE ASSY-AFT CARGO DOOR (PLACARDS AND MARKINGS ONLY)		
- 1	65C33684-13		COUNTERBALANCE ASSY-AFT CARGO DOOR (PLACARDS AND MARKINGS ONLY)		R F
			QUALIFIED I/W DATA: 65C33684-13 IS FUNCTIONALLY INTERCHANGEABLE WITH 65C33684-12, HOWEVER THE WARNING DECAL BAC27DBY193 ON THE 65C33684-13 REFERS TO THE 737NG MAINTENANCE MANUAL WHILE THE WARNING DECAL BAC27DBY0184 ON THE 65C33684-12 REFERS TO THE CLASSIC MAINTENANCE MANUAL. CHANGE DECAL AND REPARTMARK AS REQUIRED. FOR NHA/OTHER SYS DET SEE: 52-31-00-15		
5	BAC27DBY193		.MARKER-ALUMINUM FOIL		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED


R Y R

11-37-02-24

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-02
FIG. 24
PAGE 1
FEB 15/21

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

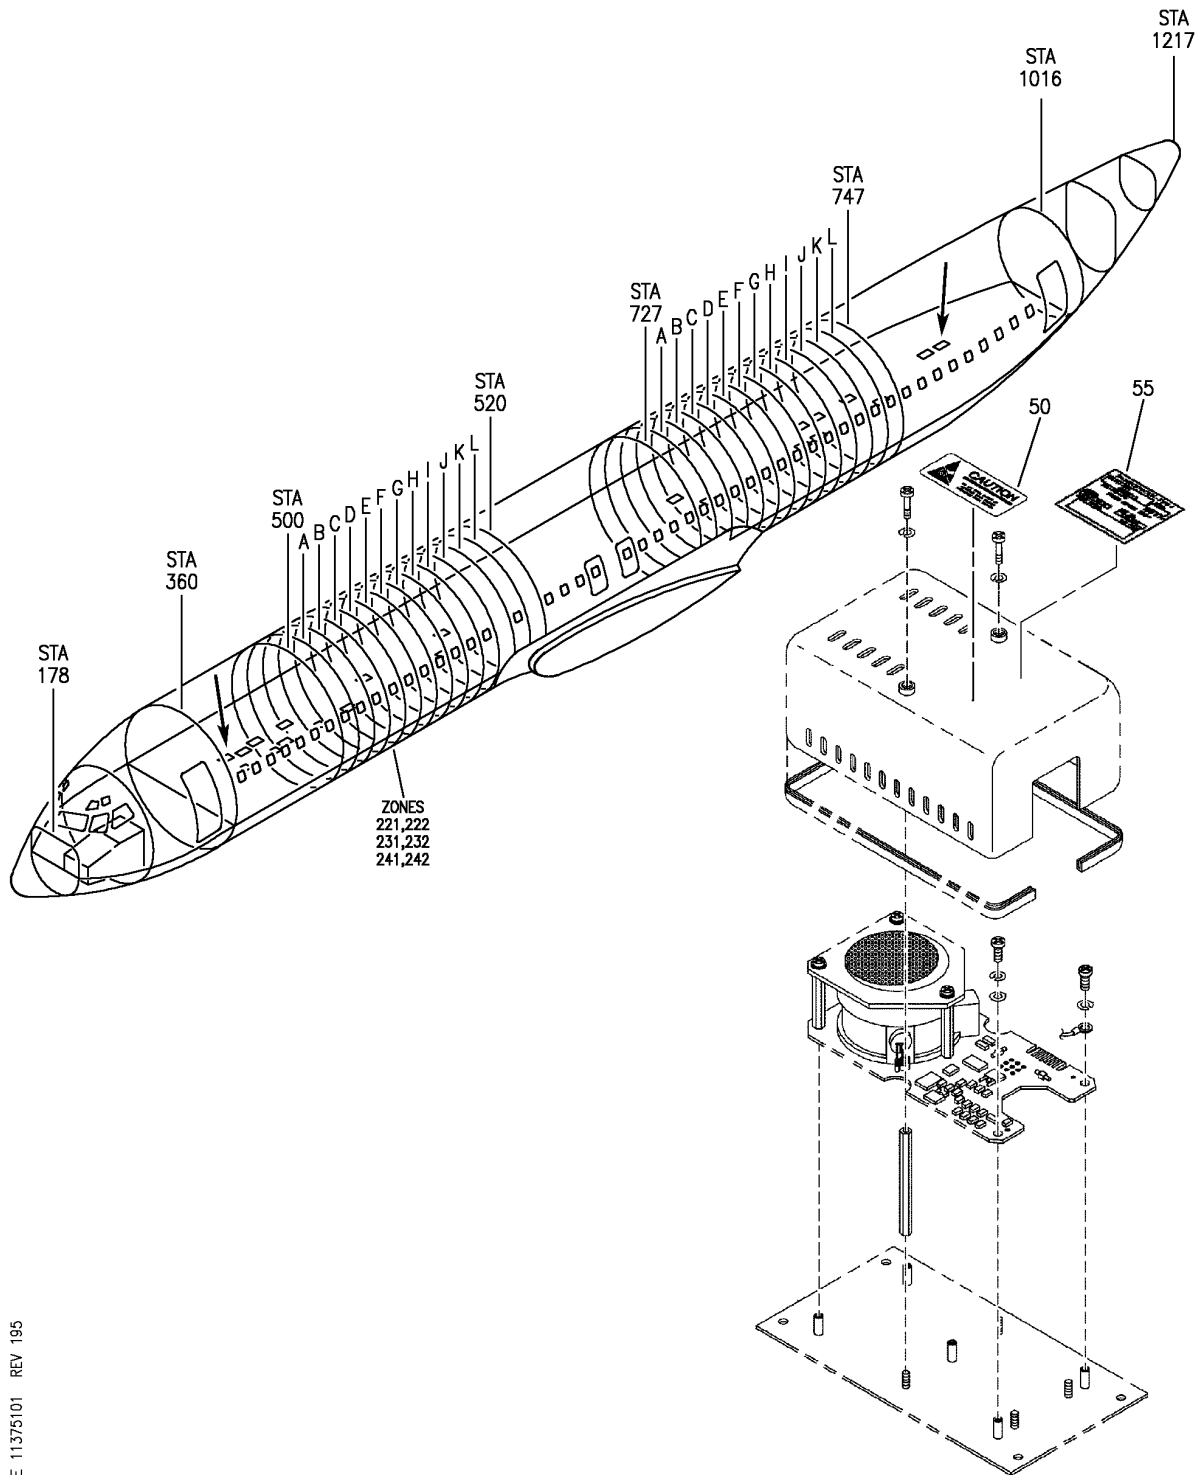

DETECTOR ASSY-SMOKE CARGO COMPT FWD, AFT (PLACARDS AND MARKINGS ONLY)

FIGURE 1

11-37-51-01

RJR
OCT 15/12

11-37-51-01
PAGE 0

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

E 11375101 REV 195

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1			DETECTOR ASSY-SMOKE CARGO COMPT FWD, AFT (PLACARDS AND MARKINGS ONLY)		
- 1	473597-5		DETECTOR ASSY-SMOKE CARGO COMPT (PLACARDS AND MARKINGS ONLY) SUPPLIER CODE: V61423 POSITION DATA: AFT, FWD FUNCTIONAL DESCRIPTION: DETECTS INCIPIENT FIRES IN AIRCRAFT LAVATORIES AND CARGO COMPARTMENTS. MISCELLANEOUS DATA: PORTABLE ELECTRONIC DEVICE (PED) TOLERANT PER GUIDELINES IN DRAWING 222A4006 ELECTRICAL EQUIP NUMBER: D12766 D12768 D12770 D12772 D12778 D12780 D12782 D12784 D12786 D12788 M02238 M02239 M02240 M02241 M02242 M02243 M02244 M02245 M02246 M02247 COMPONENT MAINT MANUAL REF: 26-10-66 SERVICE BULLETIN OPT DATA: 2156-45 V03972 8550-10 V25693 CGAB1400-00 VF4885		RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

RYR

11-37-51-01

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-51
FIG. 01
PAGE 1
JUN 15/15

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1			FOR NHA/OTHER SYS DET SEE: 26-16-01-05 26-16-01-08		
50	304452		.LABEL-ESD CAUTION SUPPLIER CODE: V61423		1
55	346572		.NAMEPLATE- SUPPLIER CODE: V61423		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

— ITEM NOT ILLUSTRATED


R Y R

11-37-51-01

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

11-37-51
 FIG. 01
 PAGE 2
 JUN 15/15

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

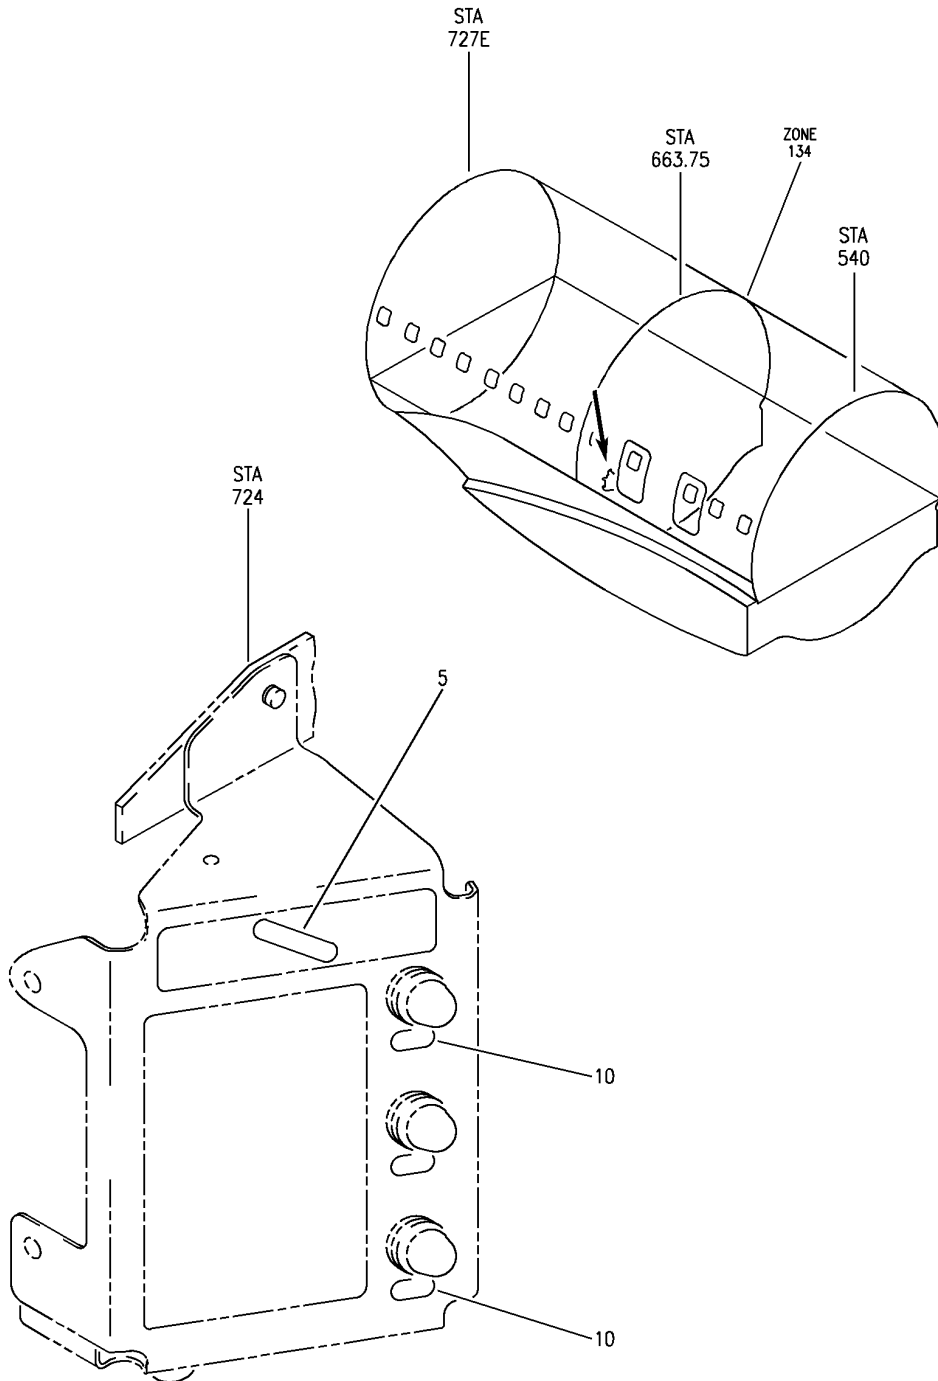

E 11375103 REV 122

PLACARD INSTL-NITROGEN GENERATION SYS INDICATION P63
FIGURE 3

11-37-51-03

R/YR
OCT 10/06

11-37-51-03
PAGE 0

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
3			PLACARD INSTL-NITROGEN GENERATION SYS INDICATION P63	111173	
- 1	MODREF305863		PLACARD INSTL-NITROGEN GENERATION SYS INDICATION MODULE NUMBER: 284A0810-2 REV A POSITION DATA: P63	111173	RF
5	BAC27DCC355		.DECAL- PLACARD CONTENT: INOPERATIVE	111173	1
10	BAC27DCC3073		.MARKER- PLACARD CONTENT: INOP	111173	3
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED


R Y R

11-37-51-03

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-51
 FIG. 03
 PAGE 1
 OCT 15/20

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

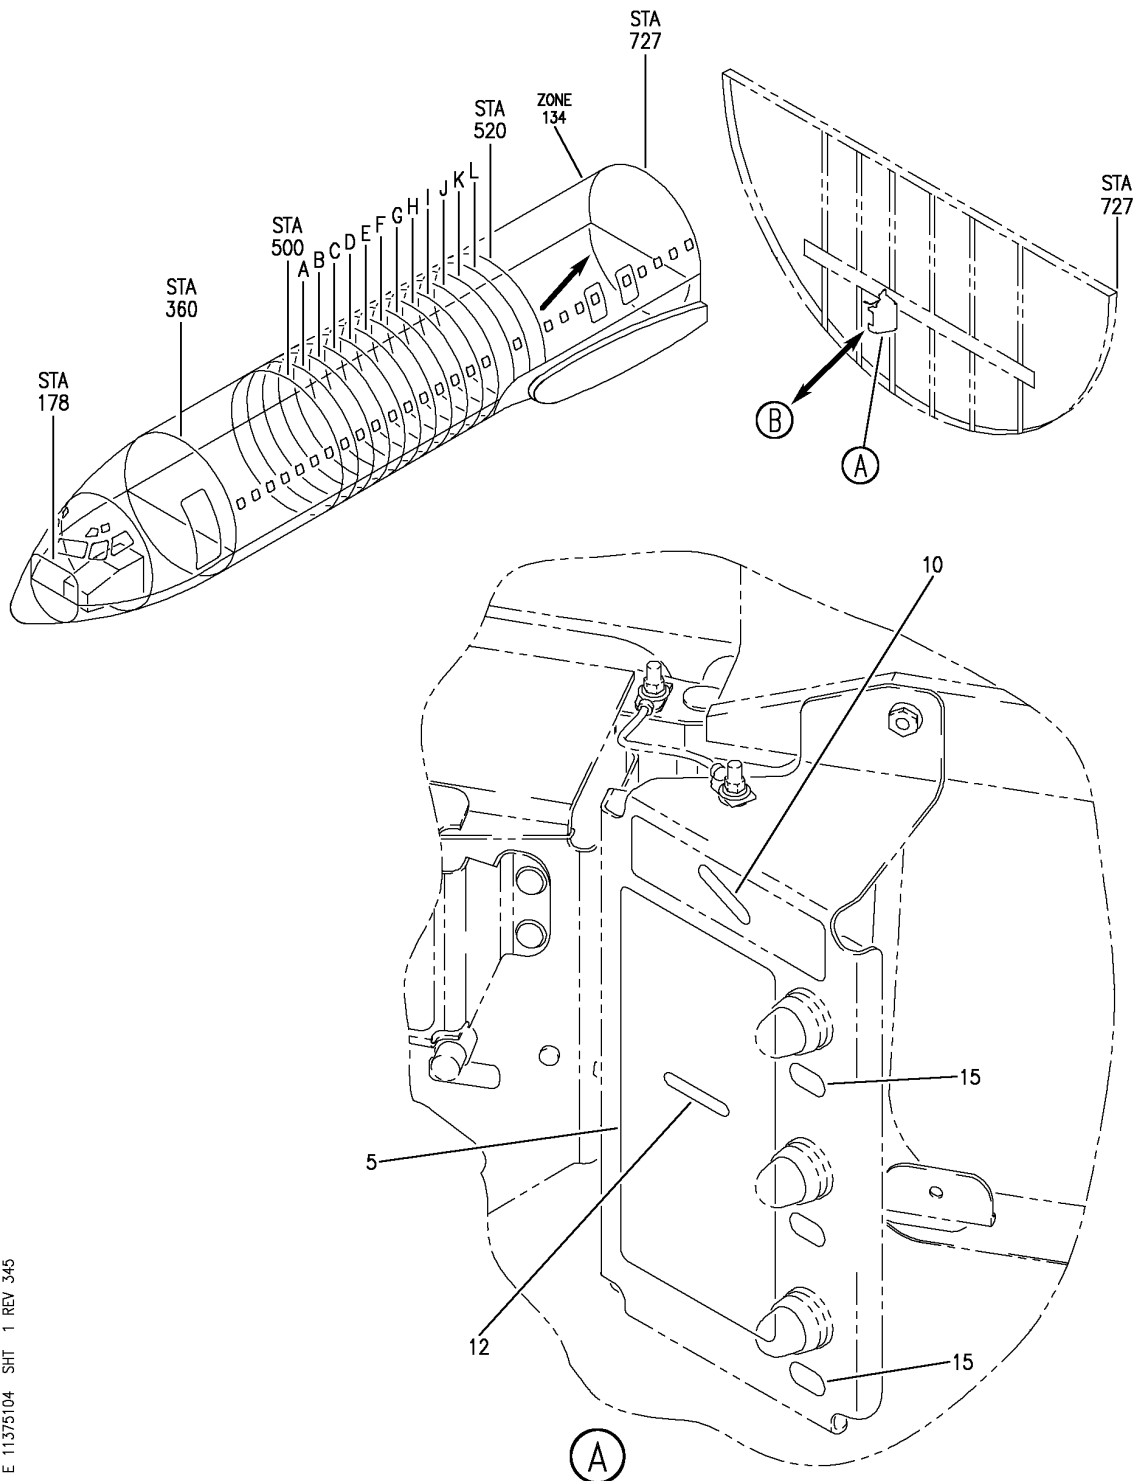

E 11375104 SHT 1 REV 345

PANEL ASSY-NITROGEN GENERATION SYS INDICATION (PLACARDS AND MARKINGS ONLY)
FIGURE 4 (SHEET 1)


R/YR
APR 15/25

11-37-51-04

11-37-51-04
PAGE 0

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

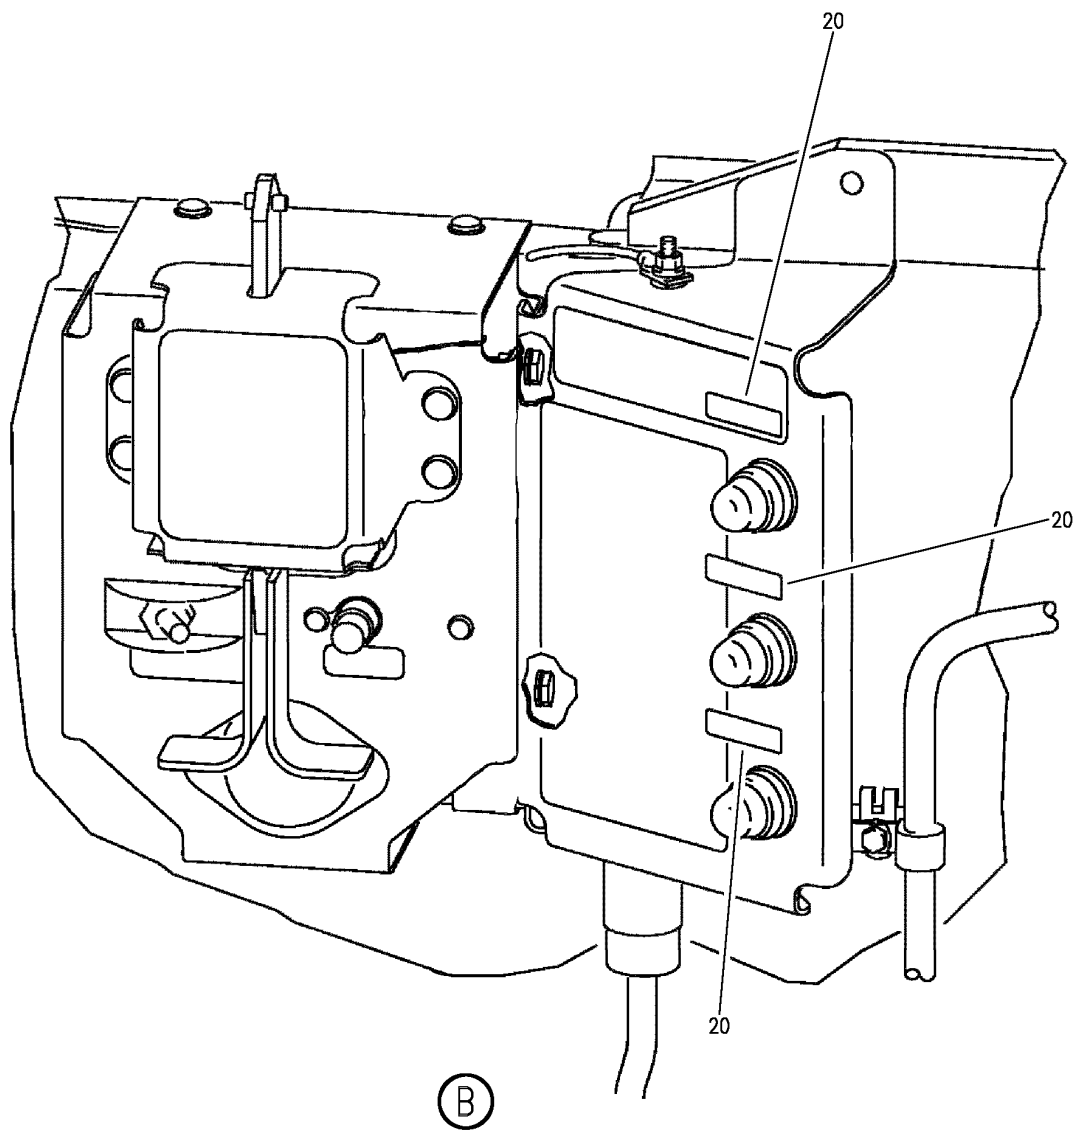

E 11375104 SHT 2 REV 217

PANEL ASSY-NITROGEN GENERATION SYS INDICATION (PLACARDS AND MARKINGS ONLY)
FIGURE 4 (SHEET 2)

RJR
AUG 15/14

11-37-51-04

11-37-51-04
PAGE 0A

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
 737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
4			PANEL ASSY-NITROGEN GENERATION SYS INDICATION (PLACARDS AND MARKINGS ONLY)	111999	
- 1	284A2810-1		PANEL ASSY-NITROGEN GENERATION SYS INDICATION (PLACARDS AND MARKINGS ONLY) FOR NHA/OTHER SYS DET SEE: 47-41-00-01	111121	RF
- 1	284A2810-2		PANEL ASSY-NITROGEN GENERATION SYS INDICATION (PLACARDS AND MARKINGS ONLY) FOR NHA/OTHER SYS DET SEE: 47-41-00-01	111121	RF
- 1	284A2810-3		PANEL ASSY-NITROGEN GENERATION SYS INDICATION (PLACARDS AND MARKINGS ONLY) FOR NHA/OTHER SYS DET SEE: 47-41-00-01	111480	RF
- 1	284A2810-4		PANEL ASSY-NITROGEN GENERATION SYS INDICATION (PLACARDS AND MARKINGS ONLY) FOR NHA/OTHER SYS DET SEE: 47-41-00-01	111999	RF
- 1	284A2810-5		PANEL ASSY-NITROGEN GENERATION SYS INDICATION (PLACARDS AND MARKINGS ONLY) FOR NHA/OTHER SYS DET SEE: 47-41-00-01	111999	RF
	5 BAC27DEX7170		.MARKER- PLACARD CONTENT: OPERATIONAL SERVICEABLE DEGRADED TEMPORARILY SERVICEABLE INOPERATIVE UNSERVICEABLE	111999	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED


RYR

11-37-51-04

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-51
 FIG. 04
 PAGE 1
 OCT 15/20

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

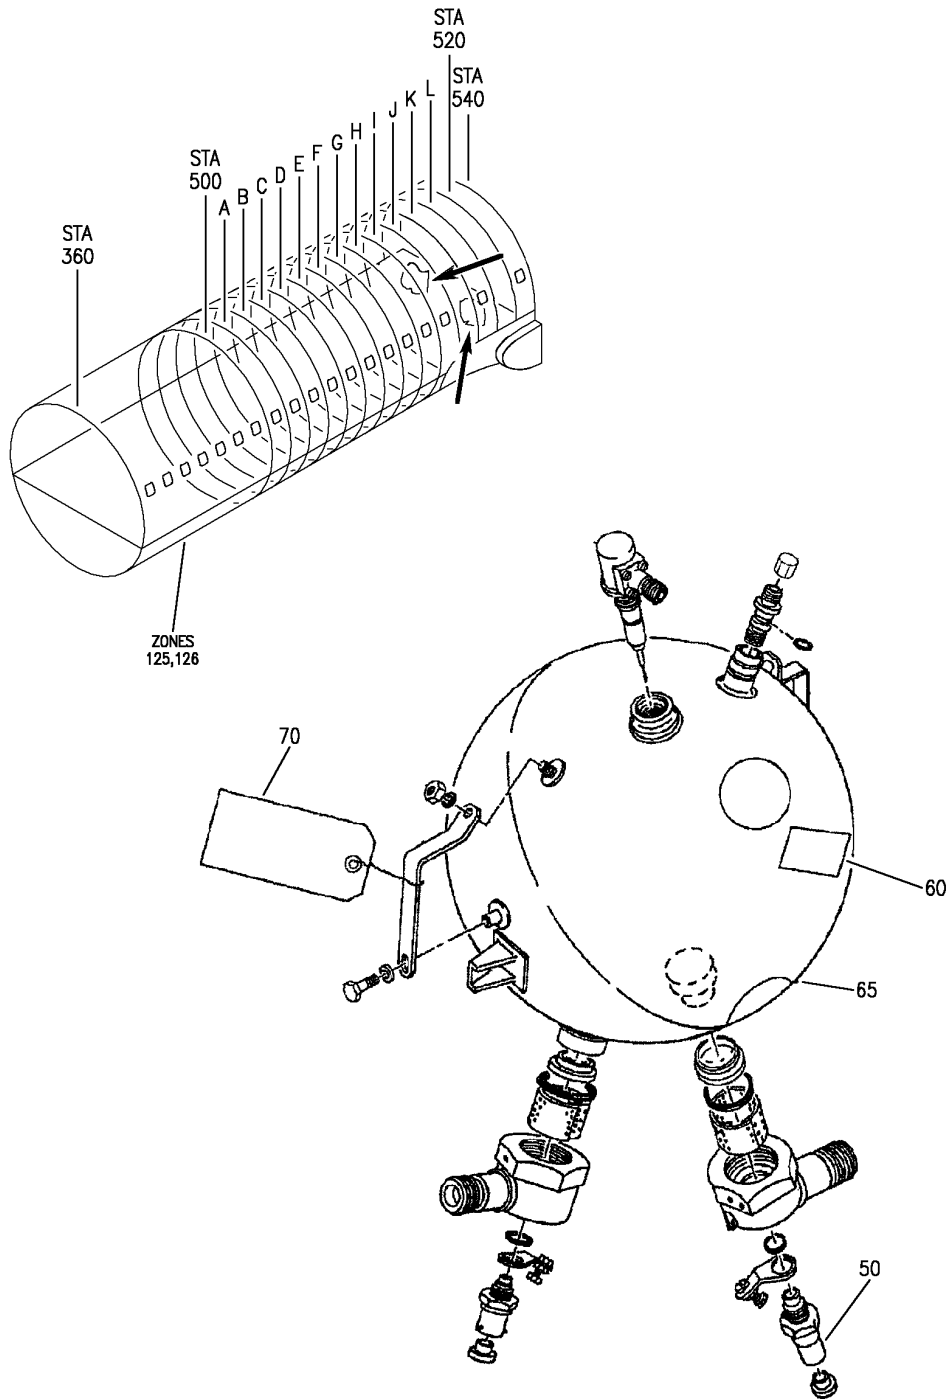

E 11375107 REV 311

EXTINGUISHER ASSY-FIRE EXT, 800 CUBIC IN. (PLACARDS AND MARKINGS ONLY)
FIGURE 7

11-37-51-07

R Y R
O C T 15 / 22

11-37-51-07
PAGE 0

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
7			EXTINGUISHER ASSY-FIRE EXT, 800 CUBIC IN. (PLACARDS AND MARKINGS ONLY)		
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

— ITEM NOT ILLUSTRATED

R Y R

11-37-51-07

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

11-37-51
 FIG. 07
 PAGE 1
 OCT 15/22

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
7 - 1	34600010-28		EXTINGUISHER ASSY-FIRE EXT, 800 CUBIC IN. (PLACARDS AND MARKINGS ONLY) SUPPLIER CODE: V05167 SPECIFICATION NUMBER: S453T201-28 MISCELLANEOUS DATA: FOR INTERCHANGEABILITY, SEE FIRE BOTTLE SPARES SUBSTITUTION AND INTERCHANGEABILITY DRAWING 218A6302 ELECTRICAL EQUIP NUMBER: M02248 M02263 COMPONENT MAINT MANUAL REF: 26-23-21 QUALIFIED I/W DATA: 34600010-28 CAN REPLACE OR BE REPLACED BY 473957-2. 34600010-28 CAN REPLACE OR BE REPLACED BY 473957-1 FOR 737-600, 737-700, 737-800 NON-ETOPS AND 737-900 NON-ETOPS (FAA REGULATIONS) ONLY. FOR 737-600, 737-700, 737-800 ETOPS AND 737-900 NON-ETOPS (JAA REGULATIONS) ONLY 34600010-28 CAN BE USED. 34600010-28 CAN REPLACE OR BE REPLACED BY 473957 FOR 737-600, 737-700, 737-800 NON-ETOPS AND 737-900 NON-ETOPS (FAA REGULATIONS) ONLY. FOR 737-600, 737-700, 737-800 ETOPS AND 737-900 NON-ETOPS (JAA REGULATIONS) ONLY 34600010-28 CAN BE USED.		RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

— ITEM NOT ILLUSTRATED

RYR

11-37-51-07

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

11-37-51
FIG. 07
PAGE 2
APR 15/23

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
7 - 1	34600010-36		BOTTLE ASSY-FIRE EXT, 800 CUBIC IN. (PLACARDS AND MARKINGS ONLY) SUPPLIER CODE: V05167 SPECIFICATION NUMBER: S453T201-36 MISCELLANEOUS DATA: FOR INTERCHANGEABILITY, SEE FIRE BOTTLE SPARES SUBSTITUTION AND INTERCHANGEABILITY DRAWING 218A6302 ELECTRICAL EQUIP NUMBER: M02248 M02263 COMPONENT MAINT MANUAL REF: 26-23-21 QUALIFIED I/W DATA: 34600010-36 CAN REPLACE OR BE REPLACED BY 473957-2. 34600010-36 CAN REPLACE OR BE REPLACED BY 473957 FOR 737-600, 737-700, 737-800 NON-ETOPS AND 737-900 NON-ETOPS (FAA REGULATIONS) ONLY. FOR 737-600, 737-700, 737-800 ETOPS AND 737-900 NON-ETOPS (JAA REGULATIONS) ONLY 34600010-36 CAN BE USED. 34600010-36 CAN REPLACE OR BE REPLACED BY 473957-1 FOR 737-600, 737-700, 737-800 NON-ETOPS AND 737-900 NON-ETOPS (FAA REGULATIONS) ONLY. FOR 737-600, 737-700, 737-800 ETOPS AND 737-900 NON-ETOPS (JAA REGULATIONS) ONLY 34600010-36 CAN BE USED.		RF
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

— ITEM NOT ILLUSTRATED

RYR

11-37-51-07

ECCN 9E991 BOEING PROPRIETARY – See title page for details.

11-37-51
FIG. 07
PAGE 3
JUN 15/22

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
7					
50	30903852		.CARTRIDGE ASSY-AFT COMPT SUPPLIER CODE: V05167 CONFIG CHG DATA FROM A CMM: REPLD BY 30903933		RF
50	30903933		.CARTRIDGE ASSY-AFT COMPT, BNCP SUPPLIER CODE: V05167 CONFIG CHG DATA FROM A CMM: REPLS 30903852		RF
- 55	31576633		..TAG-CAUTION SUPPLIER CODE: V05167		2
60	51950023-1		.DECAL-WEIGH INSTRUCTIONS SUPPLIER CODE: V05167		1
65	31576592		.PLATE-CAUTION SUPPLIER CODE: V05167		1
70	51950020-1		.TAG-CAUTION, FILL SUPPLIER CODE: V05167		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

RYR

11-37-51-07

ECCN 9E991 BOEING PROPRIETARY - See title page for details.

11-37-51
FIG. 07
PAGE 4
OCT 15/22