GATE UPRIGHT / CUT WRAP

2-7/8 in OD | 1/4 in plates | Moving gate latch tube | Page 1 of 2

LETTER - LANDSCAPE
100% / ACTUAL SIZE

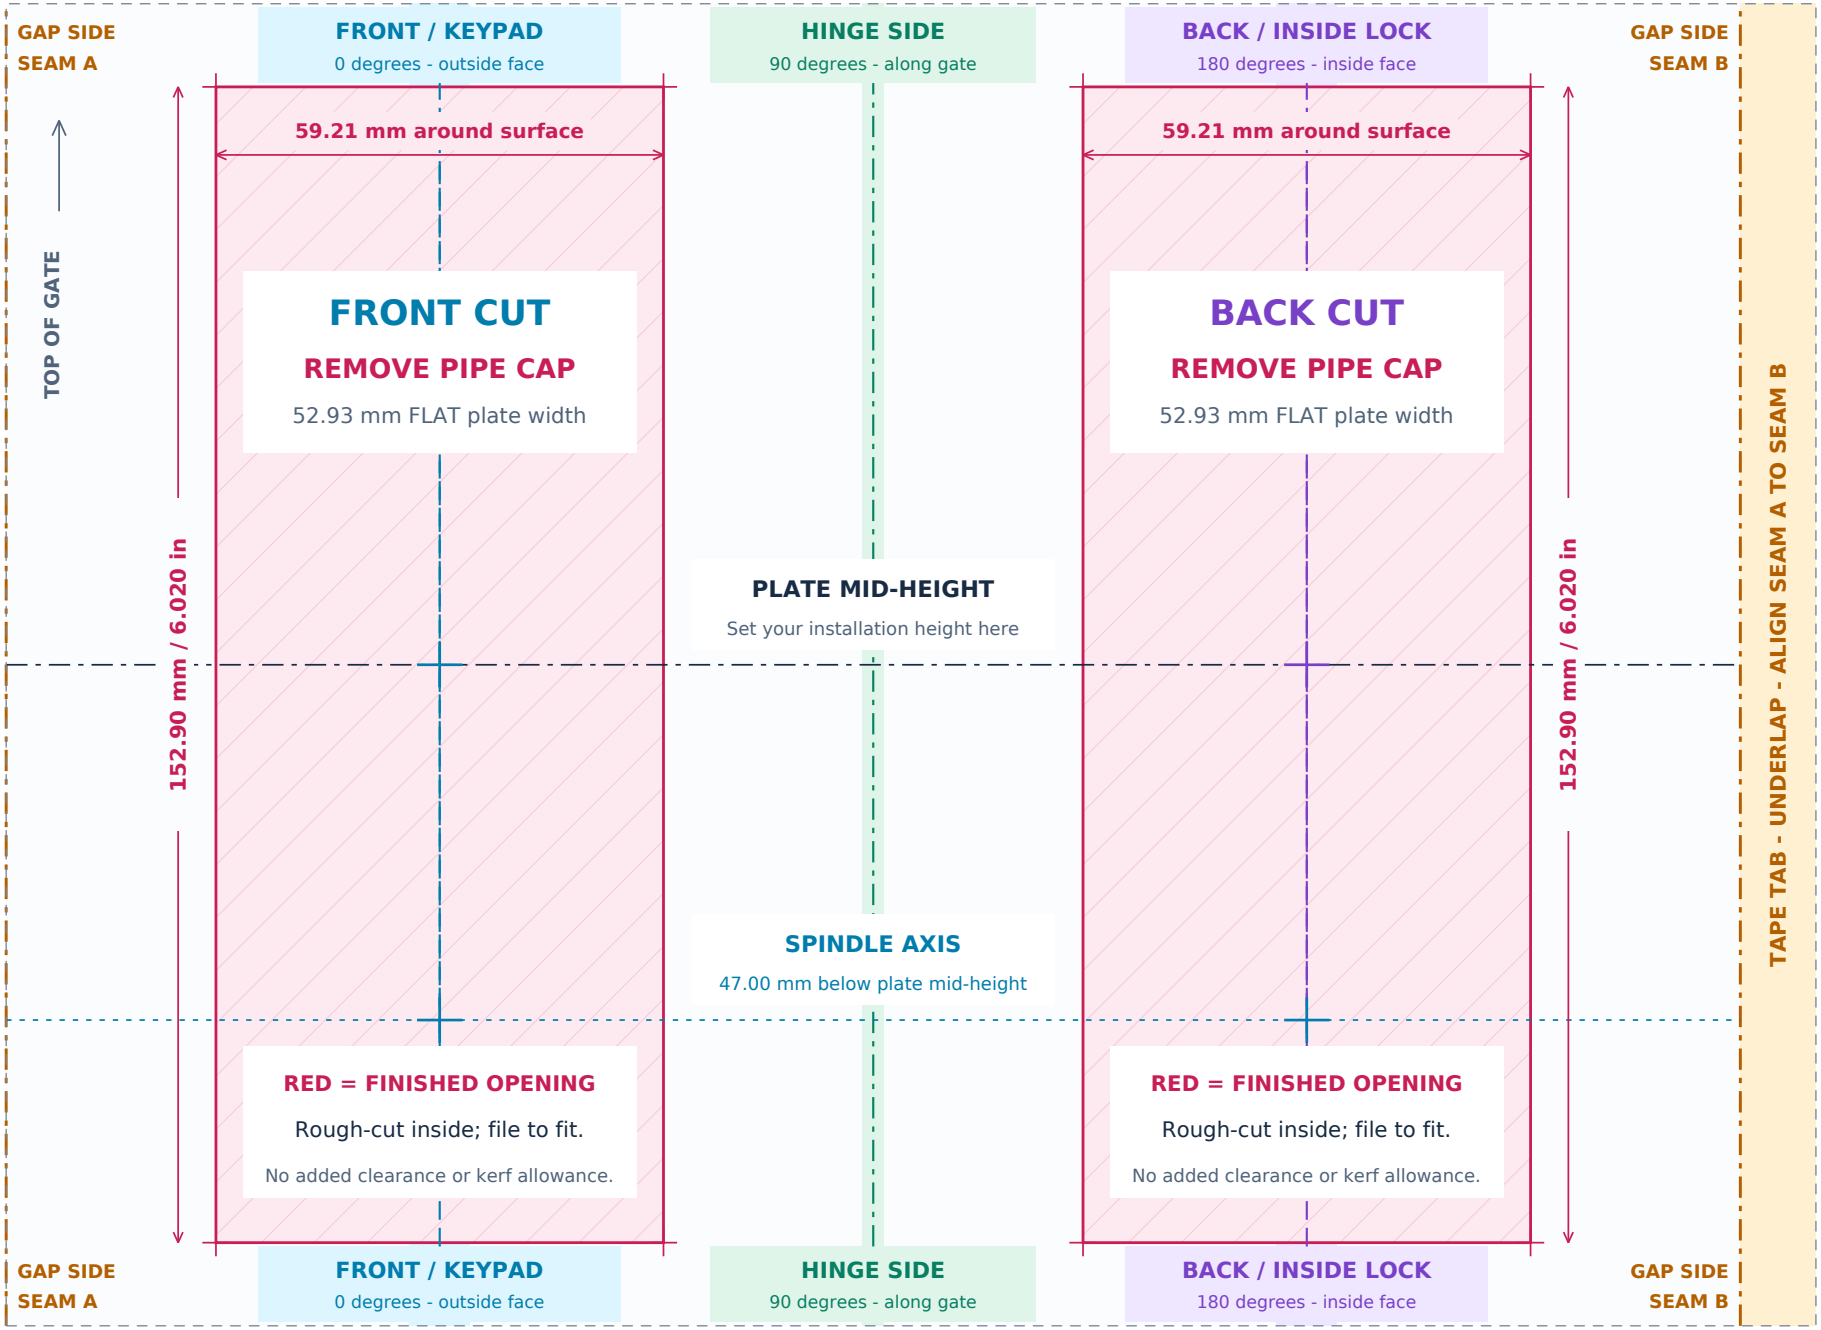

GRAY DASH = trim paper perimeter

RED = steel opening boundary

2.000 in scale check

Other colored lines = references, not cuts

One wrap: 229.415 mm / 9.03208 in

Scale + fit checks: page 2.

PRINT, ALIGN, THEN FIT

Setup for the two mounting plates on the moving gate upright

CUT SECTION / 1:1

Looking down the upright

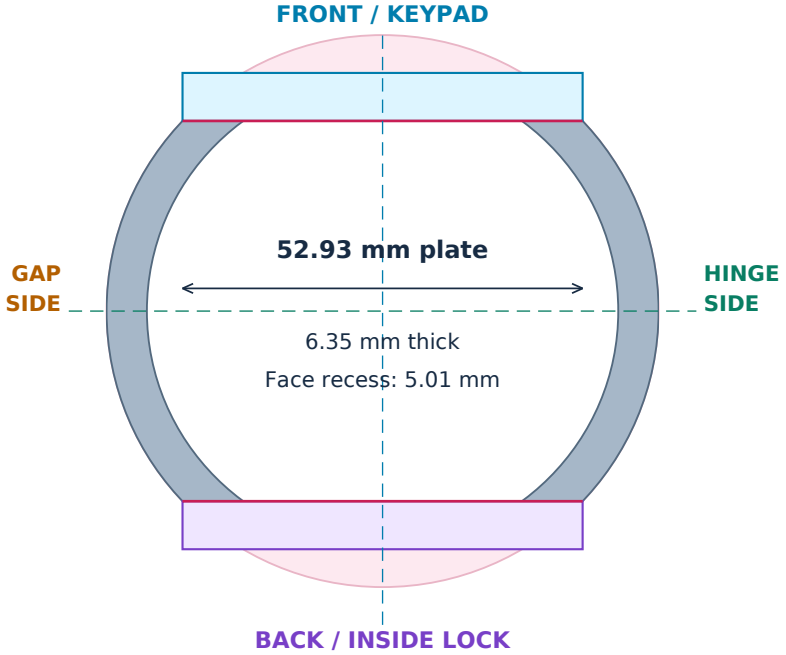

Blue / purple = plates. Red = seating cut planes.

Pink = removed pipe. Gray-blue = remaining pipe wall.

VERIFY PRINT SCALE

Measure center-to-center between end ticks.

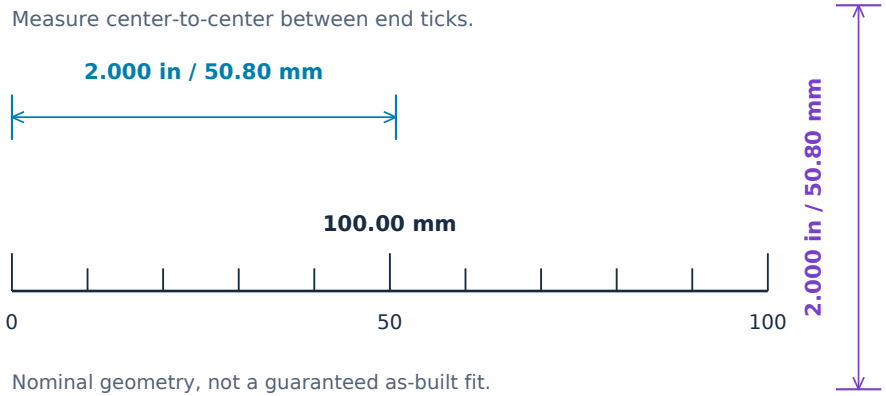

Nominal geometry, not a guaranteed as-built fit.

1 Print at actual size

Use letter paper, landscape, 100% / Actual size. Disable Fit, Shrink and borderless expansion. Check both 2-inch gauges below and the 100 mm gauge. Page 1 is the wrap.

2 Confirm the pipe and plate

This wrap assumes 73.025 mm (2-7/8 in) outside diameter and a 52.93 x 152.90 mm plate. Check your actual parts. Do not scale the entire page to suit a different pipe diameter.

3 Establish the front, then wrap

Mark the keypad-side crown with a straightedge held horizontally, parallel to the closed gate face. Open the gate, expose the tube and align blue FRONT with that mark. Purple BACK is opposite; seam A/B faces the fixed post and green faces the hinges.

4 Set height and check closure

Keep TOP upward. Trim the gray perimeter, keep the tape tab, and tuck it underneath. Align Seam A exactly over Seam B. Set the plate center at your chosen height; the spindle is 47 mm lower. Keep the wrap snug and square, without stretching.

5 Transfer, rough-cut and fit

Transfer red boundaries and reference marks. Remove the paper before cutting. Keep the kerf on the waste side and leave stock for fitting. Finish the long cuts in the flat seating plane shown here, not radially toward the tube center. Support the gate and fit one side before opening the other.

Basis: supplied DXF outline + SolidWorks plate seating. CAD pipe OD is rounded to 73.000 mm; this wrap uses 73.025 mm. Window height uses the DXF: 152.90 mm. No weld clearance or kerf offset added. No above-ground installation height assumed.