

# TILELOCK CLIPS PLIERS FREE


## **TLS - TILE LOCK Levelling System**

Tile Lock is a revolution in the tile setting, while it ensures the proper leveling of tiles, this system helps to speed up the tile setting process. Can be used by hand or with pliers

**SMOOTH FINISH.  
FOR A BETTER WORLD.**



[www.tlpro.co](http://www.tlpro.co)

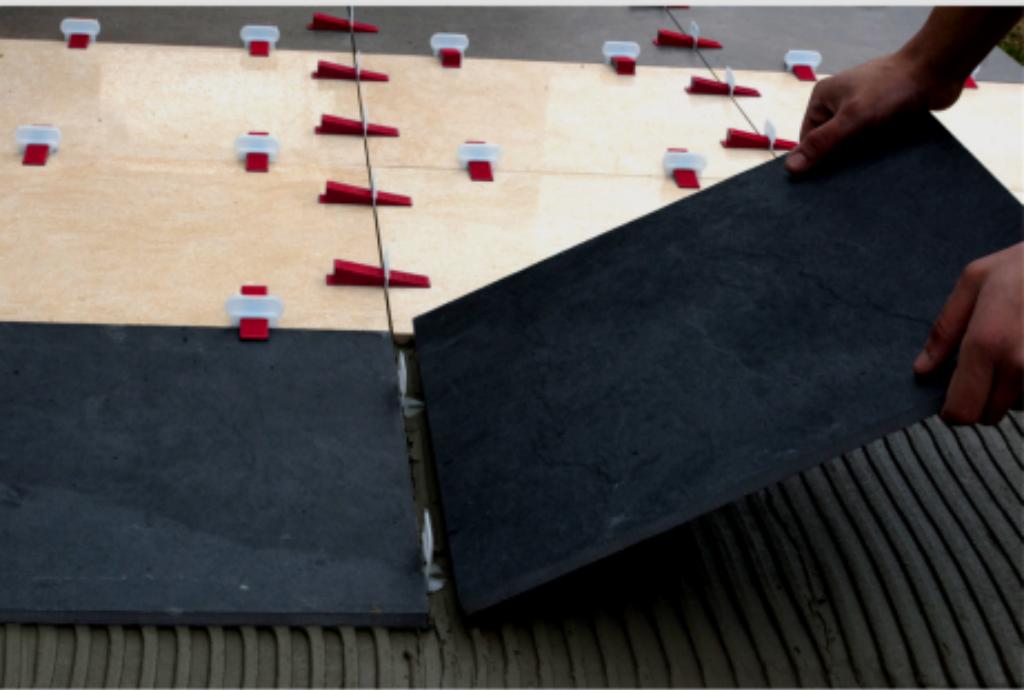

## TILE LOCK LEVELING SYSTEM

- EXTREMELY **EASY** TO INSTALL
- CAN BE USED **WITHOUT** FLOOR PLIERS
- INSTALLATION IS UP TO **3x FASTER**
- MORE **PROFITABLE** FOR INSTALLER

**TILE LOCK** was developed to bring a perfect installation for all surfaces covered with tiles. This system ensures that your tile installation will be leveled while laying tiles takes less time.

For those who are uncomfortable around tools all instalation can be done with hand.


For tiles from **3mm** up to **12mm** thickness. Space between the tiles of **1.5mm**.




ECO friendly



Designed by **TILELOCK Canada**  
Produced in Serbia

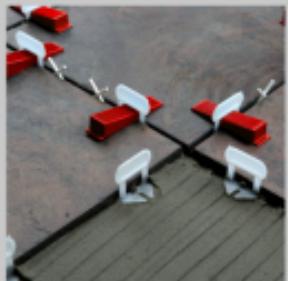

Can be used with tile spacers

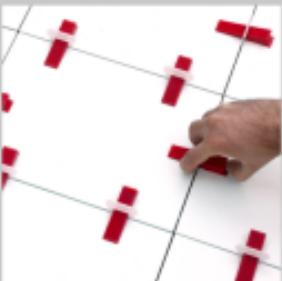

Install by hand or with pliers



Perfect leveling



Beat it with mallet or foot.

## HOW TO USE:

### STEP 1

After spreading your tile adhesive, insert leveling spacer underneath the tiles along the 4 sides, use traditional spacers as you normally would to square up the corners.

### STEP 2

Set the tile and beat it with a rubber mallet or foot.

### STEP 3

Insert wedge by hand into the leveling spacers, paying attention not to pass the break point.

### STEP 4


Once the tile adhesive has been allowed to set. Remove the leveling spacers with the traction-adjustable pliers, rubber mallet, or kicking them out with your feet.


## Consumption Per Square Meter

A (cm)	10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120	125 130 135 140 145 150 155 160 165 170 175 180 185 190 195 200 205 210 215 220 225 230 235 240	250 260 270 280 290 300 310 320 330 340 350 360 370 380 390 400 410 420 430 440 450 460 470 480																					
B (cm)	10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120	125 130 135 140 145 150 155 160 165 170 175 180 185 190 195 200 205 210 215 220 225 230 235 240	250 260 270 280 290 300 310 320 330 340 350 360 370 380 390 400 410 420 430 440 450 460 470 480																					
10	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	105	110	115	120	
15	133	89																						
20	100	67	50																					
25	80	53	40	32																				
30	100	67	50	40	34																			
35	91	61	45	34	40	37																		
40	75	58	37	30	33	30	25																	
45	67	44	33	27	30	27	22	20																
50	60	48	38	34	27	34	26	18	16															
55	50	33	25	30	22	30	17	15	13	11														
60	50	33	25	30	21	19	16	14	12	10	9													
65	44	30	22	18	19	17	14	12	11	9	8	7												
70	50	33	25	30	20	18	15	13	12	10	9	8	8											
75	50	33	25	30	20	18	15	13	12	10	9	8	8	8										
80	42	38	21	17	17	15	13	11	10	8	7	6	7	6										
85	10	15	20	25	30	33	40	45	50	50	50	50	50	50	50	50	50	50	50	50	50	50	50	
90																								
95																								
100																								
105																								
110																								
115																								
120																								

$\text{pcs/m}^2$

A (80 cm); B (40 cm) = 16 pcs/m<sup>2</sup>

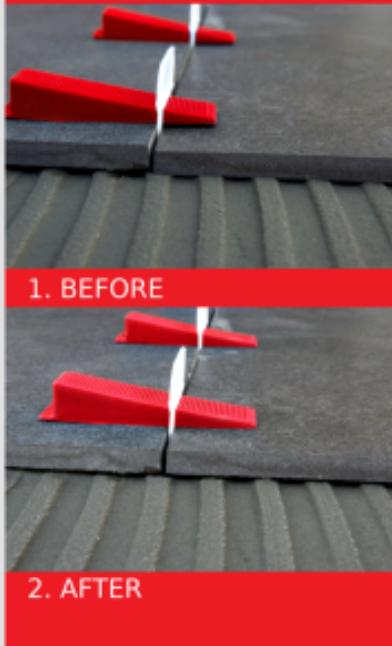

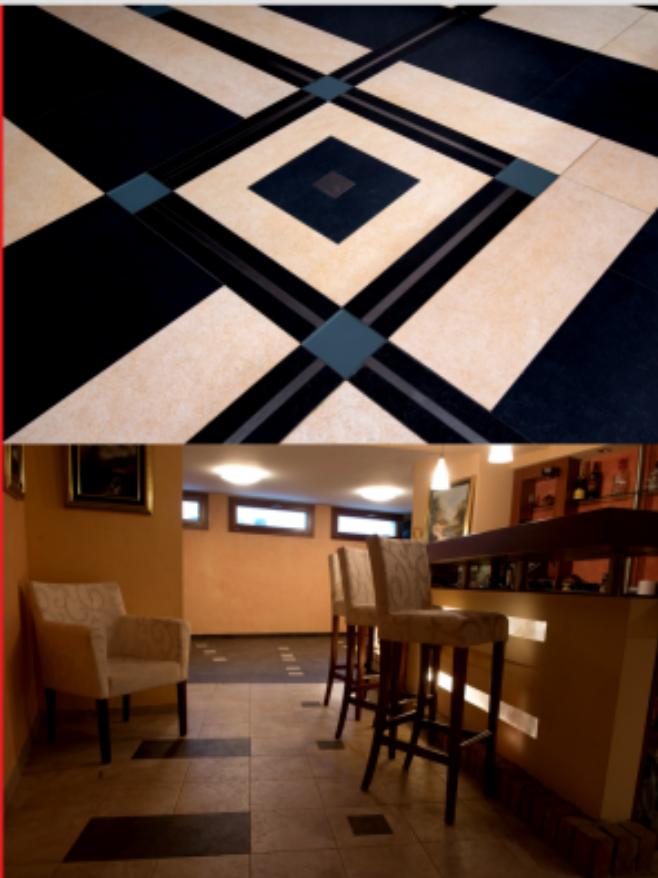

Recommended with:



Designed by: TILE LOCK Canada

Distributor for Serbia:

EURIS doo, Save Maškovića 3, 11000 Beograd

phone: +381 11 6304 800

fax: +381 11 6304 800

email: trade@tlpro.co



[www.tlpro.co](http://www.tlpro.co)