


EXTREMELY EASY TO INSTALL

MORE PROFITABLE FOR INSTALLER
INSTALLATION IS UP TO 3x FASTER
CAN BE USED WITHOUT FLOOR PLIERS

PATENTED

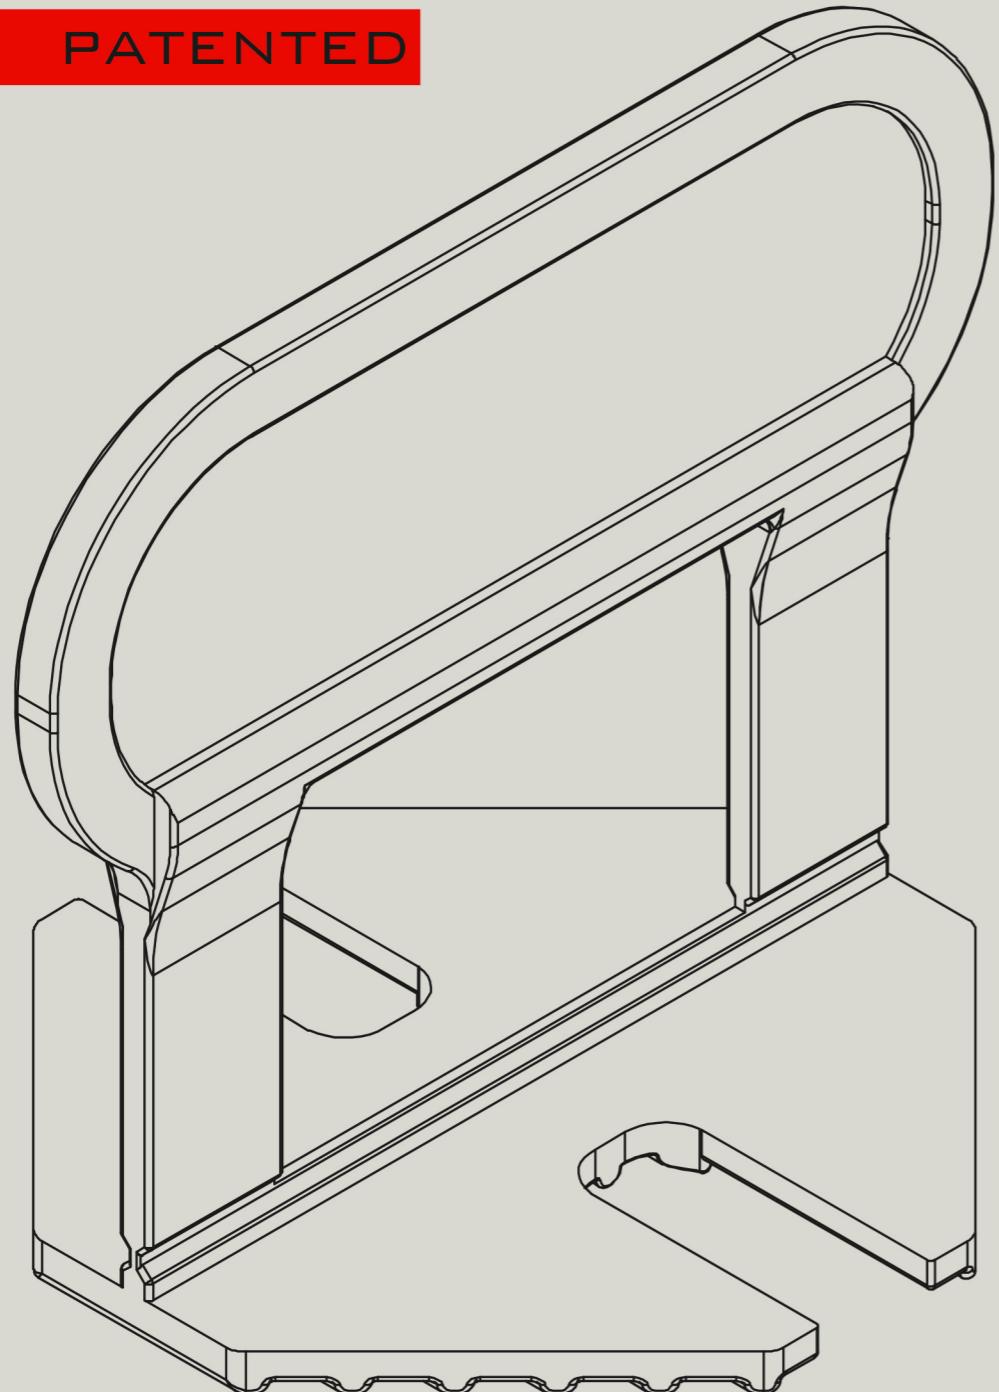

CANADIAN DESIGN

WWW.TLPRO.CO

CONSUMPTION PER SQUARE METER

TILE LOCK CLIPS

A (60cm) x B (25cm) = 20pcs

**SPACER FROM:
TILE THICKNESS:**

1.5 MM

1.5 MM

500 PCS +/- 1%

TILE LOCK LEVELING SYSTEM


HOW TO USE

STEP 1




APPLY TILE ADHESIVE EVENLY ON SURFACE.

STEP 2

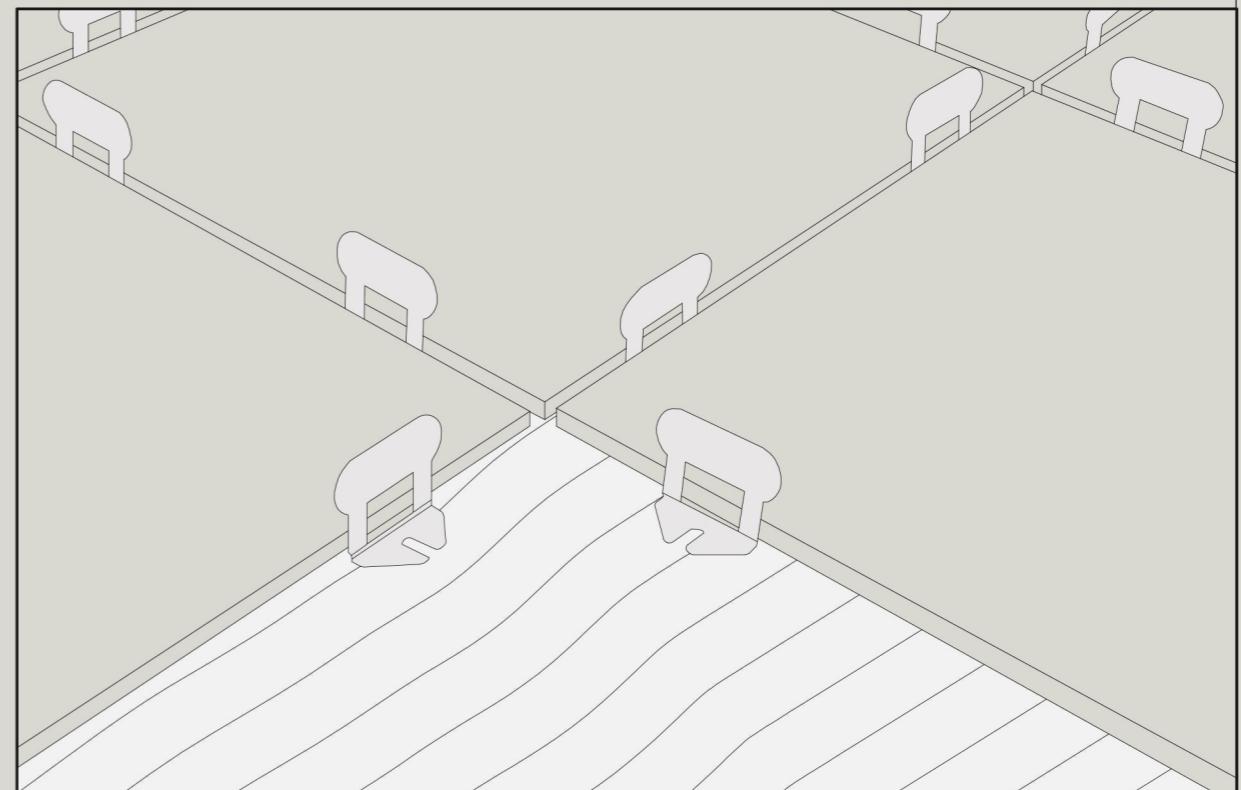


PLACE TILES AND INSERT CLIPS. (SEE CONSUMMATION TABLE FOR RECOMMENDED AMOUNT OF CLIPS)

STEP 3

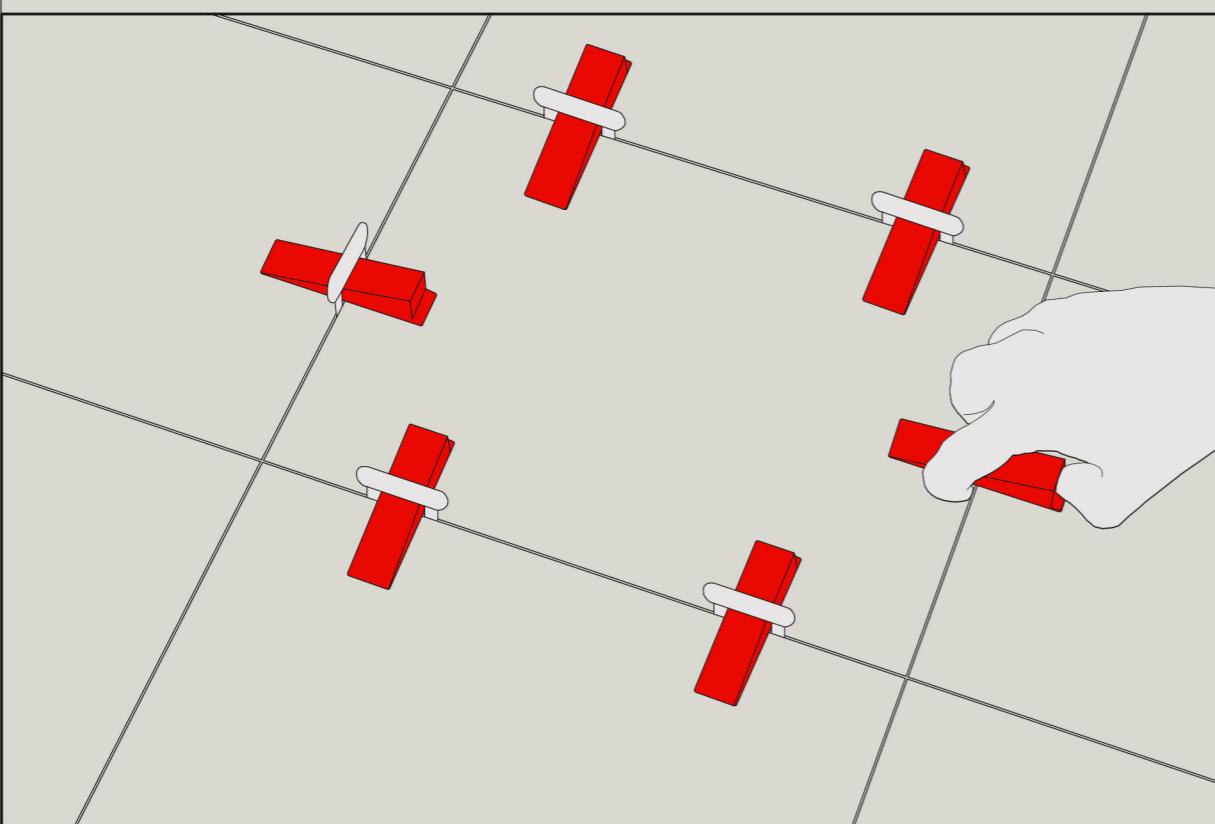

INSERT WEDGE INTO CLIP, PLACE THUMB ON BACK SIDE OF WEDGE AND PLACE MIDDLE AND FOREFINGERS ON CLIP.
PRESS WEDGE WITH THUMB THROUGH CLIP WHILE PULLING BACK WITH MIDDLE AND FOREFINGER UNTIL TILES LEVEL.
(FOR TILES LARGER THAN 60x 60CM ITS RECOMMENDED TO USE LEVELING PLIERS).

STEP 4

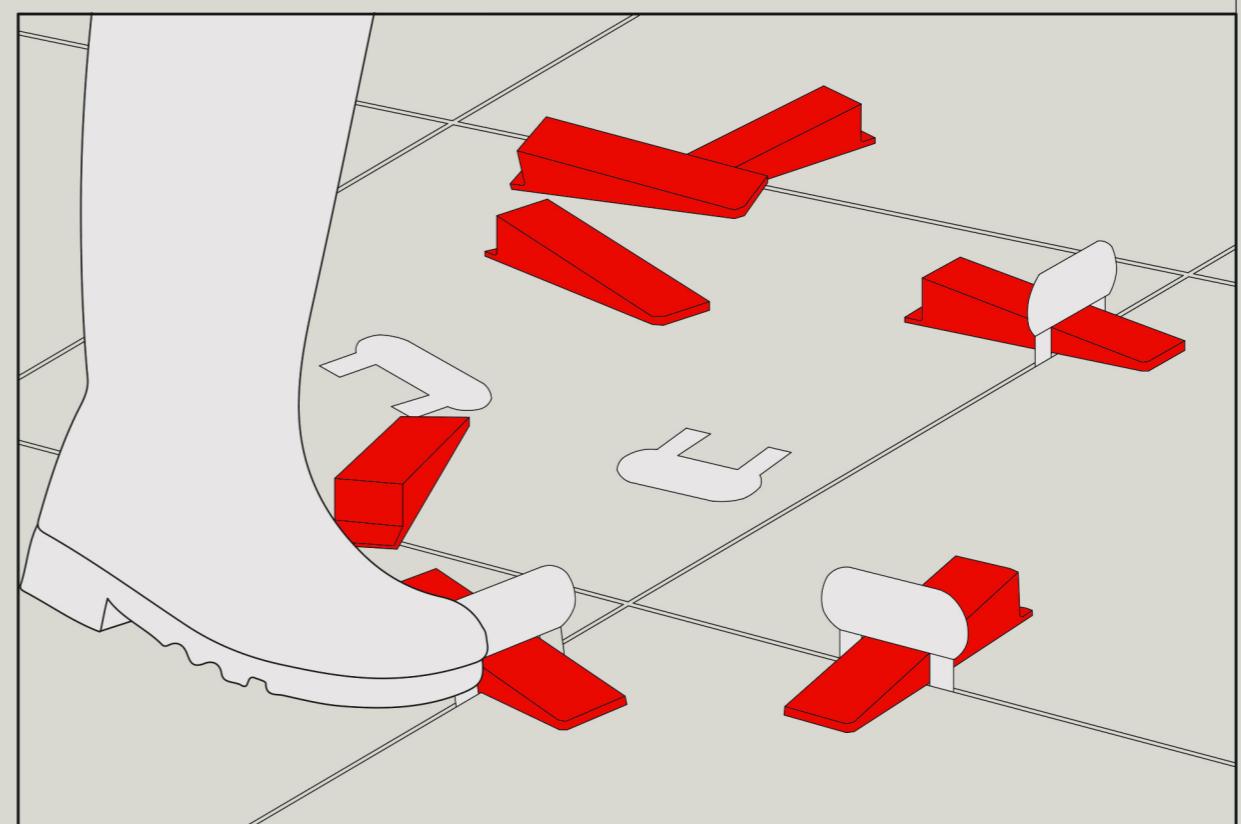

AFTER ADHESIVE DRIES, BREAK OFF LOOSE ENDS WITH RUBBER HAMMER OR KICK OFF WITH BOOT.



DESIGNED BY TILE LOCK CANADA.

PRODUCED IN SERBIA.

EXPORTER & DISTRIBUTER: EURIS DOO, SAVE MASKOVICA 3, 11000 BEOGRAD, SERBIA

PHONE +381 11 6304 800, EMAIL: TRADE@TLPRO.CO

PACKAGE DESIGN BY: "OUT-LINE", RUOUTLINED@GMAIL.COM