

Read this instruction sheet completely before beginning any work.

This guide is to help you install your fence panels, posts, and gates for the Straight and Scallop Picket fence styles.

### Before you begin, it's important to check:

- ✓ To ensure your fence footings do not exceed legally established property lines.
- ✓ The local codes for specification regarding frontage locations, allowable fence heights and if a permit is required etc.
- ✓ With your local utility companies for locations of underground cables or pipelines. (You can call 811 to get started).





## **General Information:**

- During panel / gate assembly, work on a soft, non-abrasive surface to avoid scratching.
- When cutting PVC components with a power saw, use a fine-toothed blade (plywood blade, finishing blade, etc.).
- Plan ahead when working with PVC glue. It dries very fast, requiring speed and precision. Two Part Epoxy (PVC glue) can be found at your local hardware store.
- Laying out the fence is the critical first step toward ensuring a quality installation.

**Note:** Standard fence sections and gates are designed for level terrain. Significant slope in the terrain will require modification to the panel or gate and post.

#### **Tool & Materials Checklist:**

- ✓ Post Hole Digger or Auger
- ✓ Drill
- ✓ Circular Saw
- ✓ Rubber Mallet
- ✓ Post Level
- ✓ Pencil
- ✓ Two Part Epoxy (PVC Glue)
- ✓ Shovel
- ✓ Stakes
- ✓ String
- ✓ Tape Measure
- ✓ Concrete mix
- ✓ Gravel
- ✓ Re-Bar
- ✓ Cleaning cloth or paper towels
- ✓ Duct Tape
- ✓ Screw Driver
- ✓ Funnel

While installation of fences varies depending on the fence style, material, and the terrain it will be installed into, taking the time to properly lay out your fence can help to avoid mishaps later. It is a good idea to lay out the fence as a "test fit" before digging holes for the posts. Remember to always measure twice and use a level to maintain straight lines.



## **Prepare Fence Layout:**

#### Step 1:


Locate the boundary lines to your property.

#### Step 2:

Drive stakes into the ground along the property line. Stretch a string between each stake. Be sure to extend the string about 24" beyond the property line (Fig. 1). It is recommended that all posts be set approximately 6" inside of the property line so the concrete footings do not encroach onto the adjoining property.

#### Step 3:

Mark the location of each terminal post with a stake (corner, end and gate post are also called terminal posts).

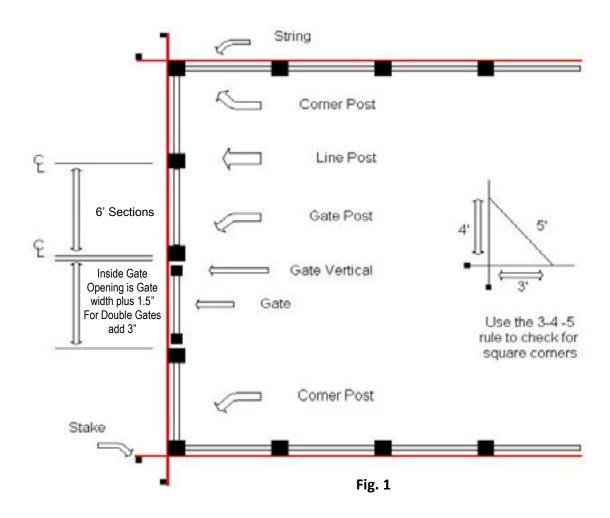




## **Setting Terminal Posts:**

Although post depth and hole diameter will be determined by local weather and soil conditions, holes for corner post, end post and lines post are typically dug 10" in diameter and 24" deep with sloped sides.

**Step 1**. Dig all corner, end and gate post holes.

Step 2. Position the post in the hole. The post should be centered in the hole and must be square with the fence line so that when the rails are inserted into the post, they will parallel the string line. Check the post on two adjacent sides with a carpenter's level and adjust as necessary to make sure it is a plumb. The fence height above grade is determined at this time as well. We recommend a 2" space from the bottom of the bottom rail to the ground (Fig. 2).

Step 3. Set all corner, end and gate posts in concrete (not line posts). Pour concrete around post; fill to 2" below ground level. Once the concrete is completely dry, fill the balance of the hole with dirt.

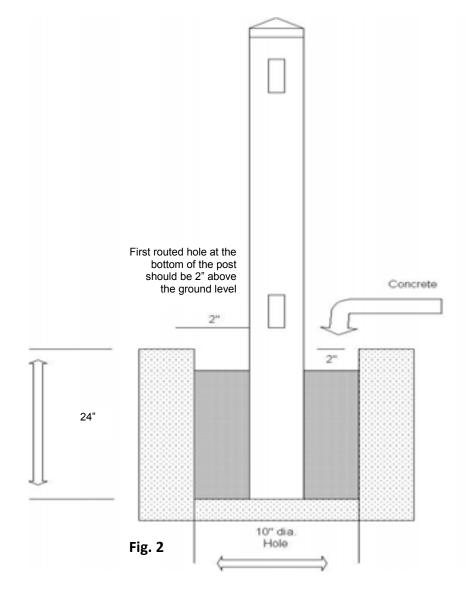




## **Locating and setting line posts:**


**Step 1.** After the corner, end, and gate post footings have hardened enough for the posts to remain stable, stake and stretch a string line taut across the tops of the posts to mark the desired height of the line posts (Fig. 3).

Step 2. Working along the string line, stake out the positions of all line posts. Line posts should be spaced 6' on-center starting at one end and working forward post by post.

**Step 3.** Dig all line post holes so that they are spaced 6 Foot on-center.

**Note:** On-center is a customary form of measurement relating to the distance from the center of one post to the center of another. A simple method to calculate this is to measure from one side of one post to the same side on the next adjacent post.

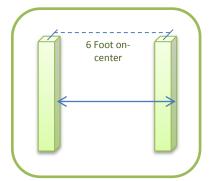

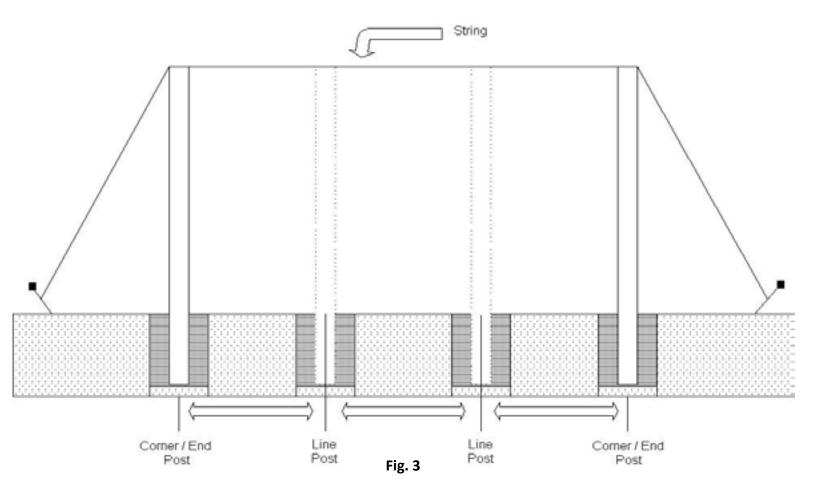




## **Setting line posts and rails:**

Step 1. If post spacing is less than 6'on center, cut an equal piece from the ends of both the top and bottom rails to achieve the desired length while also maintaining uniform picket spacing. The length of the top and bottom rails should be 1/2" less than the on-center measurement of the posts, which allows for expansion.


**Note:** If the rail ends are cut to shorten the fence section, a tabbing (crimping) device can be purchased at any local hardware store to re-crimp the rail ends (Fig. 4).

Step 2. Rails are pre-tabbed and ready to be inserted into the 6' on center post. The tabs are designed for easy insertion and to lock the rails into the post and may be difficult to remove once inserted. Make sure all work and measurements have been completed before installing.

**Note:** The rails which are to be placed into the corners, ends and gate posts (posts which will be back filled with concrete), must be duct taped before installing to prevent concrete from flowing inside of the rails (Fig. 4).

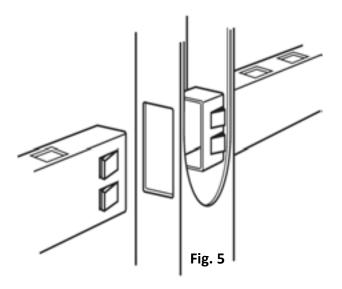

**Note:** Cut Two 2 x 4's to 66" Long and use as spacers between posts to ensure accurate distance. Place one at the top between the posts and one at the bottom between the posts for best results.

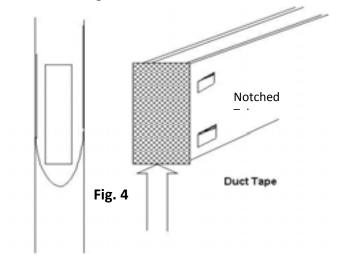

**Step 3.** Slide the rail into the bottom hole in the post (Fig. 5). Proceeding down the fence line, place the next rail into the next hole and insert the bottom rail into each post.

**Step 4.** Fill the post hole with concrete. Check to make sure that the post is set at the correct height, is plumb and level and square to the fence line. Block and support as necessary to keep the posts stable as installation continues. Repeat these steps until all posts are set with the bottom rails installed.




## **Installing Pickets:**


**Step 1.** Before installing the pickets, install the top rail (Fig. 6).

<u>Step 2</u>. The easiest way to install the pickets is to insert the picket through the top rail and into the bottom rail where it will lock in place.

**Step 3.** In some cases it may be necessary to shorten a section of the Scallop or Straight picket style fence. For best visual results cut both top and bottom rails down, re-crimp both top and bottom rails (Fig. 7).

**Note:** If the rail ends are cut to shorten the fence section, a tabbing (crimping) device can be purchased at any local hardware store to re-crimp the rail ends.

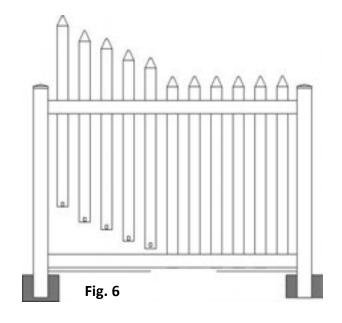


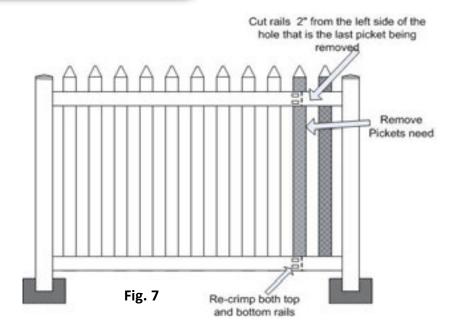

**NOTE:** For Straight Picket styles, because all pickets are the same length and size, the rails can be shortened from only one side. Determine what size your fence section needs to be cut down to, then cut both top and bottom rails to within 2" from the left side of the hole that is the last picket being removed. Mark cut line first with pencil to double check and safeguard that the rails, after cutting, will measure 1" less than the on-center measurement (Fig. 7).




Step 4. For Scallop picket fence styles, it is best to work from the center out (Fig. 8).

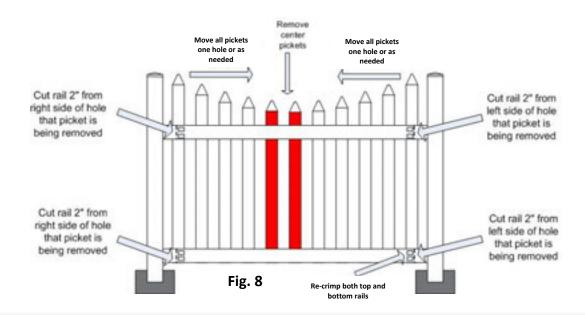

**NOTE:** For Scallop Picket styles, because the pickets vary in lengths, the rails need to be shortened on both sides. Determine what size your fence section needs to be cut down to, then cut both top and bottom rails to within 2" from the left and right side of the hole that is the last picket being removed from each side. Pickets will be removed from the center outwards assuring the height of the outer pickets will match the height of the outer pickets of the adjacent fence panels. Mark cut lines first with pencil to double check and safequard that the rails, after cutting, will measure 1" less than the on-center measurement (Fig. 8).

## Fill Posts with Re-Bar and Concrete:

Gate, corner and end posts should be filled to within 2" of the top of the post with concrete and re-bar. Line posts should be filled halfway with concrete only. Make sure the gate hardware (hinges and latches) is installed before filling gate posts with concrete.

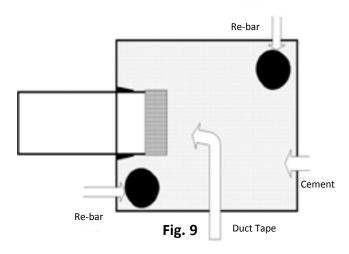


**Step 1.** If Re-Bar is not being used, proceed to Step 2. For each corner, end and gate post, cut two pieces of #4 Re-Bar shorter than the post length. Drop two pieces into each post at opposing corners (Fig. 9).

**Step 2.** Before filling the post hole(s) with concrete, recheck to make sure that the post is set at the correct height and is plumb and level, and square to the fence line. Block and support as necessary to keep the post stable as installation continues.



**Step 3.** Using a large funnel, fill the post with concrete (Fig. 10). Tap lightly on the sides of the post to help void air pockets in the concrete. Repeat these steps until all posts are set.


Note: Clean off the excess concrete that has spilled onto the post as soon as possible.

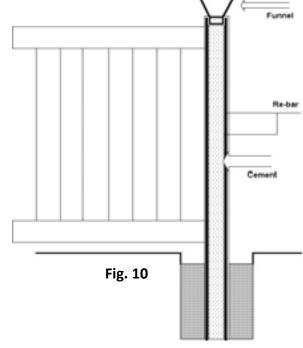

## **Gates and Gate Opening:**

Gates come preassembled and ready to hang at 34.5" wide, with a post opening being 1.5" larger than the gates which allows room for the hinges and latches. The gates are designed to coordinate and match the style of fence and rails.

The actual opening from post to post should measure 72".

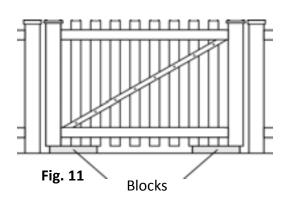

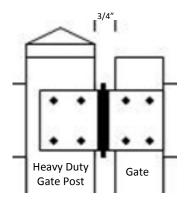


Fig. 12

**Step 1**. To ensure your gate is square and supported during the installation process, position your gate within the gate opening and place two 2" block supports (or similar support to line up gate horizontally) under the gate to hold it at the proper height, and level to line up with the rails of the fence (Fig. 11).

Step 2. If you have elected to utilize 1 heavy duty post per gate opening, be sure to align the "hinges" side of the gate to attach to this post (Fig. 12). If you have elected to utilize 2 heavy duty posts per gate opening, select your preferred post, and align the "hinges" side of the gate to attach to the post.


**Step 3.** Once you have determined your hinge locations, use a pencil to clearly mark where you need to drill. Be sure to leave a ¾" space between the gate and the post. Pre-drill 1/16" diameter holes per your pencil markings on both the gate and the post.



Step 4. Using the eight 8-3/4" screws provided (for each hinge), attach both hinges as marked, and firmly fasten into place (Fig. 12).


Step 5. At the opposing post, determine where you would prefer to install your latch, firmly hold your latch against the post and gate and use a pencil to clearly mark where you will need to drill. Be sure to leave a ¾" space between the gate and the post. Predrill 1/16" diameter holes per your pencil markings on both the gate and the post.

**Step 6.** Using the eight 8-3/4" screws provided attach your latch as marked, and firmly fasten into place (Fig. 13).

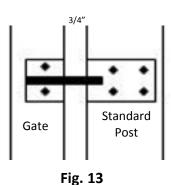

# **Installing Post Caps:**

Apply a small amount of PVC glue (two part epoxy found in most local hardware stores) to the inside of all four sides of the cap and press cap completely onto the top of the post and hold for a few seconds and you are completed (Fig. 14). Be sure to only apply a small amount, just a little dab on each side is sufficient for a firm hold.

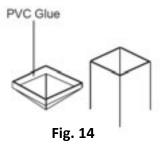

## **Cleaning your Fence:**

Your new PVC fence is easily cleaned up with soap and water. For stubborn stains, you can use Simple Green® or mild detergent and water. Rinse all cleaners with water before they dry.

