Number Systems (in Binary)

Pick up Nondout

Today's lecture

- Representing things with bits
 - N bits gets you 2^N representations
- Unsigned binary number representation
 - Converting between binary and decimal
 - Hexadecimal notation
- Binary Addition & Bitwise Logical Operations
 - Every operation has a width
- Two's complement signed binary representation

Representing things as bits

- We said everything in computers is bits (e.g., 1's and 0's)
- We do this by associating a pattern of bits with a thing


Bit pattern	Marine Mammal
0100101	Humpback Whale
0100110	Leopard Seal
0100111	Sea Otter
0101000	West Indian Manatee
0101001	Bottlenose Dolphin

(like a secret decoder ring...)

- This mapping however is rarely stored explicitly
 - Rather it is used when we interpret the bits.

How many bits to encode N possible things?

1 bit can encode 2 possibilities (0, 1)

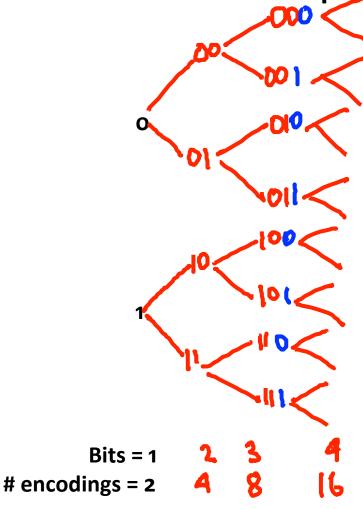

What is the minimum # of bits to encode?

One of the U.S.'s 50 states?

How many bits to encode?

■ The list of Justin Bieber's good songs?

- a) o
- b) o
- c) O
- d) 0
- e) o

Representing Unsigned numbers

- Unsigned numbers are the set of non-negative numbers:
 - **0**, 1, 2, 3, 4, 5, ...
- We can only represent a range of these numbers
 - Based on the # of bits we're using to store the range
 - 3 bits \rightarrow 0 7 (8 representations)
 - 8 bits \rightarrow 0 255 (256 representations)
- But what encoding should we use?

Decimal review

Consider 162.375

Numbers consist of a bunch of digits, each with a weight:

The weights are all powers of the base, which is 10. We can rewrite the weights like this:

To find the decimal value of a number, multiply each digit by its weight and sum the products.

$$(1 \times 10^{2}) + (6 \times 10^{1}) + (2 \times 10^{0}) + (3 \times 10^{-1}) + (7 \times 10^{-2}) + (5 \times 10^{-3}) = 162.375$$

Unsigned Binary Number Representation

- We use the same scheme to represent binary numbers,
 except the weights are powers of 2.
- For example, here is 1101 in binary:

```
1 1 0 1 Binary digits, or bits 2^3 2^2 2^1 2^0 Weights (in base 10)
```

The decimal value is:

$$(1 \times 2^3) + (1 \times 2^2) + (0 \times 2^1) + (1 \times 2^0) =$$

8 + 4 + 0 + 1 = 13

Powers of 2:		
2 ⁰ = 1	2 ⁴ = 16	2 ⁸ = 256
$2^1 = 2$	$2^5 = 32$	2 ⁹ = 512
$2^2 = 4$	$2^6 = 64$	$2^{10} = 1024$
$2^3 = 8$	$2^7 = 128$	

Binary to Decimal



What is the 5-bit unsigned number 01010 in decimal?

- a) 2
- b) 5
- c) 10
- d) 12
- e) 18

Powers of 2:

	<u> </u>	
2 ⁰ = 1	2 ⁴ = 16	2 ⁸ = 256
$2^1 = 2$	$2^5 = 32$	2 ⁹ = 512
$2^2 = 4$	2 ⁶ = 64	$2^{10} = 1024$
$2^3 = 8$	$2^7 = 128$	

Decimal Binary

- The same works with decimal binary, but this is uncommon outside of floating point representations.
- **■** For example, here is 1101.01 in binary:

The decimal value is:

$$(1 \times 2^{3}) + (1 \times 2^{2}) + (0 \times 2^{1}) + (1 \times 2^{0}) + (0 \times 2^{-1}) + (1 \times 2^{-2}) =$$

8 + 4 + 0 + 1 + 0 + 0.25 = 13.25

Converting decimal to binary

■ Decimal integer → binary: Keep dividing by 2 until the quotient is 0. Collect the remainders in reverse order.

Example: 162: 162 / 2 = **1** rem • 81 / 2 = 40 rem (**%** / 2 = ¹⁰ rem [□] 20 / 2 = 10 rem ○ 10100010 /o / 2 = 5 rem ○ $\frac{5}{2} = \frac{1}{2} \text{ rem } \frac{1}{2}$ 128 2 / 2 = 1 rem D / 2 = O rem

Converting decimal to binary


- Decimal integer → binary: Keep dividing by 2 until the quotient is 0. Collect the remainders in reverse order.
- Example: 162.375:

```
162 / 2 = 81 rem 0
81 / 2 = 40 rem 1
40 / 2 = 20 rem 0
20 / 2 = 10 rem 0
10 / 2 = 5 rem 0
5 / 2 = 2 rem 1
2 / 2 = 1 rem 0
1 / 2 = 0 rem 1
```

To convert a fraction, keep multiplying the fractional part by 2 until it becomes 0. Collect the integer parts in forward order.

 \bullet So, 162.375₁₀ = 10100010.011₂

Why does this work?

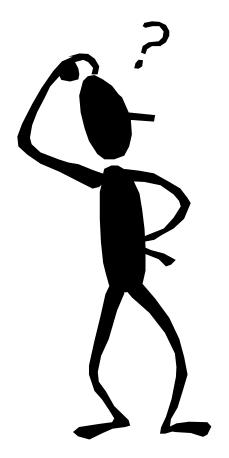

- This works for converting from decimal to any base
- Why? Think about converting 162.375 from decimal to decimal.
 162 / 10= 16 rem 2

- Each division strips off the rightmost digit (the remainder). The quotient represents the remaining digits in the number.
- Similarly, to convert fractions, each multiplication strips off the leftmost digit (the integer part). The fraction represents the remaining digits.

$$0.375 \times 10 = 3.750$$

$$0.750 \times 10 = 7.500$$

$$0.500 \times 10 = 5.000$$

Writing Binary Numbers

It gets tedious to write 32-bit numbers like:
10011010 1100 1100 0111 11110

It is even more error prone to copy them.

0x22

22

Hexadecimal (base-16)

■ The hexadecimal system uses 16 digits:

We can write our 32bit number:

```
1001 1010 1110 0110 1011 0001 1111 1101
as
```

0x9AE6B1FD (C/Java style)
32'h9AE6B1FD (Verilog style)

Hex is frequently used to specify things like 32-bit IP addresses and 24-bit colors.

Decimal	Binary	<u>Hex</u>
0	0000	0
1	0001	1
2	0010	2
3	0011	3
4	0100	4
5	0101	5
6	0110	6
7	0111	7
8	1000	8
9	1001	9
10	1010	Α
11	1011	В
12	1100	C
13	1101	D
14	1110	Ε
15	1111	F





■ What is B8₁₆ in binary?

• A: 10111000

B: 10100100

• C: 10110100

D: 11001000

Binary and hexadecimal conversions

 Converting from hexadecimal to binary is easy: just replace each hex digit with its equivalent 4-bit binary sequence.

$$261.35_{16} = 2 6 1 . 3 5_{16}$$

= 0010 0110 0001 . 0011 0101₂

To convert from binary to hex, make groups of 4 bits, starting from the binary point. Add os to the ends of the number if needed.

Then, just convert each bit group to its corresponding hex digit.

```
10110100.001011_2 = 1011 0100 . 0010 1100_2
= B 4 . 2 C_{16}
```

Hex	Binary
0	0000
1	0001
2	0010
3	0011


Hex	Binary
4	0100
5	0101
6	0110
7	0111

Hex	Binary
8	1000
9	1001
Α	1010
В	1011

Hex	Binary	
С	1100	
D	1101	
Е	1110	
F	1111	


Binary addition by hand (5-bit numbers)

- You can add two binary numbers one column at a time starting from the right, just as you add two decimal numbers.
- But remember that it's binary. For example, 1 + 1 = 10 and you have to carry!

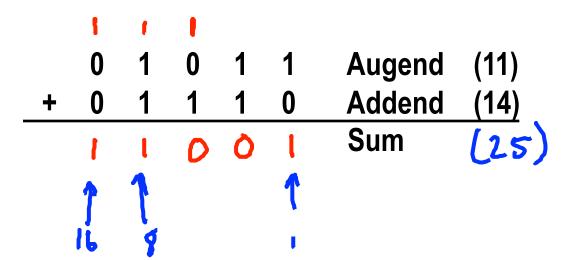

Binary addition by hand

- You can add two binary numbers one column at a time starting from the right, just as you add two decimal numbers.
- But remember that it's binary. For example, 1 + 1 = 10 and you have to carry!

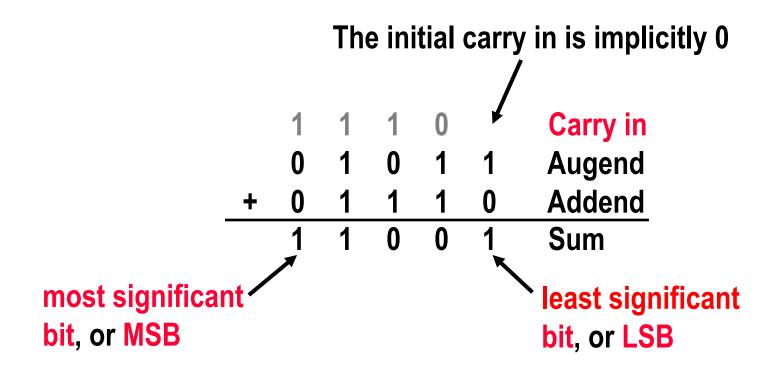

Limited representation (4-bit numbers)

- What if we do that same addition, using only 4-bit numbers
 - (and where the result can only be 4 bits long...)

Bitwise Logical operations

- Most computers also support logical operations like AND, OR and NOT, but extended to multi-bit words instead of just single bits.
- To apply a logical operation to two words X and Y, apply the operation on each pair of bits X_i and Y_i:

1 0 1 1	1 0 1 1	1 0 1 1
AND 1110	OR 1110	XOR 1110
1010	1111	01 01

Bitwise operations in programming

Languages like C, C++ and Java provide bitwise logical operations:

```
& (AND) (OR) ^ (XOR) ~ (NOT)
```

These operations treat each integer as a bunch of individual bits:

Bitwise operators are often used in programs to set a bunch of Boolean options, or flags, with one argument.

They are not the same as the operators &&, || and !, which treat each integer as a single logical value (o is false, everything else is true):





001011 XOR 110011

- A: 111001

B: 111011

<u>C: 111000</u>

D: 000110

Bitwise operations in networking

- IP addresses are actually 32-bit (or 128-bit) binary numbers, and bitwise operations can be used to find network information.
- For example, you can bitwise-AND an address 192.168.10.43 with a "subnet mask" to find the "network address," or which network the machine is connected to.

```
192.168. 10. 43 = 11000000.10101000.00001010.00101011
& 255.255.255.224 = 11111111.11111111.1111111.11100000

192.168. 10. 32 = 11000000.10101000.00001010.00100000
```

You can use bitwise-OR to generate a "broadcast address," for sending data to all machines on the local network.

```
192.168. 10. 43 = 11000000.10101000.00001010.00101011

| 0. 0. 31 = 00000000.00000000.00000000.00011111

192.168. 10. 63 = 11000000.10101000.00001010.00111111
```

Negative Numbers

- It is useful to be able to represent negative numbers.
- What would be ideal is:
 - If we could use the same algorithm to add signed numbers as we use for unsigned numbers
 - Then our computers wouldn't need 2 kinds of adders, just 1.
- This is achieved using the 2's complement representation.

The number wheel (4-bit unsigned #'s)

