

TABLE OF CONTENTS

Introduction	. vii
Chapter 1. Compatibility and Versioning	1
Chapter 2. Host API Overview	2
2.1. Generator Types	3
2.2. Generator Options	3
2.2.1. Seed	3
2.2.2. Offset	3
2.2.3. Order	4
2.3. Return Values	5
2.4. Generation Functions	6
2.5. Host API Example	7
2.6. Performance Notes	8
Chapter 3. Device API Overview	9
3.1. Pseudorandom Sequences	
3.1.1. Bit Generation with XORWOW and MRG32k3a generators	9
3.1.2. Bit Generation with the MTGP32 generator	10
3.1.3. Distributions	12
3.2. Quasirandom Sequences	13
3.3. Skip-Ahead	15
3.4. Device API for discrete distributions	15
3.5. Performance Notes	16
3.6. Device API Examples	16
3.7. Thrust and CURAND Example	25
3.8. Poisson API Example	26
Chapter 4. Testing	33
Chapter 5. Modules	40
5.1. Host API	40
curandCreateGenerator (curandGenerator_t, curandRngType_t)	42
curandCreateGeneratorHost (curandGenerator_t, curandRngType_t)	44
$curand Create Poisson Distribution\ (double,\ curand Discrete Distribution_t)t)$	46
curandDestroyDistribution (curandDiscreteDistribution_t)	47
curandDestroyGenerator (curandGenerator_t)	
curandGenerate (curandGenerator_t, unsigned int, size_t)	. 48
curandGenerateLogNormal (curandGenerator_t, float, size_t, float, float)	49
$curand Generate Log Normal Double\ (curand Generator_t,\ double,\ size_t,\ double,\ double)$	50
curandGenerateLongLong (curandGenerator_t, unsigned long long, size_t)	51
curandGenerateNormal (curandGenerator_t, float, size_t, float, float)	52
curandGenerateNormalDouble (curandGenerator_t, double, size_t, double, double)	53
curandGeneratePoisson (curandGenerator_t, unsigned int, size_t, double)	55
curandGenerateSeeds (curandGenerator_t)	56

	$curand Generate Uniform\ (curand Generator_t,\ float,\ size_t)$. 56
	curandGenerateUniformDouble (curandGenerator_t, double, size_t)	. 57
	$curand Get Direction Vectors 32_t, curand Direction Vector Set_t). \dots \\$.58
	$curand Get Direction Vectors 64\ (curand Direction Vectors 64_t,\ curand Direction Vector Set_t)$.59
	curandGetScrambleConstants32 (unsigned int)	.59
	curandGetScrambleConstants64 (unsigned long long)	. 60
	curandGetVersion (int)	. 60
	curandSetGeneratorOffset (curandGenerator_t, unsigned long long)	. 61
	curandSetGeneratorOrdering (curandGenerator_t, curandOrdering_t)	. 61
	curandSetPseudoRandomGeneratorSeed (curandGenerator_t, unsigned long long)	. 62
	curandSetQuasiRandomGeneratorDimensions (curandGenerator_t, unsigned int)	. 63
	curandSetStream (curandGenerator_t, cudaStream_t)	. 63
5.	2. Device API	. 64
	curand (curandStateMtgp32_t)	. 64
	curand (curandStateScrambledSobol64_t)	.64
	curand (curandStateSobol64_t)	. 65
	curand (curandStateScrambledSobol32_t)	.65
	curand (curandStateSobol32_t)	. 66
	curand (curandStateMRG32k3a_t)	. 66
	curand (curandStatePhilox4_32_10_t)	. 67
	curand (curandStateXORWOW_t)	67
	curand4 (curandStatePhilox4_32_10_t)	. 68
	curand_init (curandDirectionVectors64_t, unsigned long long, unsigned long long,	
	curandStateScrambledSobol64_t)	. 68
	$curand_init\ (curand Direction Vectors 64_t,\ unsigned\ long\ long,\ curand State Sobol 64_t)$. 69
	curand_init (curandDirectionVectors32_t, unsigned int, unsigned int,	
	curandStateScrambledSobol32_t)	. 69
	curand_init (curandDirectionVectors32_t, unsigned int, curandStateSobol32_t)	.70
	curand_init (unsigned long long, unsigned long long, unsigned long long,	
	curandStateMRG32k3a_t)	. 70
	curand_init (unsigned long long, unsigned long long, unsigned long long,	
	curandStatePhilox4_32_10_t)	. 71
	curand_init (unsigned long long, unsigned long long, unsigned long long,	
	curandStateXORWOW_t)	. 71
	curand_log_normal (curandStateScrambledSobol64_t, float, float)	
	curand_log_normal (curandStateSobol64_t, float, float)	
	curand_log_normal (curandStateScrambledSobol32_t, float, float)	
	curand_log_normal (curandStateSobol32_t, float, float)	. 74
	curand_log_normal (curandStateMtgp32_t, float, float)	
	curand_log_normal (curandStateMRG32k3a_t, float, float)	
	curand_log_normal (curandStatePhilox4_32_10_t, float, float)	
	curand_log_normal (curandStateXORWOW_t, float, float)	. 76
	curand_log_normal2 (curandStateMRG32k3a_t, float, float)	77

curand_log_normal2 (curandStatePhilox4_32_10_t, float, float)	. 78
curand_log_normal2 (curandStateXORWOW_t, float, float)	. 78
curand_log_normal2_double (curandStateMRG32k3a_t, double, double)	79
curand_log_normal2_double (curandStatePhilox4_32_10_t, double, double)	80
curand_log_normal2_double (curandStateXORWOW_t, double, double)	80
curand_log_normal4 (curandStatePhilox4_32_10_t, float, float)	. 81
$curand_log_normal_double \ (curand State Scrambled Sobol 64_t, \ double, \ double)$. 82
curand_log_normal_double (curandStateSobol64_t, double, double)	82
$curand_log_normal_double \ (curand State Scrambled Sobol 32_t, \ double, \ double)$. 83
curand_log_normal_double (curandStateSobol32_t, double, double)	84
curand_log_normal_double (curandStateMtgp32_t, double, double)	84
curand_log_normal_double (curandStateMRG32k3a_t, double, double)	85
curand_log_normal_double (curandStatePhilox4_32_10_t, double, double)	. 86
curand_log_normal_double (curandStateXORWOW_t, double, double)	.86
curand_mtgp32_single (curandStateMtgp32_t)	87
curand_mtgp32_single_specific (curandStateMtgp32_t, unsigned char, unsigned char)	88
curand_mtgp32_specific (curandStateMtgp32_t, unsigned char, unsigned char)	. 88
curand_normal (curandStateScrambledSobol64_t)	. 89
curand_normal (curandStateSobol64_t)	90
curand_normal (curandStateScrambledSobol32_t)	. 90
curand_normal (curandStateSobol32_t)	91
curand_normal (curandStateMtgp32_t)	91
curand_normal (curandStateMRG32k3a_t)	92
curand_normal (curandStatePhilox4_32_10_t)	.92
curand_normal (curandStateXORWOW_t)	.93
curand_normal2 (curandStateMRG32k3a_t)	93
curand_normal2 (curandStatePhilox4_32_10_t)	94
curand_normal2 (curandStateXORWOW_t)	94
curand_normal2_double (curandStateMRG32k3a_t)	95
curand_normal2_double (curandStatePhilox4_32_10_t)	.95
curand_normal2_double (curandStateXORWOW_t)	.96
curand_normal4 (curandStatePhilox4_32_10_t)	
curand_normal_double (curandStateScrambledSobol64_t)	97
curand_normal_double (curandStateSobol64_t)	. 97
curand_normal_double (curandStateScrambledSobol32_t)	98
curand_normal_double (curandStateSobol32_t)	. 98
curand_normal_double (curandStateMtgp32_t)	99
curand_normal_double (curandStateMRG32k3a_t)	. 99
curand_normal_double (curandStatePhilox4_32_10_t)1	100
curand_normal_double (curandStateXORWOW_t)1	
curand_poisson (curandStateScrambledSobol64_t, double)1	101
curand_poisson (curandStateSobol64_t, double)1	
curand_poisson (curandStateScrambledSobol32_t, double)	102

curand_poisson (curandStateSobol32_t, double)
curand_poisson (curandStateMtgp32_t, double)103
curand_poisson (curandStateMRG32k3a_t, double)
curand_poisson (curandStatePhilox4_32_10_t, double)104
curand_poisson (curandStateXORWOW_t, double)104
curand_poisson4 (curandStatePhilox4_32_10_t, double)105
curand_uniform (curandStateScrambledSobol64_t)
curand_uniform (curandStateSobol64_t)106
curand_uniform (curandStateScrambledSobol32_t)
curand_uniform (curandStateSobol32_t)107
curand_uniform (curandStateMtgp32_t)107
curand_uniform (curandStatePhilox4_32_10_t)108
curand_uniform (curandStateMRG32k3a_t)108
curand_uniform (curandStateXORWOW_t)109
curand_uniform2_double (curandStatePhilox4_32_10_t)109
curand_uniform4 (curandStatePhilox4_32_10_t)110
curand_uniform_double (curandStateScrambledSobol64_t)110
curand_uniform_double (curandStateSobol64_t)111
curand_uniform_double (curandStateScrambledSobol32_t)111
curand_uniform_double (curandStateSobol32_t)112
curand_uniform_double (curandStatePhilox4_32_10_t)
curand_uniform_double (curandStateMtgp32_t)113
curand_uniform_double (curandStateMRG32k3a_t)113
curand_uniform_double (curandStateXORWOW_t)114
curandMakeMTGP32Constants (const mtgp32_params_fast_t, mtgp32_kernel_params_t) 114
<pre>curandMakeMTGP32KernelState (curandStateMtgp32_t, mtgp32_params_fast_t,</pre>
mtgp32_kernel_params_t, int, unsigned long long)115
skipahead (unsigned long long, T)116
skipahead (unsigned int, T)116
skipahead (unsigned long long, curandStateMRG32k3a_t)116
skipahead (unsigned long long, curandStatePhilox4_32_10_t)117
skipahead (unsigned long long, curandStateXORWOW_t)117
skipahead_sequence (unsigned long long, curandStateMRG32k3a_t)118
skipahead_sequence (unsigned long long, curandStatePhilox4_32_10_t)118
skipahead_sequence (unsigned long long, curandStateXORWOW_t)119
skipahead_subsequence (unsigned long long, curandStateMRG32k3a_t)119
Appendix A. Bibliography
Appendix B. Acknowledgements122

LIST OF FIGURES

Figure 1	MTGP32 Block and Thre	d Operation	11
----------	-----------------------	-------------	----

INTRODUCTION

The CURAND library provides facilities that focus on the simple and efficient generation of high-quality pseudorandom and quasirandom numbers. A *pseudorandom* sequence of numbers satisfies most of the statistical properties of a truly random sequence but is generated by a deterministic algorithm. A *quasirandom* sequence of *n*-dimensional points is generated by a deterministic algorithm designed to fill an *n*-dimensional space evenly.

CURAND consists of two pieces: a library on the host (CPU) side and a device (GPU) header file. The host-side library is treated like any other CPU library: users include the header file, /include/curand.h, to get function declarations and then link against the library. Random numbers can be generated on the device or on the host CPU. For device generation, calls to the library happen on the host, but the actual work of random number generation occurs on the device. The resulting random numbers are stored in global memory on the device. Users can then call their own kernels to use the random numbers, or they can copy the random numbers back to the host for further processing. For host CPU generation, all of the work is done on the host, and the random numbers are stored in host memory.

The second piece of CURAND is the device header file, <code>/include/curand_kernel.h</code>. This file defines device functions for setting up random number generator states and generating sequences of random numbers. User code may include this header file, and user-written kernels may then call the device functions defined in the header file. This allows random numbers to be generated and immediately consumed by user kernels without requiring the random numbers to be written to and then read from global memory.

Chapter 1. COMPATIBILITY AND VERSIONING

The host API of CURAND is intended to be backward compatible at the source level with future releases (unless stated otherwise in the release notes of a specific future release). In other words, if a program uses CURAND, it should continue to compile and work correctly with newer versions of CURAND without source code changes.

CURAND is not guaranteed to be backward compatible at the binary level. Using different versions of the **curand.h** header file and the shared library is not supported. Using different versions of CURAND and the CUDA runtime is not supported.

The device API should be backward compatible at the source level for public functions in most cases.

Chapter 2. HOST API OVERVIEW

To use the host API, user code should include the library header file **curand.h** and dynamically link against the CURAND library. The library uses the CUDA runtime, so user code must also use the runtime. The CUDA driver API is not supported by CURAND.

Random numbers are produced by generators. A generator in CURAND encapsulates all the internal state necessary to produce a sequence of pseudorandom or quasirandom numbers. The normal sequence of operations is as follows:

- 1. Create a new generator of the desired type (see Generator Types) with curandCreateGenerator().
- 2. Set the generator options (see Generator Options); for example, use curandSetPseudoRandomGeneratorSeed() to set the seed.
- 3. Allocate memory on the device with cudaMalloc().
- 4. Generate random numbers with **curandGenerate()** or another generation function.
- 5. Use the results.
- 6. If desired, generate more random numbers with more calls to curandGenerate().
- 7. Clean up with curandDestroyGenerator().

To generate random numbers on the host CPU, in step one above call **curandCreateGeneratorHost()**, and in step three, allocate a host memory buffer to receive the results. All other calls work identically whether you are generating random numbers on the device or on the host CPU.

It is legal to create several generators at the same time. Each generator encapsulates a separate state and is independent of all other generators. The sequence of numbers produced by each generator is deterministic. Given the same set-up parameters, the same sequence will be generated with every run of the program. Generating random numbers on the device will result in the same sequence as generating them on the host CPU.

Note that **curandGenerate()** in step 4 above launches a kernel and returns asynchronously. If you launch another kernel in a different stream, and that kernel needs to use the results of curandGenerate(), you must either call **cudaThreadSynchronize()**

or use the stream management/event management routines, to ensure that the random generation kernel has finished execution before the new kernel is launched.

Note that it is not valid to pass a host memory pointer to a generator that is running on the device, and it is not valid to pass a device memory pointer to a generator that is running on the CPU. Behavior in these cases is undefined.

2.1. Generator Types

Random number generators are created by passing a type to curandCreateGenerator(). There are seven types of random number generators in CURAND, that fall into two categories. curand_rng_pseudo_xorwow, CURAND RNG PSEUDO MRG32K3A, and CURAND RNG PSEUDO MTGP32 are pseudorandom number generators. CURAND RNG PSEUDO XORWOW is implemented using the XORWOW algorithm, a member of the xor-shift family of pseudorandom number generators. CURAND RNG PSEUDO MRG32K3A is a member of the Combined Multiple Recursive family of pseudorandom number generators. **CURAND RNG PSEUDO MTGP32** is a member of the Mersenne Twister family of pseudorandom number generators, with parameters customized for operation on the GPU. There are 4 variants of the basic SOBOL' quasi random number generator. All of the variants generate sequences in up to 20,000 dimensions. CURAND_RNG_QUASI_SOBOL32, CURAND_RNG_QUASI_SCRAMBLED_SOBOL32, CURAND RNG QUASI SOBOL64, and CURAND RNG QUASI SCRAMBLED SOBOL64 are quasirandom number generator types. **CURAND RNG QUASI SOBOL32** is a Sobol' generator of 32-bit sequences. CURAND RNG QUASI SCRAMBLED SOBOL32 is a scrambled Sobol' generator of 32-bit sequences. CURAND RNG QUASI SOBOL64 is a Sobol' generator of 64-bit sequences. CURAND_RNG_QUASI_SCRAMBLED_SOBOL64 is a scrambled Sobol' generator of 64-bit sequences.

2.2. Generator Options

Once created, random number generators can be defined using the general options seed, offset, and order.

2.2.1. Seed

The seed parameter is a 64-bit integer that initializes the starting state of a pseudorandom number generator. The same seed always produces the same sequence of results.

2.2.2. Offset

The offset parameter is used to skip ahead in the sequence. If offset = 100, the first random number generated will be the 100th in the sequence. This allows multiple runs of the same program to continue generating results from the same sequence without overlap. Note that the skip ahead function is not available for the **CURAND RNG PSEUDO MTGP32** generator.

2.2.3. Order

The order parameter is used to choose how the results are ordered in global memory. There are three ordering choices for pseudorandom sequences:

CURAND_ORDERING_PSEUDO_DEFAULT, CURAND_ORDERING_PSEUDO_BEST, and

CURAND_ORDERING_PSEUDO_SEEDED. There is one ordering choice for quasirandom numbers, CURAND_ORDERING_QUASI_DEFAULT. The default ordering for pseudorandom number generators is CURAND_ORDERING_PSEUDO_DEFAULT, while the default ordering for quasirandom number generators is CURAND_ORDERING_QUASI_DEFAULT.

CURAND_ORDERING_PSEUDO_BEST produce the same output ordering for all pseudorandom generators. However, future releases of CURAND may change the ordering associated with CURAND_ORDERING_PSEUDO_BEST to improve either performance or the quality of the results. It will always be the case that the ordering obtained with CURAND_ORDERING_PSEUDO_BEST is deterministic and is the same for each run of the program. The ordering returned by CURAND_ORDERING_PSEUDO_DEFAULT is guaranteed to remain the same for all CURAND releases. In the current release, only the XORWOW generator has more than one ordering.

The behavior of the ordering parameters for each generator type is outlined below:

- XORWOW pseudorandom generator
 - CURAND_ORDERING_PSEUDO_BEST

The output ordering of **CURAND_ORDERING_PSEUDO_BEST** is the same as **CURAND_ORDERING_PSEUDO_DEFAULT** in the current release.

CURAND_ORDERING_PSEUDO_DEFAULT

The result at offset n in global memory is from position $(n \mod 4096) \cdot 2^{67} + |n/4096|$

in the original XORWOW sequence.

► CURAND_ORDERING_PSEUDO_SEEDED

The result at offset n in global memory is from position n/4096] in the XORWOW sequence seeded with a combination of the user seed and the number $n \mod 4096$. In other words, each of 4096 threads uses a different seed. This seeding method reduces state setup time but may result in statistical weaknesses of the pseudorandom output for some user seed values.

MRG32k3a pseudorandom generator

CURAND ORDERING PSEUDO BEST

The output ordering of **CURAND_ORDERING_PSEUDO_BEST** is the same as **CURAND_ORDERING_PSEUDO_DEFAULT** in the current release.

CURAND_ORDERING_PSEUDO_DEFAULT

The result at offset n in global memory is from position $(n \mod 4096) \cdot 2^{76} + \lfloor n/4096 \rfloor$

in the original MRG32k3a sequence. (Note that the stride between subsequent samples for MRG32k3a is not the same as for XORWOW)

MTGP32 pseudorandom generator

CURAND_ORDERING_PSEUDO_BEST

The output ordering of **CURAND_ORDERING_PSEUDO_BEST** is the same as **CURAND_ORDERING_PSEUDO_DEFAULT** in the current release.

CURAND ORDERING PSEUDO DEFAULT

The MTGP32 generator actually generates 64 distinct sequences based on different parameter sets for the basic algorithm. Let S(p) be the sequence for parameter set p.

The result at offset n in global memory is from position $n \mod 256$ from the sequence

 $S(n/256) \mod 64$

In other words 256 samples from S(0) are followed by 256 samples from S(1) and so-on, up to S(63). This pattern repeats, so the subsequent 256 samples are from S(0), followed by 256 samples from S(1), ands so on.

Philox_4x32_10 pseudorandom generator

CURAND_ORDERING_PSEUDO_BEST

The output ordering of **CURAND_ORDERING_PSEUDO_BEST** is the same as **CURAND_ORDERING_PSEUDO_DEFAULT** in the current release.

CURAND_ORDERING_PSEUDO_DEFAULT

Each thread in Philox_4x32_10 generator generates distinct sequences based on different parameter sets for the basic algorithm. In host API there are 8192 different sequences. Each four values from one sequence are followed by four values from next sequence.

32 and 64 bit SOBOL and Scrambled SOBOL quasirandom generators

► CURAND ORDERING QUASI DEFAULT

When generating n results in d dimensions, the output will consist of n/d results from dimension 1, followed by n/d results from dimension 2, and so on up to dimension d. Only exact multiples of the dimension size may be generated. The dimension parameter d is set with ${\tt curandSetQuasiRandomGeneratorDimensions}$ () and defaults to 1.

2.3. Return Values

All CURAND host library calls have a return value of **curandStatus_t**. Calls that succeed without errors return **CURAND_STATUS_SUCCESS**. If errors occur, other values are returned depending on the error. Because CUDA allows kernels to execute asynchronously from CPU code, it is possible that errors in a non-

CURAND kernel will be detected during a call to a library function. In this case, **CURAND STATUS PREEXISTING ERROR** is returned.

2.4. Generation Functions

```
curandStatus_t
curandGenerate(
    curandGenerator_t generator,
    unsigned int *outputPtr, size t num)
```

The **curandGenerate()** function is used to generate pseudo- or quasirandom bits of output. For XORWOW, MRG32k3a, MTGP32, and SOBOL32 generators, each output element is a 32-bit unsigned int where all bits are random. For SOBOL64 generators, each output element is a 64-bit unsigned long long where all bits are random.

```
curandStatus_t
curandGenerateUniform(
    curandGenerator_t generator,
    float *outputPtr, size t num)
```

The **curandGenerateUniform()** function is used to generate uniformly distributed floating point values between 0.0 and 1.0, where 0.0 is excluded and 1.0 is included.

```
curandStatus_t
curandGenerateNormal(
    curandGenerator_t generator,
    float *outputPtr, size_t n,
    float mean, float stddev)
```

The **curandGenerateNormal()** function is used to generate normally distributed floating point values with the given mean and standard deviation.

```
curandStatus_t
curandGenerateLogNormal(
    curandGenerator_t generator,
    float *outputPtr, size_t n,
    float mean, float stddev)
```

The **curandGenerateLogNormal()** function is used to generate log-normally distributed floating point values based on a normal distribution with the given mean and standard deviation.

```
curandStatus_t
curandGeneratePoisson(
    curandGenerator_t generator,
    unsigned int *outputPtr, size_t n,
    double lambda)
```

The **curandGeneratePoisson()** function is used to generate Poisson-distributed integer values based on a Poisson distribution with the given lambda.

```
curandStatus_t
curandGenerateUniformDouble(
    curandGenerator_t generator,
    double *outputPtr, size_t num)
```

The **curandGenerateUniformDouble()** function generates uniformly distributed random numbers in double precision.

```
curandStatus_t
curandGenerateNormalDouble(
    curandGenerator_t generator,
    double *outputPtr, size_t n,
    double mean, double stddev)
```

curandGenerateNormalDouble() generates normally distributed results in double precision with the given mean and standard deviation. Double precision results can only be generated on devices of compute capability 1.3 or above, and the host.

```
curandStatus_t
curandGenerateLogNormalDouble(
   curandGenerator_t generator,
   double *outputPtr, size_t n,
   double mean, double stddev)
```

curandGenerateLogNormalDouble() generates log-normally distributed results in double precision, based on a normal distribution with the given mean and standard deviation.

For quasirandom generation, the number of results returned must be a multiple of the dimension of the generator.

Generation functions can be called multiple times on the same generator to generate successive blocks of results. For pseudorandom generators, multiple calls to generation functions will yield the same result as a single call with a large size. For quasirandom generators, because of the ordering of dimensions in memory, many shorter calls will not produce the same results in memory as one larger call; however the generated *n*-dimensional vectors will be the same.

Double precision results can only be generated on devices of compute capability 1.3 or above, and the host.

2.5. Host API Example

```
/*
 * This program uses the host CURAND API to generate 100
 * pseudorandom floats.
 */
#include <stdio.h>
#include <cuda.h>
#include <curand.h>

#define CUDA_CALL(x) do { if((x)!=cudaSuccess) { \
    printf("Error at %s:%d\n", FILE_, LINE_); \
    return EXIT_FAILURE;}} while(0)
#define CURAND_CALL(x) do { if((x)!=CURAND_STATUS_SUCCESS) { \
    printf("Error at %s:%d\n", FILE_, LINE_); \
    return EXIT_FAILURE;}} while(0)

int main(int argc, char *argv[])
{
    size_t n = 100;
```

```
size t i;
curandGenerator_t gen;
float *devData, *hostData;
/* Allocate n floats on host */
hostData = (float *)calloc(n, sizeof(float));
/* Allocate n floats on device */
CUDA CALL(cudaMalloc((void **) &devData, n*sizeof(float)));
/* Create pseudo-random number generator */
CURAND CALL (curandCreateGenerator (&gen,
            CURAND RNG PSEUDO DEFAULT));
/* Set seed */
CURAND CALL (curandSetPseudoRandomGeneratorSeed (gen,
            1234ULL));
/* Generate n floats on device */
CURAND CALL(curandGenerateUniform(gen, devData, n));
/* Copy device memory to host */
CUDA CALL(cudaMemcpy(hostData, devData, n * sizeof(float),
    cudaMemcpyDeviceToHost));
/* Show result */
for(i = 0; i < n; i++) {
    printf("%1.4f ", hostData[i]);
printf("\n");
/* Cleanup */
CURAND CALL(curandDestroyGenerator(gen));
CUDA CALL (cudaFree (devData));
free (hostData);
return EXIT SUCCESS;
```

2.6. Performance Notes

In general you will get the best performance from the CURAND library by generating blocks of random numbers that are as large as possible. Fewer calls to generate many random numbers is more efficient than many calls generating only a few random numbers. The default pseudorandom generator, XORWOW, with the default ordering takes some time to setup the first time it is called. Subsequent generation calls do not require this setup. To avoid this setup time, use the CURAND_ORDERING_PSEUDO_SEEDED ordering.

The MTGP32 Mersenne Twister algorithm is closely tied to the thread and block count. The state structure for MTGP32 actually contains the state for 256 consecutive samples from a given sequence, as determined by a specific parameter set. Each of 64 blocks uses a different parameter set and each of 256 threads generates one sample from the state, and updates the state. Hence the most efficient use of MTGP32 is to generate a multiple of 16384 samples.

Chapter 3. DEVICE API OVERVIEW

To use the device API, include the file **curand_kernel**. h in files that define kernels that use CURAND device functions. The device API includes functions pseudorandom generation for and quasirandom generation.

3.1. Pseudorandom Sequences

The functions for pseudorandom sequences support bit generation and generation from distributions.

3.1.1. Bit Generation with XORWOW and MRG32k3a generators

```
__device__ unsigned int
curand (curandState t *state)
```

Following a call to $\mathtt{curand_init()}$, $\mathtt{curand()}$ returns a sequence of pseudorandom numbers with a period greater than 2^{190} . If $\mathtt{curand()}$ is called with the same initial state each time, and the state is not modified between the calls to $\mathtt{curand()}$, the same sequence is always generated.

```
__device__ void
curand_init (
   unsigned long long seed, unsigned long long sequence,
   unsigned long long offset, curandState t *state)
```

The **curand_init()** function sets up an initial state allocated by the caller using the given seed, sequence number, and offset within the sequence. Different seeds are guaranteed to produce different starting states and different sequences. The same seed always produces the same state and the same sequence. The state set up will be the state after 2^{67} # **sequence + offset** calls to **curand()** from the seed state.

Sequences generated with different seeds usually do not have statistically correlated values, but some choices of seeds may give statistically correlated sequences. Sequences generated with the same seed and different sequence numbers will not have statistically correlated values.

For the highest quality parallel pseudorandom number generation, each experiment should be assigned a unique seed. Within an experiment, each thread of computation should be assigned a unique sequence number. If an experiment spans multiple kernel launches, it is recommended that threads between kernel launches be given the same seed, and sequence numbers be assigned in a monotonically increasing way. If the same configuration of threads is launched, random state can be preserved in global memory between launches to avoid state setup time.

3.1.2. Bit Generation with the MTGP32 generator

The MTGP32 generator is an adaptation of code developed at Hiroshima University (see [1]). In this algorithm, samples are generated for multiple sequences, each sequence based on a set of computed parameters. CURAND uses the 200 parameter sets that have been pre-generated for the 32-bit generator with period 2¹¹²¹⁴. It would be possible to generate other parameter sets, as described in [1], and use those instead. There is one state structure for each parameter set (sequence), and the algorithm allows thread-safe generation and state update for up to 256 concurrent threads (within a single block) for each of the 200 sequences.

Note that two different blocks can not operate on the same state safely. Also note that, within a block, at most 256 threads may operate on a given state.

For the MTGP32 generator, two host functions are provided to help set up parameters for the different sequences in device memory, and to set up the initial state.

```
__host__ curandStatust curandMakeMTGP32Constants(mtgp32paramsfastt params[], mtgp32kernelparamst *p)
```

This function reorganizes the parameter set data from the pre-generated format (mtgp32_params_fast_t) into the format used by the kernel functions (mtgp32_kernel_params_t), and copies them to device memory.

This function initializes \mathbf{n} states, based on the specified parameter set and seed, and copies them to device memory indicated by \mathbf{s} . Note that if you are using the pregenerated states, the maximum value of \mathbf{n} is 200.

The CURAND MTGP32 generator provides two kernel functions to generate random bits.

```
__device__ unsigned int
curand (curandStateMtgp32_t *state)
```

This function computes a thread index, and for that index generates a result and updates state. The thread index **t** is computed as:

```
t= (blockDim.z * blockDim.y * threadIdx.z) + (blockDim.x *
threadIdx.y) + threadIdx.x
```

This function may be called repeatedly from a single kernel launch, with the following constraints:

- ▶ It may only be called safely from a block that has 256 or fewer threads.
- ► A given state may not be used by more than one block.
- ► A given block may generate randoms using multiple states.

```
__device__ unsigned int
curandmtgp32specific(curandStateMtgp32_t *state, unsigned char index,
unsigned char n)
```

This function generates a result and updates state for the position specified by a thread-specific index, and advances the offset in the state by n positions.curand_mtgp32_specific may be called multiple times within a kernel launch, with the following constraints:

- ► At most 256 threads may call this function for a given state.
- Within a block, for a given state, if n threads are calling the function, the indices must run from 0...n-1. The indices do not have to match the thread numbers, and may be distributed among the threads as required by the calling program.
- ▶ A given state may not be used by more than one block.
- ▶ A given block may generate randoms using multiple states.

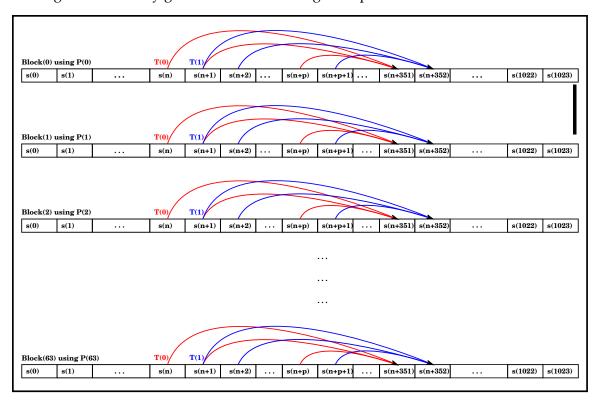


Figure 1 MTGP32 Block and Thread Operation

Figure 1 is an illustration of how blocks and threads in MTGP32 operate on the generator states. Each row represents a circular state array of 32-bit integers \mathbf{s} (\mathbf{n}). Threads operating on the array are identified as \mathbf{T} (\mathbf{m}). The specific case shown matches the internal implementation of the host API, which launches 64 blocks of 256 threads. Each block operates on a different sequence, determined by a unique set of parameters, \mathbf{P} (\mathbf{n}). One complete state of an MTGP32 sequence is defined by 351 32-bit integers. Each thread \mathbf{T} (\mathbf{m}) operates on one of these integers, \mathbf{s} (\mathbf{n} + \mathbf{m}) combining it with \mathbf{s} (\mathbf{n} + \mathbf{m} + $\mathbf{1}$) and

a pickup element **s** (**n**+**m**+**p**), where **p** <= **95**. It stores the new state at position **s** (**n**+**m** +**351**) in the state array. After thread synchronization, the base index **n** is advanced by the number of threads that have updated the state. To avoid being overwritten, the array itself must be at least 256 + 351 integers in length. In fact it is sized at 1024 integers for efficiency of indexing.

The limitation on the number of threads in a block, which can operate on a given state array, arises from the need to ensure that state **s** (**n**+**351**) has been updated before it is needed as a pickup state. If there were a thread **T** (**256**), it could use **s** (**n**+**256**+**95**) i.e. **s** (**n**+**351**) before thread zero has updated **s** (**n**+**351**). If an application requires that more than 256 threads in a block invoke an MTGP32 generator function, it must use multiple MTGP32 states, either by using multiple parameter sets, or by using multiple generators with different seeds. Also note that the generator functions synchronize threads at the end of each call, so it is most efficient for 256 threads in a block to invoke the generator.

3.1.3. Distributions

```
__device__ float
curand uniform (curandState t *state)
```

This function returns a sequence of pseudorandom floats uniformly distributed between 0.0 and 1.0. It may return from 0.0 to 1.0, where 1.0 is included and 0.0 is excluded. Distribution functions may use any number of unsigned integer values from a basic generator. The number of values consumed is not guaranteed to be fixed.

```
__device__ float
curand_normal (curandState_t *state)
```

This function returns a single normally distributed float with mean 0.0 and standard deviation 1.0. This result can be scaled and shifted to produce normally distributed values with any mean and standard deviation.

```
__device__ float
curand_log_normal (curandState_t *state, float mean, float stddev)
```

This function returns a single log-normally distributed float based on a normal distribution with the given mean and standard deviation.

```
__device__ unsigned int
curand_poisson (curandState_t *state, double lambda)
```

This function returns a single Poisson-distributed unsigned int based on a Poisson distribution with the given lambda. The algorithm used to derive a Poisson result from a uniformly distributed result varies depending on the value of lambda and the type of generator. Some algorithms draw more than one sample for a single output. Also note that this distribution requires pre-processing on the host. See the description of curandCreatePoissonDistribution() below.

```
__device__ double
curand_uniform_double (curandState_t *state)

__device__ double
curand_normal_double (curandState_t *state)

__device__ double
curand_log_normal_double (curandState_t *state, double mean, double stddev)
```

The three functions above are the double precision versions of curand_uniform(), curand normal(), and curand log normal().

For pseudorandom generators, the double precision functions use multiple calls to **curand()** to generate 53 random bits.

```
__device__ float2
curand_normal2 (curandState_t *state)

__device__ float2
curand_log_normal2 (curandState_t *state)

__device__ double2
curand_normal2_double (curandState_t *state)

__device__ double2
curand_log_normal2_double (curandState_t *state)
```

The above functions generate two normally or log normally distributed pseudorandom results with each call. Because the underlying implementation uses the Box-Muller transform, this is generally more efficient than generating a single result with each call.

```
device uint4
curand4 (curandStatePhilox4 32 10 t *state)
device float4
curand uniform4 (curandStatePhilox4 32 10 t *state)
device float4
curand normal4 (curandStatePhilox4 32 10 t *state)
device float4
curand log normal4 (curandStatePhilox4 32 10 t *state, float mean, float stddev)
device uint4
curand poisson4 (curandStatePhilox4 32 10 t *state, double lambda)
device uint4
curand discrete4 (curandStatePhilox4 32 10 t *state,
curandDiscreteDistribution t discrete distribution)
 device double2
curand uniform2 double (curandStatePhilox4 32 10 t *state)
device double2
curand normal2 double (curandStatePhilox4 32 10 t *state)
 _device__ double2
\overline{\text{curand log}} normal2 double (curandStatePhilox4 32 10 t *state, double mean,
double stddev)
```

The above functions generate four single precision or two double precision results with each call. Because the underlying implementation uses the Philox generator, this is generally more efficient than generating a single result with each call.

3.2. Quasirandom Sequences

Although the default generator type is pseudorandom numbers from XORWOW, Sobol' sequences based on Sobol' 32-bit integers can be generated using the following functions:

```
__device__ void
curand_init (
   unsigned int *direction_vectors,
   unsigned int offset,
```

```
curandStateSobol32 t *state)
device void
curand init (
   unsigned int *direction_vectors,
   unsigned int scramble_c,
   unsigned int offset,
  curandStateScrambledSobol32 t *state)
 device unsigned int
curand (curandStateSobol32_t *state)
device float
curand uniform (curandStateSobol32 t *state)
device float
curand normal (curandStateSobol32 t *state)
device float
\overline{\text{curand log normal}} (
   curandStateSobol32 t *state,
   float mean,
   float stddev)
device unsigned int
curand_poisson (curandStateSobol32 t *state, double lambda)
 device double
curand uniform double (curandStateSobol32 t *state)
device double
curand normal double (curandStateSobol32 t *state)
__device__ double curand_log_normal_double (
   curandStateSobol32_t *state,
   double mean,
 double stddev)
```

The curand init() function initializes the quasirandom number generator state. There is no seed parameter, only direction vectors and offset. For scrambled Sobol' generators, there is an additional parameter scramble c, which is the initial value of the scrambled sequence. For the curandStateSobol32 t type and the curandStateScrambledSobol32 t type the direction vectors are an array of 32 unsigned integer values. For the curandStateSobol64 t type and the curandStateScrambledSobol64 t type the direction vectors are an array of 64 unsigned long long values. Offsets and initial constants for the scrambled sequence are of type unsigned int for 32-bit Sobol' generators. These parameters are of type unsigned long long for 64-bit Soblol' generators. For the curandStateSobol32 t type and the $curandStateScrambledSobol32_t$ type the sequence is exactly 2^{32} elements long where each element is 32 bits. For the curandStateSobol64 t type and the ${\tt curandStateScrambledSobol64_t}$ type the sequence is exactly 2^{64} elements long where each element is 64 bits. Each call to curand() returns the next quasirandom element. Calls to curand uniform() return quasirandom floats or doubles from 0.0 to 1.0, where 1.0 is included and 0.0 is excluded. Similarly, calls to curand normal() return normally distributed floats or doubles with mean 0.0 and standard deviation 1.0. Calls to curand_log_normal() return log-normally distributed floats or doubles, derived from the normal distribution with the specified mean and standard deviation. All of the generation functions may be called with any type of Sobol' generator.

As an example, generating quasirandom coordinates that fill a unit cube requires keeping track of three quasirandom generators. All three would start at offset = 0 and would have dimensions 0, 1, and 2, respectively. A single call to curand_uniform() for each generator state would generate the *x*, *y*, and *z* coordinates. Tables of direction vectors are accessible on the host through the curandGetDirectionVectors32() and curandGetDirectionVectors64() functions. The direction vectors needed should be copied into device memory before use.

The normal distribution functions for quasirandom generation use the inverse cumulative density function to preserve the dimensionality of the quasirandom sequence. Therefore there are no functions that generate more than one result at a time as there are with the pseudorandom generators.

The double precision Sobol32 functions return results in double precision that use 32 bits of internal precision from the underlying generator.

The double precision Sobol64 functions return results in double precision that use 53 bits of internal precision from the underlying generator. These bits are taken from the high order 53 bits of the 64 bit samples.

3.3. Skip-Ahead

There are several functions to skip ahead from a generator state.

```
__device__ void
skipahead (unsigned long long n, curandState_t *state)
__device__ void
skipahead (unsigned int n, curandStateSobol32_t *state)
```

Using this function is equivalent to calling **curand()** *n* times without using the return value, but it is much faster.

```
__device__ void skipaheadsequence (unsigned long long n, curandState_t *state)
```

This function is the equivalent of calling **curand()** $n \cdot 2^{67}$ times without using the return value and is much faster.

3.4. Device API for discrete distributions

Discrete distributions, such as the Poisson distribution, require additional API's that perform preprocessing on HOST side to generate a histogram for the specific distribution. In the case of the Poisson distribution this histogram is different for different values of lambda. Best performance for these distributions will be seen on GPUs with at least 48KB of L1 cache.

```
curandStatus_t
curandCreatePoissonDistribution(
   double lambda,
   curandDiscreteDistribution_t *discrete_distribution)
```

The **curandCreatePoissonDistribution()** function is used to create a histogram for the Poisson distribution with the given lambda.

```
__device__ unsigned int
```

```
curand_discrete (
    curandState_t *state,
    curandDiscreteDistribution_t discrete_distribution)
```

This function returns a single discrete distributed unsigned int based on a distribution for the given discrete distribution histogram.

```
curandStatus_t
curandDestroyDistribution(
    curandDiscreteDistribution t discrete distribution)
```

The **curandDestroyDistribution()** function is used to clean up structures related to the histogram.

3.5. Performance Notes

Calls to curand_init() are slower than calls to curand() or curand_uniform(). Large offsets to curand_init() take more time than smaller offsets. It is much faster to save and restore random generator state than to recalculate the starting state repeatedly.

As shown below, generator state can be stored in global memory between kernel launches, used in local memory for fast generation, and then stored back into global memory.

```
__global__ void example(curandState *global_state)
{
    curandState local_state;
    local_state = global_state[threadIdx.x];
    for(int i = 0; i < 10000; i++) {
        unsigned int x = curand(&local_state);
        ...
    }
    global_state[threadIdx.x] = local_state;
}</pre>
```

Initialization of the random generator state generally requires more registers and local memory than random number generation. It may be beneficial to separate calls to **curand init()** and **curand()** into separate kernels for maximum performance.

State setup can be an expensive operation. One way to speed up the setup is to use different seeds for each thread and a constant sequence number of 0. This can be especially helpful if many generators need to be created. While faster to set up, this method provides less guarantees about the mathematical properties of the generated sequences. If there happens to be a bad interaction between the hash function that initializes the generator state from the seed and the periodicity of the generators, there might be threads with highly correlated outputs for some seed values. We do not know of any problem values; if they do exist they are likely to be rare.

3.6. Device API Examples

This example uses the CURAND device API to generate pseudorandom numbers using either the XORWOW or MRG32k3a generators. For integers, it calculates the proportion that have the low bit set. For uniformly distributed real numbers, it calculates the

proportion that are greater than 0.5. For normally distributed real numbers, it calculates the proportion that are within one standard deviation of the mean.

```
* This program uses the device CURAND API to calculate what
* proportion of pseudo-random ints have low bit set.
* It then generates uniform results to calculate how many
* are greater than .5.
* It then generates normal results to calculate how many
* are within one standard deviation of the mean.
#include <stdio.h>
#include <stdlib.h>
#include <cuda.h>
#include <curand kernel.h>
#define CUDA CALL(x) do { if((x) != cudaSuccess) { \
   printf("Error at %s:%d\n",__FILE__,_LINE__); \
   return EXIT FAILURE; }} while (0)
 _global__ void setup_kernel(curandState *state)
    int id = threadIdx.x + blockIdx.x * 64;
    /* Each thread gets same seed, a different sequence
      number, no offset */
   curand init(1234, id, 0, &state[id]);
 global void setup kernel(curandStatePhilox4 32 10 t *state)
   int id = threadIdx.x + blockIdx.x * 64;
   /* Each thread gets same seed, a different sequence
      number, no offset */
   curand init(1234, id, 0, &state[id]);
 global void setup_kernel(curandStateMRG32k3a *state)
   int id = threadIdx.x + blockIdx.x * 64;
   /* Each thread gets same seed, a different sequence
      number, no offset */
   curand init(0, id, 0, &state[id]);
 global void generate kernel(curandState *state,
                                int n,
                                unsigned int *result)
   int id = threadIdx.x + blockIdx.x * 64;
   int count = 0;
   unsigned int x;
   /* Copy state to local memory for efficiency */
   curandState localState = state[id];
    /* Generate pseudo-random unsigned ints */
    for(int i = 0; i < n; i++) {</pre>
       x = curand(&localState);
        /* Check if low bit set */
       if(x & 1) {
           count++;
   /* Copy state back to global memory */
   state[id] = localState;
   /* Store results */
   result[id] += count;
```

```
global void generate kernel(curandStatePhilox4 32 10 t *state,
                                int n,
                                unsigned int *result)
  int id = threadIdx.x + blockIdx.x * 64;
  int count = 0;
  unsigned int x;
   /* Copy state to local memory for efficiency */
  curandStatePhilox4 32 10 t localState = state[id];
   /* Generate pseudo-random unsigned ints */
   for(int i = 0; i < n; i++) {</pre>
      x = curand(&localState);
       /* Check if low bit set */
      if(x & 1) {
           count++;
   /* Copy state back to global memory */
  state[id] = localState;
   /* Store results */
  result[id] += count;
global void generate uniform kernel (curandState *state,
                                int n,
                                unsigned int *result)
  int id = threadIdx.x + blockIdx.x * 64;
  unsigned int count = 0;
  float x;
   /* Copy state to local memory for efficiency */
  curandState localState = state[id];
   /* Generate pseudo-random uniforms */
   for(int i = 0; i < n; i++) {
      x = curand uniform(&localState);
       /* Check i\overline{f} > .5 */
      if(x > .5) {
           count++;
   /* Copy state back to global memory */
  state[id] = localState;
   /* Store results */
  result[id] += count;
global void generate uniform kernel(curandStatePhilox4 32 10 t *state,
                                īnt n,
                                unsigned int *result)
  int id = threadIdx.x + blockIdx.x * 64;
  unsigned int count = 0;
  float x;
   /* Copy state to local memory for efficiency */
  curandStatePhilox4_32_10_t localState = state[id];
   /* Generate pseudo-random uniforms */
   for(int i = 0; i < n; i++) {</pre>
      x = curand_uniform(&localState);
       /* Check i\overline{f} > .5 */
      if(x > .5) {
           count++;
   /* Copy state back to global memory */
  state[id] = localState;
```

```
/* Store results */
   result[id] += count;
__global__ void generate_normal_kernel(curandState *state,
                                unsigned int *result)
   int id = threadIdx.x + blockIdx.x * 64;
   unsigned int count = 0;
   float2 x;
   /* Copy state to local memory for efficiency */
   curandState localState = state[id];
    /* Generate pseudo-random normals */
   for (int i = 0; i < n/2; i++) {
       x = curand normal2(&localState);
       /* Check i\overline{f} within one standard deviaton */
       if((x.x > -1.0) && (x.x < 1.0)) {
           count++;
       if((x.y > -1.0) && (x.y < 1.0)) {
           count++;
   /* Copy state back to global memory */
   state[id] = localState;
   /* Store results */
   result[id] += count;
global void generate normal kernel(curandStatePhilox4 32 10 t *state,
                                int n,
                                unsigned int *result)
   int id = threadIdx.x + blockIdx.x * 64;
   unsigned int count = 0;
   float2 x;
   /* Copy state to local memory for efficiency */
   curandStatePhilox4_32_10_t localState = state[id];
    /* Generate pseudo-random normals */
   for (int i = 0; i < n/2; i++) {
       x = curand normal2(&localState);
        /* Check i\overline{f} within one standard deviaton */
       if((x.x > -1.0) && (x.x < 1.0)) {
           count++;
       if((x.y > -1.0) && (x.y < 1.0)) {
           count++;
   /* Copy state back to global memory */
   state[id] = localState;
   /* Store results */
   result[id] += count;
global void generate kernel(curandStateMRG32k3a *state,
                                unsigned int *result)
   int id = threadIdx.x + blockIdx.x * 64;
   unsigned int count = 0;
   unsigned int x;
   /* Copy state to local memory for efficiency */
   curandStateMRG32k3a localState = state[id];
   /* Generate pseudo-random unsigned ints */
   for(int i = 0; i < n; i++) {</pre>
```

```
x = curand(&localState);
        /* Check if low bit set */
       if(x & 1) {
           count++;
    /* Copy state back to global memory */
   state[id] = localState;
    /* Store results */
   result[id] += count;
global void generate uniform kernel(curandStateMRG32k3a *state,
                                 int n,
                                unsigned int *result)
   int id = threadIdx.x + blockIdx.x * 64;
   unsigned int count = 0;
   double x;
   /* Copy state to local memory for efficiency */
   curandStateMRG32k3a localState = state[id];
    /* Generate pseudo-random uniforms */
    for(int i = 0; i < n; i++) {</pre>
       x = curand uniform double(&localState);
        /* Check i\overline{f} > .5 */
       if(x > .5) {
           count++;
    /* Copy state back to global memory */
   state[id] = localState;
   /* Store results */
   result[id] += count;
 global void generate normal kernel(curandStateMRG32k3a *state,
                                int n,
                                unsigned int *result)
   int id = threadIdx.x + blockIdx.x * 64;
   unsigned int count = 0;
   double2 x;
    /* Copy state to local memory for efficiency */
   curandStateMRG32k3a localState = state[id];
    /* Generate pseudo-random normals */
    for (int i = 0; i < n/2; i++) {
       x = curand normal2 double(&localState);
        /* Check if within one standard deviation */
       if((x.x > -1.0) && (x.x < 1.0)) {
            count++;
        if((x.y > -1.0) \&\& (x.y < 1.0)) {
            count++;
    /* Copy state back to global memory */
   state[id] = localState;
    /* Store results */
   result[id] += count;
int main(int argc, char *argv[])
   int i;
   unsigned int total;
   curandState *devStates;
   curandStateMRG32k3a *devMRGStates;
```

```
curandStatePhilox4 32 10 t *devPHILOXStates;
  unsigned int *devResults, *hostResults;
  bool useMRG = 0;
  bool usePHILOX = 0;
  int sampleCount = 10000;
  bool doubleSupported = 0;
  int device;
  struct cudaDeviceProp properties;
   /* check for double precision support */
  CUDA CALL(cudaGetDevice(&device));
  CUDA CALL (cudaGetDeviceProperties (&properties, device));
  if ( properties.major >= 2 || (properties.major == 1 && properties.minor >=
3) ) {
      doubleSupported = 1;
  }
   /* Check for MRG32k3a option (default is XORWOW) */
   if (argc >= 2) {
      if (strcmp(argv[1], "-m") == 0) {
          useMRG = 1;
           if (!doubleSupported) {
              printf("MRG32k3a requires double precision\n");
               printf("^^^^ test WAIVED due to lack of double precision\n");
               return EXIT SUCCESS;
      }else if (strcmp(argv[1], "-p") == 0) {
usePHILOX = 1;
}
       /* Allow over-ride of sample count */
      sscanf(argv[argc-1], "%d", &sampleCount);
   /* Allocate space for results on host */
  hostResults = (unsigned int *)calloc(64 * 64, sizeof(int));
   /* Allocate space for results on device */
  CUDA CALL(cudaMalloc((void **)&devResults, 64 * 64 *
             sizeof(unsigned int)));
   /* Set results to 0 */
  CUDA CALL(cudaMemset(devResults, 0, 64 * 64 *
            sizeof(unsigned int)));
   /* Allocate space for prng states on device */
  if (useMRG) {
      CUDA CALL(cudaMalloc((void **) &devMRGStates, 64 * 64 *
                sizeof(curandStateMRG32k3a)));
  }else if(usePHILOX) {
      CUDA CALL(cudaMalloc((void **)&devPHILOXStates, 64 * 64 *
                sizeof(curandStatePhilox4 32 10 t)));
      CUDA CALL(cudaMalloc((void **)&devStates, 64 * 64 *
                sizeof(curandState)));
   }
   /* Setup prng states */
  if (useMRG) {
      setup kernel<<<64, 64>>>(devMRGStates);
  }else if(usePHILOX)
      setup kernel<<<64, 64>>>(devPHILOXStates);
      setup kernel<<<64, 64>>>(devStates);
  /* Generate and use pseudo-random */
```

```
for(i = 0; i < 50; i++) {</pre>
       if (useMRG) {
           generate kernel<<<64, 64>>>(devMRGStates, sampleCount, devResults);
       }else if (usePHILOX) {
           generate kernel<<<64, 64>>>(devPHILOXStates, sampleCount,
devResults);
}else {
           generate kernel<<<64, 64>>>(devStates, sampleCount, devResults);
       }
   }
   /* Copy device memory to host */
   CUDA CALL(cudaMemcpy(hostResults, devResults, 64 * 64 *
       sizeof(unsigned int), cudaMemcpyDeviceToHost));
   /* Show result */
   total = 0;
   for (i = 0; i < 64 * 64; i++) {
       total += hostResults[i];
   printf("Fraction with low bit set was %10.13f\n",
       (float) total / (64.0f * 64.0f * sampleCount * 50.0f));
   /* Set results to 0 */
   CUDA CALL(cudaMemset(devResults, 0, 64 ^{\star} 64 ^{\star}
             sizeof(unsigned int)));
   /* Generate and use uniform pseudo-random */
   for(i = 0; i < 50; i++) {
       if (useMRG) {
           generate uniform kernel<<<64, 64>>>(devMRGStates, sampleCount,
devResults);
       }else if(usePHILOX) {
           generate uniform kernel<<<64, 64>>>(devPHILOXStates, sampleCount,
devResults);
}else {
           generate uniform kernel <<<64, 64>>> (devStates, sampleCount,
devResults);
      }
   /* Copy device memory to host */
   CUDA CALL(cudaMemcpy(hostResults, devResults, 64 * 64 *
       sizeof(unsigned int), cudaMemcpyDeviceToHost));
   /* Show result */
   total = 0;
   for(i = 0; i < 64 * 64; i++) {
       total += hostResults[i];
   printf("Fraction of uniforms > 0.5 was %10.13f\n",
       (float)total / (64.0f * 64.0f * sampleCount * 50.0f));
   /* Set results to 0 *,
   CUDA_CALL(cudaMemset(devResults, 0, 64 * 64 *
             sizeof(unsigned int)));
   /* Generate and use uniform pseudo-random */
   for(i = 0; i < 50; i++) {</pre>
       if (useMRG) {
           generate normal kernel<<<64, 64>>>(devMRGStates, sampleCount,
devResults);
       }else if(usePHILOX) {
           generate normal kernel<<<64, 64>>>(devPHILOXStates, sampleCount,
devResults);
}else {
           generate normal kernel<<<64, 64>>>(devStates, sampleCount,
devResults);
```

```
/* Copy device memory to host */
CUDA CALL(cudaMemcpy(hostResults, devResults, 64 * 64 *
    sizeof(unsigned int), cudaMemcpyDeviceToHost));
/* Show result */
total = 0;
for (i = 0; i < 64 * 64; i++) {
   total += hostResults[i];
printf("Fraction of normals within 1 standard deviation was 10.13f",
   (float) total / (64.0f * 64.0f * sampleCount * 50.0f));
/* Cleanup */
if (useMRG) {
   CUDA CALL (cudaFree (devMRGStates));
}else if(usePHILOX)
   CUDA CALL(cudaFree(devPHILOXStates));
   CUDA CALL(cudaFree(devStates));
CUDA CALL(cudaFree(devResults));
free(hostResults);
printf("^^^^ kernel_example PASSED\n");
return EXIT SUCCESS;
```

The following example uses the CURAND host MTGP setup API, and the CURAND device API, to generate integers using the MTGP32 generator, and calculates the proportion that have the low bit set.

```
* This program uses the device CURAND API to calculate what
* proportion of pseudo-random ints have low bit set.
#include <stdio.h>
#include <stdlib.h>
#include <cuda.h>
#include <curand kernel.h>
/* include MTGP host helper functions */
#include <curand mtgp32 host.h>
/* include MTGP pre-computed parameter sets */
#include <curand mtgp32dc p 11213.h>
#define CUDA CALL(x) do { if((x) != cudaSuccess) { \
    printf("Error at %s:%d\n", _FILE__, _LINE__); \
return EXIT_FAILURE;}} while(0)
\#define CURAND CALL(x) do { if((x) != CURAND STATUS SUCCESS) { \
   printf("Error at %s:%d\n", FILE__, LINE__); \
return EXIT_FAILURE;}} while(0)
__global__ void generate_kernel(curandStateMtgp32 *state,
                                  int n,
                                  int *result)
    int id = threadIdx.x + blockIdx.x * 256;
    int count = 0;
    unsigned int x;
    /* Generate pseudo-random unsigned ints */
    for(int i = 0; i < n; i++) {</pre>
       x = curand(&state[blockIdx.x]);
```

```
/* Check if low bit set */
       if(x & 1) {
           count++;
    /* Store results */
   result[id] += count;
int main(int argc, char *argv[])
   int i;
   long long total;
   curandStateMtgp32 *devMTGPStates;
   mtgp32 kernel params *devKernelParams;
   int *devResults, *hostResults;
   int sampleCount = 10000;
    /* Allow over-ride of sample count */
   if (argc == 2) {
       sscanf(argv[1],"%d",&sampleCount);
    /* Allocate space for results on host */
   hostResults = (int *)calloc(64 * 256, sizeof(int));
    /* Allocate space for results on device */
   CUDA CALL(cudaMalloc((void **)&devResults, 64 * 256 *
              sizeof(int)));
    /* Set results to 0 */
   CUDA CALL(cudaMemset(devResults, 0, 64 * 256 *
             sizeof(int)));
    /* Allocate space for prng states on device */
   CUDA CALL(cudaMalloc((void **)&devMTGPStates, 64 *
              sizeof(curandStateMtgp32)));
   /* Setup MTGP prng states */
   /* Allocate space for MTGP kernel parameters */
CUDA CALL(cudaMalloc((void**)&devKernelParams, sizeof(mtgp32 kernel params)));
    /* Reformat from predefined parameter sets to kernel format, */
   /\star and copy kernel parameters to device memory
   CURAND CALL (curandMakeMTGP32Constants (mtgp32dc params fast 11213,
devKernelParams));
    /* Initialize one state per thread block */
   CURAND CALL (curandMakeMTGP32KernelState (devMTGPStates,
                mtgp32dc params fast 11213, devKernelParams, 64, 1234));
   /* State setup is complete */
    /* Generate and use pseudo-random */
   for(i = 0; i < 10; i++) {
       generate kernel<<<64, 256>>>(devMTGPStates, sampleCount, devResults);
    /* Copy device memory to host */
   CUDA CALL(cudaMemcpy(hostResults, devResults, 64 * 256 *
       sizeof(int), cudaMemcpyDeviceToHost));
    /* Show result */
    total = 0;
   for (i = 0; i < 64 * 256; i++) {
```

3.7. Thrust and CURAND Example

The following example demonstrates mixing CURAND and Thrust. It is a minimally modified version of $monte_carlo.cu$, one of the standard Thrust examples. The example estimates π by randomly picking points in the unit square and calculating the distance to the origin to see if the points are in the quarter unit circle.

```
#include <thrust/iterator/counting iterator.h>
#include <thrust/functional.h>
#include <thrust/transform reduce.h>
#include <curand kernel.h>
#include <iostream>
#include <iomanip>
// we could vary M & N to find the perf sweet spot
struct estimate pi :
   public thrust::unary function<unsigned int, float>
 float operator() (unsigned int thread_id)
   float sum = 0;
   unsigned int N = 10000; // samples per thread
   unsigned int seed = thread id;
   curandState s;
    // seed a random number generator
   curand init(seed, 0, 0, &s);
    // take N samples in a quarter circle
    for (unsigned int i = 0; i < N; ++i)
      // draw a sample from the unit square
     float x = curand_uniform(&s);
     float y = curand uniform(&s);
      // measure distance from the origin
      float dist = sqrtf(x*x + y*y);
      // add 1.0f if (u0,u1) is inside the quarter circle
     if (dist <= 1.0f)</pre>
       sum += 1.0f;
   // multiply by 4 to get the area of the whole circle
```

```
sum *= 4.0f;
    // divide by N
    return sum / N;
};
int main (void)
  // use 30K independent seeds
 int M = 30000;
  float estimate = thrust::transform reduce(
        thrust::counting iterator<int>(0),
        thrust::counting_iterator<int>(M),
        estimate pi(),
        0.0f,
        thrust::plus<float>());
  estimate /= M;
 std::cout << std::setprecision(3);</pre>
 std::cout << "pi is approximately ";</pre>
 std::cout << estimate << std::endl;</pre>
  return 0;
```

3.8. Poisson API Example

This example shows the differences between the 3 API types for the Poisson distribution. It is a simulation of queues in a store. The host API is the most robust for generating large vectors of Poisson-distributed random numbers. (i.e. it has the best statistical properties across the full range of lambda values) The discrete Device API is almost as robust as the HOST API and allows Poisson-distributed random numbers to be generated inside a kernel. The simple Device API is the least robust but is more efficient when generating Poisson-distributed random numbers for many different lambdas.

```
* This program uses CURAND library for Poisson distribution
* to simulate queues in store for 16 hours. It shows the
* difference of using 3 different APIs:
  - HOST API -arrival of customers is described by Poisson(4)
 * - SIMPLE DEVICE API -arrival of customers is described by
      Poisson(4*(\sin(x/100)+1)), where x is number of minutes
      from store opening time.
 * - ROBUST DEVICE API -arrival of customers is described by:
      - Poisson(2) for first 3 hours.
      - Poisson(1) for second 3 hours.
      - Poisson(3) after 6 hours.
#include <stdio.h>
#include <stdlib.h>
#include <cuda.h>
#include <curand kernel.h>
#include <curand.h>
#define CUDA CALL(x) do { if((x) != cudaSuccess) { \
   printf("Error at %s:%d\n",__FILE__,__LINE__); \
   return EXIT FAILURE; } while (0)
#define CURAND_CALL(x) do { if((x)!=CURAND_STATUS SUCCESS) { \
   printf("Error at %s:%d\n",__FILE__,_LINE__);\
   return EXIT FAILURE; } while (0)
```

```
#define HOURS 16
#define OPENING HOUR 7
#define CLOSING_HOUR (OPENING_HOUR + HOURS)
#define access_2D(type, ptr, row, column, pitch) \
   *((type*)((char*)ptr + (row) * pitch) + column)
enum API TYPE {
   HOSTAPI = 0,
   SIMPLE DEVICE API = 1,
   ROBUST DEVICE API = 2,
};
/* global variables */
API TYPE api;
int report_break;
int cashiers_load_h[HOURS];
__constant__ int cashiers_load[HOURS];
 global void setup kernel(curandState *state)
    int id = threadIdx.x + blockIdx.x * blockDim.x;
    /* Each thread gets same seed, a different sequence
      number, no offset */
   curand init(1234, id, 0, &state[id]);
 inline
          device
void update queue(int id, int min, unsigned int new customers,
                 unsigned int &queue length,
                 unsigned int *queue lengths, size t pitch)
{
   int balance;
   balance = new_customers - 2 * cashiers_load[(min-1)/60];
    if (balance + (int) queue length <= 0) {
       queue_length = 0;
    }else{
       queue length += balance;
   /* Store results */
   access_2D(unsigned int, queue_lengths, min-1, id, pitch)
       = queue length;
 global void simple device API kernel(curandState *state,
                   unsigned int *queue lengths, size t pitch)
   int id = threadIdx.x + blockIdx.x * blockDim.x;
   unsigned int new customers;
   unsigned int queue length = 0;
    /* Copy state to local memory for efficiency */
   curandState localState = state[id];
    /* Simulate queue in time *,
    for(int min = 1; min <= 60 * HOURS; min++) {</pre>
        /* Draw number of new customers depending on API */
       new_customers = curand_poisson(&localState,
                                4*(sin((float)min/100.0)+1));
        /* Update queue */
       update_queue(id, min, new_customers, queue_length,
                     queue lengths, pitch);
    /* Copy state back to global memory */
   state[id] = localState;
```

```
__global__ void host_API_kernel(unsigned int *poisson_numbers,
                    unsigned int *queue_lengths, size_t pitch)
   int id = threadIdx.x + blockIdx.x * blockDim.x;
   unsigned int new customers;
   unsigned int queue_length = 0;
    /* Simulate queue in time */
   for(int min = 1; min <= 60 * HOURS; min++) {</pre>
       /* Get random number from global memory */
       new_customers = poisson_numbers
                   [blockDim.x * gridDim.x * (min -1) + id];
        /* Update queue */
       update_queue(id, min, new_customers, queue_length,
                     queue lengths, pitch);
global void robust device API kernel(curandState *state,
                   curandDiscreteDistribution t poisson 1,
                   curandDiscreteDistribution t poisson 2,
                   curandDiscreteDistribution_t poisson_3,
                   unsigned int *queue_lengths, size_t pitch)
   int id = threadIdx.x + blockIdx.x * 64;
   unsigned int new customers;
   unsigned int queue length = 0;
    /* Copy state to local memory for efficiency */
   curandState localState = state[id];
    /* Simulate queue in time */
    /* first 3 hours */
    for(int min = 1; min <= 60 * 3; min++) {</pre>
       /* draw number of new customers depending on API */
       new customers =
                   curand discrete(&localState, poisson 2);
       /* Update queue */
       update_queue(id, min, new_customers, queue_length,
                                    queue lengths, pitch);
    /* second 3 hours */
    for(int min = 60 * 3 + 1; min <= 60 * 6; min++) {</pre>
       /* draw number of new customers depending on API */
       new_customers =
                   curand discrete(&localState, poisson 1);
        /* Update queue */
       update_queue(id, min, new_customers, queue_length,
                                    queue lengths, pitch);
    /* after 6 hours */
    for(int min = 60 * 6 + 1; min <= 60 * HOURS; min++) {</pre>
       /* draw number of new customers depending on API */
       new customers =
                   curand discrete(&localState, poisson 3);
        /* Update queue */
       update queue (id, min, new customers, queue length,
                                    queue_lengths, pitch);
    /* Copy state back to global memory */
   state[id] = localState;
/* Set time intervals between reports */
void report settings()
      printf("Set time intervals between queue reports");
```

```
printf("(in minutes > 0)\n");
        if (scanf("%d", &report_break) == 0) continue;
    }while(report break <= 0);</pre>
/* Set number of cashiers each hour */
void add cachiers(int *cashiers load)
    int i, min, max, begin, end;
    printf("Cashier serves 2 customers per minute...\n");
    for (i = 0; i < HOURS; i++) {
        cashiers load h[i] = 0;
    while (true) {
       printf("Adding cashier...\n");
        min = OPENING HOUR;
        max = CLOSING HOUR-1;
            printf("Set hour that cahier comes (%d-%d)",
                                                  min, max):
            printf(" [type 0 to finish adding cashiers]\n");
            if (scanf("%d", &begin) == 0) continue;
        }while (begin > max || (begin < min && begin != 0));</pre>
        if (begin == 0) break;
        min = begin+1;
        max = CLOSING HOUR;
        do {
            printf("Set hour that cahier leaves (%d-%d)",
            printf(" [type 0 to finish adding cashiers]\n");
            if (scanf("%d", &end) == 0) continue;
        \ while (end > max || (end < min && end != 0));
        if (end == 0) break;
        for (i = begin - OPENING_HOUR;
    i < end - OPENING_HOUR; i++) {</pre>
            cashiers load h[i]++;
    for (i = OPENING HOUR; i < CLOSING HOUR; i++) {</pre>
        printf("\n^2 \overline{d}:00 - \n^2 2 d:00
                                       ₹d cashier",
                 i, i+1, cashiers load h[i-OPENING HOUR]);
        if (cashiers load[i-OPENING HOUR] != 1) printf("s");
    printf("\n");
/* Set API type */
API TYPE set API type()
    printf("Choose API type:\n");
    int choose;
    do{
        printf("type 1 for HOST API\n");
        printf("type 2 for SIMPLE DEVICE API\n");
        printf("type 3 for ROBUST DEVICE API\n");
        if (scanf("%d", &choose) == 0) continue;
    }while( choose < 1 || choose > 3);
    switch (choose) {
        case 1: return HOST API;
        case 2: return SIMPLE_DEVICE_API;
        case 3: return ROBUST_DEVICE_API;
           fprintf(stderr, "wrong API\n");
            return HOST_API;
```

```
void settings()
    add_cachiers(cashiers_load);
    cudaMemcpyToSymbol("cashiers_load", cashiers_load_h,
            HOURS * sizeof(int), 0, cudaMemcpyHostToDevice);
    report settings();
    api = set_API_type();
void print statistics(unsigned int *hostResults, size t pitch)
    int min, i, hour, minute;
    unsigned int sum;
    for(min = report_break; min <= 60 * HOURS;</pre>
                             min += report_break) {
        sum = 0;
        for(i = 0; i < 64 * 64; i++) {
            sum += access 2D(unsigned int, hostResults,
                                          min-1, i, pitch);
        hour = OPENING HOUR + min/60;
        minute = min\%60;
        printf("%2d:%02d
                            # of waiting customers = %10.4g |",
                    hour, minute, (float) sum/(64.0 * 64.0));
        printf(" # of cashiers = %d | ",
                    cashiers_load_h[(min-1)/60]);
        printf("# of new customers/min ~= ");
        switch (api) {
            case HOST API:
                 print\overline{f}("%2.2f\n", 4.0);
                break;
            case SIMPLE DEVICE API:
               printf(\overline{"}%2.2f\\overline{n}",
                              4*(sin((float)min/100.0)+1));
                break;
            case ROBUST DEVICE API:
                 if (min <= 3 * 60) {
                     printf("%2.2f\n", 2.0);
                 }else{
                     if (min <= 6 * 60) {</pre>
                         printf("%2.2f\n", 1.0);
                     }else{
                         printf("%2.2f\n", 3.0);
                 break;
            default:
                 fprintf(stderr, "Wrong API\n");
   }
int main(int argc, char *argv[])
    int n;
    size t pitch;
    curandState *devStates;
    unsigned int *devResults, *hostResults;
unsigned int *poisson_numbers_d;
   curandDiscreteDistribution_t poisson_1, poisson_2;
   curandDiscreteDistribution_t poisson_3;
    curandGenerator t gen;
    /* Setting cashiers, report and API */
   settings();
```

```
/* Allocate space for results on device */
CUDA_CALL(cudaMallocPitch((void **)&devResults, &pitch, 64 * 64 * sizeof(unsigned int), 60 * HOURS));
/* Allocate space for results on host */
hostResults = (unsigned int *) calloc (pitch * 60 * HOURS,
            sizeof(unsigned int));
/* Allocate space for prng states on device */
CUDA CALL(cudaMalloc((void **)&devStates, 64 * 64 *
          sizeof(curandState)));
/* Setup prng states */
if (api != HOST_API) {
    setup_kernel<<<64, 64>>>(devStates);
/* Simulate queue */
switch (api) {
   case HOST API:
        /* Create pseudo-random number generator */
        CURAND CALL (curandCreateGenerator (&gen,
                            CURAND_RNG_PSEUDO_DEFAULT));
        /* Set seed */
        CURAND CALL(curandSetPseudoRandomGeneratorSeed(
                                         gen, 1234ULL));
        /* compute n */
        n = 64 * 64 * HOURS * 60;
        /* Allocate n unsigned ints on device */
        CUDA CALL(cudaMalloc((void **) &poisson numbers d,
                            n * sizeof(unsigned int)));
        /* Generate n unsigned ints on device */
        CURAND CALL (curandGeneratePoisson (gen,
                            poisson_numbers_d, n, 4.0));
        host API kernel <<< 64, 64>>> (poisson numbers d,
                                     devResults, pitch);
        /* Cleanup */
        CURAND CALL(curandDestroyGenerator(gen));
        break:
    case SIMPLE DEVICE API:
        simple device API kernel <<< 64, 64>>> (devStates,
                                     devResults, pitch);
        break:
    case ROBUST_DEVICE_API:
        /* Create histograms for Poisson(1) */
        CURAND CALL (curandCreatePoissonDistribution (1.0,
                                              &poisson_1));
        /* Create histograms for Poisson(2) *,
        CURAND CALL(curandCreatePoissonDistribution(2.0,
        /* Create histograms for Poisson(3) */
        CURAND CALL (curandCreatePoissonDistribution (3.0,
                                              &poisson 3));
        robust_device_API_kernel<<<64, 64>>>(devStates,
                         poisson_1, poisson_2, poisson_3,
                         devResults, pitch);
        /* Cleanup */
        CURAND CALL(curandDestroyDistribution(poisson 1));
        CURAND CALL(curandDestroyDistribution(poisson 2));
        CURAND CALL(curandDestroyDistribution(poisson 3));
        break;
    default:
        fprintf(stderr, "Wrong API\n");
/* Copy device memory to host */
CUDA_CALL(cudaMemcpy2D(hostResults, pitch, devResults,
           pitch, 64 * 64 * sizeof(unsigned int),
```

```
60 * HOURS, cudaMemcpyDeviceToHost));
/* Show result */
print_statistics(hostResults, pitch);
/* Cleanup */
CUDA_CALL(cudaFree(devStates));
CUDA_CALL(cudaFree(devResults));
free(hostResults);
return EXIT_SUCCESS;
}
```

Chapter 4. TESTING

The XORWOW generator was proposed by Marsaglia [5] and has been tested using the TestU01 "Crush" framework of tests [6]. The full suite of NIST pseudorandomness tests [7] has also been run, though the focus has been on TestU01. The most rigorous the the TestU01 batteries is "BigCrush", which executes 106 statistical tests over the course of approximately 5 hours on a high-end CPU/GPU. The XORWOW generator passes all of the tests on most runs, but does produce occasional suspect statistics. Below is an example of the summary output from a run that did not pass all tests, with the detail of the specific failure.

```
====== Summary results of BigCrush =======
 Version: TestU01 1.2.3
Generator: curandXORWOW
 Number of statistics: 160
 Total CPU time: 05:17:59.63
 The following tests gave p-values outside [0.001, 0.9990]:
 (eps means a value < 1.0e-300):
 (eps1 means a value < 1.0e-15):
      Test
                                    p-value
 81 LinearComp, r = 29 1 - 7.1e-11
 All other tests were passed
Detail from test 81:
scomp LinearComp test:
 N = 1, n = 400020, r = 29, s = 1
Number of degrees of freedom : 12
Chi2 statistic for size of jumps : 7.11
The statistic for size of jumps : 0.85
______
Normal statistic for number of jumps : -6.41
```

```
p-value of test : 1 - 7.1e-11 *****
```

To put this into perspective, there is a table in [6] that gives the results of running various levels of the "Crush" tests on a broad selection of generators. Only a small number of generators pass all of the BigCrush tests. For example the widely-respected Mersenne twister [8] consistently fails two of the linear complexity tests.

The MRG32k3a generator was proposed in [9], with a specific implementation suggested in [10]. This generator passes all "BigCrush" tests frequently, with occasional marginal results similar to those shown below.

```
====== Summary results of BigCrush =======
Version: TestU01 1.2.3
Generator: curandMRG32k3a
Number of statistics: 160
Total CPU time: 07:14:55.41
The following tests gave p-values outside [0.001, 0.9990]:
 (eps means a value < 1.0e-300):
 (eps1 means a value < 1.0e-15):
     Test
_____
59 WeightDistrib, r = 0 5.2e-4
 _____
All other tests were passed
Detail from test 59:
svaria WeightDistrib test:
 N = 1, n = 20000000, r = 0, k = 256, Alpha = 0, Beta =
0.25
Number of degrees of freedom : 67
Chi-square statistic : 111.55
                              : 5.2e-4 ****
p-value of test
_____
CPU time used
                          : 00:02:56.25
```

The MTGP32 generator is an adaptation of the work outlined in [1]. The MTGP32 generator exhibits some marginal results on "BigCrush". Below is an example.

```
Version: TestU01 1.2.3

Generator: curandMtgp32Int

Number of statistics: 160

Total CPU time: 05:45:29.49

The following tests gave p-values outside [0.001, 0.9990]:

(eps means a value < 1.0e-300):

(eps1 means a value < 1.0e-15):

Test p-value

12 CollisionOver, t = 21 0.9993
```

```
All other tests were passed
Detail from test 12:
smultin MultinomialOver test:
  N = 30, n = 20000000, r = 28, d = 4, t = 21,
       Sparse = TRUE
       GenerCell = smultin GenerCellSerial
       Number of cells = \overline{d} = 4398046511104
Expected number per cell = 1 / 219902.33
       EColl = n^2 / (2k) = 45.47473509
       Hashing = TRUE
       Collision test
       CollisionOver: density = n / k = 1 / 219902.33
       Expected number of collisions = Mu = 45.47
Results of CollisionOver test:
POISSON approximation
Expected number of collisions = N*Mu : 1364.24
Observed number of collisions : 1248
p-value of test : 0.9993 *****
Total number of cells containing j balls
                                        : 131940795334368
 j = 1
j = 2
                                        : 599997504
                                                  1248
                                        :
  j = 3
j = 4
                                        :
                                                         0
                                                           0
                                        :
                            : 00:04:32.52
CPU time used
```

Sobol' sequences are generated using the direction vectors recommended by Joe and Kuo [2]. The scrambled Sobol' method is described in [3] and [4].

Testing of the normal distribution, with the each of the generators, has been done using the Pearson chi-squared test [11], [12], the Jarque-Bera test [13], the Kolmogorov-Smirnov test [14], [15], and the Anderson-Darling test [16].

Tests are run over the range +/- 6 standard deviations. Three Pearson tests are run, with cell counts 1000, 100, and 25. The test output has columns labeled PK for Pearson with 1000 cells, PC for Pearson with 100 cells, P25 for Pearson with 25 cells, JB for Jarque-Bera, KS for Kolmogorov-Smirnov, and AD for Anderson-Darling. The rejection criterion for each test is printed below the label.

The following tables are representative of the test output for statistical testing of the normal distribution for XORWOW, MRG32k3a, MTGP32, Sobol' 32-bit, and scrambled Sobol' 32-bit generators. The rows of each table represent the statistical results computed over successive sequences of 10000 samples.

XORWOW Generator:

PK AD	PC	P25	JВ	KS	
<1058 <.632	<118	<33	<4.6	<0.0122	
684.48120 0.32829	58.97784	20.44693	2.84152	0.00540	
686.37925 0.25832	54.84938	7.79583	0.55109	0.00900	
673.21437 0.26772	69.15825	15.46540	0.30335	0.00872	
568.26999 0.22939	49.99519	8.85046	0.66624	0.00870	
639.10690 0.27939	84.23040	10.19753	0.19844	0.00542	

MRg32k3a Generator:

PK AD	PC	P25	JB	KS	
<1058 <.632	<118	<33	<4.6	<0.0122	
764 20500	74 40157	10 20716	1 50110	0 01102	
764.38500 0.60351	74.48157	19.32716	1.50118	0.01103	
795.31006	74.15086	11.78414	1.15159	0.00821	
0.35343 741.85426 0.61787	91.88692	20.67103	2.34232	0.00900	
644.62093	70.68369	17.18277	0.32870	0.01243*	
0.34630 806.02693 0.51466	93.50691	23.10548	2.67340	0.00978	

MTGP32 Generator:

PK	PC	P25	JB	KS	
AD <1058	<118	<33	<4.6	<0.0122	
<.632					
924.62604	110.19868	23.45811	0.86919	0.00519	
0.33411	79.42919	20.67913	1 12407	0 01140	
708.76047 0.54632	79.42919	20.67913	1.13427	0.01142	
674.17713	65.80415	13.09834	1.07799	0.01040	
0.23860					
733.35915	57.13829	17.66337	3.17017	0.01188	
0.30864					
620.17297	50.39043	14.75682	0.57970	0.00845	
0.28916					

Philox_4x32_10 Generator:

PK AD	PC	P25	JB	KS	
<1058	<118	<33	<4.6	<0.0122	
<.632					
688.73231	78.60241	18.28300	0.23786	0.00520	
0.24052 600.66650	59.78966	21.59090	4.24401	0.00464	
0.49806	39.70900	21.39090	4.24401	0.00404	
916.60146	78.16294	10.01345	1.53526	0.00660	
0.25025	64 00000	4.5.00000	0 50560	0.0064.4	
713.67544	61.20329	15.82239	0.79568	0.00614	
699.84498 0.29227	80.73224	16.07304	1.37786	0.00464	

Sobol' 32-bit generator:

PK AD <1058 <.632	PC <118	P25 <33	JB <4.6	KS <0.0122	
157.04578 0.00188	6.47398	1.45802	0.19007	0.00024	
243.82767 0.00086	11.98164	1.34982	0.00668	0.00030	
229.87234	10.40206	2.73912	0.04165	0.00036	
0.00137 290.29451 0.00172	17.09013	3.25717	0.02583	0.00042	
327.32072 0.00127	19.22832	5.09510	0.00335	0.00036	

Scrambled Sobol' 32-bit generator:

PK	PC	P25	JB	KS	
AD <1058 <.632	<118	<33	<4.6	<0.0122	
255.80606 0.00112	10.93180	1.33766	0.01226	0.00036	
258.84244 0.00170	8.45589	1.56766	0.04164	0.00036	
585.34346 0.00208	49.33610	5.32037	0.04069	0.00043	
337.50312 0.00211	27.64720	3.38925	0.01953	0.00041	
729.56687 0.00204	56.89682	32.89772	0.00911	0.00040	

Even though the log-normal distribution is closely derived from the normal distribution, it has also been tested using the Pearson chi-squared test and the Kolmogorov-Smirnov test.

The following tables are representative of the test output for statistical testing of the log normal distribution for XORWOW, MRG32k3a, MTGP32, Sobol' 32-bit, and scrambled Sobol' 32-bit generators.

XORWOW generator:

PK <1058	PC <118	P25 <33	KS <0.0122
1019.57936	105.63667	13.15820	0.00540
991.93663 983.09678	91.95369 115.34978	20.46549	0.00940
966.45604 996.35262	113.30013 111.50026	24.54060	0.00872 0.00870 0.00542

MRG32k3a generator:

PK	PC	P25	KS
<1058	<118	<33	<0.0122
1000.00359	90.12428	22.82709	0.00826
942.17843	81.16259	16.13670	0.00739
1005.62148	102.29924	23.62705	0.00697
1053.68391	98.75565	28.65422	0.01107
998.38936	103.43649	19.26568	0.00803

MTGP32 generator:

PK	PC	P25	KS
<1058	<118	<33	<0.0122
1010.18903 993.78319 1010.22068 963.33103 927.15616	94.51850 76.86543 63.76027 89.44369 75.85515	17.98126 12.48859 11.65743 17.96636	0.00771 0.00831 0.00677 0.01200 0.00566

Philox_4x32_10 generator:

PK	PC	P25	KS
<1058	<118	<33	<0.0122
992.19843	100.39826	14.91235	0.00357
962.03714	115.40663	18.03086	0.00595
1006.41781	92.84903	27.33686	0.00385
1009.75491	96.93654	11.99484	0.00520
1003.85449	89.00801	15.64060	0.00464

Sobol' 32-bit generator:

PK	PC	P25	KS	
<1058	<118	<33	<0.0122	
289.42589 386.79860	5.03327 6.57783	0.48858 0.76902	0.00024	

355.04631	8.54472	1.12228	0.00036	
434.19211	9.54021	2.07006	0.00042	
343.57507	10.71571	0.42503	0.00036	

Scrambled Sobol- 32-bit generator:

PK	PC	P25	KS	
<1058	<118	<33	<0.0122	
354.55037	8.20727	0.24592	0.00036	
506.45280	12.93848	0.73323	0.00036	
451.96949	18.18903	0.69465	0.00043	
593.25666	16.55782	0.54769	0.00041	
423.05263	12.06600	0.53472	0.00040	

Testing of the Poisson-distribution, with the each of the generators, has been done using the Pearson chi-squared test [11].

Tests are run over a broad range of lambda values, and the statistics are compared to those for Poisson distribution results using MKL.

Chapter 5. MODULES

Here is a list of all modules:

- Host API
- Device API

5.1. Host API

enum curandDirectionVectorSet

CURAND choice of direction vector set

Values

CURAND_DIRECTION_VECTORS_32_JOEKUO6 = 101

Specific set of 32-bit direction vectors generated from polynomials recommended by S. Joe and F. Y. Kuo, for up to 20,000 dimensions.

CURAND_SCRAMBLED_DIRECTION_VECTORS_32_JOEKUO6 = 102

Specific set of 32-bit direction vectors generated from polynomials recommended by S. Joe and F. Y. Kuo, for up to 20,000 dimensions, and scrambled.

CURAND_DIRECTION_VECTORS_64_JOEKUO6 = 103

Specific set of 64-bit direction vectors generated from polynomials recommended by S. Joe and F. Y. Kuo, for up to 20,000 dimensions.

CURAND_SCRAMBLED_DIRECTION_VECTORS_64_JOEKUO6 = 104

Specific set of 64-bit direction vectors generated from polynomials recommended by S. Joe and F. Y. Kuo, for up to 20,000 dimensions, and scrambled.

enum curandOrdering

CURAND ordering of results in memory

Values

CURAND_ORDERING_PSEUDO_BEST = 100

Best ordering for pseudorandom results.

CURAND_ORDERING_PSEUDO_DEFAULT = 101

Specific default 4096 thread sequence for pseudorandom results.

CURAND_ORDERING_PSEUDO_SEEDED = 102

Specific seeding pattern for fast lower quality pseudorandom results.

CURAND_ORDERING_QUASI_DEFAULT = 201

Specific n-dimensional ordering for quasirandom results.

enum curandRngType

CURAND generator types

Values

 $CURAND_RNG_TEST = 0$

CURAND_RNG_PSEUDO_DEFAULT = 100

Default pseudorandom generator.

CURAND_RNG_PSEUDO_XORWOW = 101

XORWOW pseudorandom generator.

CURAND_RNG_PSEUDO_MRG32K3A = 121

MRG32k3a pseudorandom generator.

CURAND_RNG_PSEUDO_MTGP32 = 141

Mersenne Twister pseudorandom generator.

CURAND_RNG_PSEUDO_PHILOX4_32_10 = 161

Default pseudorandom generator.

CURAND_RNG_QUASI_DEFAULT = 200

Default quasirandom generator.

CURAND_RNG_QUASI_SOBOL32 = 201

Sobol32 quasirandom generator.

CURAND_RNG_QUASI_SCRAMBLED_SOBOL32 = 202

Scrambled Sobol32 quasirandom generator.

CURAND_RNG_QUASI_SOBOL64 = 203

Sobol64 quasirandom generator.

CURAND_RNG_QUASI_SCRAMBLED_SOBOL64 = 204

Scrambled Sobol64 quasirandom generator.

enum curandStatus

CURAND function call status types

Values

CURAND_STATUS_SUCCESS = 0

No errors.

CURAND_STATUS_VERSION_MISMATCH = 100

Header file and linked library version do not match.

CURAND_STATUS_NOT_INITIALIZED = 101

Generator not initialized.

CURAND_STATUS_ALLOCATION_FAILED = 102

Memory allocation failed.

CURAND_STATUS_TYPE_ERROR = 103

Generator is wrong type.

CURAND_STATUS_OUT_OF_RANGE = 104

Argument out of range.

CURAND_STATUS_LENGTH_NOT_MULTIPLE = 105

Length requested is not a multple of dimension.

CURAND_STATUS_DOUBLE_PRECISION_REQUIRED = 106

GPU does not have double precision required by MRG32k3a.

CURAND_STATUS_LAUNCH_FAILURE = 201

Kernel launch failure.

CURAND_STATUS_PREEXISTING_FAILURE = 202

Preexisting failure on library entry.

CURAND_STATUS_INITIALIZATION_FAILED = 203

Initialization of CUDA failed.

CURAND_STATUS_ARCH_MISMATCH = 204

Architecture mismatch, GPU does not support requested feature.

CURAND_STATUS_INTERNAL_ERROR = 999

Internal library error.

curandStatus_t CURANDAPI curandCreateGenerator (curandGenerator_t *generator, curandRngType_t rng_type)

Create new random number generator.

Parameters

generator

- Pointer to generator

rng_type

- Type of generator to create

Returns

- CURAND_STATUS_ALLOCATION_FAILED, if memory could not be allocated
- CURAND_STATUS_INITIALIZATION_FAILED if there was a problem setting up the GPU
- ► CURAND_STATUS_VERSION_MISMATCH if the header file version does not match the dynamically linked library version
- CURAND_STATUS_TYPE_ERROR if the value for rng_type is invalid
- CURAND_STATUS_SUCCESS if generator was created successfully

Description

CURAND generator CURAND distribution CURAND distribution M2 Creates a new random number generator of type rng type and returns it in *generator.

Legal values for rng type are:

- CURAND_RNG_PSEUDO_DEFAULT
- CURAND_RNG_PSEUDO_XORWOW
- CURAND_RNG_PSEUDO_MRG32K3A
- CURAND_RNG_PSEUDO_MTGP32
- ► CURAND_RNG_PSEUDO_PHILOX4_32_10
- CURAND_RNG_QUASI_DEFAULT
- CURAND RNG QUASI SOBOL32
- CURAND_RNG_QUASI_SCRAMBLED_SOBOL32
- CURAND_RNG_QUASI_SOBOL64
- CURAND_RNG_QUASI_SCRAMBLED_SOBOL64

When rng_type is CURAND_RNG_PSEUDO_DEFAULT, the type chosen is CURAND_RNG_PSEUDO_XORWOW. When rng_type is CURAND_RNG_QUASI_DEFAULT, the type chosen is CURAND_RNG_QUASI_SOBOL32.

The default values for rng type = CURAND_RNG_PSEUDO_XORWOW are:

- ▶ seed = 0
- ▶ offset = 0
- ordering = CURAND_ORDERING_PSEUDO_DEFAULT

The default values for rng type = CURAND_RNG_PSEUDO_MRG32K3A are:

- \triangleright seed = 0
- offset = 0
- ordering = CURAND_ORDERING_PSEUDO_DEFAULT

The default values for rng type = CURAND_RNG_PSEUDO_MTGP32 are:

- ▶ seed = 0
- ▶ offset = 0
- ordering = CURAND_ORDERING_PSEUDO_DEFAULT
- * The default values for rng type = CURAND_RNG_PSEUDO_PHILOX4_32_10 are:
- ▶ seed = 0
- \triangleright offset = 0
- ordering = CURAND_ORDERING_PSEUDO_DEFAULT

The default values for rng_type = CURAND_RNG_QUASI_SOBOL32 are:

- \blacktriangleright dimensions = 1
- offset = 0
- ordering = CURAND_ORDERING_QUASI_DEFAULT

The default values for rng type = CURAND_RNG_QUASI_SOBOL64 are:

- \blacktriangleright dimensions = 1
- \triangleright offset = 0
- ordering = CURAND_ORDERING_QUASI_DEFAULT

The default values for rng_type = CURAND_RNG_QUASI_SCRAMBBLED_SOBOL32 are:

- \blacktriangleright dimensions = 1
- offset = 0
- ordering = CURAND ORDERING QUASI DEFAULT

The default values for rng_type = CURAND_RNG_QUASI_SCRAMBLED_SOBOL64 are:

- \blacktriangleright dimensions = 1
- \triangleright offset = 0
- ordering = CURAND_ORDERING_QUASI_DEFAULT

curandStatus_t CURANDAPI curandCreateGeneratorHost (curandGenerator_t *generator, curandRngType_t rng_type)

Create new host CPU random number generator.

Parameters

generator

- Pointer to generator

rng_type

- Type of generator to create

Returns

- CURAND_STATUS_ALLOCATION_FAILED if memory could not be allocated
- CURAND_STATUS_INITIALIZATION_FAILED if there was a problem setting up the GPU
- ► CURAND_STATUS_VERSION_MISMATCH if the header file version does not match the dynamically linked library version
- CURAND_STATUS_TYPE_ERROR if the value for rng_type is invalid
- CURAND_STATUS_SUCCESS if generator was created successfully

Description

Creates a new host CPU random number generator of type rng_type and returns it in *generator.

Legal values for rng_type are:

- CURAND_RNG_PSEUDO_DEFAULT
- CURAND_RNG_PSEUDO_XORWOW
- CURAND_RNG_PSEUDO_MRG32K3A
- CURAND_RNG_PSEUDO_MTGP32
- CURAND_RNG_PSEUDO_PHILOX4_32_10
- CURAND_RNG_QUASI_DEFAULT
- CURAND RNG QUASI SOBOL32

When rng_type is CURAND_RNG_PSEUDO_DEFAULT, the type chosen is CURAND_RNG_PSEUDO_XORWOW. When rng_type is CURAND_RNG_QUASI_DEFAULT, the type chosen is CURAND_RNG_QUASI_SOBOL32.

The default values for rng type = CURAND_RNG_PSEUDO_XORWOW are:

- \triangleright seed = 0
- offset = 0
- ordering = CURAND ORDERING PSEUDO DEFAULT

The default values for rng type = CURAND RNG PSEUDO MRG32K3A are:

- ▶ seed = 0
- ▶ offset = 0
- ordering = CURAND_ORDERING_PSEUDO_DEFAULT

The default values for rng_type = CURAND_RNG_PSEUDO_MTGP32 are:

▶ seed = 0

- offset = 0
- ordering = CURAND_ORDERING_PSEUDO_DEFAULT
- * The default values for rng_type = CURAND_RNG_PSEUDO_PHILOX4_32_10 are:
- ▶ seed = 0
- \triangleright offset = 0
- ordering = CURAND_ORDERING_PSEUDO_DEFAULT

The default values for rng_type = CURAND_RNG_QUASI_SOBOL32 are:

- \blacktriangleright dimensions = 1
- \triangleright offset = 0
- ordering = CURAND_ORDERING_QUASI_DEFAULT

The default values for rng_type = CURAND_RNG_QUASI_SOBOL64 are:

- \blacktriangleright dimensions = 1
- \triangleright offset = 0
- ordering = CURAND_ORDERING_QUASI_DEFAULT

The default values for rng_type = CURAND_RNG_QUASI_SCRAMBLED_SOBOL32 are:

- \blacktriangleright dimensions = 1
- \triangleright offset = 0
- ordering = CURAND ORDERING QUASI DEFAULT

The default values for rng_type = CURAND_RNG_QUASI_SCRAMBLED_SOBOL64 are:

- \blacktriangleright dimensions = 1
- offset = 0
- ordering = CURAND_ORDERING_QUASI_DEFAULT

curandStatus_t CURANDAPI curandCreatePoissonDistribution (double lambda, curandDiscreteDistribution_t *discrete_distribution)

Construct the histogram array for a Poisson distribution.

Parameters

lambda

- lambda for the Poisson distribution

discrete_distribution

- pointer to the histogram in device memory

- CURAND_STATUS_ALLOCATION_FAILED if memory could not be allocated
- CURAND_STATUS_ARCH_MISMATCH if the GPU does not support double precision
- CURAND_STATUS_INITIALIZATION_FAILED if there was a problem setting up the GPU
- CURAND_STATUS_PREEXISTING_FAILURE if there was an existing error from a previous kernel launch
- CURAND_STATUS_OUT_OF_RANGE if lambda is non-positive or greater than 400,000
- CURAND_STATUS_SUCCESS if the histogram were generated successfully

Description

Construct the histogram array for the Poisson distribution with lambda lambda. For lambda greater than 2000, an approximation with a normal distribution is used.

curandStatus_t CURANDAPI curandDestroyDistribution (curandDiscreteDistribution_t discrete_distribution)

Destroy the histogram array for a discrete distribution (e.g. Poisson).

Parameters

discrete distribution

- pointer to device memory where the histogram is stored

Returns

- CURAND_STATUS_NOT_INITIALIZED if the histogram was never created
- CURAND_STATUS_SUCCESS if the histogram was destroyed successfully

Description

Destroy the histogram array for a discrete distribution created by curandCreatePoissonDistribution.

curandStatus_t CURANDAPI curandDestroyGenerator (curandGenerator_t generator)

Destroy an existing generator.

Parameters

generator

- Generator to destroy

Returns

- CURAND_STATUS_NOT_INITIALIZED if the generator was never created
- CURAND_STATUS_SUCCESS if generator was destroyed successfully

Description

Destroy an existing generator and free all memory associated with its state.

curandStatus_t CURANDAPI curandGenerate (curandGenerator_t generator, unsigned int *outputPtr, size_t num)

Generate 32-bit pseudo or quasirandom numbers.

Parameters

generator

- Generator to use

outputPtr

- Pointer to device memory to store CUDA-generated results, or Pointer to host memory to store CPU-generated results

num

- Number of random 32-bit values to generate

Returns

- CURAND_STATUS_NOT_INITIALIZED if the generator was never created
- CURAND_STATUS_PREEXISTING_FAILURE if there was an existing error from a previous kernel launch
- ► CURAND_STATUS_LENGTH_NOT_MULTIPLE if the number of output samples is not a multiple of the quasirandom dimension
- CURAND_STATUS_LAUNCH_FAILURE if the kernel launch failed for any reason
- CURAND_STATUS_TYPE_ERROR if the generator is a 64 bit quasirandom generator. (use curandGenerateLongLong() with 64 bit quasirandom generators)

CURAND_STATUS_SUCCESS if the results were generated successfully

Description

Use generator to generate num 32-bit results into the device memory at outputPtr. The device memory must have been previously allocated and be large enough to hold all the results. Launches are done with the stream set using curandSetStream(), or the null stream if no stream has been set.

Results are 32-bit values with every bit random.

curandStatus_t CURANDAPI curandGenerateLogNormal (curandGenerator_t generator, float *outputPtr, size_t n, float mean, float stddev)

Generate log-normally distributed floats.

Parameters

generator

- Generator to use

outputPtr

- Pointer to device memory to store CUDA-generated results, or Pointer to host memory to store CPU-generated results

n

- Number of floats to generate

mean

- Mean of associated normal distribution

stddev

- Standard deviation of associated normal distribution

Returns

- CURAND_STATUS_NOT_INITIALIZED if the generator was never created
- CURAND_STATUS_PREEXISTING_FAILURE if there was an existing error from a previous kernel launch
- ► CURAND_STATUS_LAUNCH_FAILURE if the kernel launch failed for any reason
- ► CURAND_STATUS_LENGTH_NOT_MULTIPLE if the number of output samples is not a multiple of the quasirandom dimension, or is not a multiple of two for pseudorandom generators
- ► CURAND_STATUS_SUCCESS if the results were generated successfully

Description

Use generator to generate n float results into the device memory at outputPtr. The device memory must have been previously allocated and be large enough to hold all the results. Launches are done with the stream set using curandSetStream(), or the null stream if no stream has been set.

Results are 32-bit floating point values with log-normal distribution based on an associated normal distribution with mean mean and standard deviation stddev.

Normally distributed results are generated from pseudorandom generators with a Box-Muller transform, and so require n to be even. Quasirandom generators use an inverse cumulative distribution function to preserve dimensionality. The normally distributed results are transformed into log-normal distribution.

There may be slight numerical differences between results generated on the GPU with generators created with curandCreateGenerator() and results calculated on the CPU with generators created with curandCreateGeneratorHost(). These differences arise because of differences in results for transcendental functions. In addition, future versions of CURAND may use newer versions of the CUDA math library, so different versions of CURAND may give slightly different numerical values.

curandStatus_t CURANDAPI curandGenerateLogNormalDouble (curandGenerator_t generator, double *outputPtr, size_t n, double mean, double stddev)

Generate log-normally distributed doubles.

Parameters

generator

- Generator to use

outputPtr

- Pointer to device memory to store CUDA-generated results, or Pointer to host memory to store CPU-generated results

n

- Number of doubles to generate

mean

- Mean of normal distribution

stddev

- Standard deviation of normal distribution

Returns

CURAND_STATUS_NOT_INITIALIZED if the generator was never created

- CURAND_STATUS_PREEXISTING_FAILURE if there was an existing error from a previous kernel launch
- CURAND_STATUS_LAUNCH_FAILURE if the kernel launch failed for any reason
- CURAND_STATUS_LENGTH_NOT_MULTIPLE if the number of output samples is not a multiple of the quasirandom dimension, or is not a multiple of two for pseudorandom generators
- CURAND_STATUS_ARCH_MISMATCH if the GPU does not support double precision
- CURAND_STATUS_SUCCESS if the results were generated successfully

Description

Use generator to generate n double results into the device memory at outputPtr. The device memory must have been previously allocated and be large enough to hold all the results. Launches are done with the stream set using curandSetStream(), or the null stream if no stream has been set.

Results are 64-bit floating point values with log-normal distribution based on an associated normal distribution with mean mean and standard deviation stddev.

Normally distributed results are generated from pseudorandom generators with a Box-Muller transform, and so require n to be even. Quasirandom generators use an inverse cumulative distribution function to preserve dimensionality. The normally distributed results are transformed into log-normal distribution.

There may be slight numerical differences between results generated on the GPU with generators created with curandCreateGenerator() and results calculated on the CPU with generators created with curandCreateGeneratorHost(). These differences arise because of differences in results for transcendental functions. In addition, future versions of CURAND may use newer versions of the CUDA math library, so different versions of CURAND may give slightly different numerical values.

curandStatus_t CURANDAPI curandGenerateLongLong (curandGenerator_t generator, unsigned long long *outputPtr, size_t num)

Generate 64-bit quasirandom numbers.

Parameters

generator

- Generator to use

outputPtr

- Pointer to device memory to store CUDA-generated results, or Pointer to host memory to store CPU-generated results

num

- Number of random 64-bit values to generate

Returns

- CURAND_STATUS_NOT_INITIALIZED if the generator was never created
- CURAND_STATUS_PREEXISTING_FAILURE if there was an existing error from a previous kernel launch
- CURAND_STATUS_LENGTH_NOT_MULTIPLE if the number of output samples is not a multiple of the quasirandom dimension
- CURAND_STATUS_LAUNCH_FAILURE if the kernel launch failed for any reason
- CURAND_STATUS_TYPE_ERROR if the generator is not a 64 bit quasirandom generator
- CURAND_STATUS_SUCCESS if the results were generated successfully

Description

Use generator to generate num 64-bit results into the device memory at outputPtr. The device memory must have been previously allocated and be large enough to hold all the results. Launches are done with the stream set using curandSetStream(), or the null stream if no stream has been set.

Results are 64-bit values with every bit random.

curandStatus_t CURANDAPI curandGenerateNormal (curandGenerator_t generator, float *outputPtr, size_t n, float mean, float stddev)

Generate normally distributed doubles.

Parameters

generator

- Generator to use

outputPtr

- Pointer to device memory to store CUDA-generated results, or Pointer to host memory to store CPU-generated results

n

- Number of floats to generate

mean

- Mean of normal distribution

stddev

- Standard deviation of normal distribution

- ► CURAND_STATUS_NOT_INITIALIZED if the generator was never created
- CURAND_STATUS_PREEXISTING_FAILURE if there was an existing error from a previous kernel launch
- ► CURAND_STATUS_LAUNCH_FAILURE if the kernel launch failed for any reason
- ► CURAND_STATUS_LENGTH_NOT_MULTIPLE if the number of output samples is not a multiple of the quasirandom dimension, or is not a multiple of two for pseudorandom generators
- CURAND_STATUS_SUCCESS if the results were generated successfully

Description

Use generator to generate n float results into the device memory at outputPtr. The device memory must have been previously allocated and be large enough to hold all the results. Launches are done with the stream set using curandSetStream(), or the null stream if no stream has been set.

Results are 32-bit floating point values with mean mean and standard deviation stddev.

Normally distributed results are generated from pseudorandom generators with a Box-Muller transform, and so require n to be even. Quasirandom generators use an inverse cumulative distribution function to preserve dimensionality.

There may be slight numerical differences between results generated on the GPU with generators created with curandCreateGenerator() and results calculated on the CPU with generators created with curandCreateGeneratorHost(). These differences arise because of differences in results for transcendental functions. In addition, future versions of CURAND may use newer versions of the CUDA math library, so different versions of CURAND may give slightly different numerical values.

curandStatus_t CURANDAPI curandGenerateNormalDouble (curandGenerator_t generator, double *outputPtr, size_t n, double mean, double stddev)

Generate normally distributed doubles.

Parameters

generator

- Generator to use

outputPtr

- Pointer to device memory to store CUDA-generated results, or Pointer to host memory to store CPU-generated results

n

- Number of doubles to generate

mean

- Mean of normal distribution

stddev

- Standard deviation of normal distribution

Returns

- CURAND_STATUS_NOT_INITIALIZED if the generator was never created
- ► CURAND_STATUS_PREEXISTING_FAILURE if there was an existing error from a previous kernel launch
- ► CURAND_STATUS_LAUNCH_FAILURE if the kernel launch failed for any reason
- CURAND_STATUS_LENGTH_NOT_MULTIPLE if the number of output samples is not a multiple of the quasirandom dimension, or is not a multiple of two for pseudorandom generators
- CURAND_STATUS_ARCH_MISMATCH if the GPU does not support double precision
- ► CURAND_STATUS_SUCCESS if the results were generated successfully

Description

Use generator to generate n double results into the device memory at outputPtr. The device memory must have been previously allocated and be large enough to hold all the results. Launches are done with the stream set using curandSetStream(), or the null stream if no stream has been set.

Results are 64-bit floating point values with mean mean and standard deviation stddev.

Normally distributed results are generated from pseudorandom generators with a Box-Muller transform, and so require n to be even. Quasirandom generators use an inverse cumulative distribution function to preserve dimensionality.

There may be slight numerical differences between results generated on the GPU with generators created with curandCreateGenerator() and results calculated on the CPU with generators created with curandCreateGeneratorHost(). These differences arise because of differences in results for transcendental functions. In addition, future versions of CURAND may use newer versions of the CUDA math library, so different versions of CURAND may give slightly different numerical values.

curandStatus_t CURANDAPI curandGeneratePoisson (curandGenerator_t generator, unsigned int *outputPtr, size_t n, double lambda)

Generate Poisson-distributed unsigned ints.

Parameters

generator

- Generator to use

outputPtr

- Pointer to device memory to store CUDA-generated results, or Pointer to host memory to store CPU-generated results

n

- Number of unsigned ints to generate

lambda

- lambda for the Poisson distribution

Returns

- CURAND_STATUS_NOT_INITIALIZED if the generator was never created
- CURAND_STATUS_PREEXISTING_FAILURE if there was an existing error from a previous kernel launch
- CURAND_STATUS_LAUNCH_FAILURE if the kernel launch failed for any reason
- CURAND_STATUS_LENGTH_NOT_MULTIPLE if the number of output samples is not a multiple of the quasirandom dimension
- CURAND_STATUS_ARCH_MISMATCH if the GPU or sm does not support double precision
- CURAND_STATUS_OUT_OF_RANGE if lambda is non-positive or greater than 400,000
- CURAND_STATUS_SUCCESS if the results were generated successfully

Description

Use generator to generate n unsigned int results into device memory at outputPtr. The device memory must have been previously allocated and must be large enough to hold all the results. Launches are done with the stream set using curandSetStream(), or the null stream if no stream has been set.

Results are 32-bit unsigned int point values with Poisson distribution, with lambda lambda.

curandStatus_t CURANDAPI curandGenerateSeeds (curandGenerator_t generator)

Setup starting states.

Parameters

generator

- Generator to update

Returns

- CURAND_STATUS_NOT_INITIALIZED if the generator was never created
- CURAND_STATUS_PREEXISTING_FAILURE if there was an existing error from a previous kernel launch
- ► CURAND_STATUS_LAUNCH_FAILURE if the kernel launch failed for any reason
- CURAND_STATUS_SUCCESS if the seeds were generated successfully

Description

Generate the starting state of the generator. This function is automatically called by generation functions such as curandGenerate() and curandGenerateUniform(). It can be called manually for performance testing reasons to separate timings for starting state generation and random number generation.

curandStatus_t CURANDAPI curandGenerateUniform (curandGenerator_t generator, float *outputPtr, size_t num)

Generate uniformly distributed floats.

Parameters

generator

- Generator to use

outputPtr

- Pointer to device memory to store CUDA-generated results, or Pointer to host memory to store CPU-generated results

num

- Number of floats to generate

Returns

CURAND_STATUS_NOT_INITIALIZED if the generator was never created

- CURAND_STATUS_PREEXISTING_FAILURE if there was an existing error from a previous kernel launch
- ► CURAND_STATUS_LAUNCH_FAILURE if the kernel launch failed for any reason
- CURAND_STATUS_LENGTH_NOT_MULTIPLE if the number of output samples is not a multiple of the quasirandom dimension
- ► CURAND_STATUS_SUCCESS if the results were generated successfully

Description

Use generator to generate num float results into the device memory at outputPtr. The device memory must have been previously allocated and be large enough to hold all the results. Launches are done with the stream set using curandSetStream(), or the null stream if no stream has been set.

Results are 32-bit floating point values between 0.0f and 1.0f, excluding 0.0f and including 1.0f.

curandStatus_t CURANDAPI curandGenerateUniformDouble (curandGenerator_t generator, double *outputPtr, size_t num)

Generate uniformly distributed doubles.

Parameters

generator

- Generator to use

outputPtr

- Pointer to device memory to store CUDA-generated results, or Pointer to host memory to store CPU-generated results

num

- Number of doubles to generate

Returns

- CURAND_STATUS_NOT_INITIALIZED if the generator was never created
- CURAND_STATUS_PREEXISTING_FAILURE if there was an existing error from a previous kernel launch
- CURAND_STATUS_LAUNCH_FAILURE if the kernel launch failed for any reason
- CURAND_STATUS_LENGTH_NOT_MULTIPLE if the number of output samples is not a multiple of the quasirandom dimension
- CURAND_STATUS_ARCH_MISMATCH if the GPU does not support double precision
- CURAND_STATUS_SUCCESS if the results were generated successfully

Description

Use generator to generate num double results into the device memory at outputPtr. The device memory must have been previously allocated and be large enough to hold all the results. Launches are done with the stream set using curandSetStream(), or the null stream if no stream has been set.

Results are 64-bit double precision floating point values between 0.0 and 1.0, excluding 0.0 and including 1.0.

curandStatus_t CURANDAPI curandGetDirectionVectors32 (curandDirectionVectors32_t *vectors[], curandDirectionVectorSet_t set)

Get direction vectors for 32-bit quasirandom number generation.

Parameters

vectors

- Address of pointer in which to return direction vectors

set

- Which set of direction vectors to use

Returns

- CURAND_STATUS_OUT_OF_RANGE if the choice of set is invalid
- CURAND_STATUS_SUCCESS if the pointer was set successfully

Description

Get a pointer to an array of direction vectors that can be used for quasirandom number generation. The resulting pointer will reference an array of direction vectors in host memory.

The array contains vectors for many dimensions. Each dimension has 32 vectors. Each individual vector is an unsigned int.

Legal values for set are:

- CURAND DIRECTION VECTORS 32 JOEKUO6 (20,000 dimensions)
- ► CURAND_SCRAMBLED_DIRECTION_VECTORS_32_JOEKUO6 (20,000 dimensions)

curandStatus_t CURANDAPI curandGetDirectionVectors64 (curandDirectionVectors64_t *vectors[], curandDirectionVectorSet_t set)

Get direction vectors for 64-bit quasirandom number generation.

Parameters

vectors

- Address of pointer in which to return direction vectors

set

- Which set of direction vectors to use

Returns

- CURAND_STATUS_OUT_OF_RANGE if the choice of set is invalid
- CURAND_STATUS_SUCCESS if the pointer was set successfully

Description

Get a pointer to an array of direction vectors that can be used for quasirandom number generation. The resulting pointer will reference an array of direction vectors in host memory.

The array contains vectors for many dimensions. Each dimension has 64 vectors. Each individual vector is an unsigned long long.

Legal values for set are:

- ► CURAND_DIRECTION_VECTORS_64_JOEKUO6 (20,000 dimensions)
- CURAND_SCRAMBLED_DIRECTION_VECTORS_64_JOEKUO6 (20,000 dimensions)

curandStatus_t CURANDAPI curandGetScrambleConstants32 (unsigned int **constants)

Get scramble constants for 32-bit scrambled Sobol'.

Parameters

constants

- Address of pointer in which to return scramble constants

CURAND_STATUS_SUCCESS if the pointer was set successfully

Description

Get a pointer to an array of scramble constants that can be used for quasirandom number generation. The resulting pointer will reference an array of unsinged ints in host memory.

The array contains constants for many dimensions. Each dimension has a single unsigned int constant.

curandStatus_t CURANDAPI curandGetScrambleConstants64 (unsigned long long **constants)

Get scramble constants for 64-bit scrambled Sobol'.

Parameters

constants

- Address of pointer in which to return scramble constants

Returns

CURAND_STATUS_SUCCESS if the pointer was set successfully

Description

Get a pointer to an array of scramble constants that can be used for quasirandom number generation. The resulting pointer will reference an array of unsinged long longs in host memory.

The array contains constants for many dimensions. Each dimension has a single unsigned long long constant.

curandStatus_t CURANDAPI curandGetVersion (int *version)

Return the version number of the library.

Parameters

version

- CURAND library version

► CURAND_STATUS_SUCCESS if the version number was successfully returned

Description

Return in *version the version number of the dynamically linked CURAND library. The format is the same as CUDART_VERSION from the CUDA Runtime. The only supported configuration is CURAND version equal to CUDA Runtime version.

curandStatus_t CURANDAPI curandSetGeneratorOffset (curandGenerator_t generator, unsigned long long offset)

Set the absolute offset of the pseudo or quasirandom number generator.

Parameters

generator

- Generator to modify

offset

- Absolute offset position

Returns

- CURAND_STATUS_NOT_INITIALIZED if the generator was never created
- CURAND_STATUS_SUCCESS if generator offset was set successfully

Description

Set the absolute offset of the pseudo or quasirandom number generator.

All values of offset are valid. The offset position is absolute, not relative to the current position in the sequence.

curandStatus_t CURANDAPI curandSetGeneratorOrdering (curandGenerator_t generator, curandOrdering_t order)

Set the ordering of results of the pseudo or quasirandom number generator.

Parameters

generator

- Generator to modify

order

- Ordering of results

- CURAND_STATUS_NOT_INITIALIZED if the generator was never created
- CURAND_STATUS_OUT_OF_RANGE if the ordering is not valid
- CURAND_STATUS_SUCCESS if generator ordering was set successfully

Description

Set the ordering of results of the pseudo or quasirandom number generator.

Legal values of order for pseudorandom generators are:

- CURAND_ORDERING_PSEUDO_DEFAULT
- CURAND ORDERING PSEUDO BEST
- CURAND_ORDERING_PSEUDO_SEEDED

Legal values of order for quasirandom generators are:

CURAND_ORDERING_QUASI_DEFAULT

curandStatus_t CURANDAPI curandSetPseudoRandomGeneratorSeed (curandGenerator_t generator, unsigned long long seed)

Set the seed value of the pseudo-random number generator.

Parameters

generator

- Generator to modify

seed

- Seed value

Returns

- CURAND_STATUS_NOT_INITIALIZED if the generator was never created
- CURAND_STATUS_TYPE_ERROR if the generator is not a pseudorandom number generator
- CURAND_STATUS_SUCCESS if generator seed was set successfully

Description

Set the seed value of the pseudorandom number generator. All values of seed are valid. Different seeds will produce different sequences. Different seeds will often not be statistically correlated with each other, but some pairs of seed values may generate sequences which are statistically correlated.

curandStatus_t CURANDAPI curandSetQuasiRandomGeneratorDimensions (curandGenerator_t generator, unsigned int num_dimensions)

Set the number of dimensions.

Parameters

generator

- Generator to modify

num dimensions

- Number of dimensions

Returns

- CURAND_STATUS_NOT_INITIALIZED if the generator was never created
- CURAND_STATUS_OUT_OF_RANGE if num_dimensions is not valid
- CURAND_STATUS_TYPE_ERROR if the generator is not a quasirandom number generator
- CURAND_STATUS_SUCCESS if generator ordering was set successfully

Description

Set the number of dimensions to be generated by the quasirandom number generator.

Legal values for num dimensions are 1 to 20000.

curandStatus_t CURANDAPI curandSetStream (curandGenerator_t generator, cudaStream_t stream)

Set the current stream for CURAND kernel launches.

Parameters

generator

- Generator to modify

stream

- Stream to use or NULL for null stream

Returns

- CURAND_STATUS_NOT_INITIALIZED if the generator was never created
- CURAND_STATUS_SUCCESS if stream was set successfully

Description

Set the current stream for CURAND kernel launches. All library functions will use this stream until set again.

5.2. Device API

__device__ unsigned int curand (curandStateMtgp32_t *state)

Return 32-bits of pseudorandomness from a mtgp32 generator.

Parameters

state

- Pointer to state to update

Returns

32-bits of pseudorandomness as an unsigned int, all bits valid to use.

Description

Return 32-bits of pseudorandomness from the mtgp32 generator in state, increment position of generator by the number of threads in the block. Note the number of threads in the block can not exceed 256.

__device__ unsigned long long curand (curandStateScrambledSobol64_t *state)

Return 64-bits of quasirandomness from a scrambled Sobol64 generator.

Parameters

state

- Pointer to state to update

Returns

64-bits of quasirandomness as an unsigned long long, all bits valid to use.

Description

Return 64-bits of quasirandomness from the scrambled Sobol32 generator in state, increment position of generator by one.

__device__ unsigned long long curand (curandStateSobol64_t *state)

Return 64-bits of quasirandomness from a Sobol64 generator.

Parameters

state

- Pointer to state to update

Returns

64-bits of quasirandomness as an unsigned long long, all bits valid to use.

Description

Return 64-bits of quasirandomness from the Sobol64 generator in state, increment position of generator by one.

__device__ unsigned int curand (curandStateScrambledSobol32_t *state)

Return 32-bits of quasirandomness from a scrambled Sobol32 generator.

Parameters

state

- Pointer to state to update

Returns

32-bits of quasirandomness as an unsigned int, all bits valid to use.

Description

Return 32-bits of quasirandomness from the scrambled Sobol32 generator in state, increment position of generator by one.

__device__ unsigned int curand (curandStateSobol32_t *state)

Return 32-bits of quasirandomness from a Sobol32 generator.

Parameters

state

- Pointer to state to update

Returns

32-bits of quasirandomness as an unsigned int, all bits valid to use.

Description

Return 32-bits of quasirandomness from the Sobol32 generator in state, increment position of generator by one.

__device__ unsigned int curand (curandStateMRG32k3a_t *state)

Return 32-bits of pseudorandomness from an MRG32k3a generator.

Parameters

state

- Pointer to state to update

Returns

32-bits of pseudorandomness as an unsigned int, all bits valid to use.

Description

Return 32-bits of pseudorandomness from the MRG32k3a generator in state, increment position of generator by one.

__device__ unsigned int curand (curandStatePhilox4_32_10_t *state)

Return 32-bits of pseudorandomness from an Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

Returns

32-bits of pseudorandomness as an unsigned int, all bits valid to use.

Description

Return 32-bits of pseudorandomness from the Philox4_32_10 generator in state, increment position of generator by one.

__device__ unsigned int curand (curandStateXORWOW_t *state)

Return 32-bits of pseudorandomness from an XORWOW generator.

Parameters

state

- Pointer to state to update

Returns

32-bits of pseudorandomness as an unsigned int, all bits valid to use.

Description

Return 32-bits of pseudorandomness from the XORWOW generator in state, increment position of generator by one.

__device__ uint4 curand4 (curandStatePhilox4_32_10_t *state)

Return tuple of 4 32-bits of pseudorandomness from an Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

Returns

32-bits of pseudorandomness as an unsigned int, all bits valid to use.

Description

Return four 32-bits of pseudorandomness from the Philox4_32_10 generator in state, increment position of generator by four.

__device__ void curand_init (curandDirectionVectors64_t direction_vectors, unsigned long long scramble_c, unsigned long long offset, curandStateScrambledSobol64_t *state)

Initialize Scrambled Sobol64 state.

Parameters

direction_vectors

- Pointer to array of 64 unsigned long longs representing the direction vectors for the desired dimension

scramble_c

Scramble constant

offset

- Absolute offset into sequence

state

- Pointer to state to initialize

Description

Initialize Sobol64 state in state with the given direction vectors and offset.

The direction vector is a device pointer to an array of 64 unsigned long longs. All input values of offset are legal.

__device__ void curand_init (curandDirectionVectors64_t direction_vectors, unsigned long long offset, curandStateSobol64_t *state) Initialize Sobol64 state.

Parameters

direction_vectors

- Pointer to array of 64 unsigned long longs representing the direction vectors for the desired dimension

offset

- Absolute offset into sequence

state

- Pointer to state to initialize

Description

Initialize Sobol64 state in state with the given direction vectors and offset.

The direction vector is a device pointer to an array of 64 unsigned long longs. All input values of offset are legal.

__device__ void curand_init (curandDirectionVectors32_t direction_vectors, unsigned int scramble_c, unsigned int offset, curandStateScrambledSobol32_t *state)

Initialize Scrambled Sobol32 state.

Parameters

direction_vectors

- Pointer to array of 32 unsigned ints representing the direction vectors for the desired dimension

scramble c

Scramble constant

offset

- Absolute offset into sequence

state

- Pointer to state to initialize

Description

Initialize Sobol32 state in state with the given direction vectors and offset.

The direction vector is a device pointer to an array of 32 unsigned ints. All input values of offset are legal.

__device__ void curand_init
(curandDirectionVectors32_t direction_vectors,
unsigned int offset, curandStateSobol32_t *state)

Initialize Sobol32 state.

Parameters

direction_vectors

- Pointer to array of 32 unsigned ints representing the direction vectors for the desired dimension

offset

- Absolute offset into sequence

state

- Pointer to state to initialize

Description

Initialize Sobol32 state in state with the given direction vectors and offset.

The direction vector is a device pointer to an array of 32 unsigned ints. All input values of offset are legal.

__device__ void curand_init (unsigned long long seed, unsigned long long subsequence, unsigned long long offset, curandStateMRG32k3a_t *state)

Initialize MRG32k3a state.

Parameters

seed

- Arbitrary bits to use as a seed

subsequence

- Subsequence to start at

offset

- Absolute offset into sequence

state

- Pointer to state to initialize

Description

Initialize MRG32k3a state in state with the given seed, subsequence, and offset.

All input values of seed, subsequence, and offset are legal. subsequence will be truncated to 51 bits to avoid running into the next sequence

A value of 0 for seed sets the state to the values of the original published version of the MRG32k3a algorithm.

__device__ void curand_init (unsigned long long seed, unsigned long long id, unsigned long long offset, curandStatePhilox4_32_10_t *state)

Initialize Philox4_32_10 state.

Parameters

seed

- Arbitrary bits to use as a seed

id

- thread id (second seed value)

offset

- Absolute offset into sequence

state

- Pointer to state to initialize

Description

Initialize Philox4_32_10 state in state with the given seed and id

All input values for seed and id are legal. id should be different for each thread

__device__ void curand_init (unsigned long long seed, unsigned long long subsequence, unsigned long long offset, curandStateXORWOW_t *state)

Initialize XORWOW state.

Parameters

seed

- Arbitrary bits to use as a seed

subsequence

- Subsequence to start at

offset

- Absolute offset into sequence

state

- Pointer to state to initialize

Description

Initialize XORWOW state in state with the given seed, subsequence, and offset.

All input values of seed, subsequence, and offset are legal. Large values for subsequence and offset require more computation and so will take more time to complete.

A value of 0 for seed sets the state to the values of the original published version of the xorwow algorithm.

__device__ float curand_log_normal (curandStateScrambledSobol64_t *state, float mean, float stddev)

Return a log-normally distributed float from a scrambled Sobol64 generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed float with mean mean and standard deviation stddev

Description

Return a single log-normally distributed float derived from a normal distribution with mean mean and standard deviation stddev from the scrambled Sobol64 generator in state, increment position of generator by one.

The implementation uses the inverse cumulative distribution function to generate normally distributed results, then converts to log-normal distribution.

__device__ float curand_log_normal (curandStateSobol64_t *state, float mean, float stddev)

Return a log-normally distributed float from a Sobol64 generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed float with mean mean and standard deviation stddev

Description

Return a single log-normally distributed float derived from a normal distribution with mean mean and standard deviation stddev from the Sobol64 generator in state, increment position of generator by one.

The implementation uses the inverse cumulative distribution function to generate normally distributed results, then converts to log-normal distribution.

__device__ float curand_log_normal (curandStateScrambledSobol32_t *state, float mean, float stddev)

Return a log-normally distributed float from a scrambled Sobol32 generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed float with mean mean and standard deviation stddev

Description

Return a single log-normally distributed float derived from a normal distribution with mean mean and standard deviation stddev from the scrambled Sobol32 generator in state, increment position of generator by one.

The implementation uses the inverse cumulative distribution function to generate a normally distributed result, then transforms the result to log-normal.

__device__ float curand_log_normal (curandStateSobol32_t *state, float mean, float stddev)

Return a log-normally distributed float from a Sobol32 generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed float with mean mean and standard deviation stddev

Description

Return a single log-normally distributed float derived from a normal distribution with mean mean and standard deviation stddev from the Sobol32 generator in state, increment position of generator by one.

The implementation uses the inverse cumulative distribution function to generate a normally distributed result, then transforms the result to log-normal.

__device__ float curand_log_normal (curandStateMtgp32_t *state, float mean, float stddev)

Return a log-normally distributed float from an MTGP32 generator.

Parameters

state

- Pointer to state to update

mean

Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed float with mean mean and standard deviation stddev

Description

Return a single log-normally distributed float derived from a normal distribution with mean mean and standard deviation stddev from the MTGP32 generator in state, increment position of generator.

The implementation uses the inverse cumulative distribution function to generate a normally distributed result, then transforms the result to log-normal.

__device__ float curand_log_normal (curandStateMRG32k3a_t *state, float mean, float stddev)

Return a log-normally distributed float from an MRG32k3a generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed float with mean mean and standard deviation stddev

Description

Return a single log-normally distributed float derived from a normal distribution with mean mean and standard deviation stddev from the MRG32k3a generator in state, increment position of generator by one.

The implementation uses a Box-Muller transform to generate two normally distributed results, transforms them to log-normal distribution, then returns them one at a time. See curand_log_normal2() for a more efficient version that returns both results at once.

__device__ float curand_log_normal (curandStatePhilox4_32_10_t *state, float mean, float stddev)

Return a log-normally distributed float from an Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed float with mean mean and standard deviation stddev

Description

Return a single log-normally distributed float derived from a normal distribution with mean mean and standard deviation stddev from the Philox4_32_10 generator in state, increment position of generator by one.

The implementation uses a Box-Muller transform to generate two normally distributed results, transforms them to log-normal distribution, then returns them one at a time. See curand_log_normal2() for a more efficient version that returns both results at once.

__device__ float curand_log_normal (curandStateXORWOW_t *state, float mean, float stddev)

Return a log-normally distributed float from an XORWOW generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed float with mean mean and standard deviation stddev

Description

Return a single log-normally distributed float derived from a normal distribution with mean mean and standard deviation stddev from the XORWOW generator in state, increment position of generator by one.

The implementation uses a Box-Muller transform to generate two normally distributed results, transforms them to log-normal distribution, then returns them one at a time. See curand_log_normal2() for a more efficient version that returns both results at once.

__device__ float2 curand_log_normal2 (curandStateMRG32k3a_t *state, float mean, float stddev)

Return two normally distributed floats from an MRG32k3a generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed float2 where each element is from a distribution with mean mean and standard deviation stddev

Description

Return two log-normally distributed floats derived from a normal distribution with mean mean and standard deviation stddev from the MRG32k3a generator in state, increment position of generator by two.

The implementation uses a Box-Muller transform to generate two normally distributed results, then transforms them to log-normal.

__device__ float2 curand_log_normal2 (curandStatePhilox4_32_10_t *state, float mean, float stddev)

Return two normally distributed floats from an Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed float2 where each element is from a distribution with mean mean and standard deviation stddev

Description

Return two log-normally distributed floats derived from a normal distribution with mean mean and standard deviation stddev from the Philox4_32_10 generator in state, increment position of generator by two.

The implementation uses a Box-Muller transform to generate two normally distributed results, then transforms them to log-normal.

__device__ float2 curand_log_normal2 (curandStateXORWOW_t *state, float mean, float stddev)

Return two normally distributed floats from an XORWOW generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed float2 where each element is from a distribution with mean mean and standard deviation stddev

Description

Return two log-normally distributed floats derived from a normal distribution with mean mean and standard deviation stddev from the XORWOW generator in state, increment position of generator by two.

The implementation uses a Box-Muller transform to generate two normally distributed results, then transforms them to log-normal.

__device__ double2 curand_log_normal2_double (curandStateMRG32k3a_t *state, double mean, double stddev)

Return two log-normally distributed doubles from an MRG32k3a generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed double2 where each element is from a distribution with mean mean and standard deviation stddev

Description

Return two log-normally distributed doubles derived from a normal distribution with mean mean and standard deviation stddev from the MRG32k3a generator in state, increment position of generator by two.

The implementation uses a Box-Muller transform to generate two normally distributed results, and transforms them to log-normal distribution,.

__device__ double2 curand_log_normal2_double (curandStatePhilox4_32_10_t *state, double mean, double stddev)

Return two log-normally distributed doubles from an Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed double4 where each element is from a distribution with mean mean and standard deviation stddev

Description

Return two log-normally distributed doubles derived from a normal distribution with mean mean and standard deviation stddev from the Philox4_32_10 generator in state, increment position of generator by four.

The implementation uses a Box-Muller transform to generate two normally distributed results, and transforms them to log-normal distribution,.

__device__ double2 curand_log_normal2_double (curandStateXORWOW_t *state, double mean, double stddev)

Return two log-normally distributed doubles from an XORWOW generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed double2 where each element is from a distribution with mean mean and standard deviation stddev

Description

Return two log-normally distributed doubles derived from a normal distribution with mean mean and standard deviation stddev from the XORWOW generator in state, increment position of generator by two.

The implementation uses a Box-Muller transform to generate two normally distributed results, and transforms them to log-normal distribution,.

__device__ float4 curand_log_normal4 (curandStatePhilox4_32_10_t *state, float mean, float stddev)

Return four normally distributed floats from an Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed float4 where each element is from a distribution with mean mean and standard deviation stddev

Description

Return four log-normally distributed floats derived from a normal distribution with mean mean and standard deviation stddev from the Philox4_32_10 generator in state, increment position of generator by four.

The implementation uses a Box-Muller transform to generate two normally distributed results, then transforms them to log-normal.

__device__ double curand_log_normal_double (curandStateScrambledSobol64_t *state, double mean, double stddev)

Return a log-normally distributed double from a scrambled Sobol64 generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed double with mean mean and standard deviation stddev

Description

Return a single normally distributed double derived from a normal distribution with mean mean and standard deviation stddev from the scrambled Sobol64 generator in state, increment position of generator by one.

The implementation uses the inverse cumulative distribution function to generate normally distributed results.

__device__ double curand_log_normal_double (curandStateSobol64_t *state, double mean, double stddev)

Return a log-normally distributed double from a Sobol64 generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed double with mean mean and standard deviation stddev

Description

Return a single normally distributed double derived from a normal distribution with mean mean and standard deviation stddev from the Sobol64 generator in state, increment position of generator by one.

The implementation uses the inverse cumulative distribution function to generate normally distributed results.

__device__ double curand_log_normal_double (curandStateScrambledSobol32_t *state, double mean, double stddev)

Return a log-normally distributed double from a scrambled Sobol32 generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed double with mean mean and standard deviation stddev

Description

Return a single log-normally distributed double derived from a normal distribution with mean mean and standard deviation stddev from the scrambled Sobol32 generator in state, increment position of generator by one.

The implementation uses the inverse cumulative distribution function to generate normally distributed results, and transforms them into log-normal distribution.

__device__ double curand_log_normal_double (curandStateSobol32_t *state, double mean, double stddev)

Return a log-normally distributed double from a Sobol32 generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed double with mean mean and standard deviation stddev

Description

Return a single log-normally distributed double derived from a normal distribution with mean mean and standard deviation stddev from the Sobol32 generator in state, increment position of generator by one.

The implementation uses the inverse cumulative distribution function to generate normally distributed results, and transforms them into log-normal distribution.

__device__ double curand_log_normal_double (curandStateMtgp32_t *state, double mean, double stddev)

Return a log-normally distributed double from an MTGP32 generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed double with mean mean and standard deviation stddev

Description

Return a single log-normally distributed double derived from a normal distribution with mean mean and standard deviation stddev from the MTGP32 generator in state, increment position of generator.

The implementation uses the inverse cumulative distribution function to generate normally distributed results, and transforms them into log-normal distribution.

__device__ double curand_log_normal_double (curandStateMRG32k3a_t *state, double mean, double stddev)

Return a log-normally distributed double from an MRG32k3a generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed double with mean mean and standard deviation stddev

Description

Return a single normally distributed double derived from a normal distribution with mean mean and standard deviation stddev from the MRG32k3a generator in state, increment position of generator.

The implementation uses a Box-Muller transform to generate two normally distributed results, transforms them to log-normal distribution, then returns them one at a time. See curand_log_normal2_double() for a more efficient version that returns both results at once.

__device__ double curand_log_normal_double (curandStatePhilox4_32_10_t *state, double mean, double stddev)

Return a log-normally distributed double from an Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed double with mean mean and standard deviation stddev

Description

Return a single normally distributed double derived from a normal distribution with mean mean and standard deviation stddev from the Philox4_32_10 generator in state, increment position of generator.

The implementation uses a Box-Muller transform to generate two normally distributed results, transforms them to log-normal distribution, then returns them one at a time. See curand_log_normal2_double() for a more efficient version that returns both results at once.

__device__ double curand_log_normal_double (curandStateXORWOW_t *state, double mean, double stddev)

Return a log-normally distributed double from an XORWOW generator.

Parameters

state

- Pointer to state to update

mean

- Mean of the related normal distribution

stddev

- Standard deviation of the related normal distribution

Returns

Log-normally distributed double with mean mean and standard deviation stddev

Description

Return a single normally distributed double derived from a normal distribution with mean mean and standard deviation stddev from the XORWOW generator in state, increment position of generator.

The implementation uses a Box-Muller transform to generate two normally distributed results, transforms them to log-normal distribution, then returns them one at a time. See curand_log_normal2_double() for a more efficient version that returns both results at once.

__device__ float curand_mtgp32_single (curandStateMtgp32_t *state)

Return a uniformly distributed float from a mtgp32 generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed float between 0.0f and 1.0f

Description

Return a uniformly distributed float between 0.0f and 1.0f from the mtgp32 generator in state, increment position of generator. Output range excludes 0.0f but includes 1.0f. Denormalized floating point outputs are never returned.

Note: This alternate derivation of a uniform float is provided for completeness with the original source

__device__ float curand_mtgp32_single_specific (curandStateMtgp32_t *state, unsigned char index, unsigned char n)

Return a uniformly distributed float from a specific position in a mtgp32 generator.

Parameters

state

- Pointer to state to update

index

- Index (0..255) of the position within the state to draw from and update

n

- The total number of postions in this state that are being updated by this invocation

Returns

uniformly distributed float between 0.0f and 1.0f

Description

Return a uniformly distributed float between 0.0f and 1.0f from position index of the mtgp32 generator in state, and increment position of generator by n positions, which must be the total number of positions upddated in the state by the thread block, for this invocation. Output range excludes 0.0f but includes 1.0f. Denormalized floating point outputs are never returned.

Note 1: Thread indices must range from 0...n - 1. The number of positions updated may not exceed 256. A thread block may update more than one state, but a given state may not be updated by more than one thread block.

Note 2: This alternate derivation of a uniform float is provided for completeness with the original source

__device__ unsigned int curand_mtgp32_specific (curandStateMtgp32_t *state, unsigned char index, unsigned char n)

Return 32-bits of pseudorandomness from a specific position in a mtgp32 generator.

Parameters

state

- Pointer to state to update

index

- Index (0..255) of the position within the state to draw from and update

n

- The total number of postions in this state that are being updated by this invocation

Returns

32-bits of pseudorandomness as an unsigned int, all bits valid to use.

Description

Return 32-bits of pseudorandomness from position index of the mtgp32 generator in state, increment position of generator by n positions, which must be the total number of positions upddated in the state by the thread block, for this invocation.

Note: Thread indices must range from 0... n - 1. The number of positions updated may not exceed 256. A thread block may update more than one state, but a given state may not be updated by more than one thread block.

__device__ float curand_normal (curandStateScrambledSobol64_t *state)

Return a normally distributed float from a scrambled Sobol64 generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed float with mean 0.0f and standard deviation 1.0f

Description

Return a single normally distributed float with mean 0.0f and standard deviation 1.0f from the scrambled Sobol64 generator in state, increment position of generator by one.

__device__ float curand_normal (curandStateSobol64_t *state)

Return a normally distributed float from a Sobol64 generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed float with mean 0.0f and standard deviation 1.0f

Description

Return a single normally distributed float with mean 0.0f and standard deviation 1.0f from the Sobol64 generator in state, increment position of generator by one.

The implementation uses the inverse cumulative distribution function to generate normally distributed results.

__device__ float curand_normal (curandStateScrambledSobol32_t *state)

Return a normally distributed float from a scrambled Sobol32 generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed float with mean 0.0f and standard deviation 1.0f

Description

Return a single normally distributed float with mean 0.0f and standard deviation 1.0f from the scrambled Sobol32 generator in state, increment position of generator by one.

__device__ float curand_normal (curandStateSobol32_t *state)

Return a normally distributed float from a Sobol32 generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed float with mean 0.0f and standard deviation 1.0f

Description

Return a single normally distributed float with mean 0.0f and standard deviation 1.0f from the Sobol32 generator in state, increment position of generator by one.

The implementation uses the inverse cumulative distribution function to generate normally distributed results.

__device__ float curand_normal (curandStateMtgp32_t *state)

Return a normally distributed float from a MTGP32 generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed float with mean 0.0f and standard deviation 1.0f

Description

Return a single normally distributed float with mean 0.0 f and standard deviation 1.0 f from the MTGP32 generator in state, increment position of generator.

__device__ float curand_normal (curandStateMRG32k3a_t *state)

Return a normally distributed float from an MRG32k3a generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed float with mean 0.0f and standard deviation 1.0f

Description

Return a single normally distributed float with mean 0.0f and standard deviation 1.0f from the MRG32k3a generator in state, increment position of generator by one.

The implementation uses a Box-Muller transform to generate two normally distributed results, then returns them one at a time. See curand_normal2() for a more efficient version that returns both results at once.

__device__ float curand_normal (curandStatePhilox4_32_10_t *state)

Return a normally distributed float from an Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed float with mean 0.0 f and standard deviation 1.0 f

Description

Return a single normally distributed float with mean 0.0f and standard deviation 1.0f from the Philox4_32_10 generator in state, increment position of generator by one.

The implementation uses a Box-Muller transform to generate two normally distributed results, then returns them one at a time. See curand_normal2() for a more efficient version that returns both results at once.

__device__ float curand_normal (curandStateXORWOW_t *state)

Return a normally distributed float from an XORWOW generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed float with mean 0.0f and standard deviation 1.0f

Description

Return a single normally distributed float with mean 0.0f and standard deviation 1.0f from the XORWOW generator in state, increment position of generator by one.

The implementation uses a Box-Muller transform to generate two normally distributed results, then returns them one at a time. See curand_normal2() for a more efficient version that returns both results at once.

__device__ float2 curand_normal2 (curandStateMRG32k3a_t *state)

Return two normally distributed floats from an MRG32k3a generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed float2 where each element is from a distribution with mean 0.0f and standard deviation 1.0f

Description

Return two normally distributed floats with mean 0.0f and standard deviation 1.0f from the MRG32k3a generator in state, increment position of generator by two.

__device__ float2 curand_normal2 (curandStatePhilox4_32_10_t *state)

Return two normally distributed floats from an Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed float2 where each element is from a distribution with mean 0.0 f and standard deviation 1.0 f

Description

Return two normally distributed floats with mean 0.0f and standard deviation 1.0f from the Philox4_32_10 generator in state, increment position of generator by two.

The implementation uses a Box-Muller transform to generate two normally distributed results.

__device__ float2 curand_normal2 (curandStateXORWOW_t *state)

Return two normally distributed floats from an XORWOW generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed float2 where each element is from a distribution with mean 0.0f and standard deviation 1.0f

Description

Return two normally distributed floats with mean 0.0f and standard deviation 1.0f from the XORWOW generator in state, increment position of generator by two.

__device__ double2 curand_normal2_double (curandStateMRG32k3a_t *state)

Return two normally distributed doubles from an MRG32k3a generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed double 2where each element is from a distribution with mean 0.0 and standard deviation 1.0

Description

Return two normally distributed doubles with mean 0.0 and standard deviation 1.0 from the MRG32k3a generator in state, increment position of generator.

The implementation uses a Box-Muller transform to generate two normally distributed results.

__device__ double2 curand_normal2_double (curandStatePhilox4_32_10_t *state)

Return two normally distributed doubles from an Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed double 2where each element is from a distribution with mean 0.0 and standard deviation 1.0

Description

Return two normally distributed doubles with mean 0.0 and standard deviation 1.0 from the Philox4_32_10 generator in state, increment position of generator by 2.

__device__ double2 curand_normal2_double (curandStateXORWOW_t *state)

Return two normally distributed doubles from an XORWOW generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed double 2where each element is from a distribution with mean 0.0 and standard deviation 1.0

Description

Return two normally distributed doubles with mean 0.0 and standard deviation 1.0 from the XORWOW generator in state, increment position of generator by 2.

The implementation uses a Box-Muller transform to generate two normally distributed results.

__device__ float4 curand_normal4 (curandStatePhilox4_32_10_t *state)

Return four normally distributed floats from an Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed float2 where each element is from a distribution with mean 0.0f and standard deviation 1.0f

Description

Return four normally distributed floats with mean 0.0f and standard deviation 1.0f from the Philox4_32_10 generator in state, increment position of generator by four.

__device__ double curand_normal_double (curandStateScrambledSobol64_t *state)

Return a normally distributed double from a scrambled Sobol64 generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed double with mean 0.0 and standard deviation 1.0

Description

Return a single normally distributed double with mean 0.0 and standard deviation 1.0 from the scrambled Sobol64 generator in state, increment position of generator by one.

The implementation uses the inverse cumulative distribution function to generate normally distributed results.

__device__ double curand_normal_double (curandStateSobol64_t *state)

Return a normally distributed double from a Sobol64 generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed double with mean 0.0 and standard deviation 1.0

Description

Return a single normally distributed double with mean 0.0 and standard deviation 1.0 from the Sobol64 generator in state, increment position of generator by one.

__device__ double curand_normal_double (curandStateScrambledSobol32_t *state)

Return a normally distributed double from a scrambled Sobol32 generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed double with mean 0.0 and standard deviation 1.0

Description

Return a single normally distributed double with mean 0.0 and standard deviation 1.0 from the scrambled Sobol32 generator in state, increment position of generator by one.

The implementation uses the inverse cumulative distribution function to generate normally distributed results.

__device__ double curand_normal_double (curandStateSobol32_t *state)

Return a normally distributed double from an Sobol32 generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed double with mean 0.0 and standard deviation 1.0

Description

Return a single normally distributed double with mean 0.0 and standard deviation 1.0 from the Sobol32 generator in state, increment position of generator by one.

__device__ double curand_normal_double (curandStateMtgp32_t *state)

Return a normally distributed double from an MTGP32 generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed double with mean 0.0 and standard deviation 1.0

Description

Return a single normally distributed double with mean 0.0 and standard deviation 1.0 from the MTGP32 generator in state, increment position of generator.

The implementation uses the inverse cumulative distribution function to generate normally distributed results.

__device__ double curand_normal_double (curandStateMRG32k3a_t *state)

Return a normally distributed double from an MRG32k3a generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed double with mean 0.0 and standard deviation 1.0

Description

Return a single normally distributed double with mean 0.0 and standard deviation 1.0 from the XORWOW generator in state, increment position of generator.

The implementation uses a Box-Muller transform to generate two normally distributed results, then returns them one at a time. See curand_normal2_double() for a more efficient version that returns both results at once.

__device__ double curand_normal_double (curandStatePhilox4_32_10_t *state)

Return a normally distributed double from an Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed double with mean 0.0 and standard deviation 1.0

Description

Return a single normally distributed double with mean 0.0 and standard deviation 1.0 from the Philox4_32_10 generator in state, increment position of generator.

The implementation uses a Box-Muller transform to generate two normally distributed results, then returns them one at a time. See curand_normal2_double() for a more efficient version that returns both results at once.

__device__ double curand_normal_double (curandStateXORWOW_t *state)

Return a normally distributed double from an XORWOW generator.

Parameters

state

- Pointer to state to update

Returns

Normally distributed double with mean 0.0 and standard deviation 1.0

Description

Return a single normally distributed double with mean 0.0 and standard deviation 1.0 from the XORWOW generator in state, increment position of generator.

The implementation uses a Box-Muller transform to generate two normally distributed results, then returns them one at a time. See curand_normal2_double() for a more efficient version that returns both results at once.

__device__ unsigned int curand_poisson (curandStateScrambledSobol64_t *state, double lambda)

Return a Poisson-distributed unsigned int from a scrambled Sobol64 generator.

Parameters

state

- Pointer to state to update

lambda

- Lambda of the Poisson distribution

Returns

Poisson-distributed unsigned int with lambda lambda

Description

Return a single unsigned int from a Poisson distribution with lambda lambda from the scrambled Sobol64 generator in state, increment position of generator by one.

__device__ unsigned int curand_poisson (curandStateSobol64_t *state, double lambda)

Return a Poisson-distributed unsigned int from a Sobol64 generator.

Parameters

state

- Pointer to state to update

lambda

- Lambda of the Poisson distribution

Returns

Poisson-distributed unsigned int with lambda lambda

Description

Return a single unsigned int from a Poisson distribution with lambda lambda from the Sobol64 generator in state, increment position of generator by one.

__device__ unsigned int curand_poisson (curandStateScrambledSobol32_t *state, double lambda)

Return a Poisson-distributed unsigned int from a scrambled Sobol32 generator.

Parameters

state

- Pointer to state to update

lambda

- Lambda of the Poisson distribution

Returns

Poisson-distributed unsigned int with lambda lambda

Description

Return a single unsigned int from a Poisson distribution with lambda lambda from the scrambled Sobol32 generator in state, increment the position of the generator by one.

__device__ unsigned int curand_poisson (curandStateSobol32_t *state, double lambda)

Return a Poisson-distributed unsigned int from a Sobol32 generator.

Parameters

state

- Pointer to state to update

lambda

- Lambda of the Poisson distribution

Returns

Poisson-distributed unsigned int with lambda lambda

Description

Return a single unsigned int from a Poisson distribution with lambda lambda from the Sobol32 generator in state, increment the position of the generator by one.

__device__ unsigned int curand_poisson (curandStateMtgp32_t *state, double lambda)

Return a Poisson-distributed unsigned int from a MTGP32 generator.

Parameters

state

- Pointer to state to update

lambda

- Lambda of the Poisson distribution

Returns

Poisson-distributed unsigned int with lambda lambda

Description

Return a single int from a Poisson distribution with lambda lambda from the MTGP32 generator in state, increment the position of the generator by one.

__device__ unsigned int curand_poisson (curandStateMRG32k3a_t *state, double lambda)

Return a Poisson-distributed unsigned int from a MRG32k3A generator.

Parameters

state

- Pointer to state to update

lambda

- Lambda of the Poisson distribution

Returns

Poisson-distributed unsigned int with lambda lambda

Description

Return a single unsigned int from a Poisson distribution with lambda lambda from the MRG32k3a generator in state, increment the position of the generator by a variable amount, depending on the algorithm used.

__device__ unsigned int curand_poisson (curandStatePhilox4_32_10_t *state, double lambda)

Return a Poisson-distributed unsigned int from a Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

lambda

- Lambda of the Poisson distribution

Returns

Poisson-distributed unsigned int with lambda lambda

Description

Return a single unsigned int from a Poisson distribution with lambda lambda from the Philox4_32_10 generator in state, increment the position of the generator by a variable amount, depending on the algorithm used.

__device__ unsigned int curand_poisson (curandStateXORWOW_t *state, double lambda)

Return a Poisson-distributed unsigned int from a XORWOW generator.

Parameters

state

- Pointer to state to update

lambda

- Lambda of the Poisson distribution

Returns

Poisson-distributed unsigned int with lambda lambda

Description

Return a single unsigned int from a Poisson distribution with lambda lambda from the XORWOW generator in state, increment the position of the generator by a variable amount, depending on the algorithm used.

__device__ uint4 curand_poisson4 (curandStatePhilox4_32_10_t *state, double lambda)

Return four Poisson-distributed unsigned ints from a Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

lambda

- Lambda of the Poisson distribution

Returns

Poisson-distributed unsigned int with lambda lambda

Description

Return a four unsigned ints from a Poisson distribution with lambda lambda from the Philox4_32_10 generator in state, increment the position of the generator by a variable amount, depending on the algorithm used.

__device__ float curand_uniform (curandStateScrambledSobol64_t *state)

Return a uniformly distributed float from a scrambled Sobol64 generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed float between 0.0f and 1.0f

Description

Return a uniformly distributed float between 0.0f and 1.0f from the scrambled Sobol64 generator in state, increment position of generator. Output range excludes 0.0f but includes 1.0f. Denormalized floating point outputs are never returned.

The implementation is guaranteed to use a single call to curand ().

__device__ float curand_uniform (curandStateSobol64_t *state)

Return a uniformly distributed float from a Sobol64 generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed float between 0.0f and 1.0f

Description

Return a uniformly distributed float between 0.0f and 1.0f from the Sobol64 generator in state, increment position of generator. Output range excludes 0.0f but includes 1.0f. Denormalized floating point outputs are never returned.

The implementation is guaranteed to use a single call to curand ().

__device__ float curand_uniform (curandStateScrambledSobol32_t *state)

Return a uniformly distributed float from a scrambled Sobol32 generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed float between 0.0f and 1.0f

Description

Return a uniformly distributed float between 0.0f and 1.0f from the scrambled Sobol32 generator in state, increment position of generator. Output range excludes 0.0f but includes 1.0f. Denormalized floating point outputs are never returned.

The implementation is guaranteed to use a single call to curand ().

__device__ float curand_uniform (curandStateSobol32_t *state)

Return a uniformly distributed float from a Sobol32 generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed float between 0.0f and 1.0f

Description

Return a uniformly distributed float between 0.0f and 1.0f from the Sobol32 generator in state, increment position of generator. Output range excludes 0.0f but includes 1.0f. Denormalized floating point outputs are never returned.

The implementation is guaranteed to use a single call to curand ().

__device__ float curand_uniform (curandStateMtgp32_t *state)

Return a uniformly distributed float from a MTGP32 generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed float between 0.0f and 1.0f

Description

Return a uniformly distributed float between 0.0f and 1.0f from the MTGP32 generator in state, increment position of generator. Output range excludes 0.0f but includes 1.0f. Denormalized floating point outputs are never returned.

__device__ float curand_uniform (curandStatePhilox4_32_10_t *state)

Return a uniformly distributed float from a Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed float between 0.0 and 1.0

Description

Return a uniformly distributed float between 0.0f and 1.0f from the Philox4_32_10 generator in state, increment position of generator. Output range excludes 0.0f but includes 1.0f. Denormalized floating point outputs are never returned.

__device__ float curand_uniform (curandStateMRG32k3a_t *state)

Return a uniformly distributed float from an MRG32k3a generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed float between 0.0f and 1.0f

Description

Return a uniformly distributed float between 0.0f and 1.0f from the MRG32k3a generator in state, increment position of generator. Output range excludes 0.0f but includes 1.0f. Denormalized floating point outputs are never returned.

The implementation returns up to 23 bits of mantissa, with the minimum return value latexInlineFormula: =\$ 2^{-32} \$

__device__ float curand_uniform (curandStateXORWOW_t *state)

Return a uniformly distributed float from an XORWOW generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed float between 0.0f and 1.0f

Description

Return a uniformly distributed float between 0.0f and 1.0f from the XORWOW generator in state, increment position of generator. Output range excludes 0.0f but includes 1.0f. Denormalized floating point outputs are never returned.

The implementation may use any number of calls to curand() to get enough random bits to create the return value. The current implementation uses one call.

__device__ double2 curand_uniform2_double (curandStatePhilox4_32_10_t *state)

Return a uniformly distributed tuple of 2 doubles from an Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

Returns

2 uniformly distributed doubles between 0.0 and 1.0

Description

Return a uniformly distributed 2 doubles (double4) between 0.0 and 1.0 from the Philox4_32_10 generator in state, increment position of generator by 4. Output range excludes 0.0 but includes 1.0. Denormalized floating point outputs are never returned.

__device__ float4 curand_uniform4 (curandStatePhilox4_32_10_t *state)

Return a uniformly distributed tuple of 4 floats from a Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed float between 0.0 and 1.0

Description

Return a uniformly distributed 4 floats between 0.0f and 1.0f from the Philox4_32_10 generator in state, increment position of generator by 4. Output range excludes 0.0f but includes 1.0f. Denormalized floating point outputs are never returned.

__device__ double curand_uniform_double (curandStateScrambledSobol64_t *state)

Return a uniformly distributed double from a scrambled Sobol64 generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed double between 0.0 and 1.0

Description

Return a uniformly distributed double between 0.0 and 1.0 from the scrambled Sobol64 generator in state, increment position of generator. Output range excludes 0.0 but includes 1.0. Denormalized floating point outputs are never returned.

The implementation is guaranteed to use a single call to curand() to preserve the quasirandom properties of the sequence.

__device__ double curand_uniform_double (curandStateSobol64_t *state)

Return a uniformly distributed double from a Sobol64 generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed double between 0.0 and 1.0

Description

Return a uniformly distributed double between 0.0 and 1.0 from the Sobol64 generator in state, increment position of generator. Output range excludes 0.0 but includes 1.0. Denormalized floating point outputs are never returned.

The implementation is guaranteed to use a single call to curand() to preserve the quasirandom properties of the sequence.

__device__ double curand_uniform_double (curandStateScrambledSobol32_t *state)

Return a uniformly distributed double from a scrambled Sobol32 generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed double between 0.0 and 1.0

Description

Return a uniformly distributed double between 0.0 and 1.0 from the scrambled Sobol32 generator in state, increment position of generator. Output range excludes 0.0 but includes 1.0. Denormalized floating point outputs are never returned.

The implementation is guaranteed to use a single call to curand() to preserve the quasirandom properties of the sequence.

__device__ double curand_uniform_double (curandStateSobol32_t *state)

Return a uniformly distributed double from a Sobol32 generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed double between 0.0 and 1.0

Description

Return a uniformly distributed double between 0.0 and 1.0 from the Sobol32 generator in state, increment position of generator. Output range excludes 0.0 but includes 1.0. Denormalized floating point outputs are never returned.

The implementation is guaranteed to use a single call to curand() to preserve the quasirandom properties of the sequence.

__device__ double curand_uniform_double (curandStatePhilox4_32_10_t *state)

Return a uniformly distributed double from a Philox4_32_10 generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed double between 0.0f and 1.0f

Description

Return a uniformly distributed double between 0.0f and 1.0f from the Philox4_32_10 generator in state, increment position of generator. Output range excludes 0.0f but includes 1.0f. Denormalized floating point outputs are never returned.

__device__ double curand_uniform_double (curandStateMtgp32_t *state)

Return a uniformly distributed double from a MTGP32 generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed double between 0.0f and 1.0f

Description

Return a uniformly distributed double between 0.0f and 1.0f from the MTGP32 generator in state, increment position of generator. Output range excludes 0.0f but includes 1.0f. Denormalized floating point outputs are never returned.

__device__ double curand_uniform_double (curandStateMRG32k3a_t *state)

Return a uniformly distributed double from an MRG32k3a generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed double between 0.0 and 1.0

Description

Return a uniformly distributed double between 0.0 and 1.0 from the MRG32k3a generator in state, increment position of generator. Output range excludes 0.0 but includes 1.0. Denormalized floating point outputs are never returned.

Note the implementation returns at most 32 random bits of mantissa as outlined in the seminal paper by L'Ecuyer.

__device__ double curand_uniform_double (curandStateXORWOW_t *state)

Return a uniformly distributed double from an XORWOW generator.

Parameters

state

- Pointer to state to update

Returns

uniformly distributed double between 0.0 and 1.0

Description

Return a uniformly distributed double between 0.0 and 1.0 from the XORWOW generator in state, increment position of generator. Output range excludes 0.0 but includes 1.0. Denormalized floating point outputs are never returned.

The implementation may use any number of calls to curand() to get enough random bits to create the return value. The current implementation uses exactly two calls.

curandStatus_t curandMakeMTGP32Constants (const mtgp32_params_fast_t params[], mtgp32_kernel_params_t *p)

Set up constant parameters for the mtgp32 generator.

Parameters

params

- Pointer to an array of type mtgp32_params_fast_t in host memory

p

- pointer to a structure of type mtgp32_kernel_params_t in device memory.

Returns

- CURAND_STATUS_ALLOCATION_FAILED if host memory could not be allocated
- CURAND_STATUS_INITIALIZATION_FAILED if the copy to device memory failed
- CURAND_STATUS_SUCCESS otherwise

Description

This host-side helper function re-organizes CURAND_NUM_MTGP32_PARAMS sets of generator parameters for use by kernel functions and copies the result to the specified location in device memory.

curandStatus_t CURANDAPI curandMakeMTGP32KernelState (curandStateMtgp32_t *s, mtgp32_params_fast_t params[], mtgp32_kernel_params_t *k, int n, unsigned long long seed)

Set up initial states for the mtgp32 generator.

Parameters

S

- pointer to an array of states in device memory

params

- Pointer to an array of type mtgp32_params_fast_t in host memory

 \mathbf{k}

- pointer to a structure of type mtgp32_kernel_params_t in device memory

n

- number of parameter sets/states to initialize

seed

- seed value

Returns

- CURAND_STATUS_ALLOCATION_FAILED if host memory state could not be allocated
- ► CURAND_STATUS_INITIALIZATION_FAILED if the copy to device memory failed
- CURAND_STATUS_SUCCESS otherwise

Description

This host-side helper function initializes a number of states (one parameter set per state) for an mtgp32 generator. To accomplish this it allocates a state array in host memory, initializes that array, and copies the result to device memory.

template < typename T > __device__ void skipahead (unsigned long long n, T state)

Update Sobol64 state to skip n elements.

Parameters

n

- Number of elements to skip

state

- Pointer to state to update

Description

Update the Sobol64 state in state to skip ahead n elements.

All values of n are valid.

template < typename T > __device__ void skipahead (unsigned int n, T state)

Update Sobol32 state to skip n elements.

Parameters

n

- Number of elements to skip

state

- Pointer to state to update

Description

Update the Sobol32 state in state to skip ahead n elements.

All values of n are valid.

__device__ void skipahead (unsigned long long n, curandStateMRG32k3a_t *state)

Update MRG32k3a state to skip n elements.

Parameters

n

- Number of elements to skip

state

- Pointer to state to update

Description

Update the MRG32k3a state in state to skip ahead n elements.

All values of n are valid. Large values require more computation and so will take more time to complete.

__device__ void skipahead (unsigned long long n, curandStatePhilox4_32_10_t *state)

Update Philox4_32_10 state to skip n elements.

Parameters

n

- Number of elements to skip

state

- Pointer to state to update

Description

Update the Philox4_32_10 state in state to skip ahead n elements.

All values of n are valid. Large values require more computation and so will take more time to complete.

__device__ void skipahead (unsigned long long n, curandStateXORWOW_t *state)

Update XORWOW state to skip n elements.

Parameters

n

- Number of elements to skip

state

- Pointer to state to update

Description

Update the XORWOW state in state to skip ahead n elements.

All values of n are valid. Large values require more computation and so will take more time to complete.

__device__ void skipahead_sequence (unsigned long long n, curandStateMRG32k3a_t *state)

Update MRG32k3a state to skip ahead n sequences.

Parameters

n

- Number of sequences to skip

state

- Pointer to state to update

Description

Update the MRG32k3a state in state to skip ahead n sequences. Each sequence is 2^{127} elements long, so this means the function will skip ahead 2^{127} * n elements.

All values of n are valid. Large values require more computation and so will take more time to complete.

__device__ void skipahead_sequence (unsigned long long n, curandStatePhilox4_32_10_t *state)

Update Philox4_32_10 state to skip ahead n subsequences.

Parameters

n

- Number of subsequences to skip

state

- Pointer to state to update

Description

Update the Philox 4_32_10 state in state to skip ahead n subsequences. Each subsequence is 2^{67} elements long, so this means the function will skip ahead 2^{67} * n elements.

All values of n are valid. Large values require more computation and so will take more time to complete.

__device__ void skipahead_sequence (unsigned long long n, curandStateXORWOW_t *state)

Update XORWOW state to skip ahead n subsequences.

Parameters

n

- Number of subsequences to skip

state

- Pointer to state to update

Description

Update the XORWOW state in state to skip ahead n subsequences. Each subsequence is 2^{67} elements long, so this means the function will skip ahead 2^{67} * n elements.

All values of n are valid. Large values require more computation and so will take more time to complete.

__device__ void skipahead_subsequence (unsigned long long n, curandStateMRG32k3a_t *state)

Update MRG32k3a state to skip ahead n subsequences.

Parameters

n

- Number of subsequences to skip

state

- Pointer to state to update

Description

Update the MRG32k3a state in state to skip ahead n subsequences. Each subsequence is 2¹²⁷

 2^{76} elements long, so this means the function will skip ahead 2^{67} * n elements.

Valid values of n are 0 to 2⁵¹. Note n will be masked to 51 bits

Appendix A. BIBLIOGRAPHY

- [1] Mutsuo Saito. A Variant of Mersenne Twister Suitable for Graphic Processors. *arXiv:1005.4973v2 [cs.MS]*, Jun 2010.
- [2] S. Joe and F. Y. Kuo. Remark on Algorithm 659: Implementing Sobol's quasirandom sequence generator. *ACM Transactions on Mathematical Software*, 29:49-57, March 2003.
- [3] Jiri Matousek. Journal of Complexity. *ACM Transactions on Mathematical Software*, 14(4):527-556, December 1998.
- [4] Art B. Owen. Local Antithetic Sampling with Scrambled Nets. *The Annals of Statistics*, 36(5):2319-2343, 2008.
- [5] George Marsaglia. Xorshift RNGs. *Journal of Statistical Software*, 8(14), 2003. Available at http://www.jstatsoft.org/v08/i14/paper.
- [6] Pierre L'Ecuyer and Richard Simard. TestU01: A C library for empirical testing of random number generators. *ACM Transactions on Mathematical Software*, 33(4), August 2007. Available at http://www.iro.umontreal.ca/~lecuyer/myftp/papers/testu01.pdf.
- [7] Andrew Rukhin and Juan Soto and James Nechvatal and Miles Smid and Elaine Barker and Stefan Leigh and Mark Levenson and Mark Vangel and David Banks and Alan Heckert and James Dray and San Vo. "A Statistical Test Suite for the Validation of Random Number Generators and Pseudorandom Number Generators for Cryptographic Applications. Special Publication 800-22 Revision 1a, National Institute of Standards and Technology, April 2010. http://csrc.nist.gov/groups/ST/toolkit/rng/index.html.
- [8] M. Matsumoto and T. Nishimura. Mersenne Twister: A 623-dimensionally equidistributed uniform pseudorandom number generator. *ACM Transactions on Modeling and Computer Simulation*, 8(1):3-30, January 1988.
- [9] Pierre L'Ecuyer. Good Parameters and Implementations for Combined Multiple Recursive Random Number Generators. *Operations Research*, 47(1), Jan-Feb 1999.
- [10] Pierre L'Ecuyer and Richard Simard and E. Jack Chen and W. David Kelton. An Object-Oriented Random-Number Package with Many Long Streams and Substreams. *Operations Research*, 50(6), Nov-Dec 2002.

- [11] Karl Pearson. On the criterion that a given system of deviations from the probable in the case of a correlated system of variables is such that it can be reasonably supposed to have arisen from random sampling. *Philosophical Magazine*, 50(302):157-175, July 1900.
- [12] R. L. Placket. Karl Pearson and the chi-squared test. *International Statistics Review*, 51:59-72, 1983.
- [13] Carlos M. Jarque and Anil K. Bera. Efficient tests for normality, homoscedasticity and serial independence of regression residuals. *Economics Letters*, 6(3):255-259, 1980.
- [14] A. Kolmogorov. Sulla determinazione empirica di una legge di distribuzione. *G. Inst. Ital. Attuari*, 4(83), 1933.
- [15] Frank J. Massey. The Kolmogorov-Smirnov test for goodness of fit. *Journal of the American Statistical Association*, 46(253):68-78, 1951.
- [16] T. W. Anderson and D. A. Darling. Asymptotic theory of certain "goodness-of-fit" criteria based on stochastic processes. *Annals of Mathematical Statistics*, 23(2):193-212, 1952.
- [16] John. K. Salmon, Mark A. Moraes, Ron O. Dror, and David E. Shaw. Parallel Random Numbers: As Easy as 1, 2, 3 *D.E Shaw Research, New York, NY 10036, USA*, 2011.

Appendix B. ACKNOWLEDGEMENTS

NVIDIA would like to thank the following individuals and institutions for their contributions:

- ▶ Portions of the MTGP32 (Mersenne Twister for GPU) library routines were written by Mutsuo Saito and Makoto Matsumoto.
- ▶ Portions of the PHILOX4x32 library routines were developed by D. E. Shaw Research.

Notice

ALL NVIDIA DESIGN SPECIFICATIONS, REFERENCE BOARDS, FILES, DRAWINGS, DIAGNOSTICS, LISTS, AND OTHER DOCUMENTS (TOGETHER AND SEPARATELY, "MATERIALS") ARE BEING PROVIDED "AS IS." NVIDIA MAKES NO WARRANTIES, EXPRESSED, IMPLIED, STATUTORY, OR OTHERWISE WITH RESPECT TO THE MATERIALS, AND EXPRESSLY DISCLAIMS ALL IMPLIED WARRANTIES OF NONINFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE.

Information furnished is believed to be accurate and reliable. However, NVIDIA Corporation assumes no responsibility for the consequences of use of such information or for any infringement of patents or other rights of third parties that may result from its use. No license is granted by implication of otherwise under any patent rights of NVIDIA Corporation. Specifications mentioned in this publication are subject to change without notice. This publication supersedes and replaces all other information previously supplied. NVIDIA Corporation products are not authorized as critical components in life support devices or systems without express written approval of NVIDIA Corporation.

Trademarks

NVIDIA and the NVIDIA logo are trademarks or registered trademarks of NVIDIA Corporation in the U.S. and other countries. Other company and product names may be trademarks of the respective companies with which they are associated.

Copyright

© 2007-2013 NVIDIA Corporation. All rights reserved.

