Real Time Operating System "FreeRTOS" Interrupt Management



Agenda

- How Embedded real-time systems have to take actions in response to events that originate from the environment (Interrupt Event Based) Which FreeRTOS API functions can be used from within an ISR.
- How a deferred interrupt scheme can be implemented...
- How to create and use binary semaphores and counting semaphores.



- A Binary Semaphore can be used to unblock a task each time a particular interrupt occurs
- Binary Semaphore synchronizes the task with the interrupt.
- This allows the majority of the interrupt event processing to be implemented within the synchronized task
- Only a very fast and short portion remaining directly in the ISR.
- The interrupt processing is said to have been 'deferred' to a 'handler' task.



- If the interrupt processing is particularly time critical, then the handler task priority can be set to ensure that the handler task always pre-empts the other tasks in the system.
- The ISR can then be implemented to include a context switch to ensure that the ISR returns directly to the handler task when the ISR itself has completed executing.
- This has the effect of ensuring that the entire event processing executes contiguously in time, just as if it had all been implemented within the ISR itself.



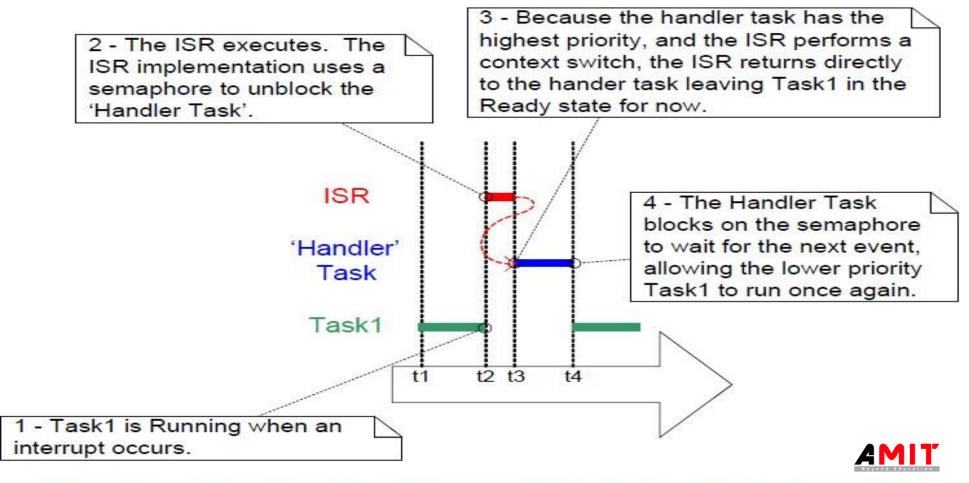


Figure 25. The interrupt interrupts one task but returns to another

Binary Semaphores Used for Synchronization

- The handler task uses a blocking 'take' call to a semaphore as a means of entering the Blocked state to wait for the event to occur.
- When the event occurs, the ISR uses a 'give' operation on the same semaphore to unblock the task so that the required event processing can proceed.
- In this interrupt synchronization scenario, the **binary semaphore** can be considered conceptually **as a queue with a length of one.** The queue can contain a maximum of one item at any time, so is always **either empty or full (hence, binary).** By calling xSemaphoreTake()
- The handler task effectively attempts to read from the queue with a block time, causing the
- task to enter the Blocked state if the queue is empty.
- When the event occurs, the ISR uses the xSemaphoreGiveFromISR() function to place a token (the semaphore) into the queue, making the queue full. This causes the handler task to exit the Blocked state and remove the token, leaving the queue empty once more.
- When the handler task has completed its processing, it once more attempts to read from the queue and, finding the queue empty, re-enters the Blocked state to wait for the next event.



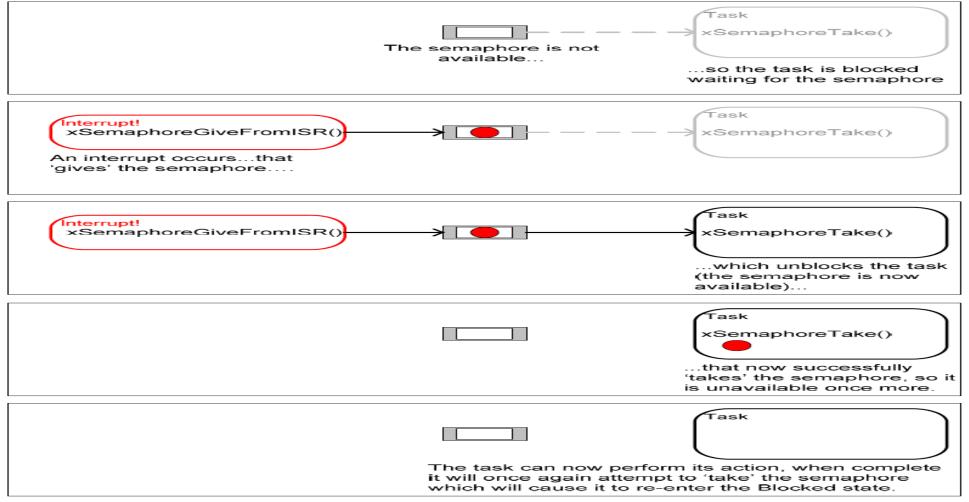


Figure 26. Using a binary semaphore to synchronize a task with an interrupt



Example 12. Using a semaphore to synchronize a task binary with an interrupt

- This example uses a binary semaphore to unblock a task from within an interrupt service routine—effectively synchronizing the task with the interrupt.
- A simple periodic task is used to generate an interrupt every 500
- milliseconds.
- A software generated interrupt is used because it allows the time at which the
 interrupt occurs to be controlled, which in turn allows the sequence of execution
 to be observed more easily.
- The interrupt service routine, which is simply a standard C function.
- It does very little other than clear the interrupt and 'give' the semaphore to unblock the handler task.



Example 12.Using a binary semaphore to synchronize a task with an interrupt

- The macro portEND_SWITCHING_ISR() is part of the FreeRTOS
- Cortex-M3 port and is the ISR safe equivalent of taskYIELD().
- It will force a context switch only if its parameter is not zero (not equal to pdFALSE).
- Note how xHigherPriorityTaskWoken is used. It is initialized to pdFALSE before being passed by reference into xSemaphoreGiveFromISR()
- it will get set to pdTRUE only if xSemaphoreGiveFromISR()
 causes a task of equal or higher priority than the currently
 executing task to leave the blocked state.
 portEND_SWITCHING_ISR() then performs a context switch
 only if xHigherPriorityTaskWoken equals pdTRUE.

Example 12. Using a binary semaphore to synchronize a task with an interrupt

```
static void vPeriodicTask( void *pvParameters )
   /* As per most tasks, this task is implemented within an infinite loop. */
   for(;;)
       /* This task is just used to 'simulate' an interrupt. This is done by
       periodically generating a software interrupt. */
       vTaskDelay( 500 / portTICK RATE MS );
        /* Generate the interrupt, printing a message both before hand and
       afterwards so the sequence of execution is evident from the output. */
       vPrintString( "Periodic task - About to generate an interrupt.\n" );
       mainTRIGGER INTERRUPT();
       vPrintString( "Periodic task - Interrupt generated.\n\n" );
```

Listing 45. Implementation of the task that periodically generates a software interrupt in Example 12



Example 12. Using a binary semaphore to synchronize a task with an interrupt

```
static void vHandlerTask( void *pvParameters )
   /* As per most tasks, this task is implemented within an infinite loop.
   Take the semaphore once to start with so the semaphore is empty before the
   infinite loop is entered. The semaphore was created before the scheduler
   was started so before this task ran for the first time. */
   xSemaphoreTake(xBinarySemaphore, 0);
   for(;;)
       /* Use the semaphore to wait for the event. The task blocks
       indefinitely meaning this function call will only return once the
       semaphore has been successfully obtained - so there is no need to check
       the returned value. */
       xSemaphoreTake(xBinarySemaphore, portMAX DELAY);
       /* To get here the event must have occurred. Process the event (in this
       case we just print out a message). */
       vPrintString( "Handler task - Processing event.\n" );
```

Listing 46. The implementation of the handler task (the task that synchronizes with the interrupt) in Example 12



Example 12. Using a binary semaphore to synchronize a task with an interrupt

```
void vSoftwareInterruptHandler( void )
portBASE TYPE xHigherPriorityTaskWoken = pdFALSE;
    /* 'Give' the semaphore to unblock the task. */
    xSemaphoreGiveFromISR(xBinarySemaphore, &xHigherPriorityTaskWoken);
    /* Clear the software interrupt bit using the interrupt controllers
    Clear Pending register. */
    mainCLEAR INTERRUPT();
    /* Giving the semaphore may have unblocked a task - if it did and the
    unblocked task has a priority equal to or above the currently executing
    task then xHigherPriorityTaskWoken will have been set to pdTRUE and
    portEND SWITCHING ISR() will force a context switch to the newly unblocked
    higher priority task.
    NOTE: The syntax for forcing a context switch within an ISR varies between
    FreeRTOS ports. The portEND SWITCHING ISR() macro is provided as part of
    the Corte M3 port layer for this purpose. taskYIELD() must never be called
    from an ISR! */
    portEND SWITCHING ISR( xHigherPriorityTaskWoken );
```

Listing 47. The software interrupt handler used in Example 12



Example 12.Using a binary semaphore to synchronize a task with an interrupt

int main (void) /* Configure both the hardware and the debug interface. */ vSetupEnvironment(); /* Before a semaphore is used it must be explicitly created. In this example a binary semaphore is created. */ vSemaphoreCreateBinary(xBinarySemaphore); /* Check the semaphore was created successfully. */ if (xBinarySemaphore != NULL) /* Enable the software interrupt and set its priority. */ prvSetupSoftwareInterrupt(); /* Create the 'handler' task. This is the task that will be synchronized with the interrupt. The handler task is created with a high priority to ensure it runs immediately after the interrupt exits. In this case a priority of 3 is chosen. */ xTaskCreate(vHandlerTask, "Handler", 240, NULL, 3, NULL); /* Create the task that will periodically generate a software interrupt. This is created with a priority below the handler task to ensure it will get preempted each time the handler task exits the Blocked state. */ xTaskCreate(vPeriodicTask, "Periodic", 240, NULL, 1, NULL); /* Start the scheduler so the created tasks start executing. */ vTaskStartScheduler(); } /* If all is well we will never reach here as the scheduler will now be running the tasks. If we do reach here then it is likely that there was insufficient heap memory available for a resource to be created. */ for(;;); }

Listing 48. The implementation of main() for Example 12

Console Console Console Console Memory Memory Memory Med Trace Preview

Example 12 (Debug) [C/C++ MCU Application] C:\E\Dev\FreeRTOS\DOC\Projects\191-ApplicationNotesAndBook\Source-Code-For-Examples\LPCXp

Periodic task - About to generate an interrupt.

Handler task - Processing event.

Periodic task - About to generate an interrupt.

Periodic task - About to generate an interrupt.

Handler task - Processing event.

Periodic task - Interrupt generated.

Figure 27. The output produced when Example 12 is executed



Example 12.Using a binary semaphore to synchronize a task with an interrupt

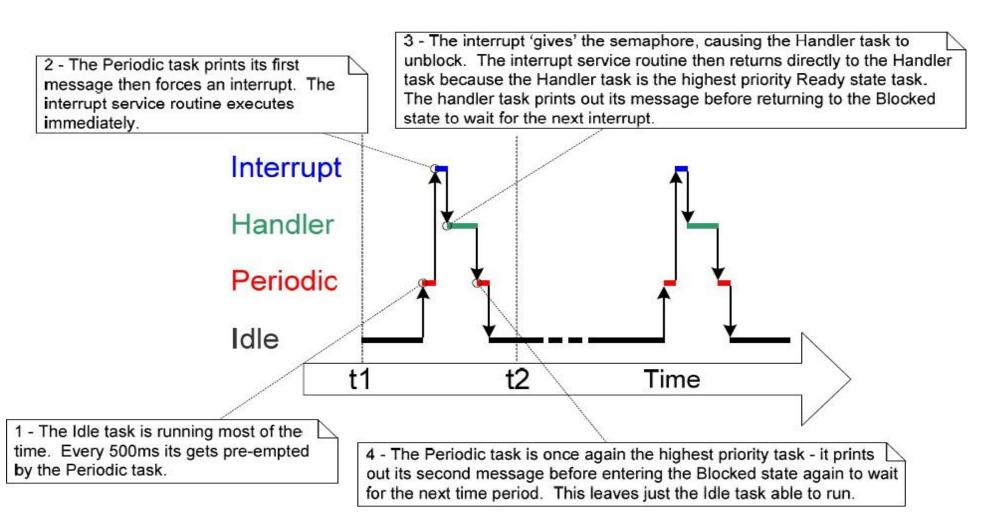


Figure 28. The sequence of execution when Example 12 is executed

