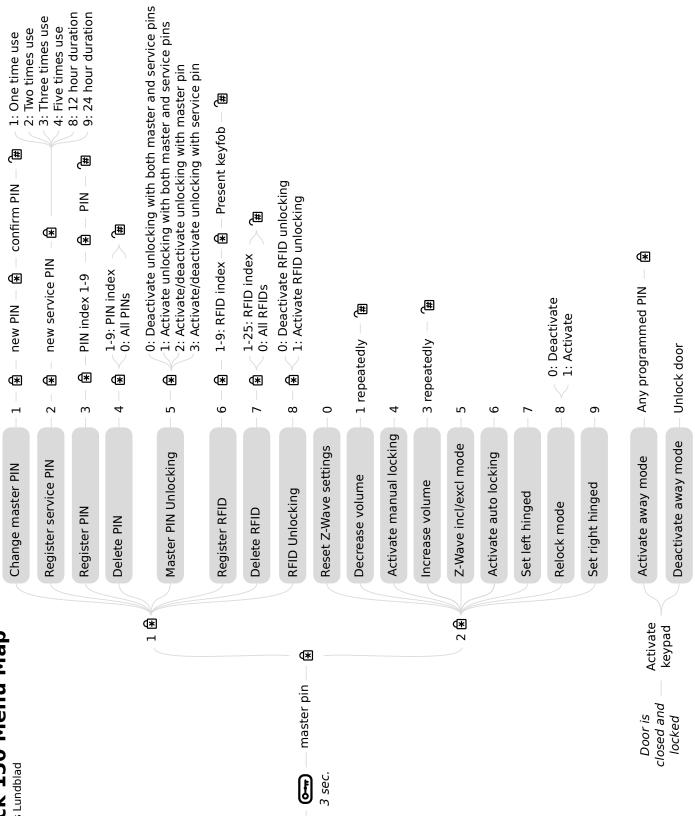# ID Lock 150 Menu Map

by Andreas Lundblad

Door is open and unlocked — 🔑 *3 sec.* — master pin — ✳

1 ✳

Change master PIN — 1 — ✳ — new PIN — ✳ — confirm PIN — ⌨

Register service PIN — 2 — ✳ — new service PIN — ✳

Register PIN — 3 — ✳ — PIN index 1-9 — ✳ — PIN — ⌨
- 1: One time use
- 2: Two times use
- 3: Three times use
- 4: Five times use
- 8: 12 hour duration
- 9: 24 hour duration

Delete PIN — 4 — ✳ — ⌨
- 1-9: PIN index
- 0: All PINs

Master PIN Unlocking — 5 — ✳ — ⌨
- 0: Deactivate unlocking with both master and service pins
- 1: Activate unlocking with both master and service pins
- 2: Activate/deactivate unlocking with master pin
- 3: Activate/deactivate unlocking with service pin

Register RFID — 6 — ✳ — RFID index — ✳ — Present keyfob — ⌨

Delete RFID — 7 — ✳ — ⌨
- 1-9: RFID index
- 1-25: RFID index
- 0: All RFIDs

RFID Unlocking — 8 — ✳ — ⌨
- 0: Deactivate RFID unlocking
- 1: Activate RFID unlocking

2 ✳

Reset Z-Wave settings — 0

Decrease volume — 1 repeatedly — ⌨

Activate manual locking — 4

Increase volume — 3 repeatedly — ⌨

Z-Wave incl/excl mode — 5

Activate auto locking — 6

Set left hinged — 7

Relock mode — 8
- 0: Deactivate
- 1: Activate

Set right hinged — 9

Door is closed and locked — Activate keypad

Activate away mode — Any programmed PIN — ✳

Deactivate away mode — Unlock door