




CROWNS

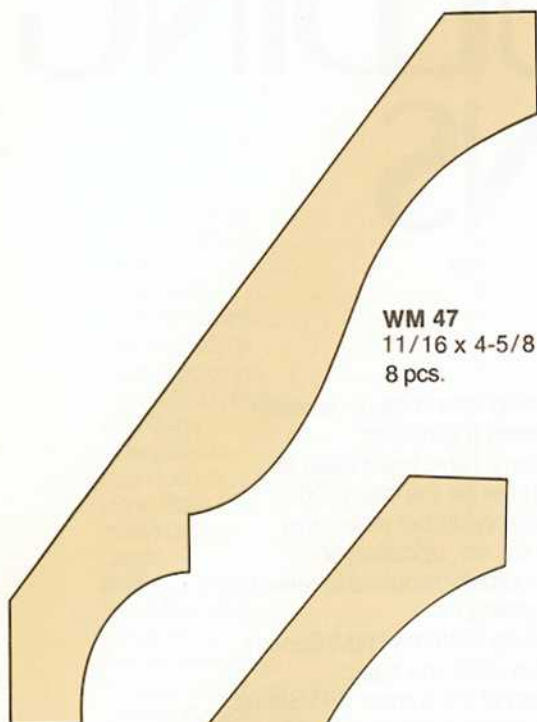


WM 47
11/16 x 4-5/8
8 pcs.

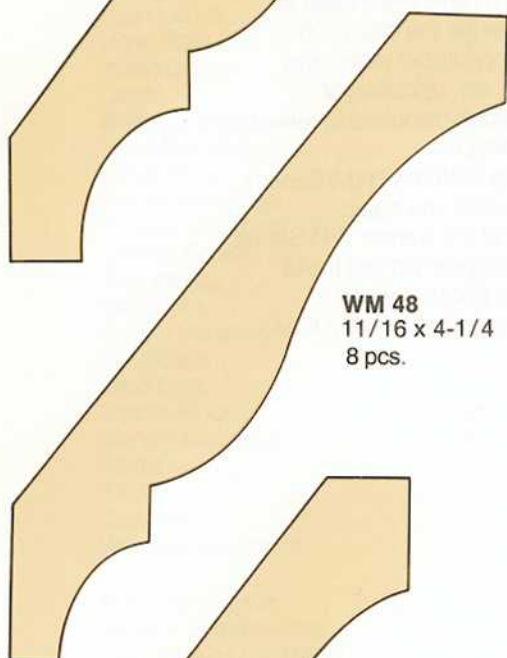


WM 48
11/16 x 4-1/4
8 pcs.

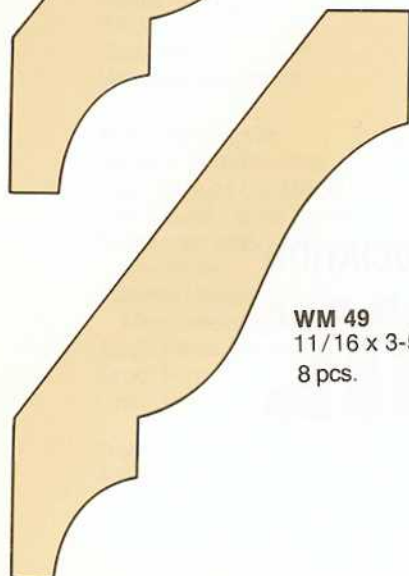


WM 49
11/16 x 3-5/8
8 pcs.

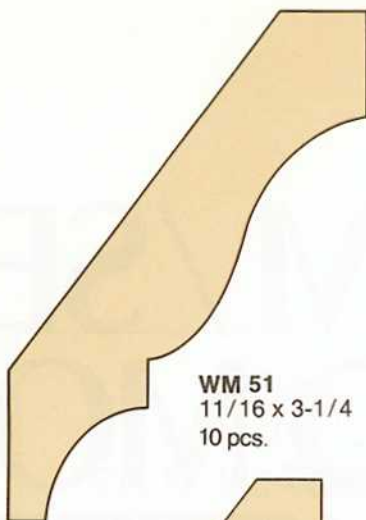


WM 51
11/16 x 3-1/4
10 pcs.

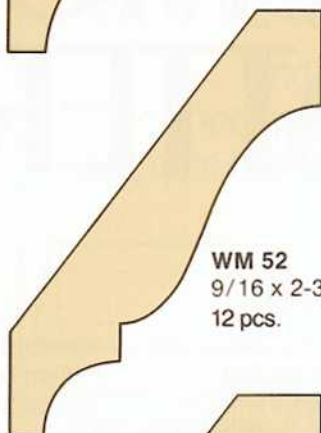

WM 52
9/16 x 2-3/4
12 pcs.

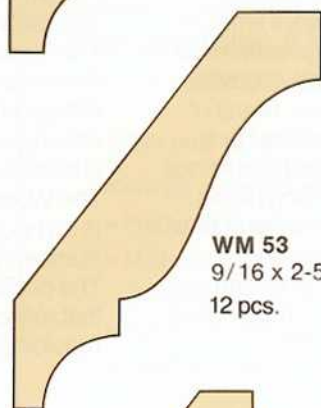

WM 53
9/16 x 2-5/8
12 pcs.

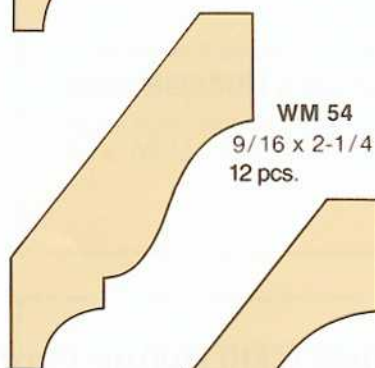

WM 54
9/16 x 2-1/4
12 pcs.



WM 57
9/16 x 3-1/4
10 pcs.




WM 58
9/16 x 2-3/4
12 pcs.



WM 59
9/16 x 2-1/4
12 pcs.



WM 60
9/16 x 1-3/4
20 pcs.





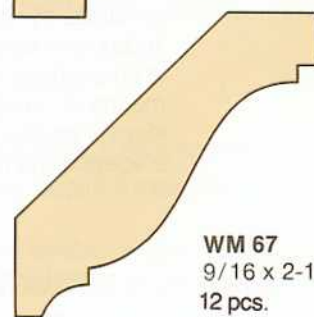


WM 67
9/16 x 2-1/4
12 pcs.










WM 68
9/16 x 1-5/8
20 pcs.


BEDS

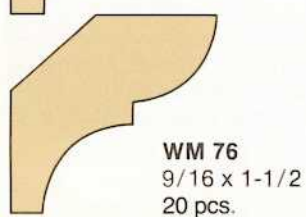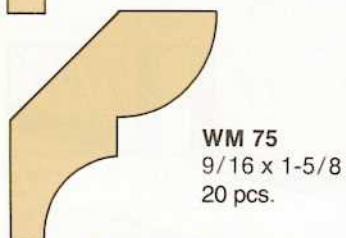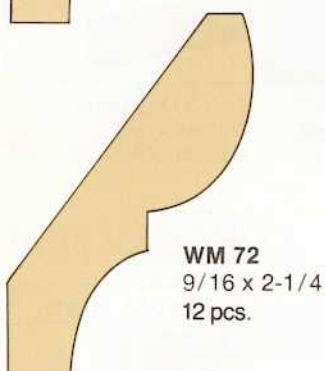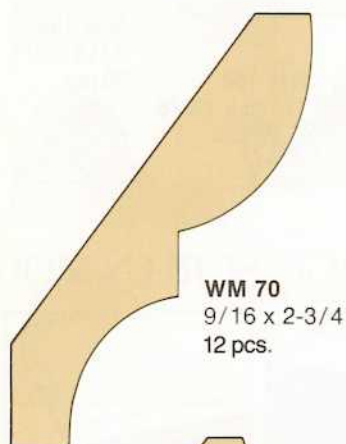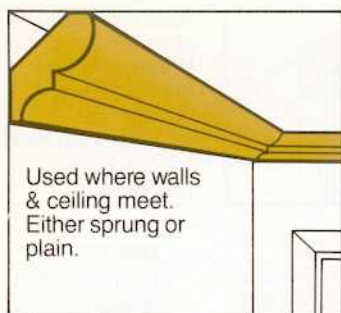


COVES

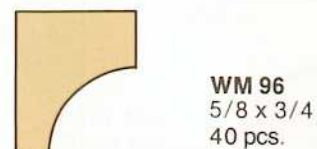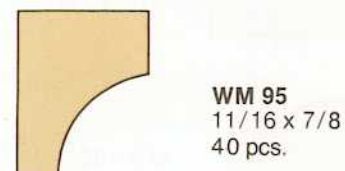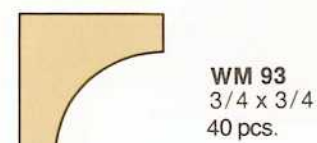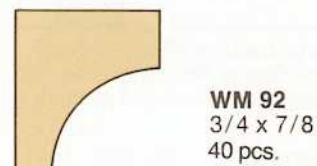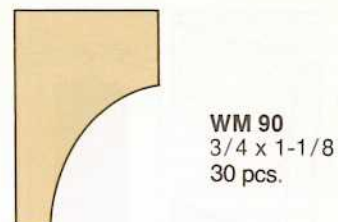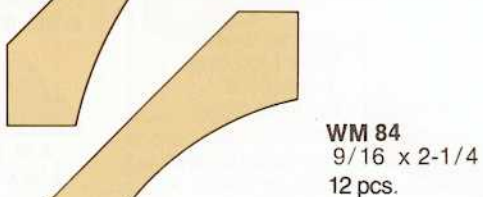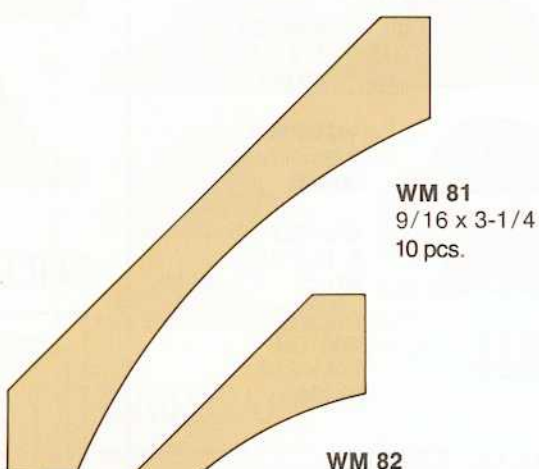


QUARTER ROUNDS

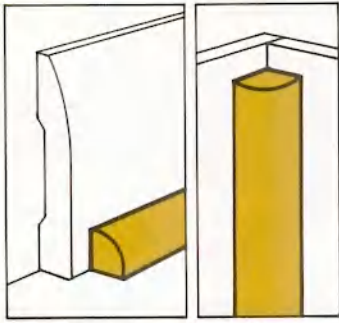

May be used as a Base Shoe, Inside Corner Moulding, or to cover any 90° recessed juncture.

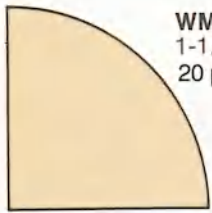

WM 103
1-1/16 x 1-1/16
20 pcs.

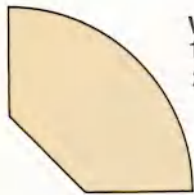

WM 104
11/16 x 1-3/8
25 pcs.



WM 105
3/4 x 3/4
40 pcs.



WM 106
11/16 x 11/16
40 pcs.



WM 107
5/8 x 5/8
40 pcs.



WM 108
1/2 x 1/2
50 pcs.




WM 109
3/8 x 3/8
50 pcs.



WM 110
1/4 x 1/4
50 pcs.

HALF ROUNDS

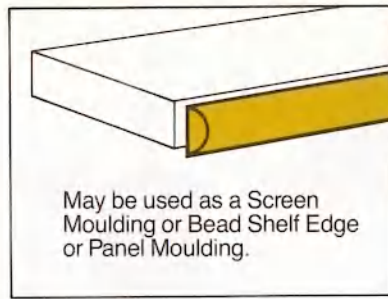

May be used as a Screen Moulding or Bead Shelf Edge or Panel Moulding.



WM 120
1/2 x 1
40 pcs.



WM 122
3/8 x 11/16
50 pcs.




WM 123
5/16 x 5/8
50 pcs.



WM 124
1/4 x 1/2
50 pcs.

BASE SHOES

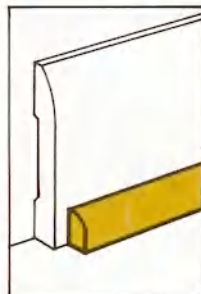

Applied where Base Moulding meets floor. Protects Base from damage. Conceals uneven lines or cracks where Base meets floor.




WM 126
1/2 x 3/4
50 pcs.



WM 127
7/16 x 3/4
50 pcs.




WM 129
7/16 x 11/16
50 pcs.




WM 131
1/2 x 3/4
50 pcs.

FLAT ASTRAGALS

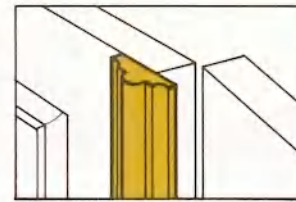

Attached to one of a pair of doors to keep the other from swinging through the opening. Also used for decorative purposes.

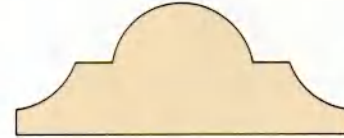

WM 133
11/16 x 1-3/4
20 pcs.




WM 134
11/16 x 1-3/8
25 pcs.




WM 135
7/16 x 3/4
50 pcs.

SHELF EDGE/SCREEN MOULD

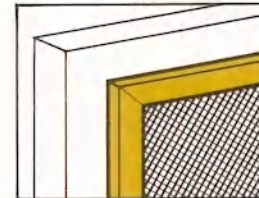

Covers seam where screening is fastened to the screen frame.

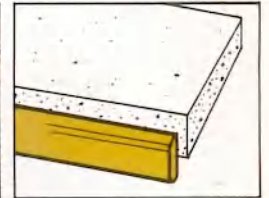

Also covers particle or flakeboard shelf edges.



WM 137
3/8 x 3/4 50 pcs.



WM 138
5/16 x 5/8 50 pcs.



WM 140
1/4 x 3/4 50 pcs.



WM 141
1/4 x 5/8 50 pcs.




WM 142
1/4 x 3/4 50 pcs.



WM 144
1/4 x 3/4 50 pcs.

GLASS BEADS

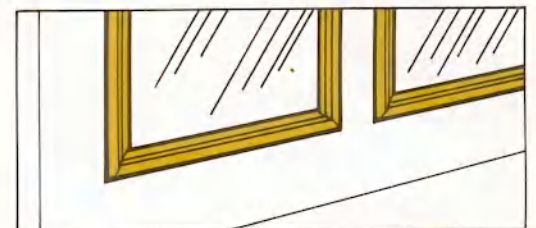

Used to hold glass in place. Also called Glass Stop, Cove & Bead, Putty Bead, Glazing Bead and Staff Bead.




WM 147
1/2 x 9/16
50 pcs.




WM 148
3/8 x 3/8
50 pcs.

BASE CAPS

A decorative member installed flush against wall and the top of an S4S Baseboard. Also a versatile Panel Moulding.

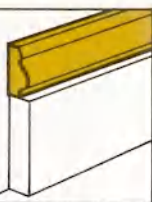


WM 163
11/16 x 1-3/8
25 pcs.

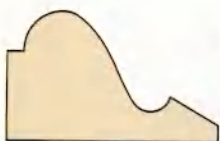


WM 164
11/16 x 1-1/8
30 pcs.



WM 166
11/16 x 1-1/4
30 pcs.

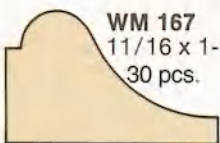


WM 167
11/16 x 1-1/8
30 pcs.

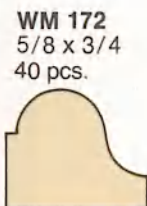


WM 172
5/8 x 3/4
40 pcs.

BRICK MOULD

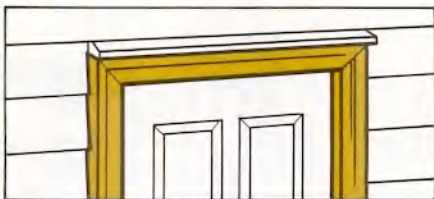

Used as an exterior door & window Casing. A thick Moulding providing a surface for brick or other siding to butt against.

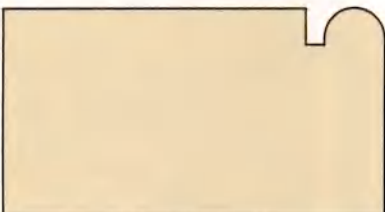


WM 175 1-1/16 x 2
8 pcs.

WM 176
1-1/16 x 1-3/4
12 pcs.



WM 180 1-1/4 x 2 8 pcs.


PANEL MOULDINGS

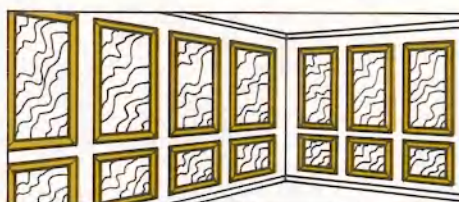


Originally used to trim out raised panel wall construction. Now, often used to frame attractive wall coverings for a paneled effect.



WM 182
11/16 x 1-5/8
20 pcs.

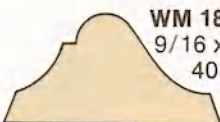

WM 183
9/16 x 1-1/8
40 pcs.

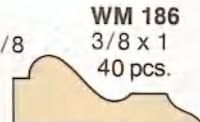

WM 186
3/8 x 1
40 pcs.




WM 185
9/32 x 1-3/8
40 pcs.

DRIP CAPS



Applied over exterior window & door frames. Keeps water from seeping under the siding. Also directs water away from window glass.

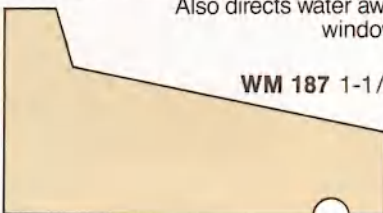

WM 187 1-1/16 x 2
12 pcs.



WM 188
1-1/16 x 1-5/8
12 pcs.




WM 196
11/16 x 1-3/4
20 pcs.




WM 197
11/16 x 1-5/8
20 pcs.


CORNER GUARDS

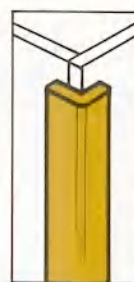


Outside (OS) Corner Guard is used to protect corners or to cover ragged edge where wall covering and painted surfaces meet at outside corner. (See page 12 for Inside Corner Guard.)

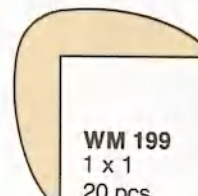


WM 199
1 x 1
20 pcs.

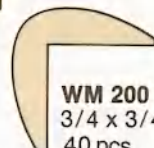


WM 200
3/4 x 3/4
40 pcs.

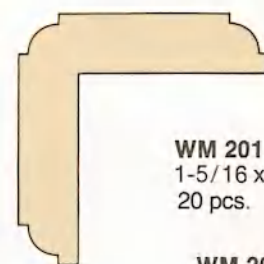


WM 201
1-5/16 x 1-5/16
20 pcs.

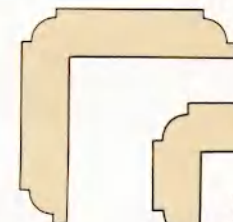


WM 202
1-1/8 x 1-1/8
20 pcs.

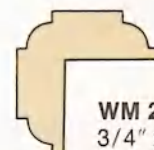


WM 203
3/4" x 3/4
40 pcs.

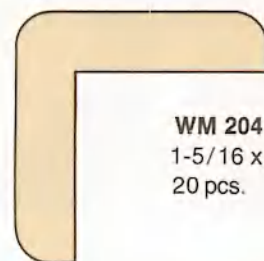

WM 204
1-5/16 x 1-5/16
20 pcs.

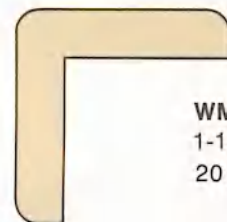


WM 205
1-1/8 x 1-1/8
20 pcs.

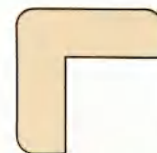

WM 206
3/4 x 3/4
40 pcs.

SHINGLE/PANEL MOULDINGS

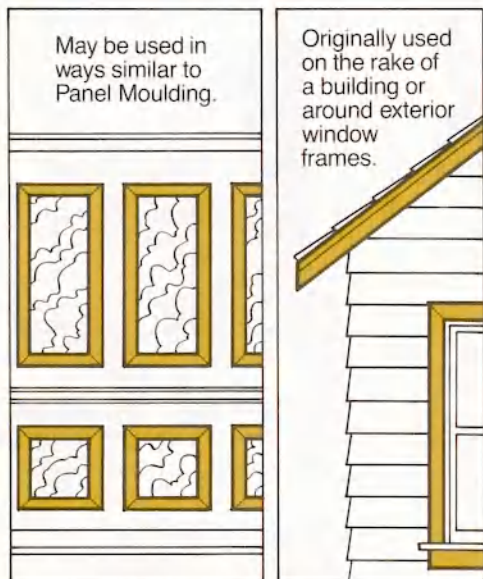

May be used in ways similar to Panel Moulding.

Originally used on the rake of a building or around exterior window frames.



WM 207
11/16 x 2-1/2
12 pcs.



WM 209
11/16 x 2
12 pcs.



WM 210
11/16 x 1-5/8
20 pcs.



WM 212
11/16 x 2-1/2
12 pcs.



WM 213
9/16 x 2
20 pcs.




WM 217
11/16 x 1-3/4
20 pcs.



WM 218
11/16 x 1-1/2
25 pcs.

BATTENS

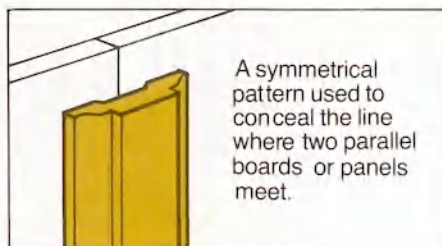

A symmetrical pattern used to conceal the line where two parallel boards or panels meet.




WM 224 9/16 x 2-1/4
12 pcs.




WM 229
11/16 x 1-5/8
20 pcs.


HAND RAIL

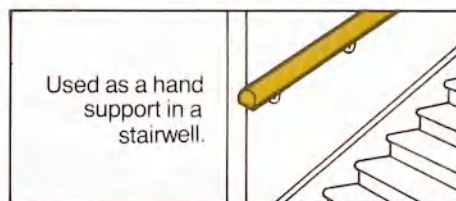


Used as a hand support in a stairwell.

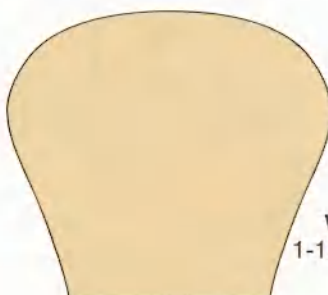

WM 230
1-1/2 x 1-11/16
6 pcs.

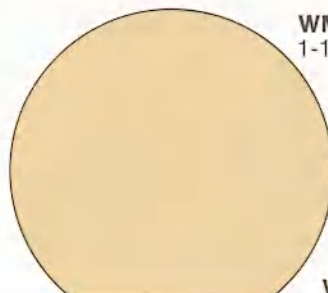


WM 231
1-1/2 x 1-11/16
6 pcs.

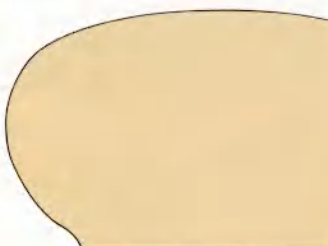


WM 240
1-1/4 x 2-1/4
6 pcs.

ROUNDS

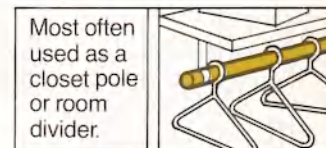


Most often used as a closet pole or room divider.

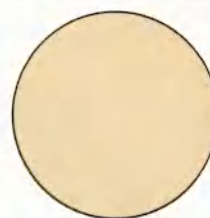

WM 232
1-5/8 6 pcs.
WM 233
1-5/16 10 pcs.
WM 234
1-1/16
12 pcs.

SQUARES

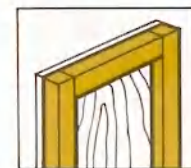


Used in cabinets, framing for shelves or other utilitarian uses. Also used as baluster for supporting stair handrails.



WM 236 6 pcs.
1-5/8 x 1-5/8
WM 237 9 pcs.
1-5/16 x 1-5/16
WM 238 12 pcs.
1-1/16 x 1-1/16
WM 239
3/4 x 3/4
30 pcs.

SCREEN/S4S STOCK

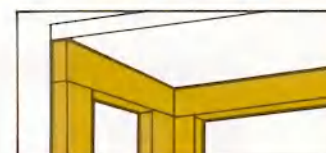


Same basic uses as Squares.



WM 241 8 pcs.
1-1/16 x 2-3/4
WM 243 8 pcs.
1-1/16 x 1-3/4
WM 246 10 pcs.
3/4 x 2-3/4
WM 247 10 pcs.
3/4 x 2
WM 248 15 pcs.
3/4 x 1-3/4
WM 249 15 pcs.
3/4 x 1-5/8
WM 250 15 pcs.
3/4 x 1-1/2
WM 251 20 pcs.
3/4 x 1-3/8
WM 252 20 pcs.
3/4 x 1-1/4
WM 254 40 pcs.
1/2 x 3/4

S4S stock also available in 7/16", 1/2", 9/16", 5/8" and 11/16" standard thickness.

LATTICE

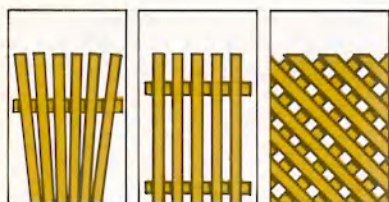

Originally used in trellis work. This small, plain S4S Moulding is among the most versatile of profiles.

WM 265
9/32 x 1-3/4
30 pcs.


WM 267
9/32 x 1-3/8
40 pcs.

WM 266
9/32 x 1-5/8
30 pcs.


WM 268
9/32 x 1-1/8
40 pcs.

Lattice also available
in 1/4 thickness.

PICTURE MOULDING

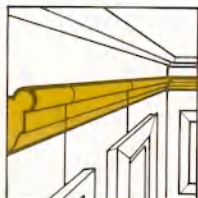


Used to support
hooks for picture
hanging. Applied
around a room's
circumference
near the
ceiling line.

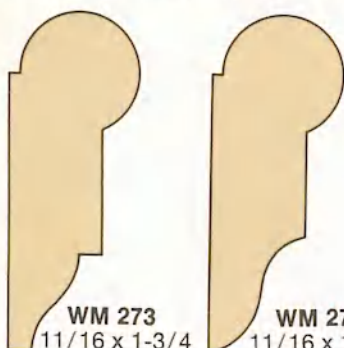


WM 273
11/16 x 1-3/4
20 pcs.

WM 276
11/16 x 1-3/4
20 pcs.

BACK BANDS

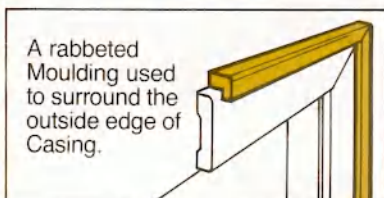

A rabbeted
Moulding used
to surround the
outside edge of
Casing.

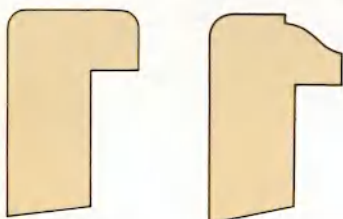


WM 280
11/16 x 1-1/16
30 pcs.

WM 281
11/16 x 1-1/8
30 pcs.

WAINSCOT/PLY CAP


Trims out the upper edge or top
of a Wainscot. Covers plywood's
rough sandwich edge in installa-
tions where it's exposed to view.
Also called a Dado Cap.

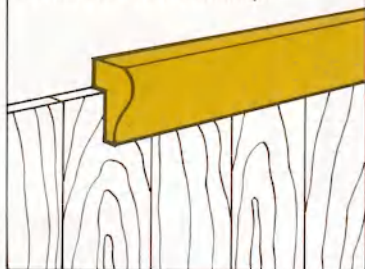

WM 290
11/16 x 1-3/8
25 pcs.



WM 292
9/16 x 1-1/8
40 pcs.

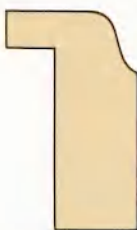

WM 294
11/16 x 1-1/8
30 pcs.




WM 295
1/2 x 1-1/4
30 pcs.



WM 296
3/4 x 3/4
40 pcs.


CHAIR RAILS

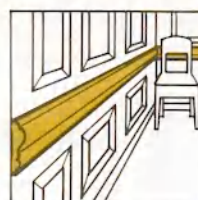


Interior Moulding
applied about one third
up from the floor, paral-
leling Base Moulding
and encircling the
room. Originally used
to prevent chairs from
marring walls. Used
today as a key decorative
detail in traditional &
colonial design.



WM 297
11/16 x 3
10 pcs.

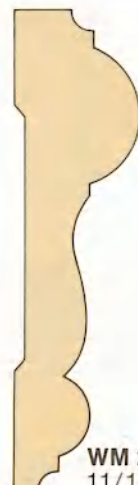

WM 298
11/16 x 2-1/2
12 pcs.

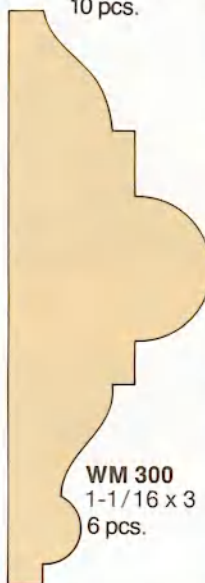

WM 300
1-1/16 x 3
6 pcs.



WM 303
9/16 x 2-1/2
12 pcs.





WM 304
1/2 x 2-1/4
12 pcs.




WM 390
11/16 x 2-5/8
12 pcs.


CASING

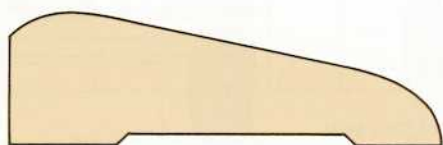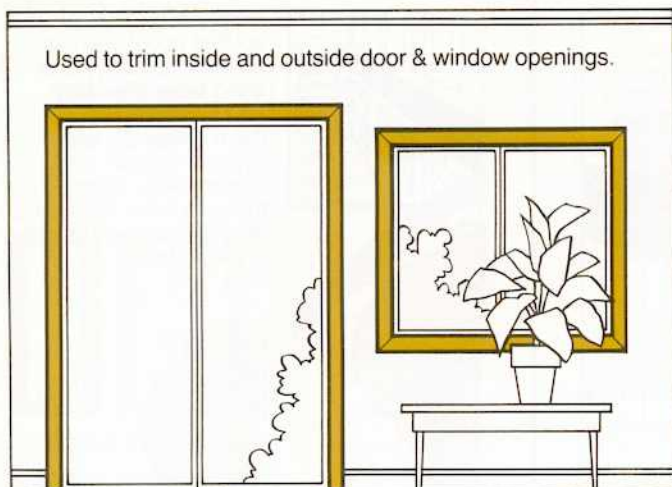


WM 306
11/16 x 2-1/4
12 pcs.

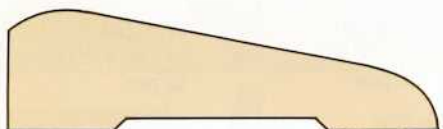


WM 307
5/8 x 2-1/4
12 pcs.

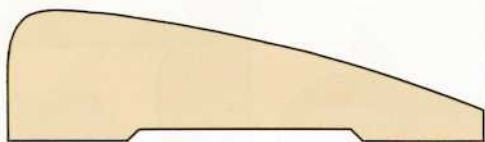


WM 315
11/16 x 2-1/2
12 pcs.

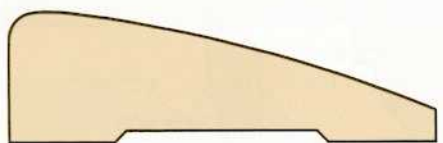


WM 316
11/16 x 2-1/4
12 pcs.

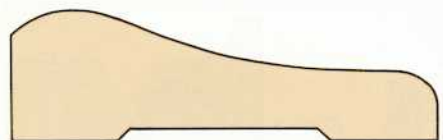


WM 321
11/16 x 2-1/4
12 pcs.

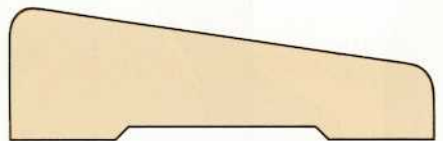


WM 324
11/16 x 2-1/4
12 pcs.

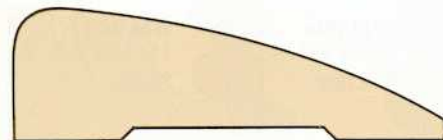


WM 327
11/16 x 2-1/4
12 pcs.

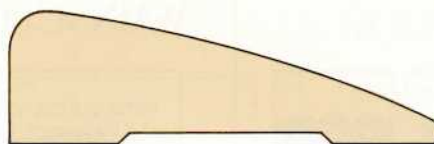


WM 328
11/16 x 2-1/4
12 pcs.

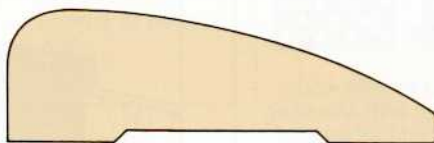

WM 329
11/16 x 2-1/4
12 pcs.

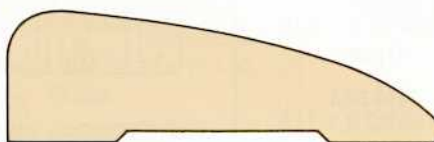


WM 330
11/16 x 2-1/4
12 pcs.

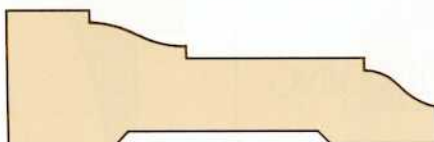


WM 332
11/16 x 2-1/4
12 pcs.




WM 346
5/8 x 2-1/4
12 pcs.

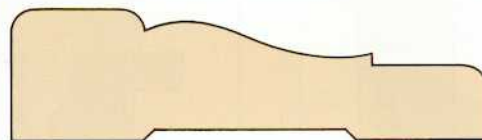


WM 351
11/16 x 2-1/2
12 pcs.

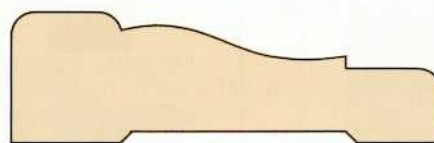


WM 356
11/16 x 2-1/4
12 pcs.

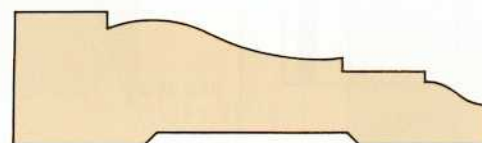


WM 361
11/16 x 2-1/2
12 pcs.

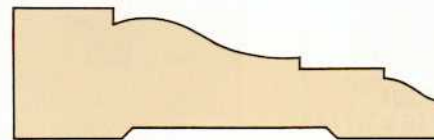


WM 366
11/16 x 2-1/4
12 pcs.

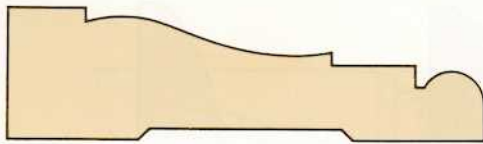


WM 371
 $11/16 \times 2-1/2$
 12 pcs.

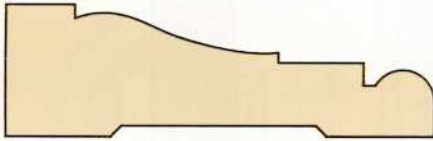


WM 376
 $11/16 \times 2-1/4$
 12 pcs.

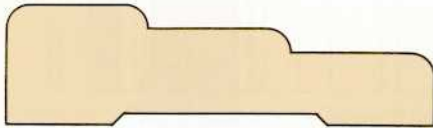


WM 387
 $5/8 \times 2-1/4$
 12 pcs.

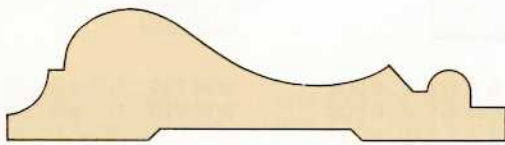


WM 390
 $11/16 \times 2-5/8$
 12 pcs.

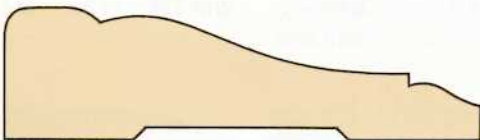


WM 440
 $11/16 \times 2-1/2$
 12 pcs.

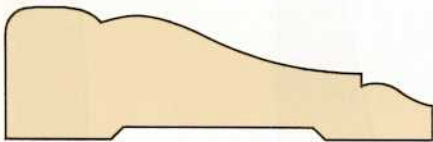


WM 442
 $11/16 \times 2-1/4$
 12 pcs.

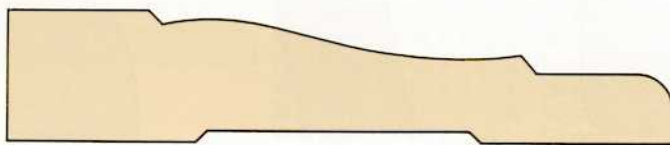


WM 444
 $11/16 \times 3-1/2$
 10 pcs.

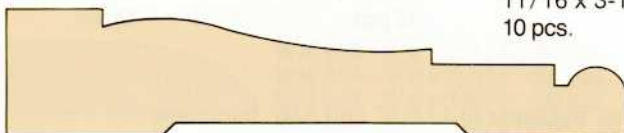

WM 445
 $11/16 \times 3-1/4$
 10 pcs.

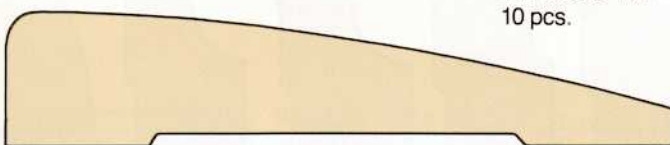


WM 448
 $11/16 \times 3-1/2$
 10 pcs.

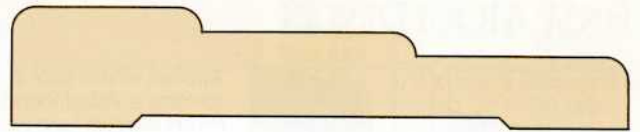


WM 683
 $5/8 \times 3-1/4$ 10 pcs.



WM 410 $11/16 \times 4-1/4$ 8 pcs.
WM 412 $11/16 \times 3-1/2$ 10 pcs.
WM 413 $11/16 \times 3-1/4$ (Illus.) 10 pcs.



WM 430 $9/16 \times 4-1/4$ 8 pcs.
WM 432 $9/16 \times 3-1/2$ 10 pcs.
WM 433 $9/16 \times 3-1/4$ (Illus.) 10 pcs.

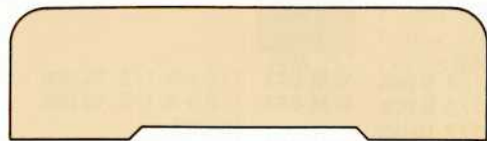

WM 452 $11/16 \times 2-1/2$ (Illus.) 12 pcs.
WM 453 $11/16 \times 2-1/4$ 12 pcs.




WM 472 $9/16 \times 2-1/2$ (Illus.) 12 pcs.
WM 473 $9/16 \times 2-1/4$ 12 pcs.




WM 492 $7/16 \times 2-1/2$ (Illus.) 20 pcs.
WM 493 $7/16 \times 2-1/4$ 20 pcs.


BASE MOULDINGS

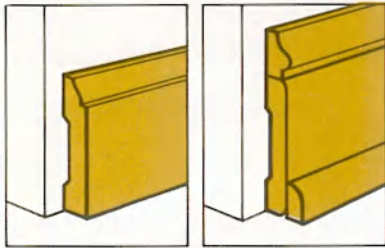


Applied where floor & walls meet, forming a visual foundation. Protects walls from kicks, bumps, furniture, etc. Base may be referred to as One, Two or Three-Member. Base Shoe & Base Cap are used to conceal uneven floor & wall junctions.

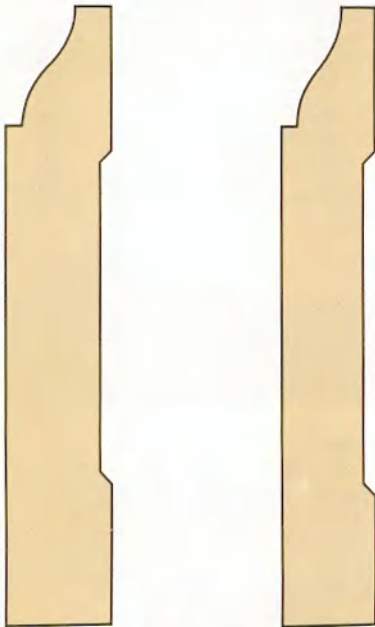


- | | | | | | |
|----------|--------------|---------|----------|-------------|---------|
| WM 618 | 9/16 x 5-1/4 | 8 pcs. | WM 632 | 1/2 x 3-1/2 | 10 pcs. |
| WM 620 | 9/16 x 4-1/4 | 8 pcs. | WM 633 | 1/2 x 3-1/4 | 10 pcs. |
| WM 622 | 9/16 x 3-1/2 | 10 pcs. | (Illus.) | | |
| WM 623 | 9/16 x 3-1/4 | 10 pcs. | WM 634 | 1/2 x 3 | 10 pcs. |
| (Illus.) | | | | | |
| WM 624 | 9/16 x 3 | 10 pcs. | | | |

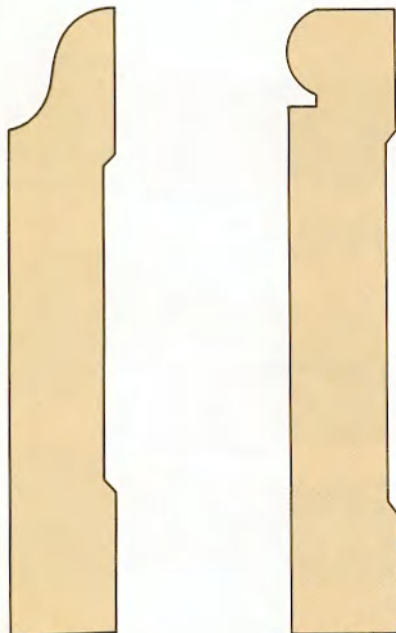

- | | | | | | |
|----------|--------------|---------|----------|--------------|---------|
| WM 658 | 9/16 x 5-1/4 | 8 pcs. | WM 750 | 9/16 x 4-1/4 | 8 pcs. |
| WM 660 | 9/16 x 4-1/4 | 8 pcs. | WM 752 | 9/16 x 3-1/2 | 10 pcs. |
| WM 662 | 9/16 x 3-1/2 | 10 pcs. | WM 753 | 9/16 x 3-1/4 | 10 pcs. |
| WM 663 | 9/16 x 3-1/4 | 10 pcs. | (Illus.) | | |
| (Illus.) | | | | | |
| WM 664 | 9/16 x 3 | 10 pcs. | | | |

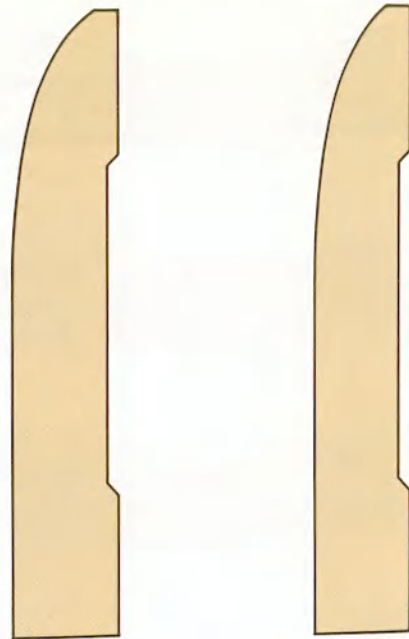


- | | | | | | |
|----------|--------------|---------|----------|-------------|---------|
| WM 709 | 9/16 x 4-1/2 | 8 pcs. | WM 722 | 1/2 x 3-1/2 | 10 pcs. |
| WM 710 | 9/16 x 4-1/4 | 8 pcs. | WM 723 | 1/2 x 3-1/4 | 10 pcs. |
| WM 712 | 9/16 x 3-1/2 | 10 pcs. | (Illus.) | | |
| WM 713 | 9/16 x 3-1/4 | 10 pcs. | WM 724 | 1/2 x 3 | 10 pcs. |
| (Illus.) | | | WM 725 | 1/2 x 2-1/2 | 12 pcs. |
| WM 714 | 9/16 x 3 | 10 pcs. | WM 726 | 1/2 x 2-1/4 | 12 pcs. |

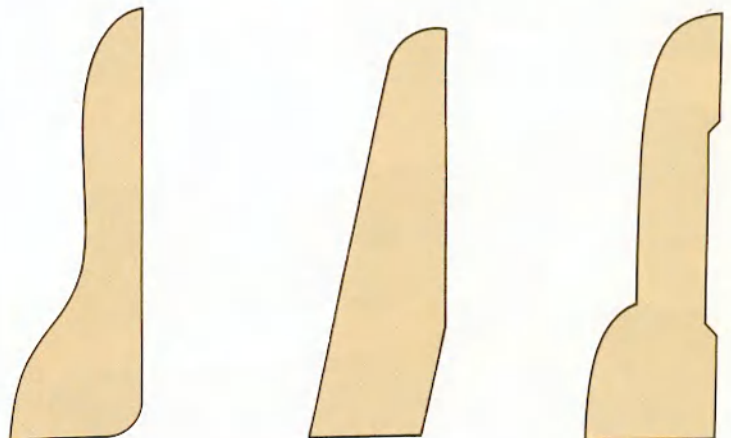

- | | | | | | |
|--------|---------------|---------|--------|---------------|---------|
| WM 790 | 11/16 x 2-1/4 | 12 pcs. | WM 791 | 11/16 x 2-1/4 | 12 pcs. |
| | | | WM 795 | 11/16 x 2-1/4 | 12 pcs. |

Base also available in 11/16" and 5/8" thickness

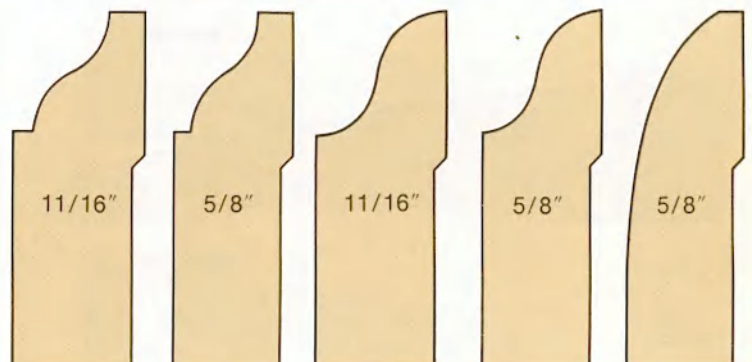

STOPS



In door trim, Stop is nailed to the faces of the door frame to prevent the door from swinging through. As window trim, Stop holds the bottom sash of a double-hung window in place. Also used as an apron under window stools.



WM 813	7/16 x 2-1/4	20 pcs.
WM 814	7/16 x 1-3/4	30 pcs.
WM 815	7/16 x 1-5/8	30 pcs.
WM 816	7/16 x 1-3/8 (Illus.)	30 pcs.
WM 817	7/16 x 1-1/4	30 pcs.
WM 818	7/16 x 1-1/8	40 pcs.
WM 820	7/16 x 7/8	50 pcs.



WM 823	3/8 x 2-1/4	20 pcs.
WM 824	3/8 x 1-3/4	30 pcs.
WM 825	3/8 x 1-5/8	30 pcs.
WM 826	3/8 x 1-3/8 (Illus.)	30 pcs.
WM 827	3/8 x 1-1/4	30 pcs.
WM 828	3/8 x 1-1/8	40 pcs.
WM 830	3/8 x 7/8	50 pcs.
WM 831	3/8 x 3/4	50 pcs.




WM 843	7/16 x 2-1/4	20 pcs.
WM 844	7/16 x 1-3/4	30 pcs.
WM 845	7/16 x 1-5/8	30 pcs.
WM 846	7/16 x 1-3/8 (Illus.)	30 pcs.
WM 847	7/16 x 1-1/4	30 pcs.
WM 848	7/16 x 1-1/8	40 pcs.
WM 850	7/16 x 7/8	50 pcs.
WM 851	7/16 x 3/4	50 pcs.




WM 853	3/8 x 2-1/4	20 pcs.
WM 854	3/8 x 1-3/4	30 pcs.
WM 855	3/8 x 1-5/8	30 pcs.
WM 856	3/8 x 1-3/8 (Illus.)	30 pcs.
WM 857	3/8 x 1-1/4	30 pcs.
WM 858	3/8 x 1-1/8	40 pcs.
WM 860	3/8 x 7/8	50 pcs.
WM 861	3/8 x 3/4	50 pcs.



WM 873	7/16 x 2-1/4	20 pcs.
WM 874	7/16 x 1-3/4	30 pcs.
WM 875	7/16 x 1-5/8	30 pcs.
WM 876	7/16 x 1-3/8 (Illus.)	30 pcs.
WM 877	7/16 x 1-1/4	30 pcs.
WM 878	7/16 x 1-1/8	40 pcs.
WM 880	7/16 x 7/8	50 pcs.
WM 881	7/16 x 3/4	50 pcs.




WM 883	3/8 x 2-1/4	20 pcs.
WM 884	3/8 x 1-3/4	30 pcs.
WM 885	3/8 x 1-5/8	30 pcs.
WM 886	3/8 x 1-3/8 (Illus.)	30 pcs.
WM 887	3/8 x 1-1/4	30 pcs.
WM 888	3/8 x 1-1/8	40 pcs.
WM 890	3/8 x 7/8	50 pcs.
WM 891	3/8 x 3/4	50 pcs.




WM 903	7/16 x 2-1/4	20 pcs.
WM 904	7/16 x 1-3/4	30 pcs.
WM 905	7/16 x 1-5/8	30 pcs.
WM 906	7/16 x 1-3/8 (Illus.)	30 pcs.
WM 907	7/16 x 1-1/4	30 pcs.
WM 908	7/16 x 1-1/8	40 pcs.
WM 910	7/16 x 7/8	50 pcs.
WM 911	7/16 x 3/4	50 pcs.



WM 913	3/8 x 2-1/4	20 pcs.
WM 914	3/8 x 1-3/4	30 pcs.
WM 915	3/8 x 1-5/8	30 pcs.
WM 916	3/8 x 1-3/8 (Illus.)	30 pcs.
WM 917	3/8 x 1-1/4	30 pcs.
WM 918	3/8 x 1-1/8	40 pcs.
WM 920	3/8 x 7/8	50 pcs.
WM 921	3/8 x 3/4	50 pcs.



WM 933	7/16 x 2-1/4	20 pcs.
WM 934	7/16 x 1-3/4	30 pcs.
WM 935	7/16 x 1-5/8	30 pcs.
WM 936	7/16 x 1-3/8 (Illus.)	30 pcs.
WM 937	7/16 x 1-1/4	30 pcs.
WM 938	7/16 x 1-1/8	40 pcs.
WM 940	7/16 x 7/8	50 pcs.
WM 941	7/16 x 3/4	50 pcs.



WM 943	3/8 x 2-1/4	20 pcs.
WM 944	3/8 x 1-3/4	30 pcs.
WM 945	3/8 x 1-5/8	30 pcs.
WM 946	3/8 x 1-3/8 (Illus.)	30 pcs.
WM 947	3/8 x 1-1/4	30 pcs.
WM 948	3/8 x 1-1/8	40 pcs.
WM 950	3/8 x 7/8	50 pcs.
WM 951	3/8 x 3/4	50 pcs.







WM 953	7/16 x Width Specified	
--------	------------------------	--




WM 954	3/8 x Width Specified	
--------	-----------------------	--



PANEL STRIPS/MULLION CASINGS

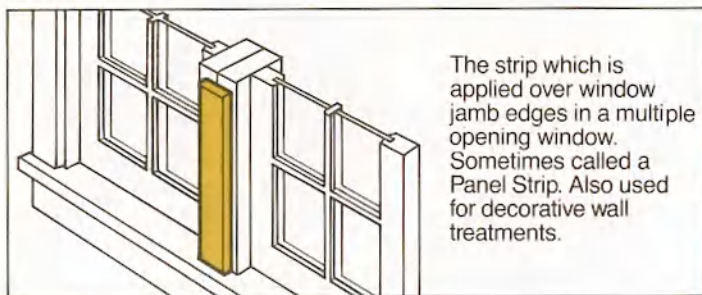


SHELF CLEAT

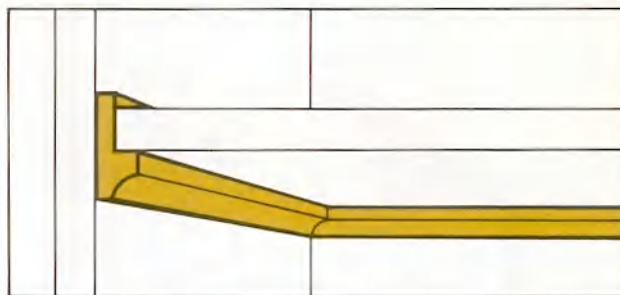

Commonly used in closets, cabinets & bookcases to support the shelves. Also called Shelf Strip.

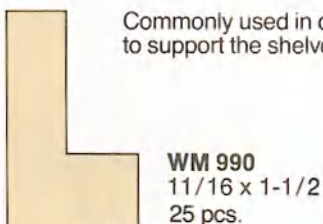


CHAMFER STRIP

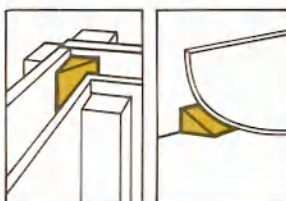


Used in highway & dam construction forms, making a chamfered edge at concrete corners. Also used where kitchen cabinet tops meet the wall. Also used as a linoleum Cove, (under linoleum where it extends up the wall).


INSIDE CORNER

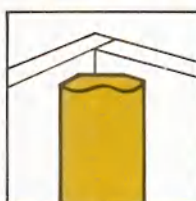


Joins two walls at inside corner. Solves problems of uneven joints where butted panels, wallpaper, painted or contrasting surfaces meet. Gives corners a decorative finished look.



FLAT STOOLS

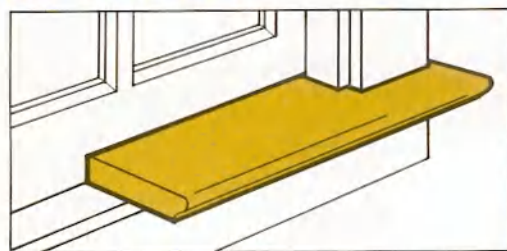


A moulded interior trim member serving as a sash or window-frame sill cap. Stools may be "beveled-rabbeted" or "rabbeted" to receive the window-frame sill or "non-rabbeted." Some "non-beveled" or "non-rabbeted" Stools include a tongue to fit in the groove of the window-frame sill.

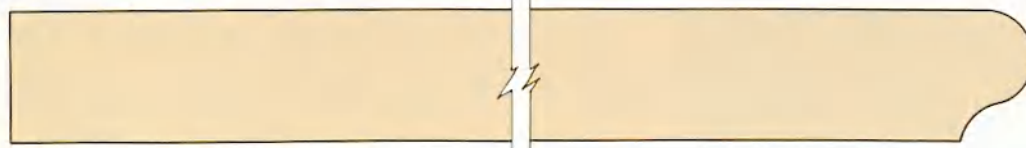



WM 1021
 11/16" x width specified

RABBETED STOOLS

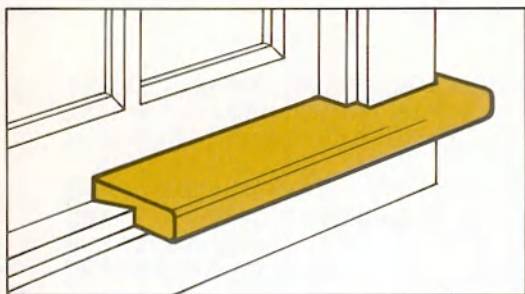

A moulded interior trim member serving as a sash or window-frame sill cap.


SPECIFY WIDTH OF RABBIT AND DEGREE OF BEVEL

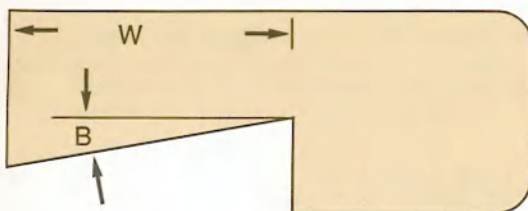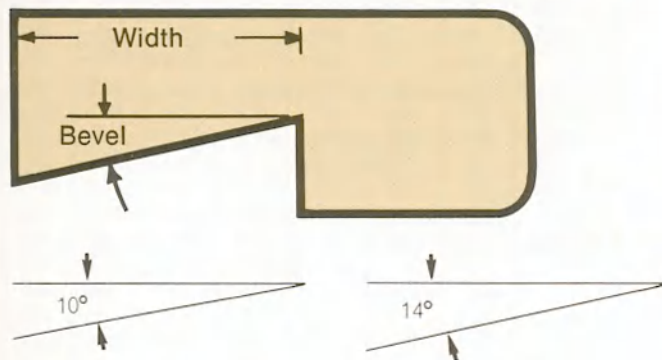

WM 1131 1-1/16 x 3-5/8
6 pcs.

WM 1133 1-1/16 x 3-1/4
6 pcs.

WM 1134 1-1/16 x 2-3/4
6 pcs.

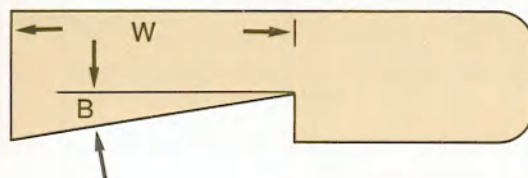


WM 1153 11/16 x 3-1/4
10 pcs.

WM 1154 11/16 x 2-3/4
12 pcs.

WM 1155 11/16 x 2-1/2
12 pcs.


WM 1156 11/16 x 2-1/4
12 pcs.

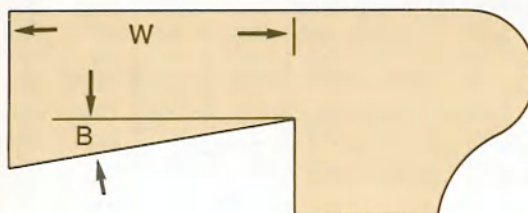

WM 1161 1-1/16 x 3-5/8
6 pcs.

WM 1163 1-1/16 x 3-1/4
6 pcs.

WM 1164 1-1/16 x 2-3/4
6 pcs.

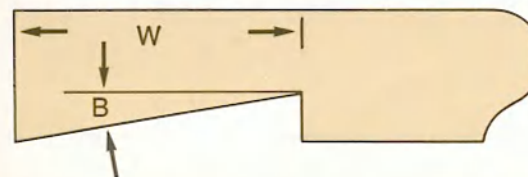


WM 1193 11/16 x 3-1/4
10 pcs.

WM 1194 11/16 x 2-3/4
12 pcs.


WM 1195 11/16 x 2-1/2
12 pcs.

WM 1196 11/16 x 2-1/4
12 pcs.


T-ASTRAGALS

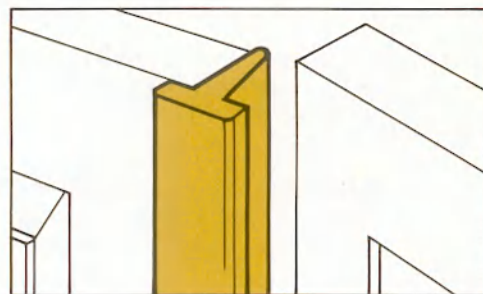


An Astragal, T-like in shape, which is rabbeted to the approximate thickness of the swinging door.

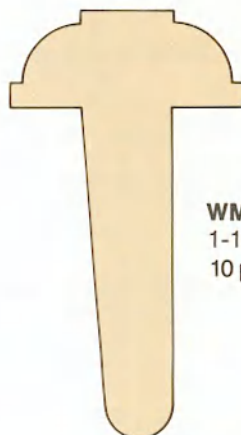


WM 1300
1-1/4 x 2-1/4
10 pcs.

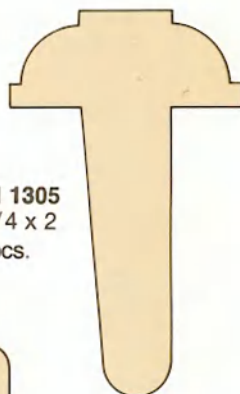

WM 1305
1-1/4 x 2
10 pcs.

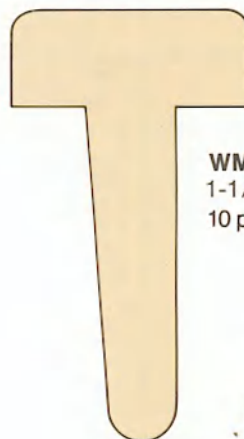

WM 1310
1-1/4 x 2-1/4
10 pcs.

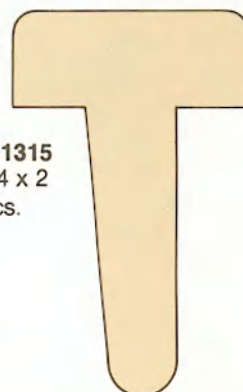

WM 1315
1-1/4 x 2
10 pcs.