

MT12 Racing Lua

Installation Guide

Product software installation for RadioMaster MT12

MT12 Racing Lua · v10.0.0

RadioMaster MT12 · EdgeTX v2.12.2 "Queen Anne's Revenge"

Official product documentation · First release

MT12 Racing Lua is a race dashboard and drive-aid suite for the RadioMaster MT12 surface radio. This guide explains how to install the product on the radio SD card and connect it to a model under EdgeTX v2.12.2 "Queen Anne's Revenge".

Screenshots show a German EdgeTX UI on MT12; menu paths and values are the same on English firmware. After installation, use the product User Manual for operation and settings. This document covers installation only.

Note: Product version: v10.0.0 (first public release). Your package contains compiled script files (.luac). Use the language package supplied with your purchase (English or German menu labels). Features are the same in both packages.

1. Requirements

Item	Specification
Radio	RadioMaster MT12 (surface / pistol grip)
Firmware	EdgeTX v2.12.2 "Queen Anne's Revenge"
Storage	EdgeTX SD card with the standard SCRIPTS folder structure
Software package	MT12 Racing Lua v10.0.0 (five .luac files, as supplied)
Computer	Any system that can copy files to the SD card

2. Install the software package

Copy the five product files into the folders below. Create any missing folders. On macOS, copy real files—not Finder aliases.

```
SCRIPTS/
TOOLS/
  abscore.luac
  absconf.luac
  absmenu.luac
MIXES/
  absmix.luac
TELEMETRY/
  absui.luac
```

2.1 After copying

- Confirm all five files are present in the paths above
- Eject the SD card safely, insert it into the radio, and power on

Note: EdgeTX lists scripts by name (for example absmix, absui). The .luac extension is the compiled form delivered with this product.

3. Prepare the model

Select or create a surface model for your vehicle. Radio link setup and channel mapping for the car are your responsibility. The product attaches to throttle/brake and steering through the mixer as described below.

4. Enable Lua scripts

- Open **Model** → **Model Setup** (German UI: **MODELL-EINRICHTUNG**)
- Set **Lua Scripts** to **ON** (German UI: **Lua-SKRIPTE = Ein**)

Important: Lua Scripts must be ON for this model. Without this, mix scripts and the telemetry script will not run.

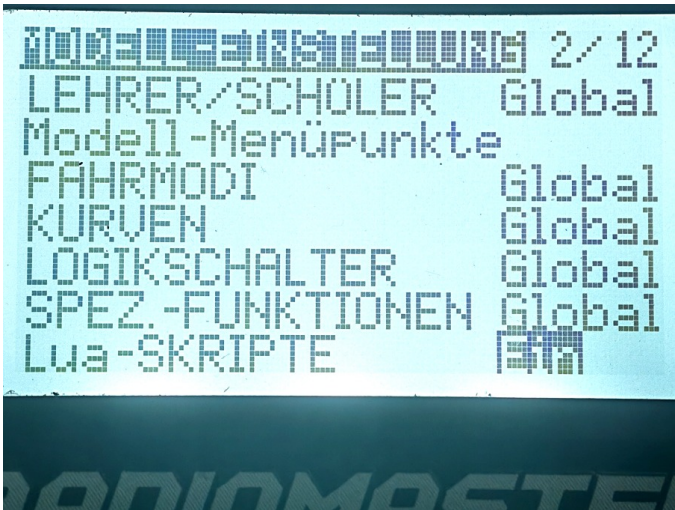


Fig. 1 — Model Setup: Lua Scripts = ON (Lua-SKRIPTE = Ein)

5. Assign the mixer script (absmix)

- Open Model → Custom Scripts / Mix Scripts (German UI: MIX SCRIPTS)
- In the first available script slot (LUA1), select **absmix**
- Confirm outputs Drive and StrMul are available as mixer sources

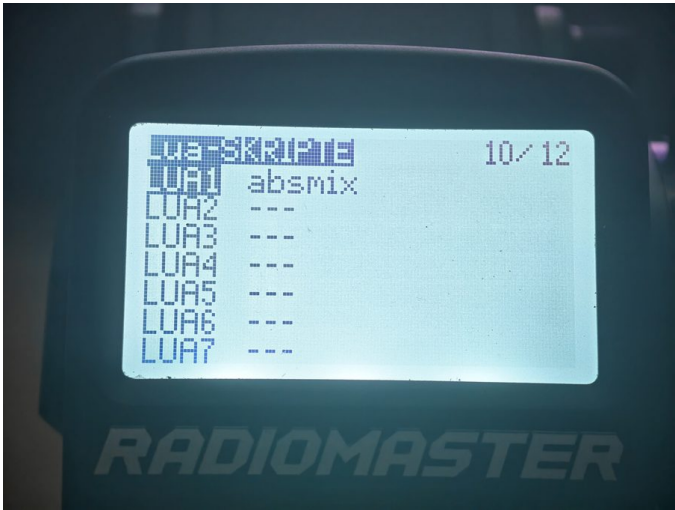


Fig. 2 — Mix Scripts: LUA1 = absmix (other slots empty)

Important: If absmix shows an input such as Brake, assign the physical Thr control—not a mixer channel (for example CH1). Using a post-mix channel can create a control feedback loop. The product is designed to read the physical throttle stick for brake and throttle processing.

6. Configure the mixer

Design: absmix does not replace the stick. Each controlled channel keeps a raw ADD line from the stick; the script only applies a MULTIPLY factor. If the script is not running, direct stick control remains available.

Required mixer structure (one ADD line and one MULTIPLY line per channel):

Channel	Line	Source / operation	Settings
CH1 throttle/brake	1	TH / Gas · ADD	Weight 100%, switch NONE (---)

Channel	Line	Source / operation	Settings
CH1	2	absmix · Drive · MULTIPLY	Weight 100%, switch NONE — one line only
CH2 steering	1	ST / Str · ADD	Weight 100%, or –100% on this ADD line if reverse is required
CH2	2	absmix · StrMul · MULTIPLY	Weight 100%, switch NONE — one line only

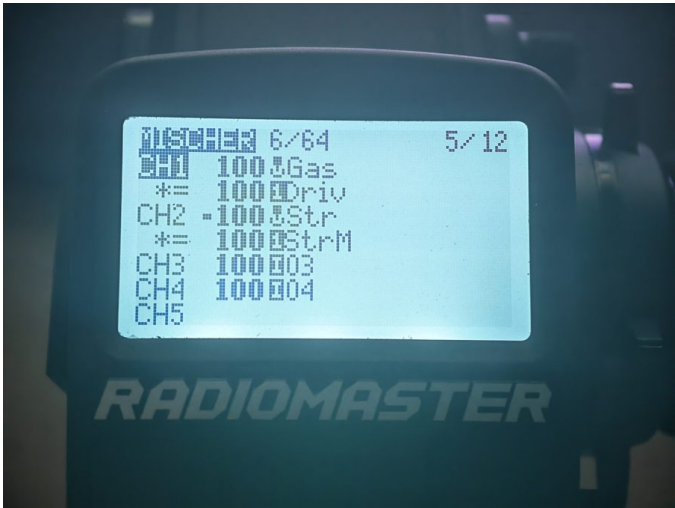


Fig. 3 — Mixer overview: CH1 Gas + Drive (×), CH2 Str (–100% reverse) + StrM (×)

Note: Script sources may appear as Drive / StrMul (short labels Driv / StrM). Leave the multiply switch at NONE (---). A second identical Drive or StrMul MULTIPLY line multiplies the factor twice and will mis-scale the aids.

Important: Do not place two identical Drive or StrMul MULTIPLY lines on the same channel. Use exactly one MULTIPLY line per channel.

6.1 CH1 multiply line (Drive)

On the second mixer line of CH1: Source = Drive, Weight = 100, Operation = Multiply (Multipl.), Switch = ---.

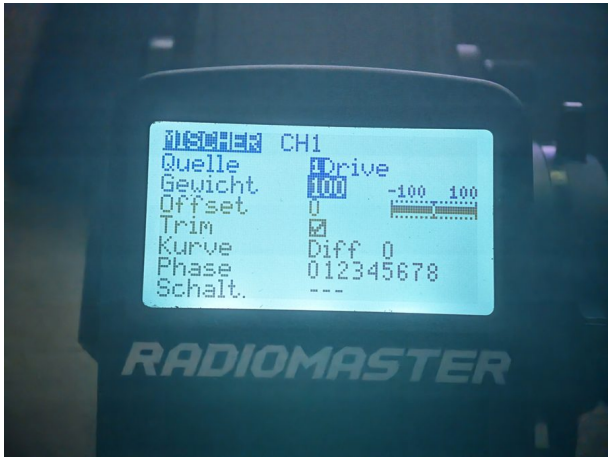


Fig. 4 — CH1 line: Source Drive, Weight 100

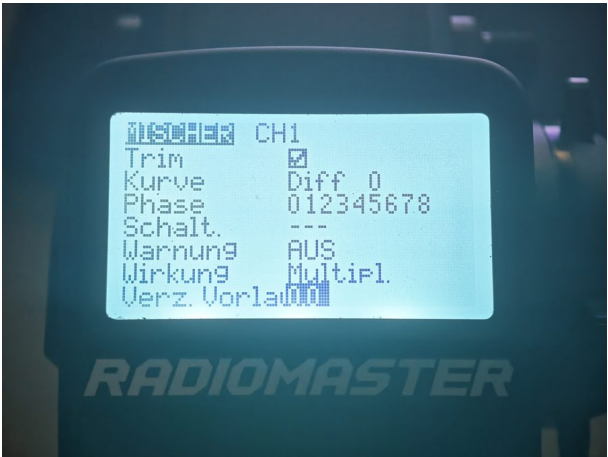


Fig. 5 — CH1 line: Operation = Multiply (Multipl.)

6.2 CH2 multiply line (StrMul)

On the second mixer line of CH2: Source = StrMul, Weight = 100, Operation = Multiply (Multipl.), Switch = ---. Reverse, if needed, belongs on the ST/Str ADD line (for example –100%), not on the StrMul MULTIPLY line.

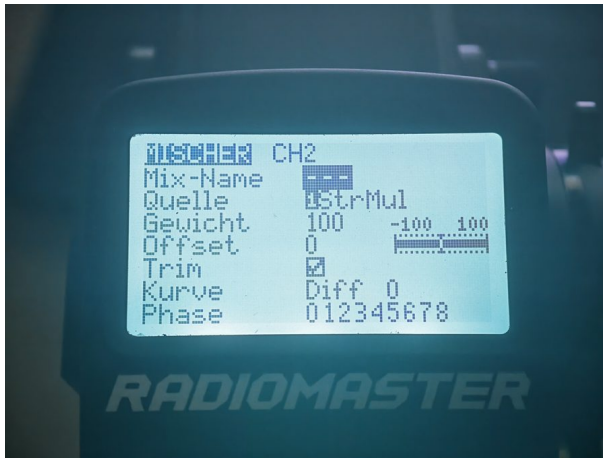


Fig. 6 — CH2 line: Source StrMul, Weight 100

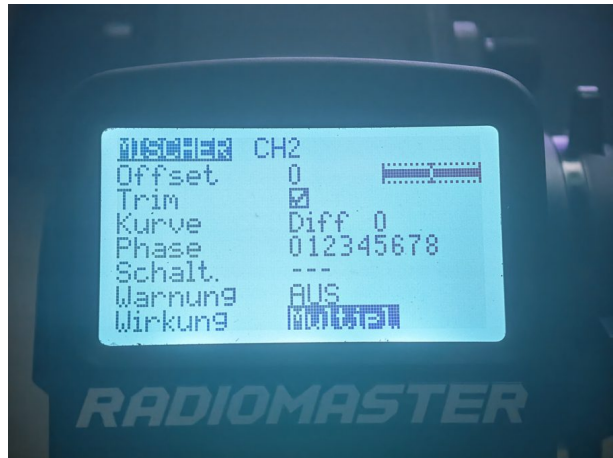


Fig. 7 — CH2 line: Operation = Multiply (Multipl.)

7. Assign the telemetry screen (absui)

- Open Model → Telemetry → Screens (German UI: TELEMETRIE)
- Set page 1 to type Script / Skript and select **absui**
- Open that screen to show Race Home (link quality, pack data, laps, session footer)

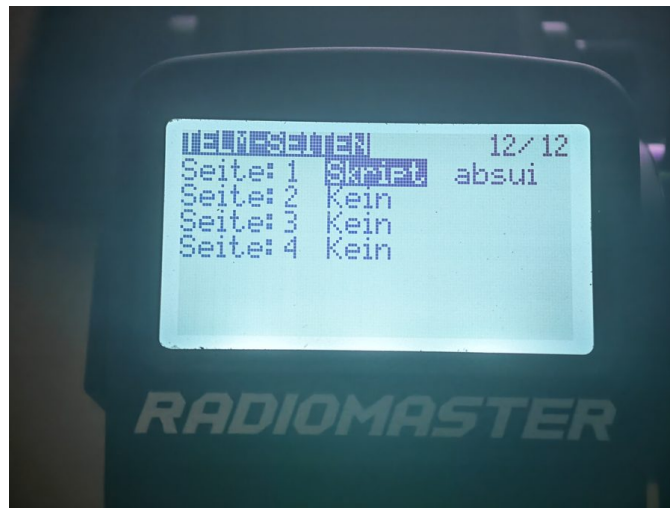


Fig. 8 — Telemetry: Page 1 = Script / Skript absui

8. Verify installation

- Race Home displays correctly on the absui telemetry screen
- ENTER opens the product settings tabs; EXIT returns to Race Home
- CH1 and CH2 respond to throttle/brake and steering with the new mixer lines active

Installation is complete. For every screen and setting, refer to the MT12 Racing Lua User Manual included with your package.