

FIFTH WHEEL GUIDE GUIDE



FW35, FW3500, FW8, FW2000, FW2500 & FW2535 Series & Simplex Series, Castloc Series & 400C Fifth Wheels & SE, Taperloc & Inboard Sliders

Parts List Information and Service Repair Kits

For parts, service, and warranty questions, call 888-396-6501

TABLE OF CONTENTS

Table of Contents	2
Holland's Quick Reference Parts Guide	3
Fifth Wheel Assemblies	4
Bracket Identification	5
Identifying the Fifth Wheel Assembly	5
Types of Fifth Wheel Mounts	6
Brackets	7
FW3500 Series Parts Explosion	8
FW35 Series Parts Explosion	9
FW2000 Series Parts Explosion	10
FW8 Series Parts Explosion	11
Explanation of Part Number Sequence	12
Rebuilding and Parts Kits	12
Rubber Upshock Cushions	15
FW8, FW35, FW2500 & FW2535 Series Slide Bracket Parts	16
FW2500-H, FW2535-H & FW2536-H Series Slide Bracket Parts	17
Holland Fifth Wheel Air Cylinders	18
Holland Fifth Wheel Air Cylinder Parts List	19
Holland Fifth Wheel Parts List	20
Simplex, Castloc, 400C and Slider Kits	21
Contact Information	2/1

HOLLAND'S QUICK REFERENCE PARTS GUIDE

At last! Holland has compiled parts breakdowns of our top products. This quick reference parts guide allows you to easily and accurately identify the correct Service Repair Kits (SRKs), rebuild kit (RK) and other parts needed to repair your Holland products.


Use only genuine Holland replacement parts made to meet or exceed OEM requirements. Protect your products and ensure long service life. Keep in mind, when you use other than genuine Holland parts, you risk voiding your warranty.

Visit the Holland website *www.thehollandgroupinc.com* for additional information.

When you visit our website:

- Click the "News" button for the latest updates on Holland products
- Download the current Holland List Price file or Hierarchy Guide
- Check the "Literature" button for a complete list of Quick Reference Parts Guides
 - 1. Fifth Wheels form number XL-AM107
 - 2. Landing Gear form number XL-AM109
 - 3. Trailer Suspensions form number XL-AM108
 - 4. Truck Suspensions form number XL-AM _ _ _ (yet to be developed)
 - 5. Couplers form number XL-PH329
- Download and print any Holland sales or service literature
- Order Holland sales or service literature, product videos, DVDs or CDs and FedEx Kinko's will send it to you—no charge.


FW35 Assembly — XA-351-A-L-P (top plate)

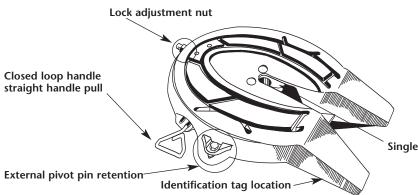


RK-351-A-L rebuild kit (left hand) RK-351-A rebuild kit (right hand)

Single stage double jaw lock

FW3500 or FW2535 Assembly — (Old style) — XA-3501 series (top plate)

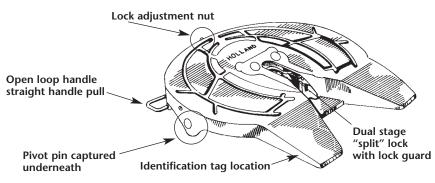

RK-63501 rebuild kit (left hand) RK-63500 rebuild kit (right hand)

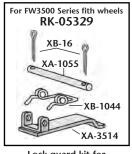




RK-04413

Retention pins


Lock guard kit for 3500 series

Pivot pin and bushing kit


FW8 Assembly — XA-201-A-L-P (top plate)

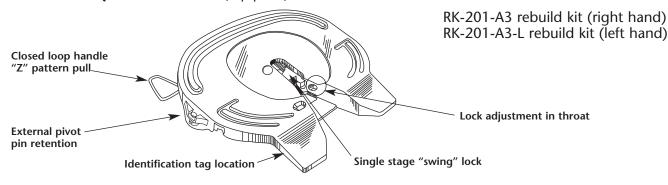

FW2000 or FW2500 Assembly — XA-2009 series top plate (obsolete)*

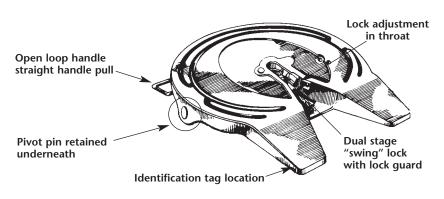

RK-62000 rebuild kit (right hand) RK-62001 rebuild kit (left hand)

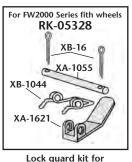




RK-04413 Retention pins Roll pins

Pivot pin and bushing kit

Top plate available to UPS and the Post Office only

BRACKET IDENTIFICATION

All of the information needed to determine your current fifth wheel bracket style and height is included in the fifth wheel model number printed on the serial number tag attached to the driver side pick-up ramp of the fifth wheel. The first four digits after the first "dash" ("-") identify your bracket.

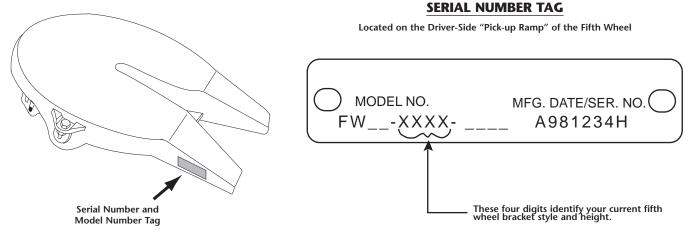

IDENTIFYING THE FIFTH WHEEL ASSEMBLY

Stationary over-the-frame angle mount

FW3500 series:

Stationary with obsolete XA-3501 top plate

FW3500-7813GL

Top plate Bracket Frame width Left hand release

G = 34" frame width

L = left hand release

Stationary outboard angle mount

FW35 series:

Stationary with XA-351 top plate

FW35-7883XR

Top plate Bracket Frame width Right hand release

X = no frame width used

 \mathbf{R} = right hand release

Air slide over-the-frame angle mount

FW35 series:

Slider with XA-351 top plate

FW35-7002G3L

Top plate Bracket Frame width Slide length LH Release

G = 34'' frame width

3 = 24.5'' slide travel

L = left hand release

Air slide outboard angle mount

FW35 series:

Slider with XA-351 top plate

FW35-8002T3L

Top plate Bracket Frame width Slide length LH Release

T = outboard angle

3 = 24.5" slide travel

L = left hand release

Stationary over-the-frame angle mount

FW2000-7811GL


Stationery with XA-2009 top plate and 34" frame width

Slider with over-the-frame angle mount


FW2500-7003G3L

Stationery with XA-2009 top plate and 34" frame width


Over-the-frame stationary mount

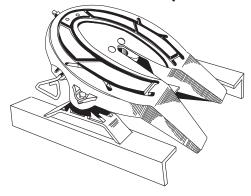


Plate/base mount

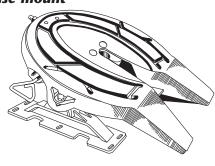


Over-the-frame slider mount

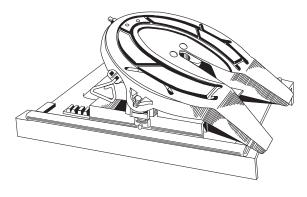


Outboard angle stationary

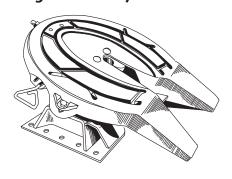

Over-the-frame slider for angle mount

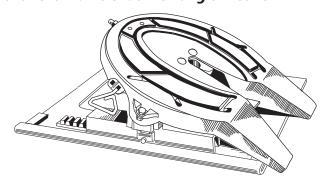

Outboard angle slider mount

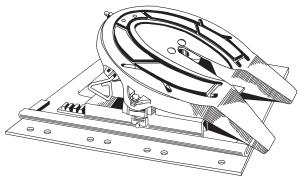


Measurements

Frame width: from the outside of the tractor frame to the opposite side of the outside frame **Fifth wheel height:** from the top of the tractor frame to the top of the fifth wheel when it's level


(do not include the angles or brackets)

Mounting Base Style

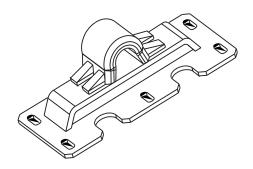

MOUNTING B	ASE STYLE BR	RACKETS
Fifth Wheel Model Number	Bracket Part Number	Height*
FW7801	XA-7801	8.69″
FW7802	XA-7802	7.69″
FW7803	XA-7803	6.69″
FW7804	XA-7804	5.69″

[&]quot;Dog Bone" Style

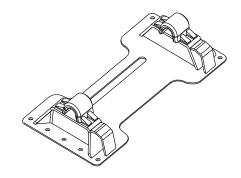


"DOG BONI	E" STYLE BRA	CKETS
Fifth Wheel Model Number	Bracket Part Number	Height*
FW7883	XA-7883	8.69″
FW7884	XA-7884	7.69″
FW7885	XA-7885	6.69″
FW7886	XA-7886	5.69″

^{*}Height of the fifth wheel from the tractor frame to the top of the fifth wheel plate when level.

Air Style

AIR	STYLE BRA	CKETS	
Fifth Wheel Model Number		Release Style	Height*
FW7001 FW8001	XA-7001	AIR	9.00″
FW7002 FW8002	XA-7002	AIR	8.00″
FW7003 FW8003	XA-7003	AIR	7.00″
FW7301 FW8301	XA-7301	AIR	8.50″
FW7009 FW8009	XA-7009	AIR	10.50″

Manual Release Style

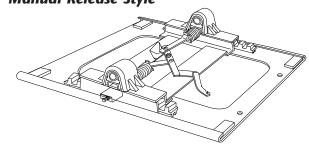

MANUAL STYLE BRACKETS					
Fifth Wheel Model Number		Release Style	Height*		
FW7011 FW8011	XA-7011	MANUAL	9.00″		
FW7012 FW8012	XA-7012	MANUAL	8.00″		
FW7013 FW8013	XA-7013	MANUAL	7.00″		
FW7311 FW8311	XA-7311	MANUAL	8.50″		
FW7019 FW8019	XA-7019	MANUAL	10.50″		

^{*}Height of the fifth wheel from the tractor frame to the top of the fifth wheel plate when level.



RK-04413 BRACKET PIN & BUSHING REPLACEMENT KIT 30 (2 Req.) 31 (2 Req.) 32 (2 (2 Req.)








XA-3501 Rebuild Kit

RK-63500: Right-hand Release



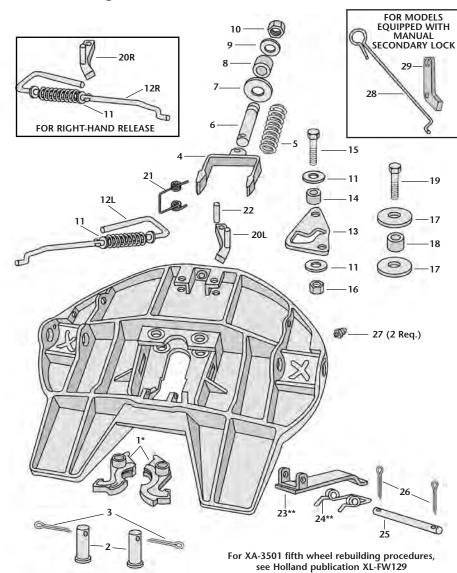

XA-3501 SERIES PARTS LIST

ITEM	PART NO.	NO. REQ'D.	PART NAME
1	XA-1704*	1	Lock Jaws
2	XA-1313	2	Lock Pin
3	XB-5	2	Cotter Pin 1/4" x 2"
4	XA-1703-F	1	Yoke Sub-Assembly
5	XB-1505	1	Spring
6	XA-1706	1	Yoke Shaft
7	XB-02312	1	Lock Adjustment Tag
8	XB-1127	1	Rubber Washer
9	XB-PW-1316-112	! 1	Washer 1-1/2" OD x 13/16" ID
10	XB-HNH-34-F	1	Locknut 3/4"-16
11	XB-T-49	3	Washer 1-3/4" OD x 9/16" ID
12L	RK-1707-M	1	Left-Hand Release Handle S/A
			(Part No. (11) must be installed on
			handle for complete assembly.)
12R	RK-1707-6	1	Right-Hand Release Handle S/A
			(Part No. (11) must be installed on
			handle for complete assembly.)
13	XA-1705	1	Cam Plate
14	XA-1029	1	Roller

15	XB-2083	1	Bolt 1/2"-20 x 1-3/4"
16	XB-T-69-A	1	Locknut 1/2"-20
17	XB-1030-1	2	Washer
18	XA-1507	1	Roller
19	XB-CX-58-F-134	1	Bolt 5/8"-18 x 1-3/4"
20L	XA-3542-L	1	Secondary Lock, Left-Hand
20R	XA-3542-R	1	Secondary Lock, Right-Hand
21	XB-2149	1	Torsion Spring
22	XB-21-S-500-2750	1	Roll Pin
23	XA-3514**	1	Lock Guard
24	XB-1044**	1	Torsion Spring
25	XA-1055	1	Pin
26	XB-16	2	Cotter Pin 1/8" x 1"
27	XB-H-38	2	Grease Fitting
28	XA-3542-M	1	Manual Secondary Lock Handle
29	XA-3528	1	Manual Secondary Lock
30	XA-2016	2	Bracket Pin
31	XB-21-S-375-1750	2	Roll Pin
32	XB-0011-2	2	Rubber Bushing

PART NAME

NO. REO'D.

ITEM PART NO.


^{*} Not available individually; order RK-63503

^{**} Not available individually; order RK-05329




RK-351-07296 LOCK REPLACEMENT KIT



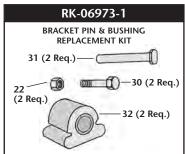

XA-351 Rebuild Kit RK-351-A: Right-hand Release

RK-351-A-L: Left-hand Release

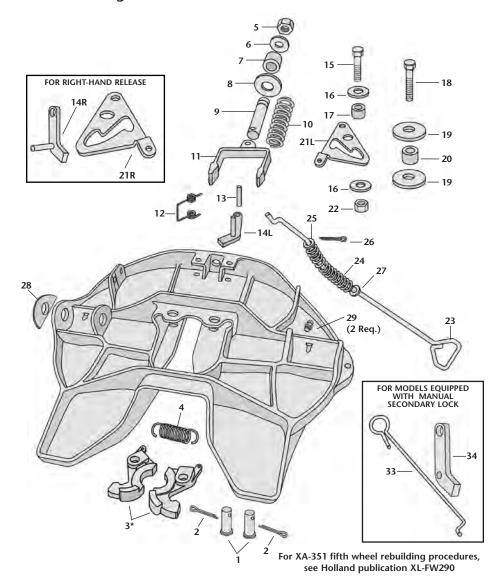

XA-351 SERIES PARTS LIST

ITEM	PART NO.	NO. REQ'D.	PART NAME
1	XA-07292-T	2	Lock Pin
2	XB-5	2	Cotter Pin (1/4" x 2")
3	XA-07296*	1	Lock Jaw Set
4	XB-07628	1	Extension Spring
5	XB-HNH-34-F	1	Locknut (3/4"-16)
6	XB-PW-1316-112	! 1	Washer (11/2" O.D. x 13/16" I.D.)
7	XB-1127	1	Rubber Washer
8	XB-02312	1	Lock Adjustment Tag
9	XA-1706	1	Yoke Shaft
10	XB-1505	1	Compression Spring
11	XA-07295	1	Yoke
12	XB-2149	1	Torsion Spring
13	XB-21-S-500-2750	1	Roll Pin (1/2" x 23/4")
14L	XA-3542-L	1	Secondary Lock (left-hand)
14R	XA-3542-R	1	Secondary Lock (right-hand)
15	XB-2083	1	Hex Head Cap Screw (1/2"-20 x 1-3/4")
16	XB-08559	2	Washer (13/4" O.D. x 9/16" I.D.)
17	XA-1029	1	Roller (1/2" I.D.)
18	XB-CX-58-F-134	1	Hex Head Cap Screw (5/8"-18 x 1-3/4")

^{*} Not available individually; order RK-351-07296


ITEM	PART NO.	NO. REQ'D.	PART NAME
19	XB-07431	2	Washer (2-5/8" x 21/32")
20	XA-1507	1	Roller (5/8" I.D.)
21L	XA-07150-L	1	Cam Plate (left-hand)
21R	XA-07150-R	1	Cam Plate (right-hand)
22	XB-T-69-A	1	Locknut (1/2"-20)
23	XA-07151-1	1	Release Handle (universal for both
			left and right)
24	XB-07291	1	Compression Spring
25	XB-PW-1732-1-116	1	Washer (11/16" O.D. x 1/2" I.D.)
26	XB-07508	1	Cotter Pin (1/8" x 1-1/4")
27	XB-T-49	1	Washer (1-3/8" O.D. x 9/16" I.D.)
28	XB-07610	1	Operation Tag
29	XB-H-38	2	Grease Zerk
30	XB-C-95	2	Hex Head Cap Screw (1/2"-20 x 1-1/4")
31	XE-06356	2	Bracket Pin
32	XB-0011-2	2	Rubber Bushing
33	XA-3542-M	1	Manual Second. Lock Release Handle
34	XA-3528	1	Manual Secondary Lock

RK-04113 BRACKET PIN AND BUSHING KIT 30 (2 Req.) 31 (2 Req.)





XA-2009 Rebuild Kit RK-62000: Right-hand Release

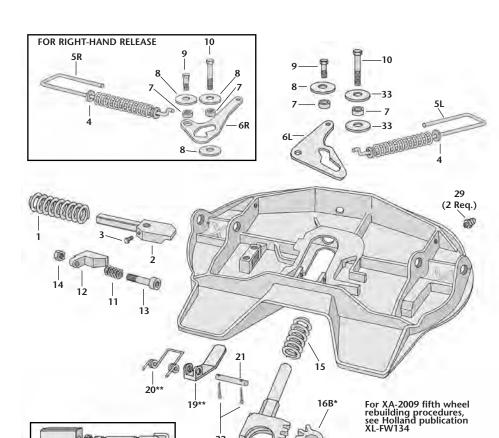

16A³

For XA-2009 fifth wheel rebuilding procedures, see Holland publication XL-FW134

Compression Spring 1-1/4" O.D. x 5"

NO. REQ'D. PART NAME

Lock Set

Hinged Lock Pin

Lock Guard

Pin

Torsion Spring

Cotter Pin 1/4" x 2

Cotter Pin 1/8" x 1"

RK-62001: Left-hand Release

XA-2009 PARTS LIST

		NO.	
ITEM	PART NO.	REQ'D.	PART NAME
1	XB-1007 (Red)	1	Compression Spring 1-5/8" O.D. x 5"
2	XA-1119	1	Plunger
3	XB-15	1	Set Screw 3/8"-16 x 3/4"
4	XB-T-49	1	Plain Washer 1/2"
5L	RK-1117-1-L	1	Left-Hand Release Handle (Item No. (4) must be installed on handle to complete assembly)
5R	RK-1117-1	1	Right-Hand Release Handle (Item No. (4) must be installed on handle to complete assembly)
6L	XA-1118-2-L	1	Left-Hand Cam Plate
6R	XA-1118-1	1	Right-Hand Cam Plate
7	XA-1029	2	Roller
8	XB-1030	3	Washer (right-hand only) 1/2" I.D. x 2-1/4" O.D.
9	XB-2083	1	Hex Head Screw 1/2"-20 x 1-3/4" with Locking Patch
10	XB-1031	1	1/2"-20 x 2" Hex Head Cap Screw
11	XB-403	1	Spring
12	XD-3123-1	1	Lock Adjusting Wedge
13	XB-2001	1	5/8″-11 x 3-3/4″ Socket Head Screw
14	XB-HNH-58-C	1	5/8″-11 Locknut

^{*} Not available individually; order RK-62004

	23	XA-1668	1	Safety Lock Block
	24	XB-NRJ-34-F	1	Jam Nut
	25	XA-1674	1	Safety Release Arm
. x 2-1/4" O.D.	26	XB-V-919	1	1/2" Diameter Steel Ball
with	27	XB-V-932	1	Compression Spring
	28	XB-V-1025	1	Set Screw 5/8"-18
V	29	XB-H-38	2	Grease Fitting
	30	XA-2016	2	Bracket Pin
	31	XB-21-S-375-1750	2	Roll Pin
ew	32	XB-0011-2	2	Rubber Bushing
	33	XB-02846	2	Washer (left-hand only) 1/2" I.D. x 2-5/8" O.D.

2

15 XB-1006 (Green)

16A&B XA-1102*

XB-5

XA-1016

XA-1621**

XB-1044**

XA-1055

XB-16

17

18

19

20

21

22

10 XL-AM107 Rev. C

26-0 27-

28-9


FOR MODELS EQUIPPED WITH SECONDARY LOCKS


^{**} Not available individually; order RK-05328

XA-201 Rebuild Kit


RK-201-A3: Right-hand Release

RK-201-A3-L: Left-hand Release



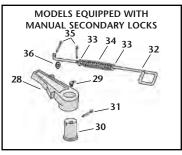



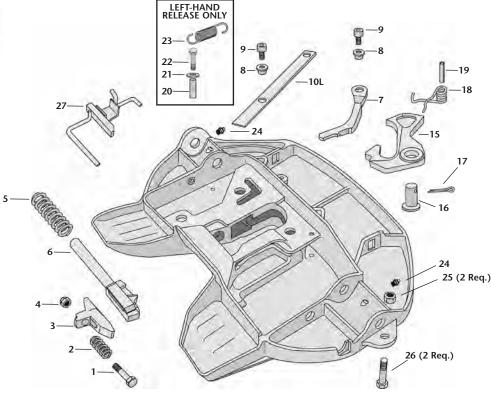


RK-06973-1

BRACKET PIN AND BUSHING KIT
25 (2 Req.) 26 (2 Req.)

37 (2 Req.)

38 (2 Req.)

For XA-201 fifth wheel rebuilding procedures, see Holland publication XL-FW355



XA-201 PARTS LIST

		-
ITFM	PART NO.	NO. REQ'D. PART NAME
1	XB-06329-1	1 Hex Head Cap Screw 5/8"-11 x 4-1/4"
2	XB-09495	1 Spring
3	XD-06328	1 Adjusting Wedge
4	XB-06179-2	1 Locknut 5/8″-11
5	XB-06330	1 Plunger Spring
6	XA-09417-1	1 Locking Plunger
7	XE-09415	1 Cam Arm
8	XA-08162	2 Roller
9	XB-08558	2 SHCS 1/2″-13 x 3/4″
10R	XA-09580†	1 Right-Hand Release Arm
10L	XA-09514	1 Left-Hand Release Arm
11R	-3 XB-09629†	1 Extension Spring
11R	-6 XB-09581†	1 Extension Spring
11L	XB-09408**	1 Extension Spring
12R	XA-09632†	1 Right-Hand Release Handle
12L	XA-09484**	1 Left-Hand Release Handle
13	XB-T-199	1 5/8" Washer
14	XB-06336	1 Cotter Pin .19" x 1-1/4"
15	XA-09416*	1 Hinged Lock
16	XA-06344	1 Lock Pin
17	XB-5	1 Cotter Pin 1/4" x 2"
18	XB-08764	1 Lock Return Spring
19	XB-21-S-500-275	0 1 Roll Pin

ITEM	PART NO.	NO. REQ'D	. PART NAME
20	XA-09558	1	Spacer
21	XB-1108	1	Washer
22	XB-C-38-C-214	1	HHCS, 3/8" x 2-1/4"
23	XB-09517-1	1	Extension Spring
24	XB-H-38	2	Grease Fitting
25	XB-T-69-A	2	Locknut, 1/2*-20
26	XB-C-95	2	Hex Head Cap Screw 1/2"-20 x 1-1/4"
27	XA-09590	1	Wedge Stop Block
28	XA-06349	1	Manual Secondary Lock Arm
29	XB-767-C	1	45° Grease Fitting
30	XA-1016-C	1	Secondary Lock Pin
31	XB-5	1	Cotter Pin 1/4" x 2" (Same as #17)
32	XA-06345	1	Secondary Lock Release Handle
33	XB-1204	2	7/16" Washer
34	XB-1028-1	1	Spring
35	XB-06337	2	Cotter Pin 1/8" x 1"
36	XB-PWC-38-78	1	Washer, 3/8" Clipped
37	XE-06356	2	Bracket Pin
38	XB-0011-2	2	Rubber Bushing
39	TF-TLN-08284	1	Helper Block (Wood)
40	TF-TLN-4000	1	Helper Block (Steel)
41	TF-TLN-0110	1	Kingpin Gage
42	TF-TLN-5001	1	2" Lock Adjustment Tool

^{*} Not available individually; order RK-201-A3-L or RK-201-A3 ** Not available individually; order RK-09557 † Not available individually; order RK-09556

EXPLANATION OF PART NUMBER SEQUENCE

- Most part numbers have been assigned a prefix "XA" or "XB".
- Listing is alpha-numeric, following the prefix.
- Parts are listed in the following sequence:
 - A. Prefix
 - В. Alpha (letter)
 - Numeric (number) sequence is left to right.

Examples:

- XA part numbers precede XB part numbers.
- XA-A part numbers precede XA-B part numbers.
- XA-A-1 part numbers precede XA-A-2 part numbers.

XA-1 part numbers precede XA-2 part numbers.

Old part number "5" is now found after

part number XB-4606 - in the following sequence:

XB-4606XB-5

XB-635-A

Notes:

Part numbers marked with an asterisk (*) indicate that other frame widths are available. For frame widths other than 34", replace "G" with the appropriate letter from the Frame Width Code chart found on page 2.

REBUILDING AND PARTS KITS

PART NUMBER	DESCRIPTION
RK-01370	Komp. lockout kit - both sides
	Release lever kit
	Kit for XA-2801-03815 & -1
	Liner brkt. kit - XA-3501-UB
	Cushion & riser kit
	Cushion & riser kit
	Drop handle kit for XA-3501-A-28-LH
KK-U4413	Cushion & pin kit for old style FW2000/FW3500
KK-U4489	Hyd. cylinder rep. kit (XA-2810-1 piston w/1 groove) Lock guard kit, FW1226
	Lock guard kit, FW1226 Lock guard kit, XA-2009
RK-05320 RK-05329	Lock guard kit, XA-2009
RK-05466	Lock kit - XA-3501-S05154
	No-tilt conv. kit - 7.88″
	No-tilt conv. kit - 8.88″
RK-06356	Mounting kit - includes bracket pins, bolts, & nuts
	Air line kit
	Air release kit for air release kingpins
RK-06973-1	Cushion & pin kit, FW8, FW35, FW33 (New style)
RK-07370	Air release kit
	Lockout kit retrofit (FW2080)
	Air release kit - includes RK-06559 & RK-09649
	Handle kit – field replacement
	Repair kit for XA-351-03505
	LH handle kit for XA-201-A-L (Gen. II Series only)
KK-09555	RH handle kit for XA-201-A (Gen. II Series only)
KK-U9336	RH handle kit for XA-201-A (Gen. III Series only) LH handle kit for XA-201-A-L (Gen. III Series only)
	Sensor harness and brackets (left hand release)
	Sensor harness and brackets (right hand release)
	ELI retrofit kit without top plate (XA-351, XA-331)
	ELI yard spotter retrofit kit without top plate
	ELI date download kit
	Sensor harness and brackets (yard spotter)
	Release handle kit (XA-2009-A)
RK-1117-1-L.	Release handle kit (XA-2009-A-LH)
RK-1117-6-L .	Release handle kit (XA-2009-A-UP-LH)
RK-1118-2-L .	Rebuild kit - LH cam (XA-2009-A-LH)
	RH handle kit (XA-1501-BA)
	Release handle kit (XA-581-AU1)
	Release handle kit (XA-1901-A)
	Release handle kit (XA-1501-CA1)
	Handle kit (XA-3501-A) (RH)
	Handle kit (XA-3501-A) (LH)
	Service kit XA-201-A) RH release 2Service kit (XA-201-A-02) RH release w/manual sec.
	-LService kit (XA-201-A-02) km release w/manual sec.
	LService kit (XA-201-A-02-L) ETTTEL W/Hahdal sec.
	Service kit (XA-201-A-02) kit release
	Air slide hose kit
	Air slide hose kit with valve
	Rod bearing kit (hydraulic cylinder)
	GGear pump & hyd. control valve - single cyl.
	GHose & fitting for single cyl. models
	GHose & fitting for twin cyl. models
RK-2800-41-0	GHyd. gear pump, cont. valve, flange kit for twin cyl.
RK-2800-50	Air operated lift control for all models
RK-2922	Hydraulic cyl. repair kit
	LówLube plates kit
	Pocket inserts kit
RK-331-3	Plates and pocket insert kit

PART NUMBER	DESCRIPTION
	Rebuild kit (XA-351-03505 & XA-351-03505-2)
	Rebuild kit (XA-351-03505-3)
RK-351-03505-4.	Rebuild kit (XA-351-03505-S)
	No-Tilt con. kit for FW35-7811 Series
	No-Tilt con. kit for FW35-7812 Series
	Lock kit (XA-351 Series)
	Lock kit (XA-351-03505)
	Handle kit (XA-351-A-28-L) Rebuild kit – XA-351-A – RH release
	Rebuild kit – XA-331-A – KH felease Rebuild kit – XA-351-A-02 manual secondary (RH)
	Rebuild kit – XA-351-A-02-I manual secondary (KH)
	Rebuild kit - XA-351-A-02-E mandar secondary (Err)
	Rebuild kit – XA-351-A-L – LH release
	Rebuild kit – XA-351-UB (used on FW67-16B)
	Release handle kit (XA-6001-A)
RK-62000	Rebuild kit - XA-2009-A
	Rebuild - XA-2009-A w/RK-04413
	Rebuild kit - XA-2009-A-LH
	Rebuild kit - XA-2009-A-LH with RK-04413
	Rebuild kit - XA-2009-A-UP
	Rebuild Kit - XA-2009-A-UP with RK-04413 Lock kit - XA-2009-A
	Rebuild kit - FW1226-UP w/LH release
	Rebuild kit - FW1226-0087 w/RH release
	Rebuild kit - FW1226
	Rebuild kit - XA-2009-01633
	Rebuild kit - XA-2009-01633-1
RK-63500	Rebuild kit - XA-3501-A
RK-63500-1	Reb. kit - XA-3501-A w/ RK-04413
RK-63501	Rebuild kit - XA-3501-A-LH
RK-63501-1	Reb. kit - XA-3501-A-LH with RK-04413
	Rebuild kit - XA-3501-UB for air lift wheels FW6700
	Lock kit - XA-3501-A, XA-1501-BA
	Lock kit - XA-3501-UB Rebuild kit - XA-3501-A-SM
	Rebuild kit - XA-3501-A-3M
	Rebuild kit - FW1900
	Rebuild kit - XA-3501-01244
	Rebuild kit - XA-351-01244-1
RK-63510	Rebuild kit - XA-3501-1244-2
	Rebuild kit - XA-6001-A
	Rebuild kit - XA-6201-A
	Kit for XA-3501-03505 for yd.sptr. FW3500-03344
	Reb. kit - XA-1501-BA, XA-1581-A1
	Rebuild kit - XA-1501-CA1
	Rebuild kit XA-1581-AU1 Slider spring conversion kit
	Silder spring conversion kit Rebuild kit - XA-101-DA
	Rebuild kit - XA-101-DA
	Rebuild kit - XA-71-DA
	Rebuild kit - XA-71-DA-03705
	Rebuild kit - XA-71-OA
RK-65015-1	Rebuild kit - XA-71-OA-0713
RK-65021	Rebuild kit - XA-2801-AX-1
	Rebuiild kit - XA-2801-S0848
	Rebuild kit - XA-71-DUA
	Lock kit, 2" - XA-71-DA, XA-101-DA
	Lock kit, 3.5" - XA-71-OA, XA-101-OA
	Secondary lock kit - XA-71, XA-101, XA-2801 Series
	Air lift fitting kit Air tank & tank bracket kit
MN-0013	WIIN OF LATER DIRECTOR NIC

Slide Plates without Mounting Angles

Standard Capacity

For FW8 FleetMaster Series, FW35 Series, or FW33 LowLube Series Fifth Wheels

Over-the-Frame Mount

MODEL	PLATE LENGTH	6.62″ TRAVEL	7.62″ and 8.62″ TRAVEL	10.1″ TRAVEL	APPROX. WEIGHT
XA-0750-1-11	32.8″	N.A	12.2″	N.A	83 lbs.
XA-0751-1	38.9″	10.7″	18.4″	13.9″	103 lbs.
XA-0751-2	45.0″	16.8″	24.5″	19.9″	118 lbs.
XA-0751-3	57.2″	N.A	36.7″	32.1″	149 lbs.
XA-0751-3A	52.6″	24.5″	N.A	N.A	138 lbs.
XA-0751-4	69.5″	41.3″	48.9″	44.4″	169 lbs.
XA-0751-5	82.0″	53.6″	61.2″	56.6″	229 lbs.
XA-0751-6	94.0″	65.8″	73.4″	68.8″	283 lbs.

All solid slide plates (XA-0750-1 through -7) are available on special order – no additional up charge.

Slide Plates with Attached Mounting Angles

Standard Capacity

For FW8 FleetMaster Series, FW35 Series, or FW33 LowLube Series Fifth Wheels

Over-the-Frame Mount

MODEL	PLATE LENGTH	7.00″ TRAVEL	8.00″ and 9.00″ TRAVEL	10.4" TRAVEL	APPROX. WEIGHT
XA-0752-G1-11	32.8″	N.A	12.2″	N.A	137 lbs.
XA-0753-G1	38.9″	10.7″	18.4″	13.9″	179 lbs.
XA-0753-G2	45.0″	16.8″	24.5″	19.9″	198 lbs.
XA-0753-G3	57.2″	N.A	36.7″	32.1″	249 lbs.
XA-0753-G3A	52.6″	24.5″	N.A	N.A	231 lbs.
XA-0753-G4	69.5″	41.3″	48.9″	44.4″	290 lbs.
XA-0753-G5	82.0″	53.6″	61.2″	56.6″	370 lbs.
XA-0753-G6	94.0″	65.8	73.4	68.8	445 lbs.

NOTE: For frame width other than 34", replace "G" with appropriate letter – see Page 2.

Slide Plates

Standard Capacity

For FW8 FleetMaster Series, FW35 Series, or FW33 LowLube Series Fifth Wheels

Outboard Angle Mount

MODEL	MOUNTING PLATE LENGTH	6.62" and 8.12" TRAVEL	7.62" and 8.62" TRAVEL	10.1″ TRAVEL	APPROX. WEIGHT
XA-07871-1	34.2″	N.A	12.2″	N.A	107 lbs.
XA-07871-2	42.2″	N.A	18.4″	N.A	121 lbs.
XA-07871-3	46.2″	N.A	24.5″	N.A	152 lbs.
XA-07871-4	58.2″	N.A	36.7″	N.A	185 lbs.
XA-07871-5	70.2″	N.A	48.9″	N.A	225 lbs.
XA-07871-1L	42.2″	10.7″	N.A	13.9″	136 lbs.
XA-07871-2L	50.2″	16.8″	N.A	19.9″	156 lbs.
XA-07871-3L	55.2″	24.5″	N.A	32.1″	184 lbs.
XA-07871-4L	74.2″	41.3″	N.A	44.4″	237 lbs.
XA-0758-5*	86.2″	52.0″	61.2″	56.6″	340 lbs.
XA-0758-6*	98.2″	64.3″	73.4″	68.8″	410 lbs.

NOTE: * Slide plates will yield F.W. height 3/8" taller. All slide plate numbers listed above are Weight Savers.

Slide Plates continued

Extra Capacity

For FW2555 Series Fifth Wheel

Outboard Angle Mount

	MOUNTING PLATE		APPROX.
MODEL	LENGTH	TRAVEL	WEIGHT
XA-0758-2	50.2″	16.8″	185 lbs.
XA-0758-3A	58.2″	24.5″	215 lbs.
XA-0758-4	74.2″	41.3″	265 lbs.
XA-0758-5	86.2″	52.0″	340 lbs.
XA-0758-6	98.2″		410 lbs.

For FW2570 Series Fifth Wheels

Over-the-Frame Mount

MODEL	PLATE LENGTH	TRAVEL	NOMINAL F.W. HEIGHT	APPROX. WEIGHT	
Slide Plate without Mounting Angles					
XA-0284-1	38.9″	10.7″	8.00″ or 9.00″	223 lbs.	
XA-0284-2	45.0″	16.8″	8.00″ or 9.00″	245 lbs.	
XA-0284-3A	52.6″	24.5″	8.00″ or 9.00″	300 lbs.	
XA-0284-4	69.5″	41.3″	8.00″ or 9.00″	375 lbs.	
XA-0284-5	82.0″	53.6″	8.00″ or 9.00″	442 lbs.	
XA-0284-6	94.0″	64.3″	8.00″ or 9.00″	515 lbs.	
Slide Plate with .5"x 4"x 4" Angles XA-02136-G1*	38.9″	10.7″	8.50″ or 9.50″	313 lbs.	
XA-02136-G2*	45.0″	16.8″	8.50″ or 9.50″	347 lbs.	
XA-02136-G3A*	52.6″	24.5″	8.50″ or 9.50″	419 lbs.	
XA-02136-G4*	69.5″	41.3″	8.50″ or 9.50″	531 lbs.	
XA-02136-G5*					
XA-02136-G6*	94.0″	64.3″	8.50″ or 9.50″	722 lbs.	

^{*} For frame width other than 34 \H , replace "G" with appropriate letter – see chart on Page 2.

Slide Brackets

Standard Capacity

For FW8 FleetMaster Series, FW35 Series, or FW33 LowLube Series Fifth Wheels

Slide Bracket - Air and Manual

AIR MODEL	MANUAL MODEL	NOMINAL F.W. HEIGHT	APPROX. WEIGHT
XA-7001	XA-7011	8.62″	115 lbs.
XA-7002	XA-7012	7.62″	110 lbs.
XA-7003	XA-7013	6.62″	123 lbs.
XA-7003-1*		6.62″	118 lbs.
XA-7301	XA-7311	8.12″	130 lbs.
XA-7301-1*		8.12″	127 lbs.
XA-7009	XA-7019	10.12″	158 lbs.
No-Tilt			
XA-7401	XA-7411	8.62″	125 lbs.
XA-7409	XA-7419	10.12″	155 lbs.

^{*} FW8 Series only.

For FW2555 Series Fifth Wheels

Slide Bracket - Air and Manual


AIR MODEL	MANUAL MODEL	NOMINAL F.W. HEIGHT	APPROX. WEIGHT	
XA-7321	.XA-7322	8.12″	118 lbs.	
XA-7325	XA-7326	9.62″	151 lbs.	

For FW2570 Series Fifth Wheels

Slide Bracket - Air and Manual

AIR MODEL	MANUAL MODEL	NOMINAL F.W. HEIGHT	APPROX. WEIGHT	
XA-7102	XA-7112	9.00″	132 lbs.	
XA-7103	XA-7113	8.00″	123 lbs.	

illustrations shown at 90% of actual size

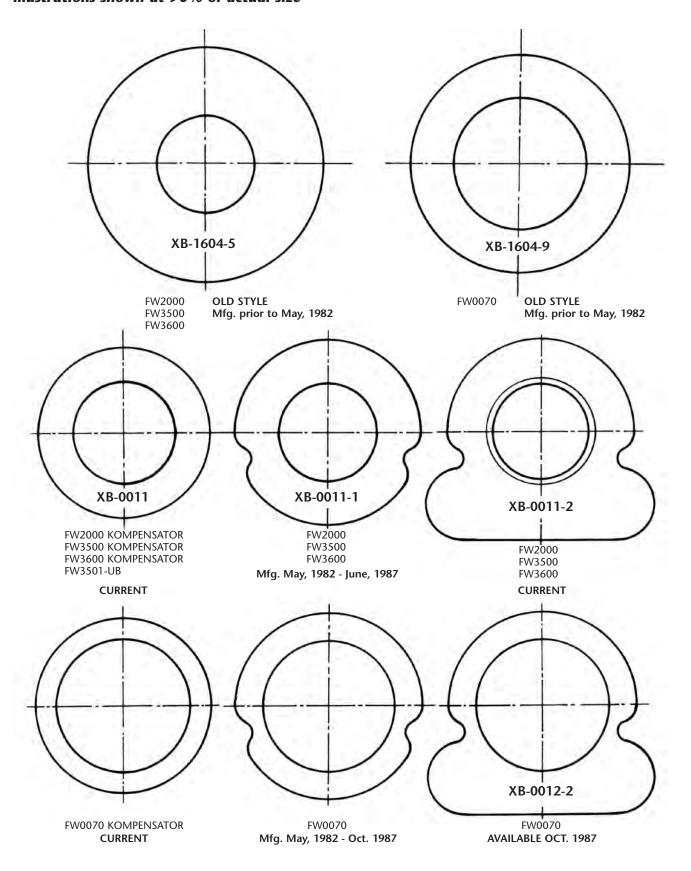


FW8, FW35, FW2500 & FW2535 SERIES SLIDE BRACKET PARTS

Manual Release Installation Instructions — Manufactured AFTER May 1, 1982


AIR RELEASE

8.62" and 7.62" Fifth Wheel Heights 8.12" and 6.62" Fifth Wheel Heights for FW8

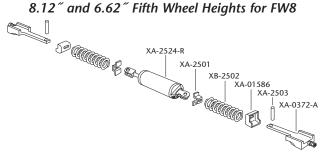


MANUAL RELEASE

All Fifth Wheel Heights

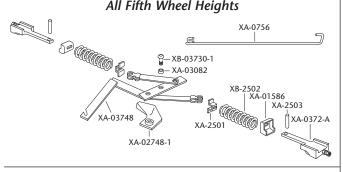


AIR RELEASE


8.12" and 6.62" Fifth Wheel Heights for FW35

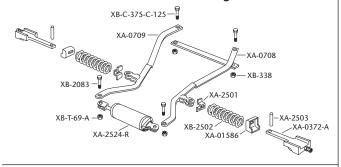

PLUNGER STYLES

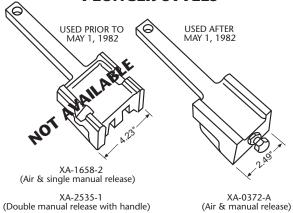


AIR & MANUAL RELEASE

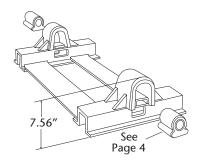

Brackets are available only as part of complete bracket assemblies – XA-7001 (air) or XA-7011 (manual). Rubber bushings included.

AIR & MANUAL RELEASE


7.62" Fifth Wheel Heights

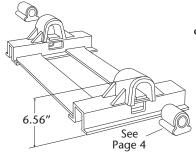

Brackets are available only as part of complete bracket assemblies -XA-7002 (air) or XA-7012 (manual). Rubber bushings included.


AIR & MANUAL RELEASE

8.12" Fifth Wheel Heights

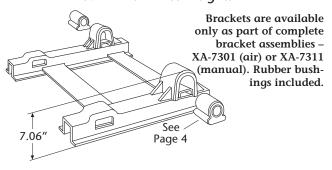

AIR & MANUAL RELEASE

6.62" Fifth Wheel Heights

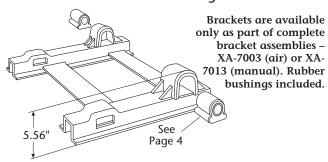


FW2500-H, FW2535-H & FW2536-H SERIES SLIDE BRACKET PARTS


Manufactured PRIOR May 1, 1982

AIR RELEASE

8.69" and 7.69" Fifth Wheel Heights

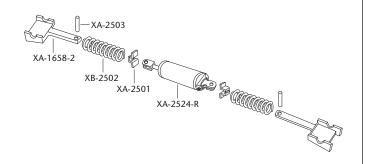


AIR & SINGLE MANUAL RELEASE

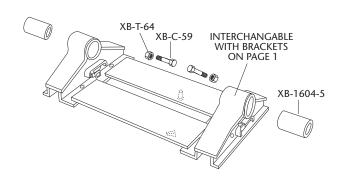


SINGLE MANUAL RELEASE

All Fifth Wheel Heights

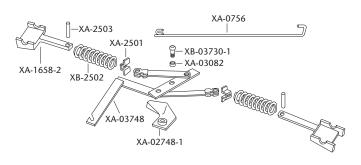


DOUBLE MANUAL RELEASE

8.69" & 7.69" Fifth Wheel Heights

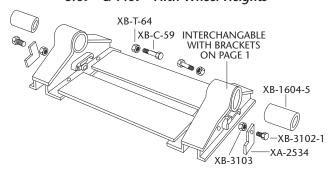


AIR RELEASE

6.75" Fifth Wheel Heights

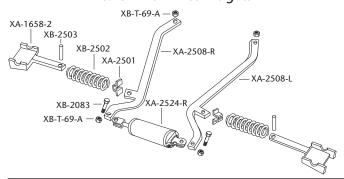

AIR & SINGLE MANUAL RELEASE


6.75" Fifth Wheel Heights

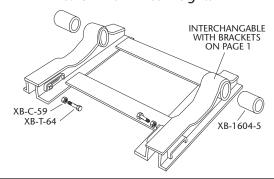


TF-TLN-2500 Slider Spring Compressor Slider Bracket Maintenance Tool

DOUBLE MANUAL RELEASE

6.75" Fifth Wheel Heights

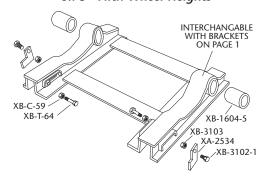

Air Cylinders

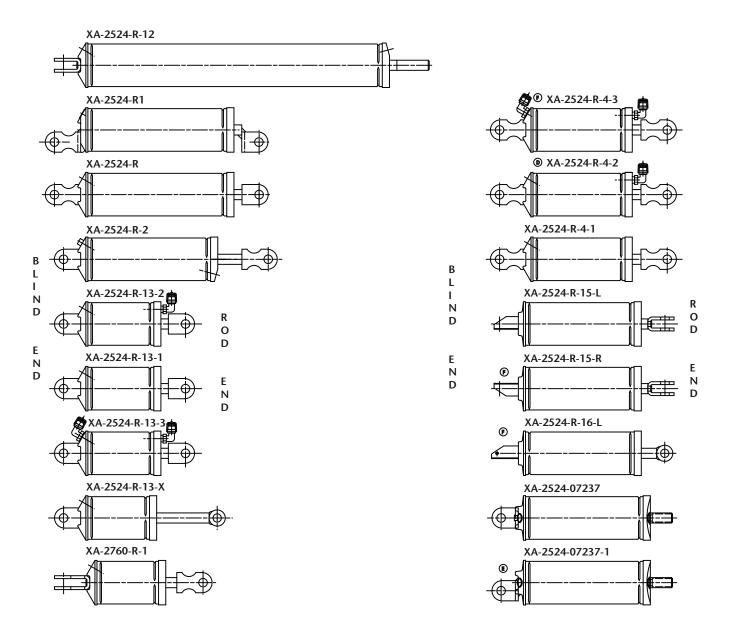

FIFTH WHEEL AIR CYLINDER PARTS LIST

TO BE COMPLETED IN FUTURE RELEASES

Air Cylinder Chart

HOLLAND PART NO.	HOLE-TO- EXTENDED		E-TO-HOLE DIM. D RETRACTED		STROKE REF	AIR INLET	USED ON
XA-2524-R-13-2	9.649″	9.464″	7.613″	7.473″	2.02″	Blind End	FW1500, FW3500
XA-2524-R-13-3	9.649″	9.464″	7.613″	7.473″	2.02″	Blind End	FW1500, FW3500
XA-2524-R-12	38.742″	38.556″	22.680″	22.496″	16.06″	Both Ends	TF-675
XA-2524-R	19.650″	19.171″	12.750″	12.506″	6.77″	Blind End	Sliding 5th Wheels
XA-2524-R-2	18.560″	18.171″	12.750″	12.506″	5.74″	Rod End	FW0070, FW0100, & FW2080
XA-2524-R-4-3	14.108″	13.863″	10.452″	10.252″	3.64″	Blind End	XA-2801-03185-4
XA-2524-R-4-2	14.108″	13.863″	10.452″	10.252″	3.64″	Blind End	XA-2801-03185-3
XA-2524-R-4-1	14.108″	13.863″	10.452″	10.252″	3.64″	Blind End	FW1560 Series
XA-2524-R-13-X	11.690″	11.280″	9.570″	9.385″	1.99″	Blind End	FW2800 Series, FW2900
XA-2760-R-1	10.840″	10.361″	8.720″	8.476″	1.99″	Blind End	FW1580
XA-2524-R-13-1	9.649″	9.464″	7.613″	7.473″	2.02″	Blind End	FW1500, FW3500
XA-2524-R-16-L	13.95	5″ REF	9.05	" REF	4.89″	Blind End	OPT. CODE 80
XA-2524-R-15-R	13.95	5″ REF	9.05	″ REF	4.89″	Blind End	XA-3501-06533
XA-2524-R-15-L	13.95	5″ REF	9.05	" REF	4.89″	Blind End	XA-3501-06533
XA-2524-07237-1	15.782″	15.598″	10.625″	10.468″	5.13″	Both Ends	FW503 (Obsolete)
XA-2524-07237	15.782″	15.598″	10.625″	10.468″	5.13″	Both Ends	FW503 (Obsolete)
XA-2524-R1	19.650″	19.171″	12.750″	12.506″	6.77″	Blind End	Warranty

FIFTH WHEEL PARTS LIST

TO BE COMPLETED IN FUTURE RELEASES

Fifth Wheel Components

PRODUCT	ТҮРЕ	TOP PLATE	REBUILD KIT	LOCK GUARD	LOCK KIT	HANDLE KIT	BUSHING/ PIN KIT	AIR CYLINDER
FW3500	Stationary	XA-3501-A-LH	RK-63501	RK-05329	RK-63503	RK-1707-M	RK-04413	None
FW2535	Sliding	XA-3501-A-RH	RK-63500	RK-05329	RK-63503	RK-1707-6	RK-04413	XA-2524
FW2000	Stationary	XA-2009-A-LH	RK-62001	RK-05328	RK-62004	RK-1117-1	RK-04413	None
FW2500	Sliding	XA-2009-A-RH	RK-62000	RK-05328	RK-62004	RK-1117-1-L	RK-04413	XA-2524
FW2555	Sliding	XA-71-A-DAS	RK-65014	-	RK-65024	-	-	-
FW2570	HD Sliding	XA-71-A-DAS	RK-65014	-	RK-65024	-	-	-
FW35	Stationary	XA-351-A-L	RK-351-A-L	N/A	RK-351-07296	XA-07151-1	RK-06973-1	None
FW35	Sliding	XA-351-A	RK-351-A	N/A	RK-351-07296	XA-07151-1	RK-06973-1	XA-2524
FW35-89xx	No-tilt Stationary	XA-351-A-06-L-P	RK-351-A-L	N/A	-	-	-	-
FW35-7401	No-tilt Sliding	XA-351-A-06-L-P	RK-351-A-L	N/A	-	XA-07151-1	RK-06973-1	XA-2524
FW35-8401	No-tilt Sliding	XA-351-A-06-L-P	RK-351-A-L	N/A	-	XA-07151-1	RK-06973-1	-
FW8	Stationary	XA-201-A3-L	RK-201-A3-L	N/A	N/A	N/A	RK-06973-1	None
FW8	Sliding	XA-201-A3	RK-201-A3	N/A	N/A	N/A	RK-06973-1	XA-2524
FW17	Stationary	XA-17-A-L-P	RK-17-A-L	N/A	-	-	-	None
FW17	Sliding	LH* only	LH* only	N/A	-	-	-	XA-2524
FW6700-16B	Air Elevating	XA-3501-UB	RK-63502	N/A	RK-63504	-	-	-
FW67-16B	Air Elevating	XA-351-UB-P	RK-351-UB	N/A	-	-	-	-
FW35-03344	Yard Spotter	XA-351-03505S	RK-351-03505	N/A	N/A	-	-	XA-2524-R-13-1
FW35-03344-1	Yard Spotter	XA-351-03505S	RK-351-03505	N/A	N/A	-	-	XA-2524-R-13-1
FW2870-03184	Yard Spotter	XA-2801-03185-1		N/A	RK-03185-1	-	-	XA-2524-R-4-1
FW1560	Side Oscillating	XA-1501-CA1S	RK-65005	N/A				
FW0100-D	HD** (2" KP†)	XA-101-DAS	RK-65012	N/A	RK-65024			N/A
FW0100-0	HD** (3.5" KP†)	XA-101-OAS	RK-65013	N/A	RK-65024-1			N/A
FW0070	HD** (2" KP†)	XA-71-DAS	RK-65014	N/A	RK-65024			N/A
FW0070	HD** (3.5" KP†)	XA-71-OAS	RK-65015	N/A	RK-65024-1			N/A
FW2800-X	Lift***	XA-2801-AX-1S	RK-65021	N/A	N/A			
FW2900-X	Lift***	XA-2801-AX-1S	RK-65021	N/A	N/A			
FW1580		XA-1581-A-1	RK-65006	-	-	-	-	-
FW2870-03184		XA-2801-03185-1S	-	-	-	-	-	-

^{*} Left Hand.

^{**} Heavy Duty

^{***} Hydraulic Lift Wheel

[†] King pin.

SIMPLEX, CASTLOC, 400C AND SLIDER KITS

Simplex Active Fifth Wheels & Sliders

TEM NO.	FIFTH WHEEL MODEL	SIMPLEX SE	SIMPLEX SE TOUCHLOC	SIMPLEX II SE	SIMPLEX II SE TOUCHLOC	SIMPLEX II SE RH* (RIGHT-HAND)	SIMPLEX II RH (RIGHT-HAND)	SIMPLEX YARD TRACTOR (SPOTTER)
1	Fifth Wheel Sub-Assembly	1040 2727	1060 2720	4102 2727	9502 720	1120 2720	1120 2700	4100 129
		1040 2720		4102 2720				4100 219
2	Serial Number Prefix-	S1LS-	S1LT-	S2LS-	S2LT-	S2RS-	SR-	SA-
3	Replaced by Simplex Model	NA	NA	NA	NA	NA	II SE RH	NA
	Kit Names and Numbers							
4	Handle Kit	4000 507	4000 531	4000 507	4000 531	4000 646	4000 512	
	(handle part number)	(4100 382)	(4100 420)	(4100 382)	(4100 420)	(4100 448)	(4100 441)	NA
5	Alternate Handle Kit (45° chamfer)	4000 531		4000 531				
	(handle part number)	(4100 420)	NA	(4100 420)	NA	NA	NA	NA
6	Jaw w/ Standard Pin	4000 644	4000 644	4000 644	4000 644	4000 645	4000 503	4000 503
7	Jaw w/ Oversized Pin	NA	NA	NA	NA	NA	4000 523	4000 523
8	Jaw & Return Spring Retrofit	NA	NA	NA	NA	NA	4000 540	NA
9	Kingpin Gauge (Jaw Adjustment Tool)	4000 171	4000 171	4000 171	4000 171	4000 171	4000 171	4000 171
10	Lock	4000 647	4000 647	4000 647	4000 647	4000 648	4000 574	4000 574
11	** Standard pad: 0.38" thickness	4000 504	4000 504	4000 504	4000 504	4000 504	4000 504	NA
12	** Large pad: 0.42″ thickness	4000 588	4000 588	4000 588	4000 588	4000 588	4000 588	NA
13	** Small Pad: 0.33" thickness	4000 641	4000 641	4000 641	4000 641	4000 641	4000 641	NA
14	** Simplex RH Pad: 0.58" thickness	NA	NA	NA	NA	NA	NA	4000 505
15	** Castloc & Castloc II	NA	NA	NA	NA	NA	NA	NA
16	** 400C	NA	NA	NA	NA	NA	NA	NA
17	Pad, Standard: 0.38" thickness)	4000 528	4000 528	4000 528	4000 528	4000 528	4000 528	NA
18	Pad, Large: 0.42" thickness	4000 587	4000 587	4000 587	4000 587	4000 587	4000 587	NA
19	Pad, Small: 0.33" thickness	4000 640	4000 640	4000 640	4000 640	4000 640	4000 640	NA
20	Pad, Simplex RH: 0.58" thickness	NA	NA	NA	NA	NA	NA	4000 529
21	Touchloc Air Cylinder	NA	4000 273	NA	4000 273	NA	NA	4100 304
22	Shims, Poly (Castloc Series)	NA	NA	NA	NA	NA	NA	NA
23	Shims, Steel - weld to bracket	NA	NA	NA	NA	NA	NA	NA
	Bulk Kits - Individual Parts (Quan	tity/Kit)						
24	Handle (5)	B4100 382	NA	B4100 382	NA	NA	B4100 441	NA
25	Indicator (5) (10 for 400C)	B4101 250	NA	B4101 250	NA	B4100 428	B4100 428	NA
26	Handle (45° Chamfer) (5)	B4100 420	B4100 420	B4100 420	B4100 420	NA	NA	NA
27	Indicator (45° Chamfer) (5)	B4100 294	B4100 294	B4100 294	B4100 294	NA	NA	NA
28	Lock Spring (5)	B1200 706	B1200 706	B1200 706	B1200 706	B1200 706	B1200 706	B1200 706
29	Jaw Return Spring (10)	B1200 101	B1200 101	B1200 101	B1200 101	B1200 101	NA	NA
30	Poly Shoes (10)	B4100 328	B4100 328	B4100 328	B4100 328	B4100 328	B4100 328	NA
31	Steel Shoes (10)	NA	NA	NA	NA	NA	NA	B4109 811
32	Pads, Standard, .38" (20)	B4100 329	B4100 329	B4100 329	B4100 329	B4100 329	B4100 329	NA
33	Pads, Large, .42" (20)	B4100 376	B4100 376	B4100 376	B4100 376	B4100 376	B4100 376	NA
34	Pads, Small, .33" (20)	B4100 339	B4100 339	B4100 339	B4100 339	B4100 339	B4100 339	NA
35	Pads, Simplex RH, .58" (20)	NA	NA	NA	NA	NA	NA	B4100 358
36	Poly Shims (20)	NA	NA	NA	NA	NA	NA	NA
37	Steel Shims (20) - weld to bracket		NA	NA	NA	NA	NA	B4100 655
	SLIDER MODEL	SE, TAPERLOC SE, TAPERLOC XL	TAPERLOC (4" INCREMENT)	INBOARD INTEGRAL				
38	Serial Number Prefix- Kit Names and Numbers	TL2-	TL-	IBS-				

	SLIDER MODEL	SE, TAPERLOC SE, TAPERLOC XL		INBOARD INTEGRAL
38	Serial Number Prefix-	TL2-	TL-	IBS-
	Kit Names and Numbers			
39	Air Cylinder	4300 228	4300 162	4300 610
40	Bolt-on removable stops	4300 227***	4300 209	4300 226***
41	Slide Bracket air 6.81″	4300 298	4300 165	4300 596***
42	Slide Bracket air 7.75"	4300 299	4300 166	4300 597***
43	Slide Bracket air 8.75″	4300 300	4300 167	4300 598***
44	Slide Bracket air 9.75″	NA	4300 172	NA
45	Slide Bracket manual 6.81″	NA	4300 204	NA
46	Slide Bracket manual 7.75″	NA	4300 205	NA
47	Slide Bracket manual 8.75	NA	4300 206	NA
48	Slide Bracket manual 9.75	NA	4300 173	NA

^{*} Available in Spring 2006; **, bracket connection; ***, check for availability; NA, not applicable.

Simplex Discontinued Fifth Wheels

SIMP	olex Disco	ntinuea	FITTH VVN	eeis					
ITEM NO.	SIMPLEX LITE	SIMPLEX LITE TOUCHLOC	SIMPLEX LITE ROTARY	SIMPLEX LITE ROTARY TOUCHLOC	SIMPLEX II & SIMPLEX III	SIMPLEX II & SIMPLEX III TOUCHLOC	SIMPLEX IIR & SIMPLEX IIIR ROTARY	SIMPLEX IIR & SIMPLEX IIIR ROTARY TOUCHLOC	SIMPLEX RH (RIGHT-HAND)
1	1040 2700	1060 2700	1080 2700	1100 2700	4102 700	9502 700	7102 700	7502 700	4102 764
	1040 2707				4102 707				4101 414
									4101 424
2	SLS-, LSLS-	SLS-, LSLS-	SLR	SLR-	SL-, LSL-, SRY-	SL-, LSL-, SRY-	SRL-, SRYL-	SRL-, SRYL-	SR-
3	SE	SE Touchloc	SE	SE Touchloc	II SE	II SE Touchloc	II SE	II SE Touchloc	II SE RH
	Kit Numbers								
4	4000 507	4000 531	4000 508	4000 508	4000 650	4000 532	4000 510	4000 510	4000 511
	(4100 382)	(4100 420)	(4100 386)	(4100 386)	(4100 332)	(4100 296)	(4100 357)	(4100 357)	(4100 350)
5	400 531				4000 509				
	(4100 420)	NA	NA	NA	(4100 342)	NA	NA	NA	NA
6	4000 501	4000 501	4000 501	4000 501	4000 501	4000 501	4000 501	4000 501	4000 503
7	4000 502	4000 502	4000 502	4000 502	4000 502	4000 502	4000 502	4000 502	4000 523
8	4000 539	4000 539	4000 539	4000 539	4000 539	4000 539	4000 539	4000 539	4000 540
9	4000 171	4000 171	4000 171	4000 171	4000 171	4000 171	4000 171	4000 171	4000 171
10	4000 570	4000 570	4000 578	4000 578	4000 572	4000 572	4000 576	4000 576	4000 574
11	4000 504	4000 504	4000 504	4000 504	4000 504	4000 504	4000 504	4000 504	NA
12	4000 588	4000 588	4000 588	4000 588	4000 588	4000 588	4000 588	4000 588	NA
13	4000 641	4000 641	4000 641	4000 641	4000 641	4000 641	4000 641	4000 641	NA
14	NA	NA	NA	NA	NA	NA	NA	NA	4000 505
15	NA	NA	NA	NA	NA	NA	NA	NA	NA
16	NA	NA	NA	NA	NA	NA	NA	NA	NA
17	4000 528	4000 528	4000 528	4000 528	4000 528	4000 528	4000 528	4000 528	NA
18	4000 587	4000 587	4000 587	4000 587	4000 587	4000 587	4000 587	4000 587	NA
19	4000 640	4000 640	4000 640	4000 640	4000 640	4000 640	4000 640	4000 640	NA 1000 500
	NA	NA 4000 077	NA NA	NA 1000 070	NA NA	NA 4100.050	NA	NA 4100.050	4000 529
21	NA NA	4000 273	NA NA	4000 272	NA NA	4100 269	NA NA	4100 258	NA NA
22	NA NA	NA NA	NA NA	NA NA	NA NA	NA NA	NA NA	NA NA	NA NA
23				NA	NA	NA	INA	INA	NA
2.4	Bulk Kits - Indiv			B 4100 204	D.4100.222	NA	D.4100.357	D.4100.257	D4100 250
24	B4100 382 B4101 250	NA NA	B4100 386 B4100 374	B4100 386 B4100 374	B4100 332 B4101 250	NA NA	B4100 357 B4100 150	B4100 357 B4100 150	B4100 350 B4100 428
<u>26</u> 27	B4100 420 B4100 294	B4100 420 B4100 294	NA NA	NA NA	B4100 342 B4100 294	B4100 296 B4100 294	NA NA	NA NA	NA NA
28	B1200 706	B1200 706	B1200 706	B1200 706	B1200 706	B1200 706	B1200 706	B1200 706	B1200 706
29	NA	NA	NA	NA	NA	NA	NA	NA	NA
30	B4100 328	B4100 328	B4100 328	B4100 328	B4100 328	B4100 328	B4100 328	B4100 328	NA NA
31	NA	NA	NA	NA	NA	NA	NA	NA	B4109 811
32	B4100 329	B4100 329	B4100 329	B4100 329	B4100 329	B4100 329	B4100 329	B4100 329	NA
33	B4100 376	B4100 376	B4100 376	B4100 376	B4100 329	B4100 325	B4100 376	B4100 376	NA NA
34	B4100 370	B4100 370 B4100 339	B4100 370	B4100 370 B4100 339	B4100 370 B4100 339	B4100 370	B4100 370 B4100 339	B4100 370 B4100 339	NA NA
35	NA	NA	NA	NA	NA	NA	NA	NA	B4100 358
36	NA NA	NA NA	NA NA	NA NA	NA NA	NA NA	NA NA	NA NA	NA
37	NA NA	NA NA	NA NA	NA NA	NA NA	NA NA	NA NA	NA NA	NA NA
	1 171						. 4/ 1		/1

Castloc & 400C Discontinued Fifth Wheels

Cu.	Strot a 400c Distor	itiliaca i litili vviiceis				
ITEM NO.	FIFTH WHEEL MODEL	CASTLOC II & CASTLOC III	CASTLOC II & CASTLOC III TOUCHLOC	CASTLOC ROTARY	CASTLOC ROTARY TOUCHLOC	400C
1	Fifth Wheel Sub-Assembly	A7202 700	A7602 700	7202 700	7602 700	4102 846
	, , , , , , , , , , , , , , , , , , , ,	7202 700A	7602 700A			
2	Serial Number Prefix-	CA-, CR-, CV-	CA-, CR-, CV-	CL-	CL-	AL-
3	Replaced by Simplex Model	II SE	II SE Touchloc	II SE	II SE Touchloc	II SE
	Kit Names and Numbers					
4	Handle Kit	4000 650	4000 532	4000 510	4000 510	4000 632
	(handle part number)	(4100 332)	(4100 296)	(4100 357)	(4100 357)	(4109 944)
5	Alternate Handle Kit (45° chamfer)					
	(handle part number)	NA	NA	NA	NA	NA
6	Jaw w/ Standard Pin	4000 501	4000 501	4000 501	4000 501	4000 178
7	Jaw w/ Oversized Pin	4000 502	4000 502	4000 502	4000 502	NA
8	Jaw & Return Spring Retrofit	4000 539	4000 539	4000 539	4000 539	NA
9	Kingpin Gauge (Jaw Adjustment Tool)	4000 171	4000 171	4000 171	4000 171	NA
10	Lock	4000 572	4000 572	4000 576	4000 576	NA
_11	* Standard pad: 0.38" thickness	NA	NA	NA	NA	NA
12	* Large pad: 0.42" thickness	NA	NA	NA	NA	NA
13	* Small Pad: 0.33" thickness	NA	NA	NA	NA	NA
14	* Simplex RH Pad: 0.58" thickness	NA	NA	NA	NA	NA
15	* Castloc & Castloc II	4000 506	4000 506	4000 506	4000 506	NA
16	**400C	NA	NA	NA	NA	4000 195
_17	Pad, Standard: 0.38" thickness)	NA	NA	NA	NA	NA
18	Pad, Large: 0.42″ thickness	NA	NA	NA	NA	NA
19	Pad, Small: 0.33" thickness	NA	NA	NA	NA	NA
20	Pad, Simplex RH: 0.58" thickness	NA	NA	NA	NA	NA
21	Touchloc Air Cylinder	NA	4100 269	NA	4100 258	NA
22	Shims, Poly (Castloc Series)	4000 530	4000 530	4000 530	4000 530	NA
23	Shims, Steel - weld to bracket	4000 630	4000 630	4000 630	4000 630	4000 630
	Bulk Kits - Individual Parts (Quan	tity/Kit)				
_24	Handle (5)	B4100 332	B4100 296	B4100 357	B4100 357	NA
25	Indicator (5) (10 for 400C)	B4101 250	B4100 294	B4100 150	B4100 150	B4109 948
26	Handle (45° Chamfer) (5)	NA	NA	NA	NA	NA
27	Indicator (45° Chamfer) (5)	NA	NA	NA	NA	NA
28	Lock Spring (5)	B1200 706	B1200 706	B1200 706	B1200 706	NA
29	Jaw Return Spring (10)	NA	NA	NA	NA	NA
30	Poly Shoes (10)	NA	NA	NA	NA	NA
31	Steel Shoes (10)	NA	NA	NA	NA	NA
32	Pads, Standard, .38" (20)	NA	NA	NA	NA	NA
33	Pads, Large, .42" (20)	NA	NA	NA	NA	NA
34	Pads, Small, .33" (20)	NA	NA	NA	NA	NA
35	Pads, Simplex RH, .58" (20)	NA	NA	NA	NA	NA
36	Poly Shims (20)	B4000 263	B4000 263	B4000 263	B4000 263	NA
37	Steel Shims (20) - weld to bracket	B4100 655	B4100 655	B4100 655	B4100 655	B4100 655

- Copyright © September 2005 • The Holland Group, Inc. -

Holland USA, Inc. Facilities: Holland International, Inc. Holland Hitch of Canada, Ltd. Holland Equipment, Ltd. Holland Hitch of Canada, Ltd. Surrey, British Columbia • Canada Phone: 604-574-7491 Fax: 604-574-0244 Dumas, AR Holland, MI Monroe, NC Muskegon, MI Warrenton, MO Wylie, TX Woodstock, Ontario • Canada Phone: 519-537-3494 Norwich, Ontario • Canada Phone: 519-863-3414 Fax: 519-863-2398 Holland, MI 616-396-6501 616-396-1511 Phone: Fax: Phone: Fax: 800-565-7753 Ph: 888-396-6501 Fax: 800-356-3929