# $\begin{array}{c} \text{CUSTOMIZED POWER} \\ \text{EFFICIENT ANDROID ROM} \\ \textit{User Guide} \end{array}$

Done By
Ajith K.M - ETAKECS004
Anjana Sasikumar - ETAKECS007
K Haridas - ETAKECS026

Guided By

Ms. Bisna N. D Assistant Professor

08 April 2013

## Chapter 1

### Installation

A rom is the layer that comes between the kernel and the user. The rom comes as a archived ZIP file which can be flashed through the recovery menu of the device.

#### Note:

Prerequisites:


- 1. Rooted device
- 2. Custom recovery installed

#### 1.1 Steps for Installation


- 1: Connect the device to the computer and copy the flashable ZIP file called mini-project.zip onto the SD-card.
- 2: Reboot the system to go into the recovery menu. This can be done by long pressing the power off button and selecting the Reboot option and selecting Recovery.




- 3: Or to go to the recovery menu, power off the phone. Hold the volume down button and press the power off button. The phone will go into the HBOOT menu. Scroll down using the Volume down button and select the Recovery option using the power off button.
- 4: Once in the Recovery menu, scroll down and and select wipe data and wipe cache.
  - 5: Now select the option Install zip from sdcard.

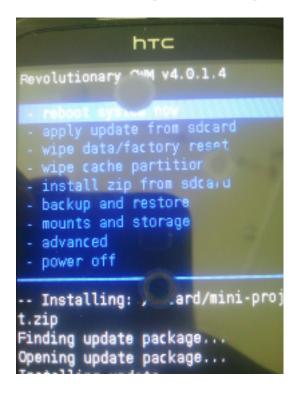


6: Select choose zip from sdcard' and browse to where the ZIP was copied.

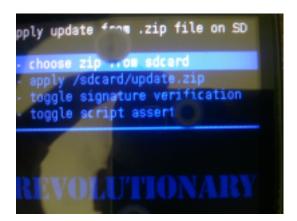

7: Select mini-project.zip'.

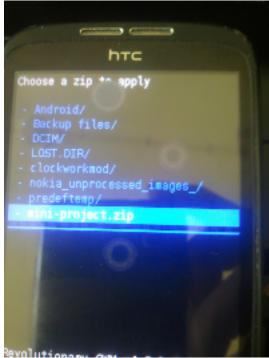

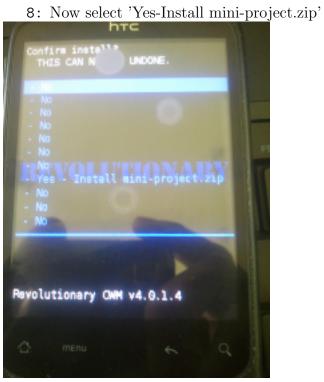

9: When done, reboot the device and enjoy the ROM.

