Lecture 17 - The Bipolar Junction Transistor (I)

FORWARD ACTIVE REGIME

April 10, 2003

Contents:

- 1. BJT: structure and basic operation
- 2. I-V characteristics in forward active regime

Reading assignment:

Howe and Sodini, Ch. 7, §§7.1, 7.2

Announcements:

Quiz 2: 4/16, 7:30-9:30 PM, Walker (lectures #10-17) open book, must bring calculator


Quiz 2 Review Session: 4/14, 7:30-9:30pm, 6-120


Extra Office Hours: 4/15, 2-4pm, 38-201; 4/16, 9am-12 & 1-4pm, 24-320

Key questions

- What does a bipolar junction transistor look like?
- How does a bipolar junction transistor operate?
- What are the leading dependencies of the terminal currents of a BJT in the forward active regime?


1. BJT: structure and basic operation

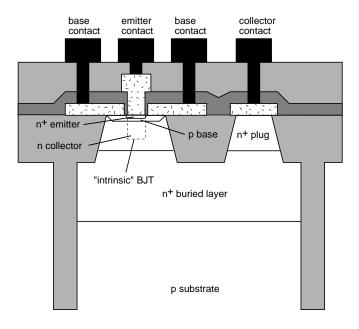

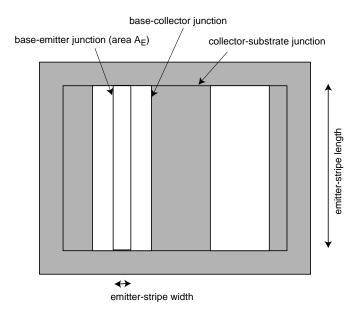

Uniqueness of BJT: high-current drivability per input capacitance \Rightarrow fast \Rightarrow excellent for analog and front-end communications applications.


Simplified one-dimensional model of intrinsic device:

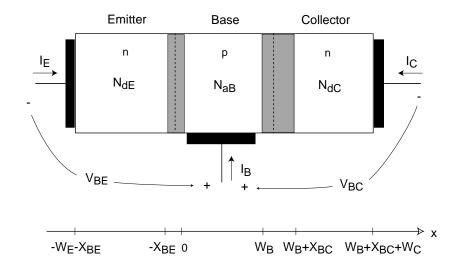


BJT = two neighbouring pn junctions back-to-back:

- close enough for minority carriers to interact (can diffuse quickly through base)
- far apart enough for depletion regions not to interact (prevent "punchthrough")

Regimes of operation:

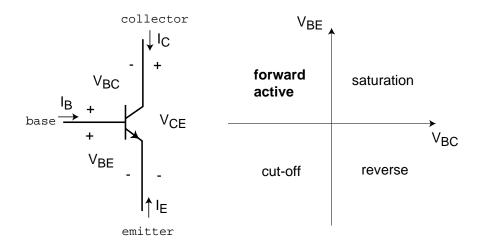

Basic operation in forward-active regime:

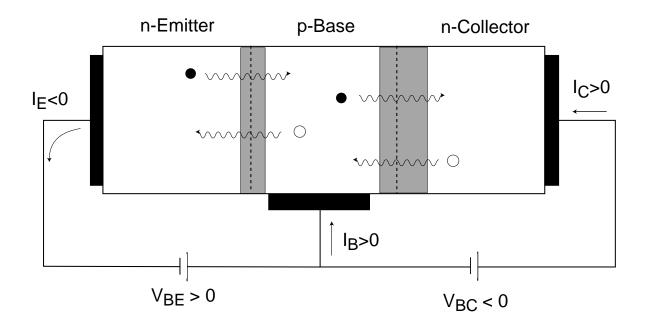


 $V_{BE} > 0 \implies \text{injection of electrons from E to B}$ injection of holes from B to E

 $V_{BC} < 0 \implies \text{extraction of electrons from B to C}$ extraction of holes from C to B


Transistor effect:

electrons injected from E to B, extracted by C!


• Carrier profiles in thermal equilibrium:

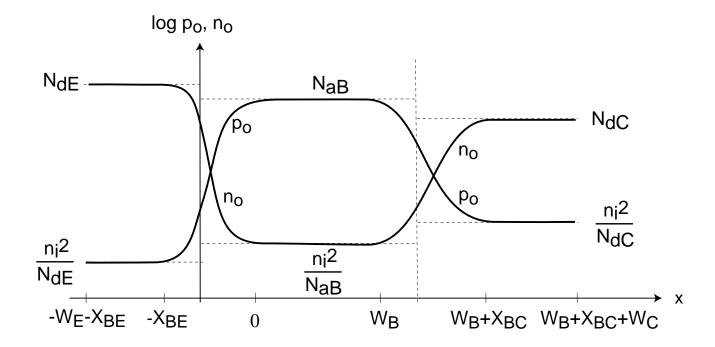

• Carrier profiles in forward-active regime:

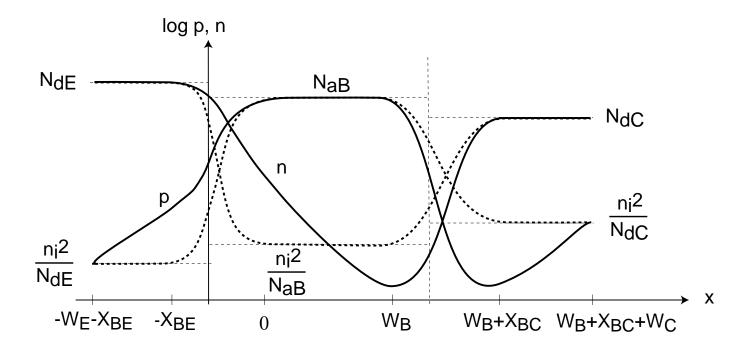

Dominant current paths in forward active regime:

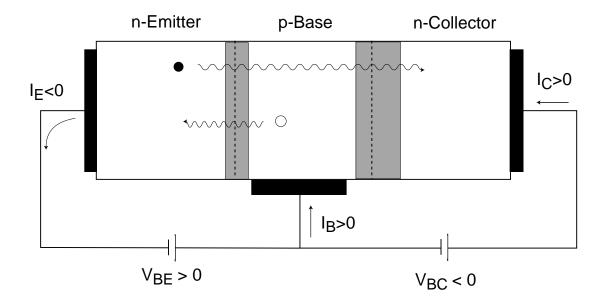

 I_C : electron injection from E to B and collection into C

 I_B : hole injection from B to E

$$I_E = -I_C - I_B$$

Key dependencies (choose one):

 I_C on V_{BE} : $e^{qV_{BE}/kT}$, $1/\sqrt{V_{BE}}$, none, other

 I_C on V_{BC} : $e^{qV_{BC}/kT}$, $1/\sqrt{V_{BC}}$, none, other

 I_B on V_{BE} : $e^{qV_{BE}/kT}$, $1/\sqrt{V_{BE}}$, none, other

 I_B on V_{BC} : $e^{qV_{BC}/kT}$, $1/\sqrt{V_{BC}}$, none, other

 I_C on I_B : exponential, quadratic, none, other

In forward-active regime:

- V_{BE} controls I_C ("transistor effect")
- I_C independent of V_{BC} ("isolation")
- price to pay for control: I_B

Comparison with MOSFET:

	ideal MOSFET	ideal BJT
feature	in saturation	in FAR
controlling terminal	gate	base
common terminal	source	emitter
controlled terminal	drain	collector
functional dependence		
of controlled current	quadratic	exponential
DC current in		
controlling terminal	0	exponential


Figure of merit for BJT:

-common-emitter current gain:

$$\beta_F = \frac{I_C}{I_B}$$
 (want big)

2. I-V characteristics in forward active regime

 \square Collector current: focus on electron diffusion in base

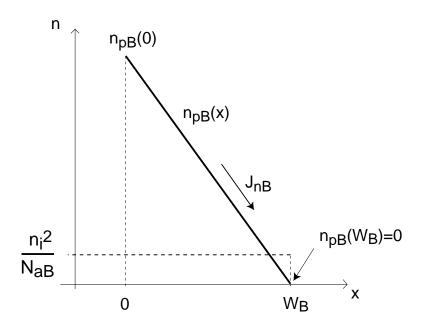

Boundary conditions:

$$n_{pB}(0) = n_{pBo} exp \frac{qV_{BE}}{kT}, \qquad n_{pB}(W_B) = 0$$


Electron profile:

$$n_{pB}(x) = n_{pB}(0)(1 - \frac{x}{W_B})$$

Electron current density:

$$J_{nB} = qD_n \frac{dn_{pB}}{dx} = -qD_n \frac{n_{pB}(0)}{W_B}$$

Collector current scales with area of base-emitter junction A_E :

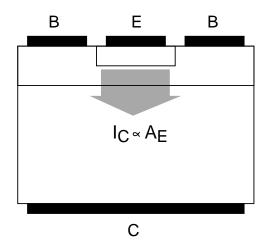

Collector terminal current:


$$I_C = -J_{nB}A_E = qA_E \frac{D_n}{W_B} n_{pBo} exp \frac{qV_{BE}}{kT}$$

or

$$I_C = I_S \ exp \frac{qV_{BE}}{kT}$$

 $I_S \equiv collector saturation current [A]$

 \square Base current: focus on hole injection and recombination in emitter

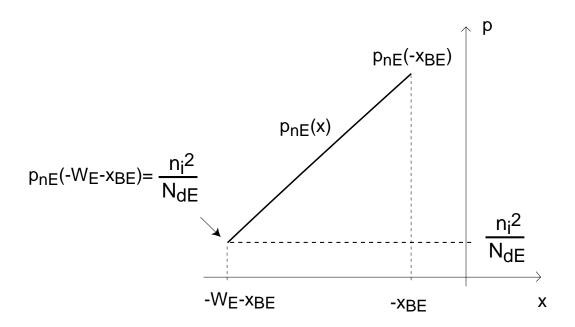

Boundary conditions:

$$p_{nE}(-x_{BE}) = p_{nEo} exp \frac{qV_{BE}}{kT}, \quad p_{nE}(-W_E - x_{BE}) = p_{nEo}$$


Hole profile:

$$p_{nE}(x) = [p_{nE}(-x_{BE}) - p_{nEo}](1 + \frac{x + x_{BE}}{W_E}) + p_{nEo}$$

Hole current density:

$$J_{pE} = -qD_{p}\frac{dp_{nE}}{dx} = -qD_{p}\frac{p_{nE}(-x_{BE}) - p_{nEo}}{W_{E}}$$

Base current scales with area of base-emitter junction A_E :

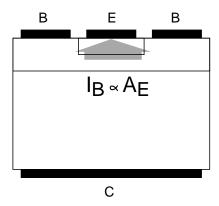

Base terminal current:

$$I_B = -J_{pE}A_E = qA_E \frac{D_p}{W_E} p_{nEo} (exp \frac{qV_{BE}}{kT} - 1)$$


Then:

$$I_B = \frac{I_S}{\beta_F} (exp \frac{qV_{BE}}{kT} - 1)$$

For $V_{BE} \gg \frac{kT}{q}$:

$$I_B \simeq \frac{I_C}{\beta_F}$$

Gummel plot: semilog plot of I_C and I_B vs. V_{BE} :

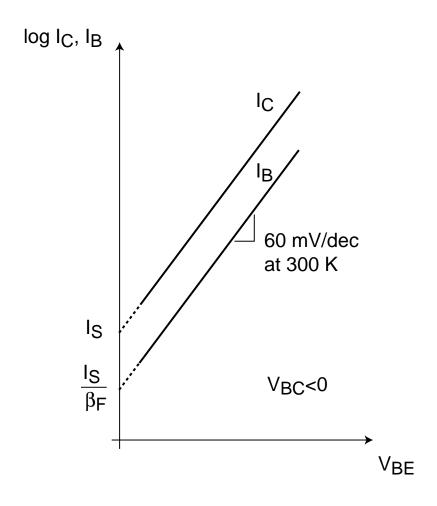

 \Box Current gain:

$$\beta_F = \frac{I_C}{I_B} = \frac{n_{pBo} \frac{D_n}{W_B}}{p_{nEo} \frac{D_p}{W_E}} = \frac{N_{dE} D_n W_E}{N_{aB} D_p W_B}$$


To maximize β_F :

- $\bullet N_{dE} \gg N_{aB}$
- $\bullet W_E \gg W_B$
- want npn, rather than pnp design because $D_n > D_p$


State-of-the-art IC BJT's today: $I_C \sim 0.1-1 \, mA, \, \beta_F \sim 50-300$


 β_F hard to control in manufacturing environment \Rightarrow need circuit techniques that are insensitive to variations in β_F

β_F dependence on I_C :

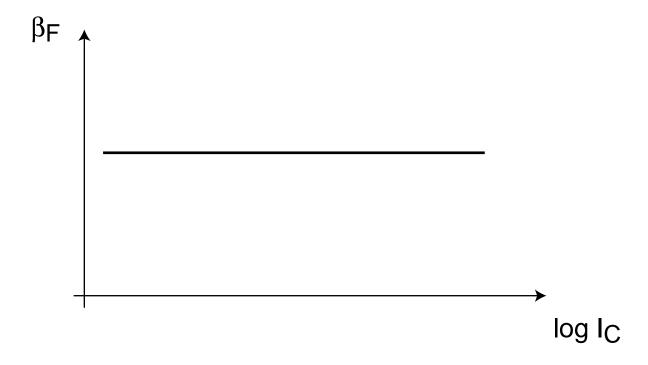


Gummel plot of BJT $(V_{CE} = 3 V)$:

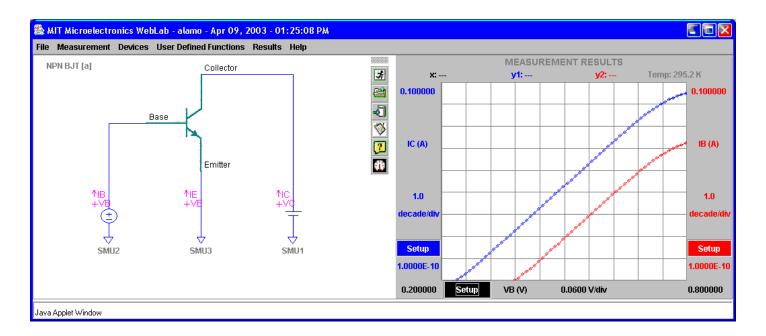

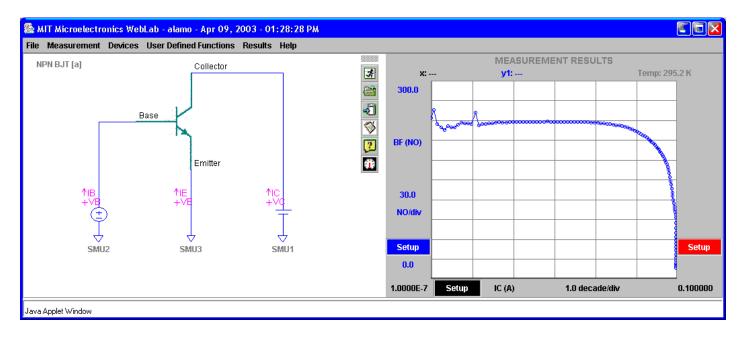

Key conclusions

npn BJT in forward active regime:

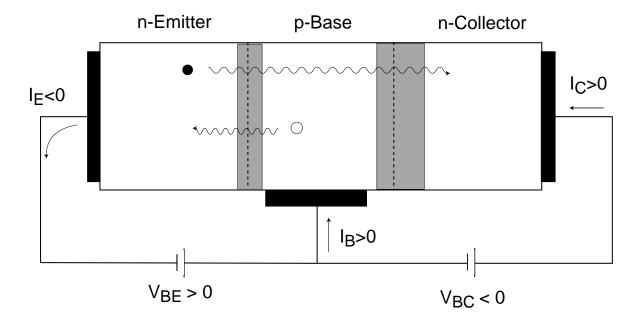

• Emitter "injects" electrons into Base, Collector "collects" electrons from Base. $\Rightarrow I_C$ controlled by V_{BE} , independent of V_{BC} (transistor effect)

$$I_C \propto \exp \frac{qV_{BE}}{kT}$$

• Base injects holes into Emitter $\Rightarrow I_B$

$$I_B \propto I_C$$