
Aklot

Instruction Manual

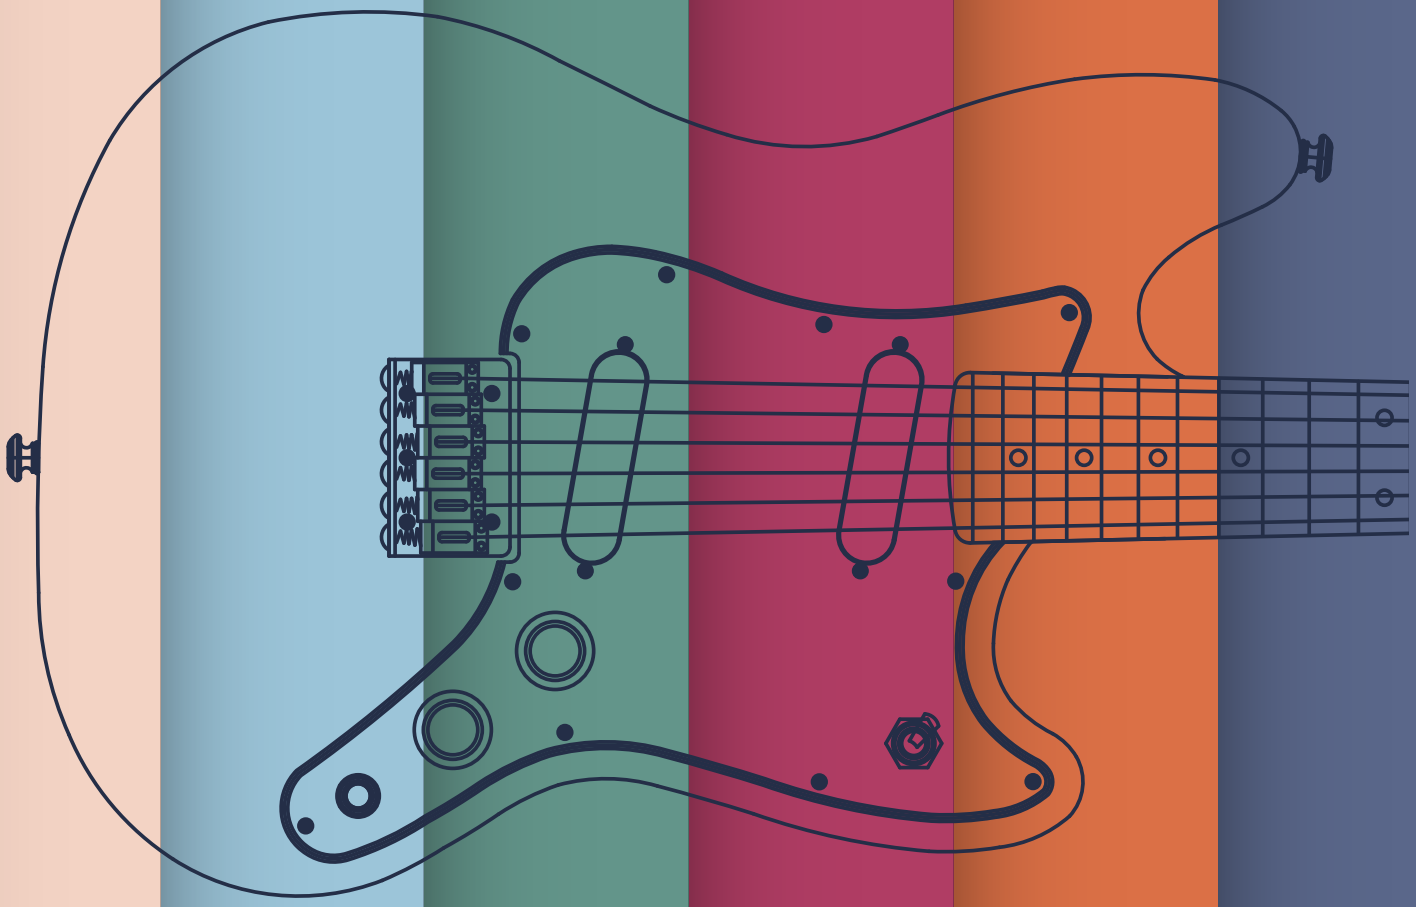

Electric Guitar
ST—Brightlet

AKLOT Brightlet™ Kids Electric Guitar Series

Thank you for choosing Aklot to be a part of your musical story.
Please Read This Manual Carefully Before Use.

WARRANTY

Any questions about the use of the product, you can contact our brand after-sales staff. We will solve your problem until it is resolved.

- 1-Year Warranty
- 24/7 0nline Support

For guidance on product use and warranty extension, please contact our brand after-sales staff via email:
[cs@aklot.com]


If any questions related to orders, please contact the seller through the shopping platform.

WARRANTY


MAINTENANCE

We congratulate and thank you for choosing AKLOT as your instrument. All AKLOT instruments are set up to our strict quality control standards before shipment. This manual how to care for and use your instrument so that your guitar remains in factory-playing condition.

PARTS

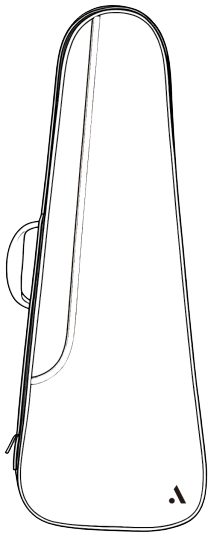

Gig Bag

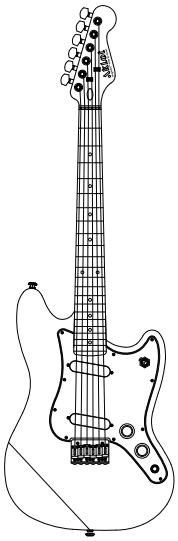


Body




Guitar Tuner




Microfiber
Cleaning Cloth

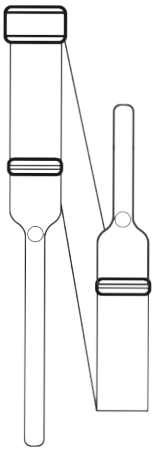

Guitar Strap

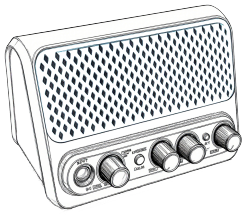


Guitar Amp

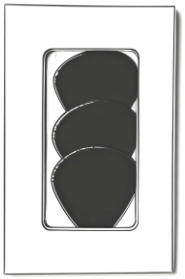

Pick Case




Instrument
Cable / 1/4" Audio Cable

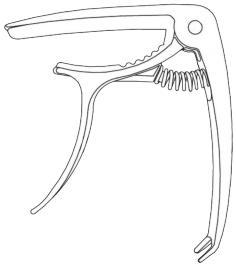


Capo



Accessory Pouch

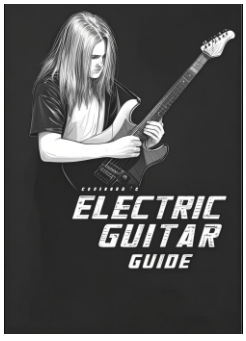

Lesson Guide

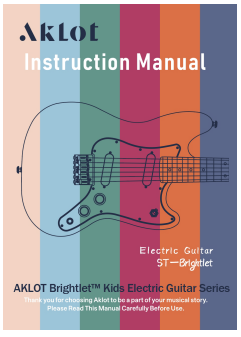


Instruction Booklet



Strings


TUNING GUIDE


Clamp the tuner on the headstock and turn the tuning knob until the green light of the corresponding string lights up.

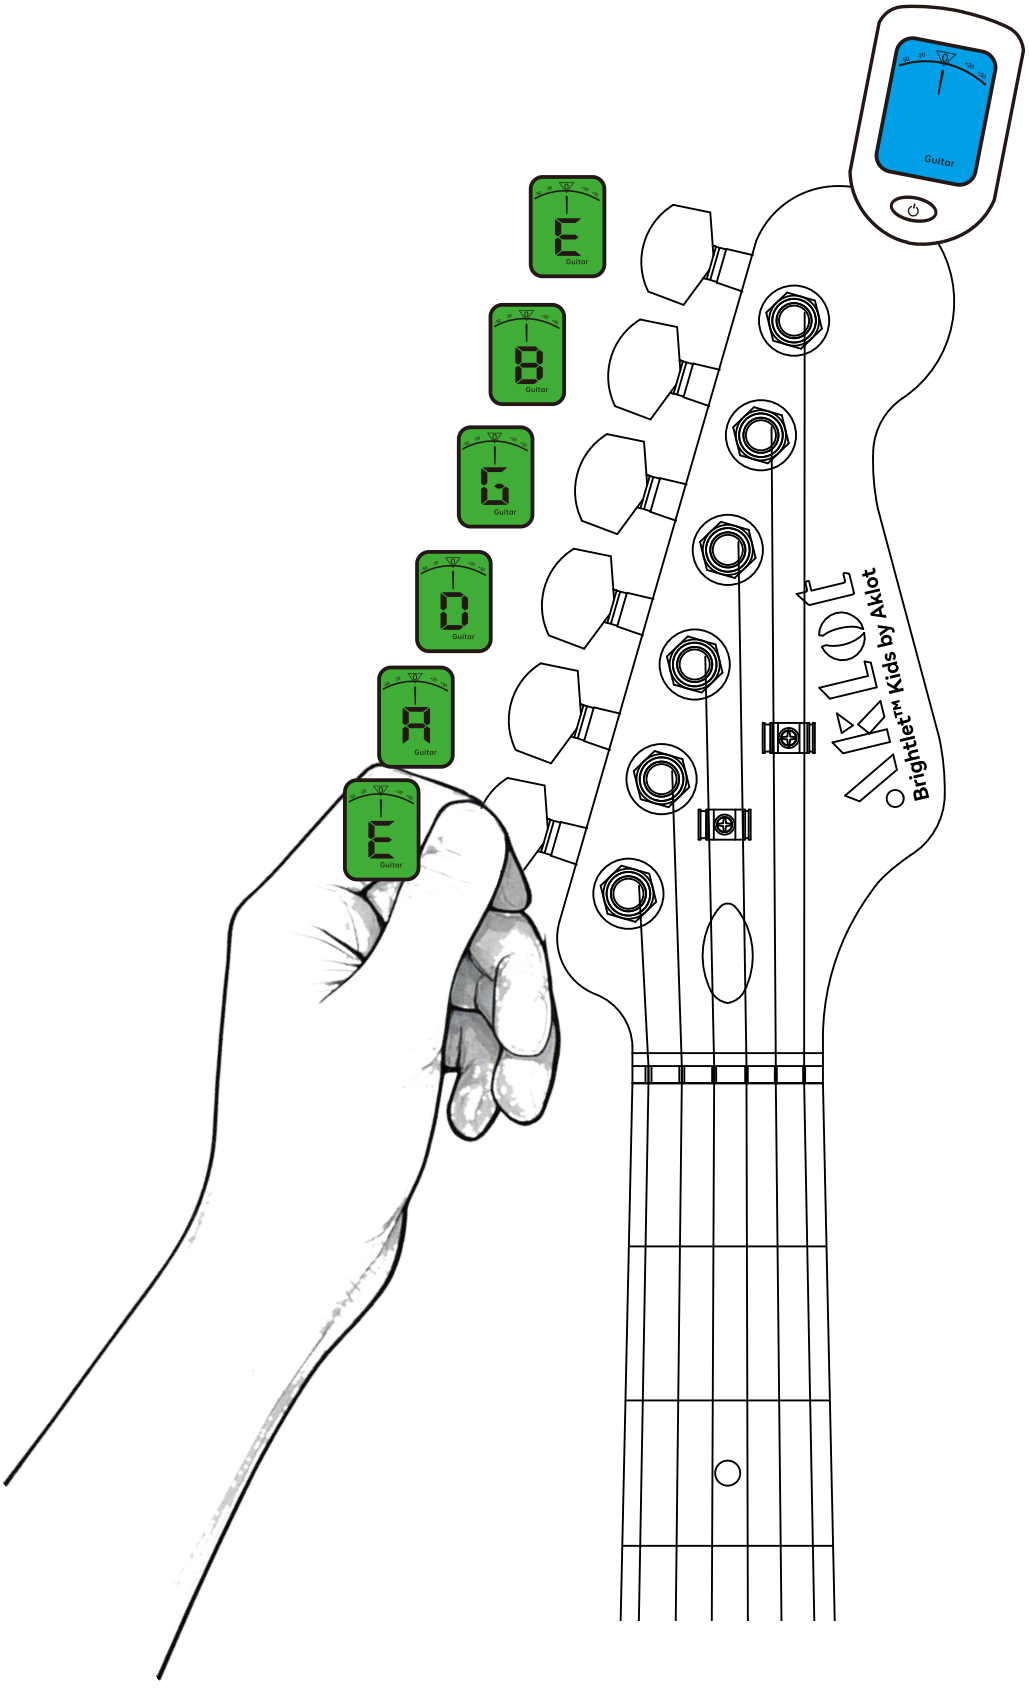


STRING INSTALLATION


The string tip goes through the corresponding string hole.
The strings should be tightly wound on to the tuning machines from top to bottom with 2 to 3 string wraps around the post.

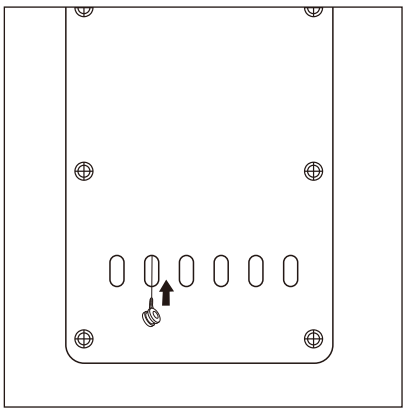


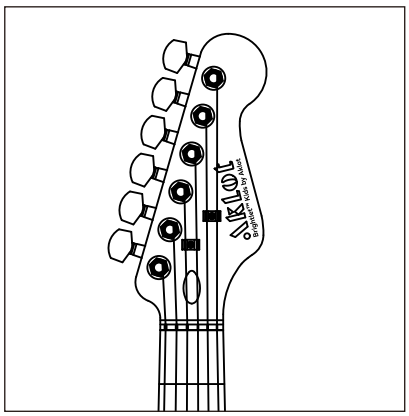

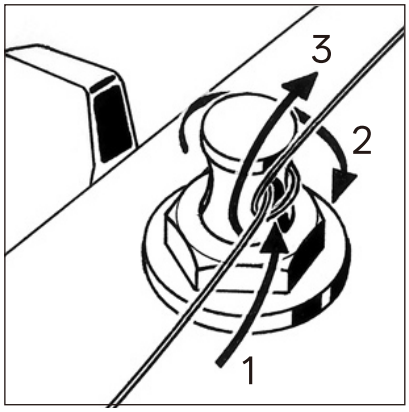


S-S/3 way PU selector/1 volume/1 tone

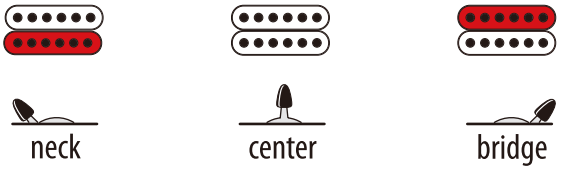

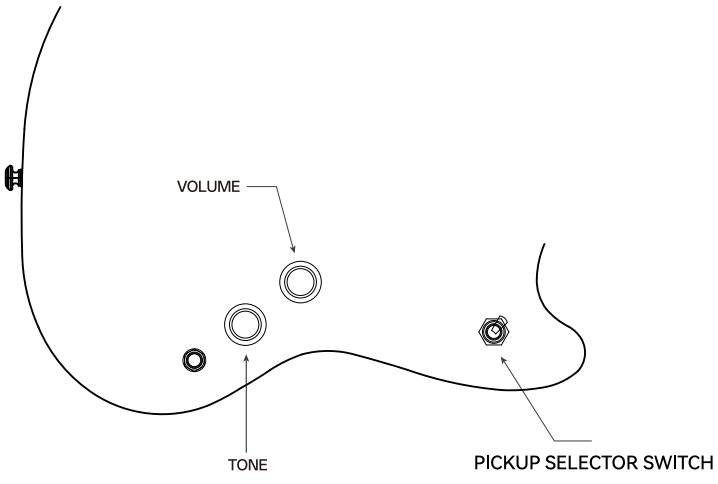


GUITAR CLEANING AND MAINTENANCE GUIDE

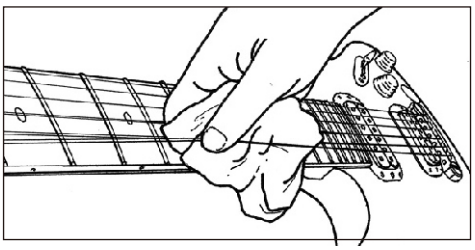



Maintaining your guitar's pristine condition requires regular cleaning to preserve both its finish and string longevity. After each playing session, thoroughly wipe down all surfaces to remove acidic perspiration deposits that can corrode strings and metal components. For gloss-finished instruments, use only specialized musical instrument polish applied with a soft treated cloth or pure cotton rag - avoid polyester or abrasive materials that may scratch delicate surfaces. Oil-finished guitars demand immediate post-play cleaning with a dry cotton cloth to prevent buildup. Should discoloration occur from prolonged use or excessive sweat exposure, consult a professional luthier for proper oil finish restoration techniques to return your instrument to its original factory condition. Remember that proper cleaning habits not only protect your investment but also ensure optimal playability and tone quality over time.

Note: Using improper cleaning products or techniques may permanently damage your guitar's finish - when in doubt, seek professional advice.

STRING MAINTENANCE AND TUNING MACHINE OPERATION GUIDE

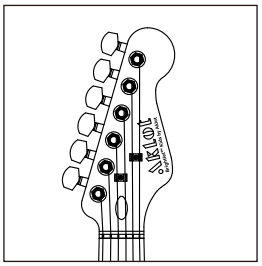

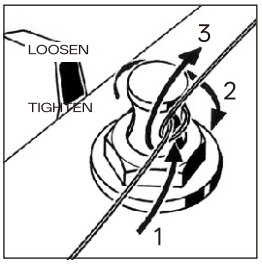

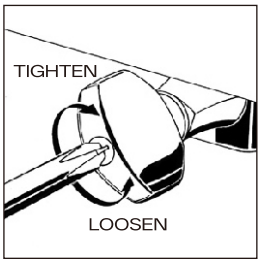


To maintain optimal performance, replace strings immediately when they exhibit discoloration, dirt buildup, or produce dull tones and buzzing sounds. For proper string replacement, change one string at a time to preserve consistent neck tension, especially important when switching to different string gauges which may require professional truss rod adjustment. Tremolo-equipped instruments need special attention as string tension changes can affect bridge height, requiring recalibration after restringing. When installing new strings, wind them tightly around tuning posts with 2-3 downward wraps for secure tuning stability - plain strings require special end preparation (as illustrated) to prevent slippage, while slotted-post tuners allow for pre-trimming with string cutters. Sealed tuning machines feature self-lubricating mechanisms with adjustable tension screws accessible via small Phillips-head screwdrivers. Always inspect new strings for smoothness and structural integrity, as damaged or kinked strings can cause buzzing, distorted tones, and reduced sustain. For instruments with floating tremolo systems or when making significant gauge changes, professional setup is strongly recommended to ensure proper intonation and playability.


Note: Improper string installation or using substandard strings may lead to tuning instability, premature wear, and compromised sound quality.


NECK

All AKLOT steel-string guitars feature adjustable truss rods that compensate for string tension variations. These adjustments become necessary when changing string gauges or altering tuning pitch, as such modifications directly impact tension distribution across the neck. Proper truss rod calibration ensures optimal string height, preventing common issues like fret buzz or muted notes. To adjust, locate the truss rod nut and insert the correct wrench - tightening (clockwise) increases tension while loosening (counter-clockwise) reduces it. For accurate measurement of neck relief, place a capo on the first fret, press the string at the body joint fret, and measure clearance at the 8th fret using a thickness gauge; ideal relief measures between 0.3mm to 0.5mm. Excessive relief elevates mid-neck action, compromising intonation and playability, while insufficient relief causes fret buzz. Due to the precision required and potential for damage, we strongly recommend having truss rod adjustments performed exclusively by qualified technicians.


Note: Improper truss rod adjustments may lead to permanent neck damage. Always exercise extreme caution or consult a professional.

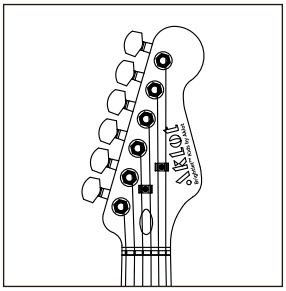

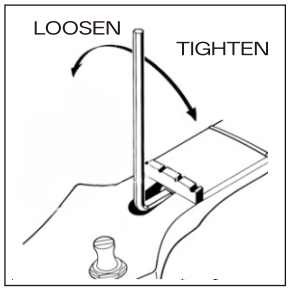

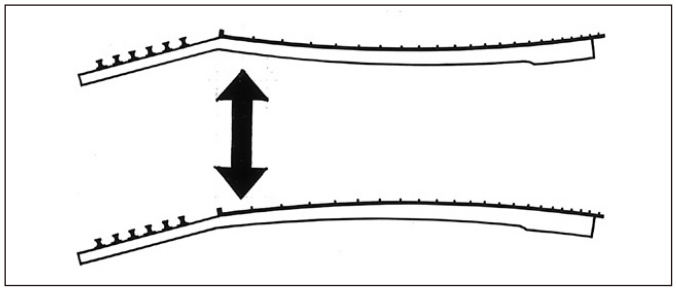

GUITAR ACTION ADJUSTMENT GUIDE

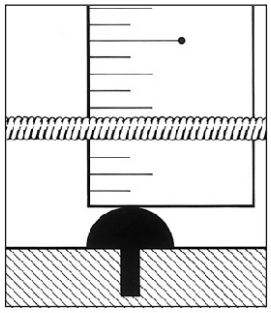

AKLOT guitars are factory-set with optimal string action at the 14th fret, though environmental factors like temperature and humidity fluctuations may necessitate adjustments over time. Proper action height is crucial - excessive height makes playing difficult while insufficient clearance causes fret buzz and unclear notes. Before making any adjustments, ensure your instrument is properly tuned and the truss rod has been correctly calibrated. Action modifications may be required after neck adjustments or when changing to different string gauges; refer to the included bridge manual for specific adjustment procedures. When using non-standard strings, progressively increase clearance starting from the treble strings and working toward the bass side. Remember that action settings are interdependent with both neck relief and string tension, requiring careful consideration of all three factors for optimal playability. For best results, we recommend consulting a professional technician for action adjustments, particularly when dealing with significant changes to your instrument's setup.

Note: Improper action adjustments can negatively affect playability and may require professional correction.

SAFETY PRECAUTIONS

Congratulations and thank you for purchasing this product. This manual contains safety precautions you need to follow when using your guitar, and describes points to note regarding cleaning

Conventions

This manual uses the following conventions to indicate how to handle the product safely and correctly so as to prevent you and other people from being injured, and property from being idamaged.

⚠ **Warning**	Handling the product incorrectly by not following the instructions highlighted by this indication may result in serious injury or death.
⚠ **Caution**	Handling the product incorrectly by not following the instructions highlighted by this indication may result in personal injury or property damage.
❗ **Request**	Handling the product incorrectly by not following the instructions highlighted by this indication may prevent the product from delivering the expected level of performance and/or functionality.

⚠ Warning

Do not play the guitar in highly humid environments.

Do not play the guitar in outdoor locations that are directly exposed to rain, or in highly humid locations such as bathrooms. Doing so may result in an electric shock

⚠ Caution

Do not twirl the instrument.

Do not twirl the guitar or swirl it around your body to mimic the actions that some professional players may perform on stage. Doing so may cause the guitar to fly off the strap and/or hit people around you, which may cause accidents involving personal injury.

Do not move your face closer to the instrument while playing it.

If a thick string (a low tone string on the guitar or a string on the bass) snaps, the broken string may hit your face or hands, which may result in personal injury. Check the strings frequently and replace them with new ones if necessary so that such accidents will not occur. Also, when you are playing the guitar, or replacing or adjusting the strings, do not move your face closer to the strings. A string may snap and hit your face, which may result in personal injury. In the worst case, if a broken string hits your eye, you may lose your eyesight. Guitar and bass strings are consumable. An old string may snap suddenly even when you pluck it in a normal way (even if you do not pull it too hard).

Do not increase the sound volume to an extremely high level.

If you use an amplifier or headphones at an extremely high volume for a long period of time, irreversible auditory damage may occur. This may also cause the amplifier to malfunction. Avoid using it at an extremely high volume.

Do not use rusty strings.

If a string (in particular, the first, second, or third string on the guitar)is rusty, it may injure your fingers. Check the string sfrequently and replace them with new ones if necessary.

Do not play the guitar with the strap loosened.

When you play the guitar while standing up and using the strap, make sure that the strap is firmly secured by the strap pins. Otherwise, the guitar may drop on your foot or other body parts, which may result in personal injury.

Pay attention to sharp portions of the pick guard.

Some electric guitar models are equipped with a pick guard that has an extremely sharp point. When plucking the strings or cleaning the guitar using a cloth, pay careful attention to the sharp point on the pick guard so that you will not be injured by it.

Ensure your hand is not injured by tremolo plate.

This tremolo plate is attached to the body back by strong magnet. Exercise care to prevent your hands from being pinched or cut by the tremolo plate.

SAFETY PRECAUTIONS

⚠ Caution

Pay attention to the fret edges so that you will not be injured by them.

When the neck becomes dry, the fret edges may protrude from the fingerboard, which may injure your hands or other body parts.

Do not tighten the strings excessively.

When stringing the guitar, do not wind up the strings over the defined pitch. Carefully and slowly wind up the strings while tuning the tones. if you wind a peg excessively, even a new string may snap, which may result in personal injury. If a broken string hits your eye, you may lose your eyesight. Never move your face closer to the strings when replacing them.

Exercise care to ensure your finger is not caught by the tremolo system.

The tremolo system uses an extremely strong spring to support the string tension. Pay attention to the tremolo system so that your finger will not be caught and injured when replacing the strings or in other cases.

Exercise care to ensure your hand is not injured by the strings.

The tip of a trimmed string may be sharp. Your hand may be injured if you touch it directly. When tuning the strings or cleaning the head using a cloth, be careful not to touch the tips of the trimmed strings. Trim any extra length of string at the tuning mechanism so that they do not come in contact with your fingers.

Do not use spray-type cleaners in a poorly ventilated space.

Prior to using a spray-type guitar cleaner, ensure there is adequate ventilation. Otherwise, poisoning symptoms may be caused. If you use a flammable cleaner, keep it away from open flames.

Do not carry your guitar with the case cover or bag fastener open.

When you carry the guitar in a guitar case or bag, make sure that the case clamp or bag fastener is securely locked. Otherwise, the cover may open, which may cause the guitar to drop to the ground.

❗ Request

Do not disassemble, modify, or repair the guitar.

Doing so may cause the guitar to malfunction or result in an electrici shock.

Do not keep old batteries installed in the instrument.

For products using dry batteries, be sure to check that no fluids are leaking from the battery. Dry batteries will discharge spontaneously even if they are not used. Therefore, periodic replacement is recommended. When disposing of dry batteries, use the collection box specified by your local government, electric appliance dealers, etc. Do not throw used dry batteries into a fire, otherwise they may explode.

Use the battery correctly.

Do not insert the battery with reversed polarity (+/-). Ensure that the polarity of the battery matches that of the battery compartment. Should the polarity be reversed, sound may not come out, the pre-amplifier may be damaged, or ignition may result.

Do not store the guitar in a position where its surface is in contact with a resin product.

If the surface of the guitar remains in contact with a resin product, furniture, or other coated items for a long period of time, color migration or adhesion may occur, which may damage both items. Prevent the guitar from direct contact with any of those items by using appropriate material such as fabric.

Do not use benzine or thinner to clean the guitar.

Using benzine, thinner, or other similar chemicals to clean the surface of the guitar may cause damage or discoloration. Procure and use a cleaner designed for use on guitars.

Regarding storage and transportation, note the following points:

The guitar is a wooden product. It is easily broken when thrown or dropped. Handle it with care.
Store the guitar in a well-ventilated location. Avoid locations subject to high temperatures or humidity. Also avoid dusty or sandy locations. When the guitar is exposed to direct sunlight, the color of its coating may gradually fade.
If you play the guitar in the rain or similar conditions where water splashes directly onto the guitar, or in an environment where the guitar is exposed to high temperatures for a long period of time, misalignment may occur in the wooden parts, such as the body or neck, of the guitar.
When using a parcel delivery service for transportation, use a dedicated guitar case. Otherwise, pack it in a rigid carton with an adequate amount of cushioning materials, and label the package as a fragile item. The carton that the musical instrument store used when you purchased the guitar may not be suitable for transportation. The guitar may be damaged if you use the carton without taking additional protective measures.

Aklot

Ride the Classic Wave

If there is anything you would like to say to us

contact our brand after-sales: cs@aklot.com
www.aklot.com