

DIY ELECTRIC GUITAR ASSEMBLY MANUAL



DESIGNED BY AKLOT FOR ALL SKILL LEVELS

VLR Series by AKLOT
Build & Play
**DIY
GUITAR
ELECTRIC**

LX ELECTRIC GUITAR
First
Your
First build
Your own voice



UNLASH YOUR DREAM

ASSEMBLE.EXPRESS. PLAY YOUR SOUND

Welcome to the **AKLOT** Family

BUILD IT. PLAY IT. MAKE IT YOURS.

Congratulations on your new AKLOT DIY Lorien Style Electric Guitar Kit! You're about to build a guitar that's 100% yours- and join thousands of first time builders and players just like you, all around the world. There's no better feeling than plugging in and playing a guitar you built with your own hands. We're here to help you make that happen.

This manual was written especially for beginners. It will walk you through every simple step of assembly, setup, care, and maintenance. No confusing jargon, no skipped steps-just clear, easy instructions to help you finish your guitar with confidence.

This manual was written especially for beginners. It will walk you through every simple step of assembly, setup, care, and maintenance. No confusing jargon, no skipped steps-just clear, easy instructions to help you finish your guitar with confidence.



Need a Hand?

We're here to help if you have any questions during your build.

cs@aklot.com

We typically reply within 24 hours.



Watch the Full Build Video

Scan the QR code to watch our complete step-by-step build tutorial.





Safety First

Building your own guitar should be fun and rewarding.
Please take a few minutes to read these basic safety guidelines before you begin.



Eye & Tool Safety

- Always wear safety glasses when using tools.
- Use tools only as intended and according to the manufacturer's instructions.
- Keep fingers and hands clear of cutting tools.
- Never force adjustments or hardware.



Finishing & Ventilation

- Work in a well-ventilated area.
 - Wear gloves when using solvents, stains, or finishes.
 - Keep lacquer, solvents, and other chemicals away from heat, sparks, and open flame.
- Store finishes and solvents safely and out of reach of children.



Keep Away from Children

- Small parts may cause choking hazards.
- Keep plastic bags, packaging, and small parts away from babies and young children.
- Never allow children to use tools or equipment unattended.



Use Common Sense

If you are unsure about any procedure, stop and seek help before continuing.
Take your time, work careful, and enjoy the process!



You've Got This!

Thousands of first-time builders have built their dream guitar—and so can you.

QUICK START

A few important things to know before you begin.



1. DRY-FIT EVERYTHING FIRST

This kit is an unfinished DIY product. Before final assembly, we strongly recommend a **full dry-fit** of the neck, hardware, electronics, and strings.

If you plan to paint or stain the body, complete all surface preparation and finishing work before final assembly.



2. NO SOLDERING REQUIRED

This kit uses pre-installed **push-on connectors**.

No soldering is required under normal assembly.



3. TIGHTEN WITH CARE

Do not fully tighten any major hardware until **alignment** has been confirmed.



4. TEST BEFORE YOU CLOSE

Test all electronics before closing the backplate.

This helps you avoid unnecessary rework later.



Take your time, enjoy the build, and don't hesitate to reach out if you need help. **We're here for you!**



TABLE OF CONTENT

1	Tools and Supplies.....	4	5	Tuning & Setup.....	29
2	What's in the Box	5	6	Troubleshooting.....	35
3	Prep for Finish.....	6	7	Final Inspection & Support.....	36
4	Assemble Your Guitar	12			



TOOLS AND SUPPLIES

These are the tools and supplies we recommend for assembling this kit. This kit uses pre-installed push-on connectors. No soldering is required under normal assembly.



TOOLS



Sanding block



Fret crowning file



Cam clamps



TIP

Having the right tools makes the build easier and more enjoyable.



SUPPLIES



Sandpaper: 400+ grit



Light Duty 3M Scotch- Brite Pad OR 0000 steel wool



Naphtha solvent



Disposable gloves



Blue permanent marker



Masking tape



Double- sided tape

KIT CONTENTS

Please check that all parts are included before starting assembly.
If any parts are missing or damaged,
please contact AKLOT Support:

 cs@aklot.com



#	PART	#	QTY
1	Body		1
2	Neck		1
3	Neck & Bridge Pickup & Screws		1&1&8
4	Tuning Machine & Screws		6&6
5	Bridge & Tailpiece Set		1&1&4
6	Neck Plate & Screws		1&4
7	Backplate & Screws		1&3
8	Pre-Wired Control Assembly		1&1&1
9	Volume & Tone Knobs		1&1
10	Output Jack Plate & Screws		1&2
11	Truss Rod Cover & Screws		1&3
12	Strap Button & Washer & Screws		2&2&2
13	String		1



IMPORTANT: Keep all small parts in a safe place during the build. A parts tray or small containers work great for organization.

PREP FOR FINISH

Good surface prep is the foundation of a great finish. Take time now to fix small flaws and fill the wood pores for a smooth, even result.

1 INSPECT AND REPAIR SMALL FLAWS

Small dents and scratches are common in unfinished wood and are easy to fix before finishing.

1 Cover the dent with a damp cloth.

2 Apply light heat with a soldering iron.

The steam will raise the wood fibers.



TIP: Test on a hidden area first. Use light heat and don't hold the iron in one spot too long.


2 FILL THE WOOD GRAIN

Grain filler fills open pores and small cracks, creating a smoother surface for finishing.

- 1 Apply **grain filler** evenly with a plastic spreader or clean rag.
- 2 Rub firmly **across the grain** to push filler into pores and small cracks..
- 3 Let it sit for **5-10 minutes** until it looks dull and slightly sticky.
- 4 Wipe off extra filler **across the grain**.
- 5 Lightly buff **with the grain** to leave filler only in the pores.
- 6 Let the filler **dry completely** per the product instructions.

When fully dry:

- ✓ Sand lightly with **400+ grit sandpaper**.
- ✓ Wipe all dust off with a clean, **lint-free cloth**.

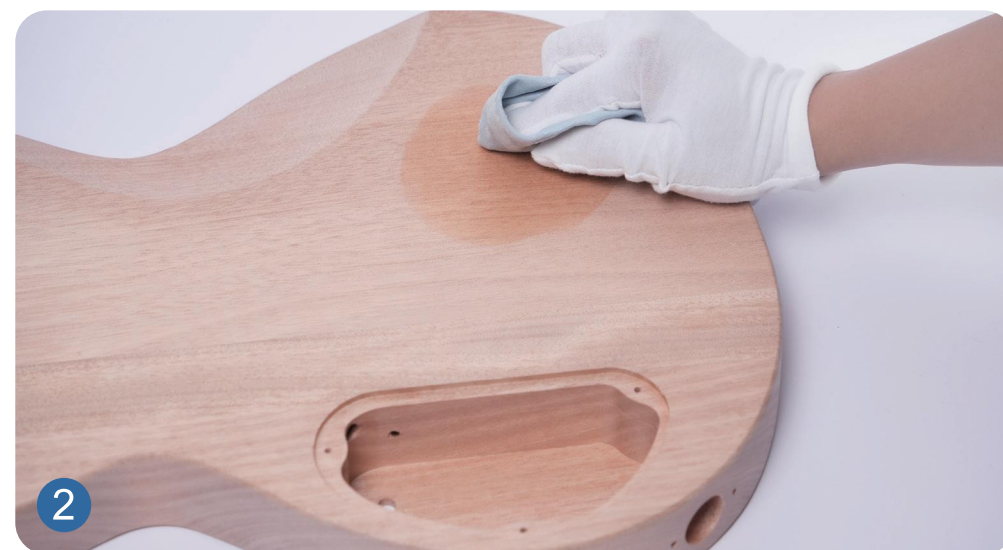



3 SAND THE BODY

- 1 Start with **400+ grit sandpaper** on a flat sanding block. Sand the entire body **only with the grain**—never back and forth or in circles.
- 2 When you're done, wipe the body with a damp cloth to raise the grain. Let it dry completely.
- 3 Sand again with **400+ grit sandpaper**, still following the grain.
- 4 Wipe with a damp cloth one more time to raise the grain. Let it dry.
- 5 Do a final sanding with **400+ grit sandpaper**.



TIP: Patience now = a smoother finish later.
Always sand with the grain to avoid visible scratches.



4 SEAT THE FRETS

Before sanding the neck, use a **fret hammer** to make sure all frets are **fully and evenly seated**.
The more evenly you seat the frets now, the less leveling work you'll need to do later.



Most kits will not require additional fret seating.
Only do this step if a fret is slightly high.
Always tap lightly—do **not force**.



SAND THE NECK

Smooth and even surfaces lead to a better feel and cleaner finish.

1 START WITH 400+ GRIT SANDPAPER.

- Sand lightly along the neck, following the grain.
- Run your fingers along the fretboard edges to check for sharp fret ends.
- If any fret ends feel sharp, sand gently with long, lengthwise strokes down the neck.



CAUTION

Be careful not to change the fret bevel during this step.

2 SAND THE FRETBOARD FACE.

- When sanding the fretboard surface, avoid sanding the fret tops.
- A small foam pad wrapped in sandpaper works best for sanding between the frets.

3 BREAK ALL SHARP EDGES.

For all neck and fingerboard types, lightly round over sharp edges on the fretboard, peghead, and body around the neck pocket.

- Soft edges help the finish coat evenly and reduce the risk of sanding through to bare wood later.

4 RAISE THE GRAIN.

Wipe the neck with a damp cloth to raise the grain.

5 Final sanding.

Once dry, sand the neck again using 400+ grit sandpaper for a smooth finish.



DEGREASE WITH NAPHTHA

Remove oils, grease, and contaminants before finishing.



Wipe clean.

Wipe the neck and body thoroughly with a naphtha-dampened rag.



Wear gloves.

Wear clean gloves after this step to prevent contamination.




Avoid touching bare wood.

From this point forward, avoid touching sanded surfaces with bare hands.


SPRAY THE FINISH

A smooth finish starts with patience and light, even coats.

The right way to spray: Move in a straight line, so the distance from the work stays the same. This gives you even coverage.

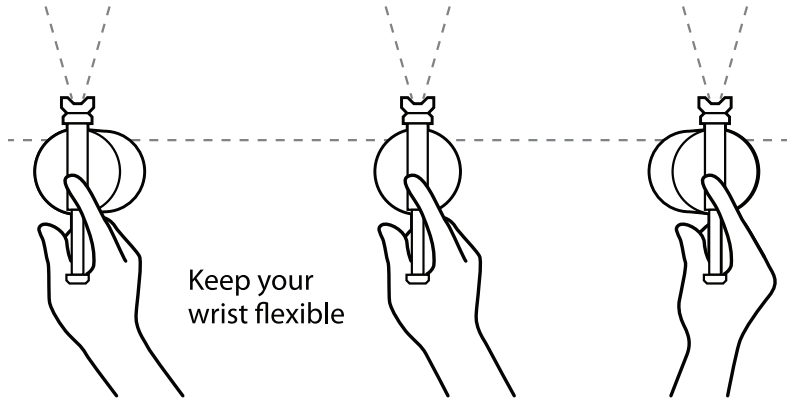

The wrong way: Swinging in an arc moves the spray closer and farther from the work. Center coverage is heavy, edges are light.

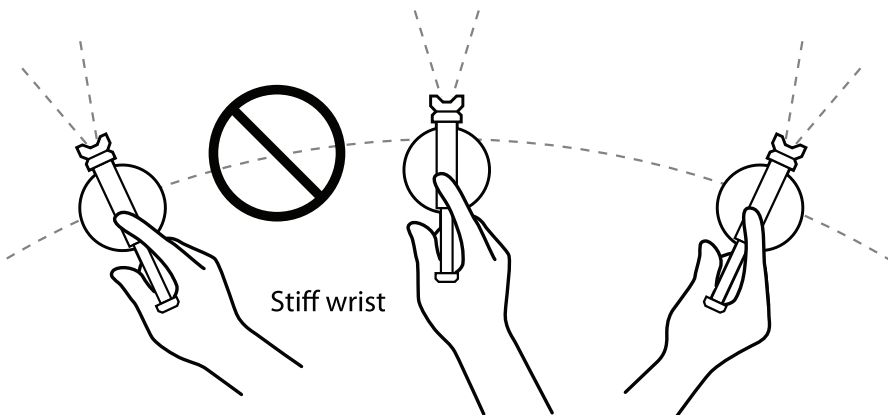

YOUR FINISH

Your AKLOT Lorien DIY kit features beautiful flame maple top-so we **strongly recommend clear satin lacquer or clear oil-based finish** (tung oil, water-based clear lacquer, shellac).

1 USE WARM LACQUER, NOT COLD

- Cold lacquer spatters and creates uneven spots. (Warm your cans in warm tap water first.)
- When spraying, keep the **spray parallel** to the surface of the guitar for even coverage.

2 THE #1 TIP FOR FLAME MAPLE: PRACTICE ON SCRAP FIRST!

- Test your finish of choice on scrap wood first, so you can see what you'll get before applying it to your guitar.

3 LIGHT COATS, NOT HEAVY COATS

- Several light coats build a better finish than one heavy coat.
- Heavy coats can run, sag, and take much longer to dry.

SPRAY THE FINISH



AFTER 1 WEEK OF CURING

Once fully cured for one week, buff the entire guitar lightly with Light Duty 3M Scotch-Brite Pads or 0000 steel wool for a smooth, uniform satin finish.



MASK THE NUT

Mask off the nut with tape to keep it free of finish. This DIY kit is equipped with a **Jatoba fretboard**. Be sure to fully mask the entire fretboard face before spraying. Any excess overspray can be scraped away once finishing is complete. Allow the body and neck to dry overnight.

DAY

1

BODY

- Spray 1-3 coats of Clear Satin Lacquer.
- Wait 1-2 hours between coats.

NECK

- Spray 1-3 coats of Clear Satin Lacquer.
- Wait 1 hours between coats.

DAY

2

BODY

- Spray 1-3 coats of Clear Satin Lacquer.
- Allow 1 hour of dry time between coats.

BODY AND NECK

- Spray 3-4 additional coats of Clear Satin Lacquer.
- 1 hour between each coat.
- Allow all parts to dry overnight.

DAY

3

BODY AND NECK

- Lightly sand all surfaces with 400+ grit sandpaper to remove dust, debris, and finish spatter.
- Apply 3-4 final coats of Clear Satin Lacquer, spacing each coat 1-2 hours apart.
- Let the finish fully cure for 1 week in a cool, dry indoor space. (Recommended environment: 70° F with 50% relative humidity.)

FRETWORK CHECK

AKLOT kits receive basic fret leveling and polishing before packaging.

No additional fretwork is required for normal use.



BEFORE YOU CONTINUE

Inspect the frets carefully to make sure everything looks and feels right.

No further fretwork is needed unless you notice:

- ! High frets (a fret feels higher than the others)
- ! Uneven frets (visible gaps or inconsistent heights)
- ! Excessive fret buzz (after string installation and tuning)



TIP:

If you are unsure, it's better to continue with the build. You can always make adjustments later if needed.



ALL GOOD?

Frets look even



No visible high spots



Ready for assembly



NEED HELP?



For advanced fret leveling, crowning, and polishing techniques, **scan the QR code or visit:**

www.aklot.com/tutorials



IMPORTANT


Fret leveling and dressing require special tools and experience. Improper fretwork can permanently damage your fretboard and frets.



When in doubt, leave it as is and enjoy your build!


NECK INSTALLATION

1 NECK PLACEMENT & FITMENT

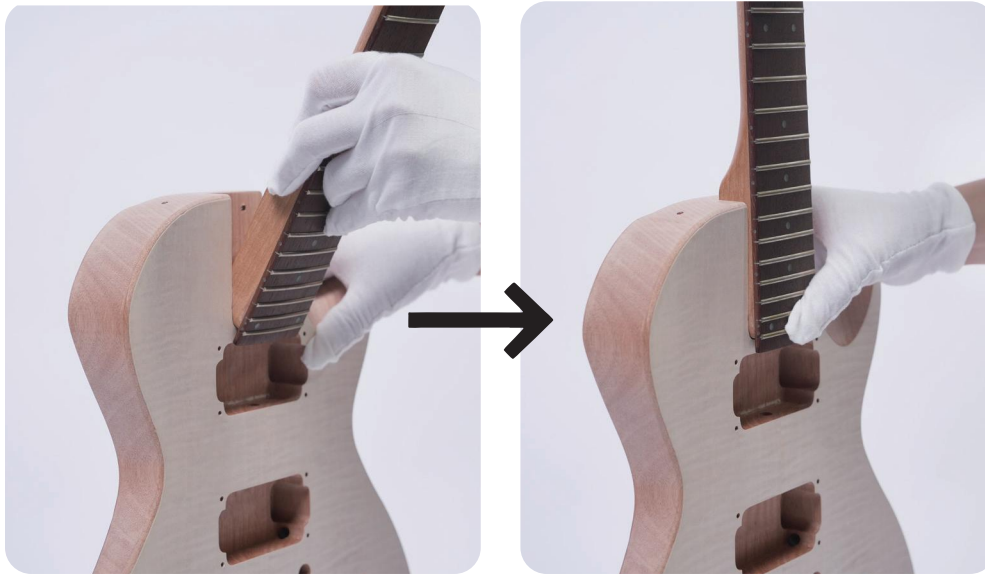

- 1 Place the **guitar body** and **neck** on a padded work surface to prevent scratches.
- 2 Gently **slide** the **neck heel** into the pocket. **Apply** even pressure with both hands until the neck is fully seated. **Avoid forcing** the neck-this can damage the pocket edges.
- 3 Temporarily **install** the **bridge**.
- 4 **Measure** from the **nut edge** (closest to the fretboard) to the **12th fret midpoint**, then **double** this value.
- 5 The standard scale length is **24.75" (628.65mm)**.
- 6 If the scale is slightly short, **move** the **bridge position rearward** to increase string tension.
- 7 **Fine-tune** with **bridge saddle** screws.

2 SCALE LENGTH VERIFICATION

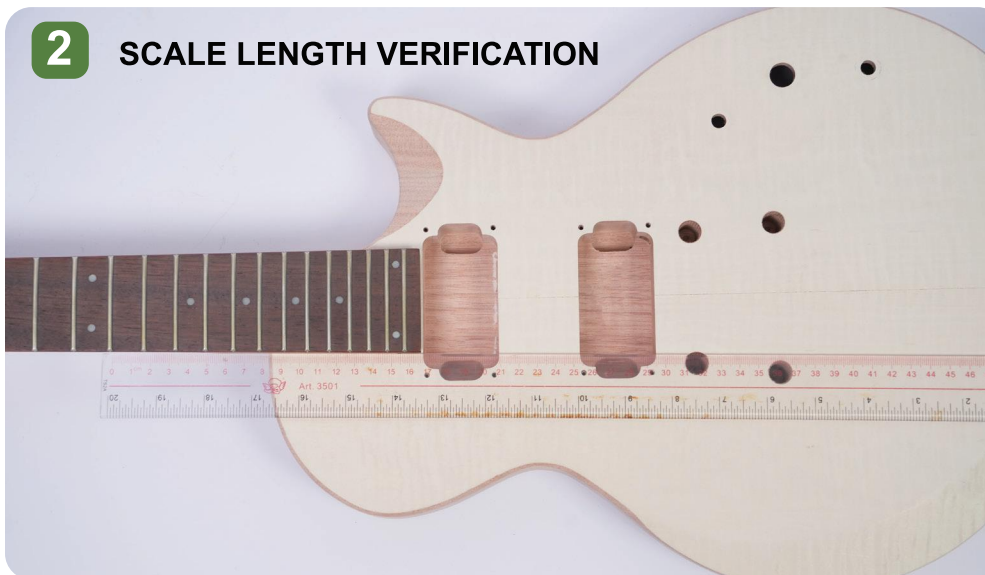

PRO TIP

A snug fit is normal. If the neck does not seat easily, recheck the pocket and heel for any finish buildup or debris.

NOTE



- Insert neck at 45° until the tenon base contacts the endpoints, rotate to vertical orientation and press to full seating.
- During precision testing procedures, apply forward pressure on neck heel to achieve 3-5mm separation, withdraw at consistent forward angle while providing immediate support upon tenon disengagement.


NECK INSTALLATION

3 REINFORCEMENT PLATE & SCREW INSTALLATION



HOW TO INSTALL

- Flip the guitar over.
- Align the reinforcement plate with the 4 backplate holes.
- Loosely insert all four screws.
- Tighten diagonally in this order:
Top Left - Bottom Right - Top Right Bottom Left
- Final check: Ensure the neck is aligned straight before fully tightening.

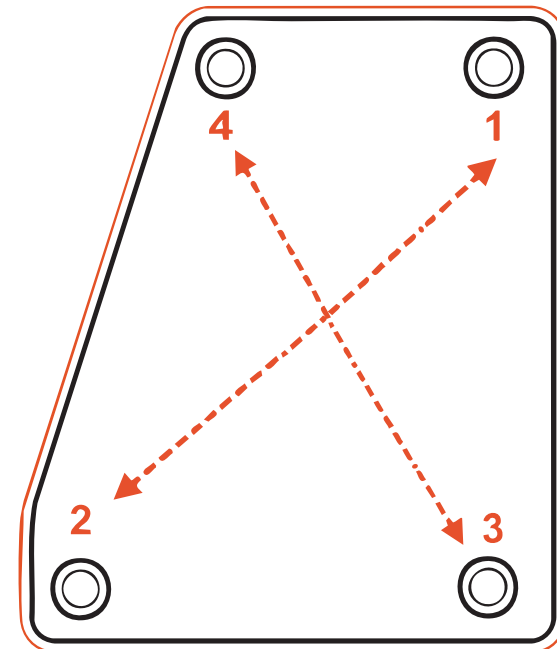

TUNER INSTALLATION

Proper tuner installation ensures stable tuning and long-term reliability.

1 ORGANIZE TUNERS



TUNER ORIENTATION GUIDE

LEFT SIDE (3 PCS)



RIGHT SIDE (3 PCS)



2 INSTALL TUNERS



TIP

Thread the washer and bushing onto the shaft, then **hand-tighten**.

- To prevent tuning machine misalignment during installation, we have factory-pre-drilled the mounting screw holes. This eliminates user positioning efforts—simply tighten the screws sequentially to ensure optimal performance.

STRAP BUTTON INSTALLATION

Correct strap button placement keeps your guitar balanced and comfortable to play.



1 POSITIONING FOR OPTIMAL BALANCE

- Strap buttons not only secure your guitar while standing, but their placement critically affects instrument balance.
- On this guitars:
 - Rear button:** Centered on the lower bout (backside).
 - Front button:** Installed at the upper bout (treble horn).

2 INSTALLATION STEPS

- Place the metal washer against the body first, followed by the strap button.
- **Hand-start** all screws into pre-drilled holes before tightening.
- Use a screwdriver with **controlled torque** to avoid wood splitting.

3 FINAL CHECK

- Gently tug the buttons to confirm stability **without over-compression marks** on the wood.





KEY WARNINGS

- Overtightening is the #1 cause of body cracks - stop when resistance increases sharply.
- For heavy guitars, consider adding a nylon washer between the button and body.

VOLUME KNOBS INSTALLATION

Proper installation ensures smooth control and noise-free performance.

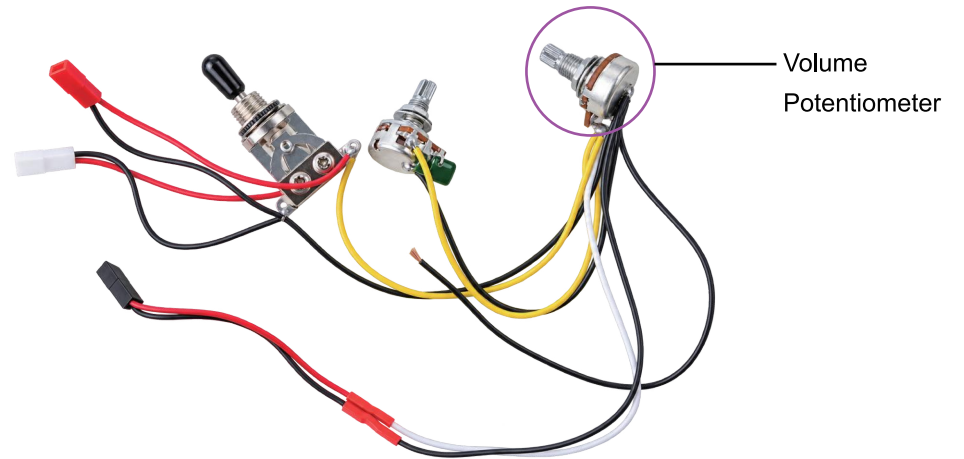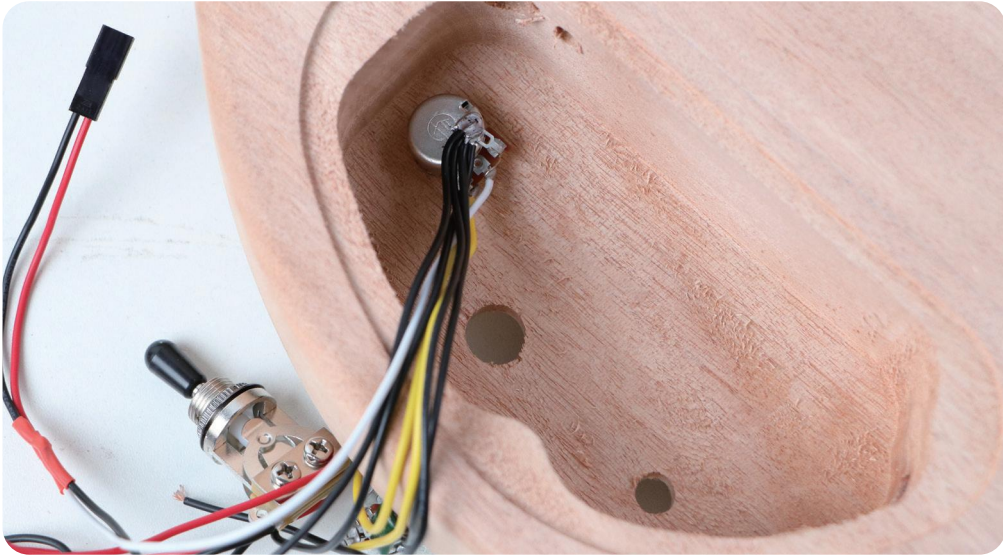

1 VOLUME KNOBS INSTALLATION

- Insert the volume potentiometer (with green ground wire) into the top pre-drilled hole.
- Flip the guitar, slide on the washer and nut, then tighten securely with pliers.





NOTE

Ensure the ground wire doesn't contact other components to avoid hum.

3 WAY SWITCH KNOB INSTALLATION

Install the selector switch properly for smooth switching and reliable performance.

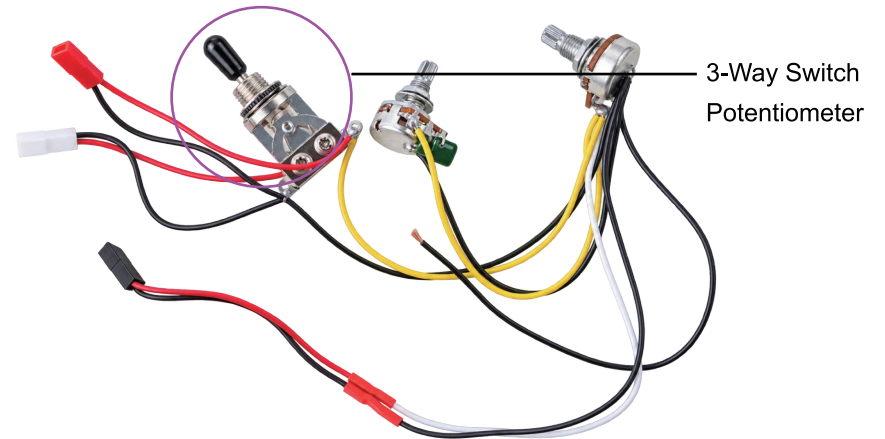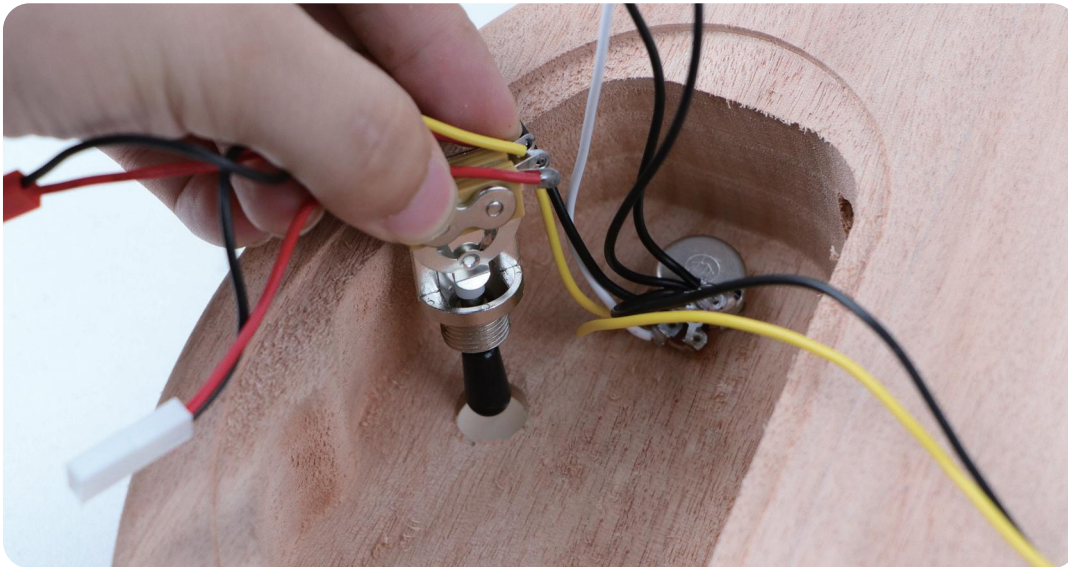

1 SELECTOR SWITCH INSTALLATION

- Remove the switch's factory washer and nut before insertion.
- Insert the switch into the center hole, then reattach the washer and nut from inside the control cavity.
- Tighten with pliers while testing switch movement - it should click firmly between positions without wobbling.





CRITICAL CHECKS:

- Verify all nuts are flush against the body to prevent grounding issues.
- If the selector feels loose, add a second nylon washer for stability.



TONE KNOB INSTALLATION

Install the controls accurately for smooth operation and reliable performance.

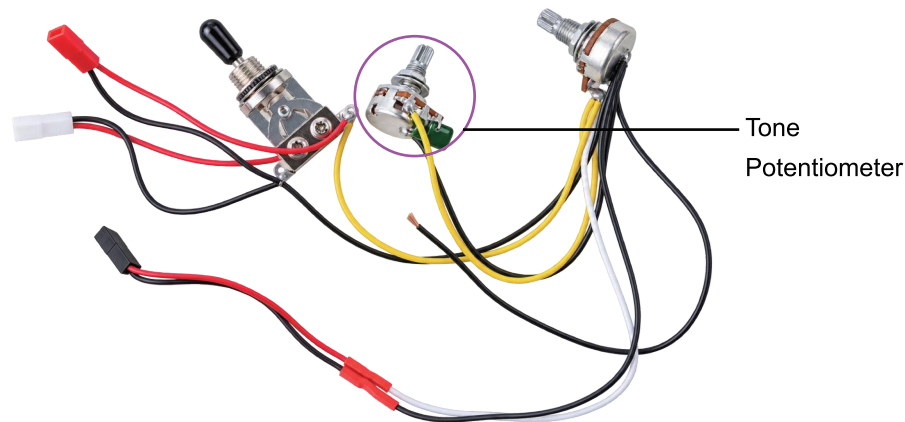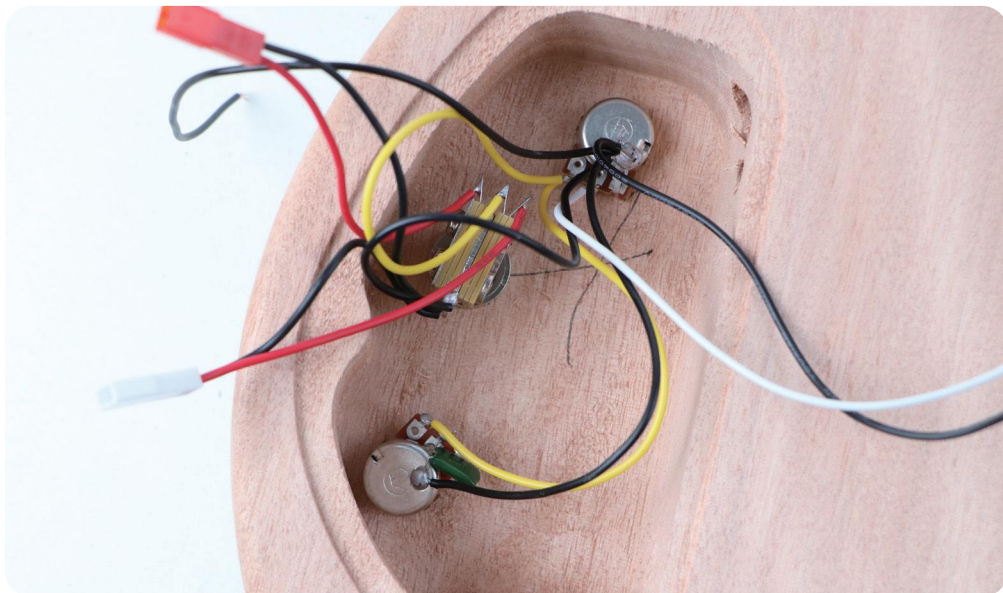

1 TONE KNOBS INSTALLATION

- Insert the tone potentiometer into the bottom pre-drilled hole
- Flip the guitar, slide on the washer and nut, then tighten securely with a wrench.
- Check that the potentiometer sits flush and does not wobble before wiring.




PRO TIP

Tighten the nut just until snug.
Over-tightening can damage the components.


GROUND WIRE ROUTING

Proper ground wire routing ensures a quiet, noise-free guitar.

1 ROUTE THE GROUND WIRE

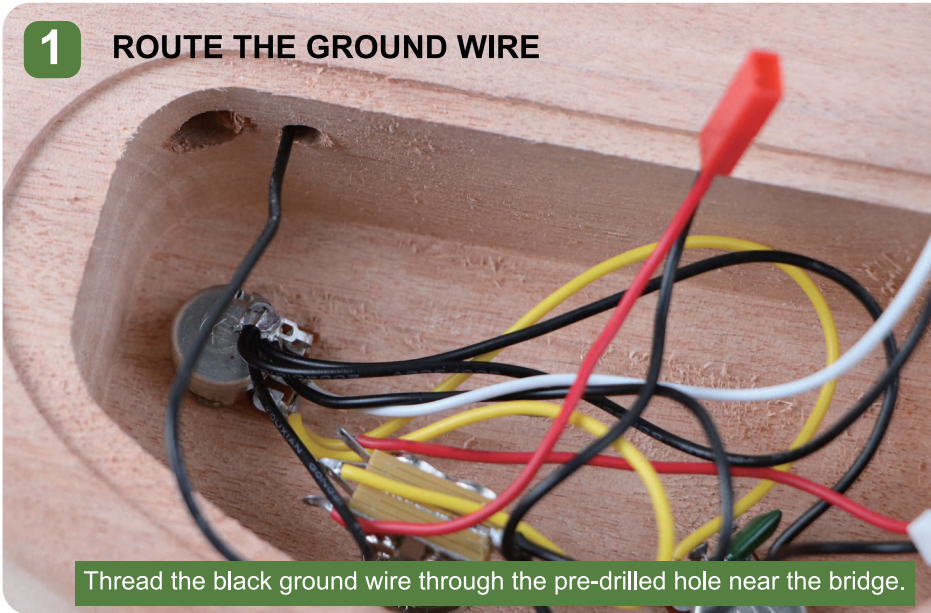

Thread the black ground wire through the pre-drilled hole near the bridge.

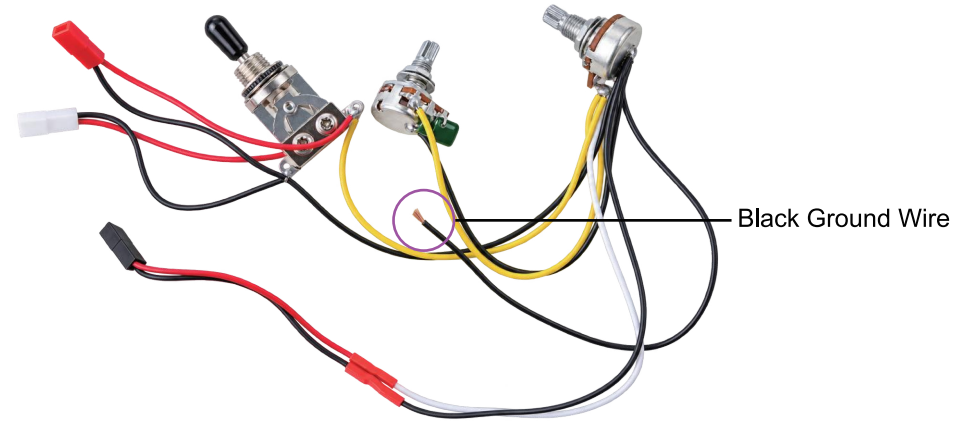

Black Ground Wire

2 WIRE EXIT LOCATION



It should exit on the right side of the bridge cavity(see diagram).




IMPORTANT TIPS

- Ensure the ground wire does not touch hot (signal) lugs.
- A solid ground connection reduces hum and noise.

PICKUP INSTALLATION

Install the pickups carefully to ensure proper alignment and reliable performance.

1 NECK PICKUP (Red Wire)

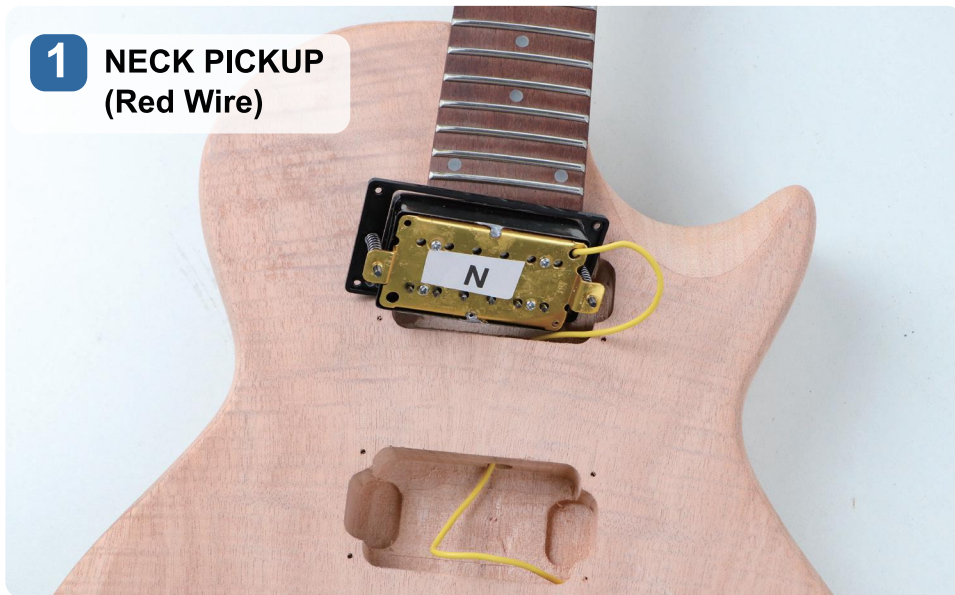

1 NECK PICKUP (RED WIRE) INSTALLATION

- Place the pickup with the red wire into the neck (upper) position.
- Route the red wire through the central channel between pickup cavities, then out through the bridge pickup hole.

2 BRIDGE PICKUP (BLACK WIRE) INSTALLATION


- Install the pickup with the black wire into the bridge (lower) position.
- Route its wire through the designated pre-drilled hole (see diagram).



PRO TIP

Ensure the pickup sits flat in the cavity before tightening the screws. Check wire routing to avoid pinching when installing the control plate.

2 BRIDGE PICKUP (Black Wire)

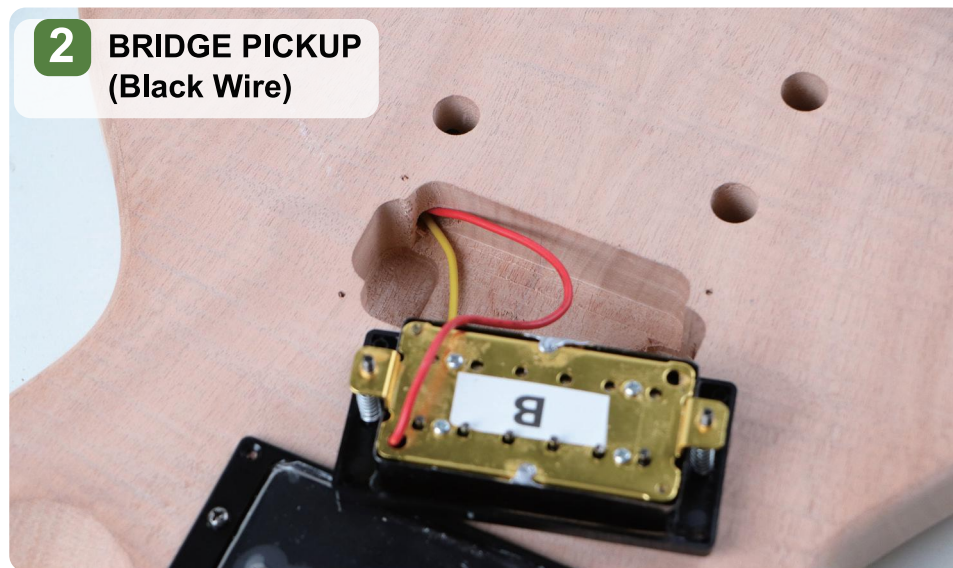

PICKUP INSTALLATION

Secure the pickups properly for balanced output and clear tone.



PICKUP & SCREW REFERENCE



REMINDER

Do not overtighten the mounting screws. Overtightening can damage the pickup or the guitar body.



1 SECURE PICKUPS

- Align both pickups with their screw holes, ensuring wires aren't pinched.
- Fasten screws evenly - alternate tightening to avoid lifting.

2 FINAL CHECK

- Ensure pickups sit level and are firmly mounted.
- Verify no wires are pinched and the height is appropriate before proceeding to setup.




KEY NOTES

- Leave slight pickup height adjustment room (1-2mm gap) for final setup.
- Avoid over-tightening - pickup bobbins may crack under pressure.

OUTPUT JACK INSTALLATION

Proper installation ensures a secure connection and reliable performance.

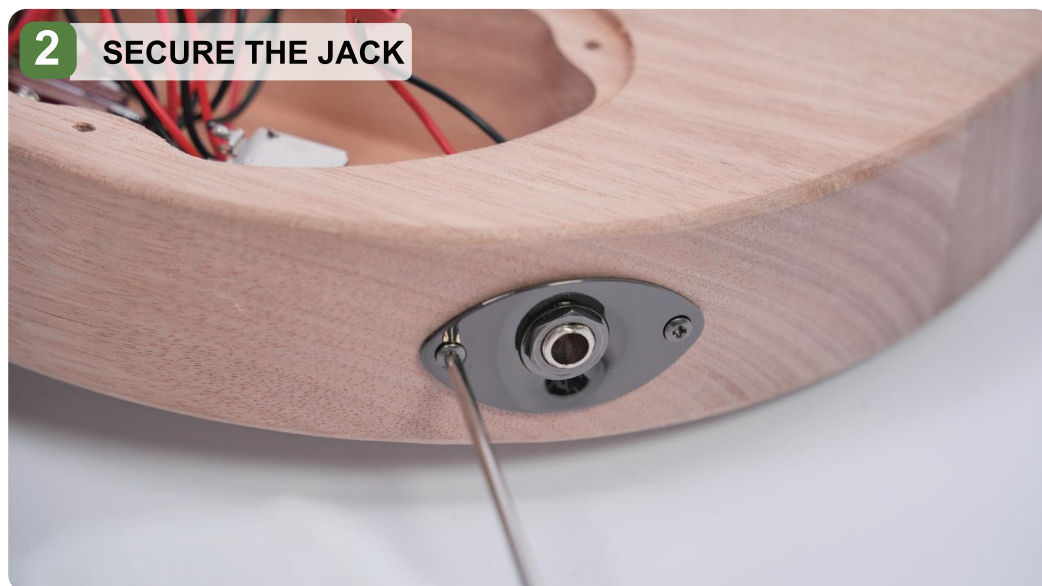

PARTS INCLUDED



Mounting Screws
(2 pcs)

Output Jack
(Pre-wired)



INSTALLATION STEPS


- Insert the output jack into its pre-cut cavity, threading the connected cable through the designated hole.
- Secure the jack with provided screws from the backplate side.



NOTES

- Carefully identify wire colors to ensure correct wiring connections.
- The neck pickup connects to the left terminal of the selector switch, and the bridge pickup to the right terminal.
- Handle wires with care during installation; avoid pulling to prevent damage to soldering joints.


WIRING DIAGRAM

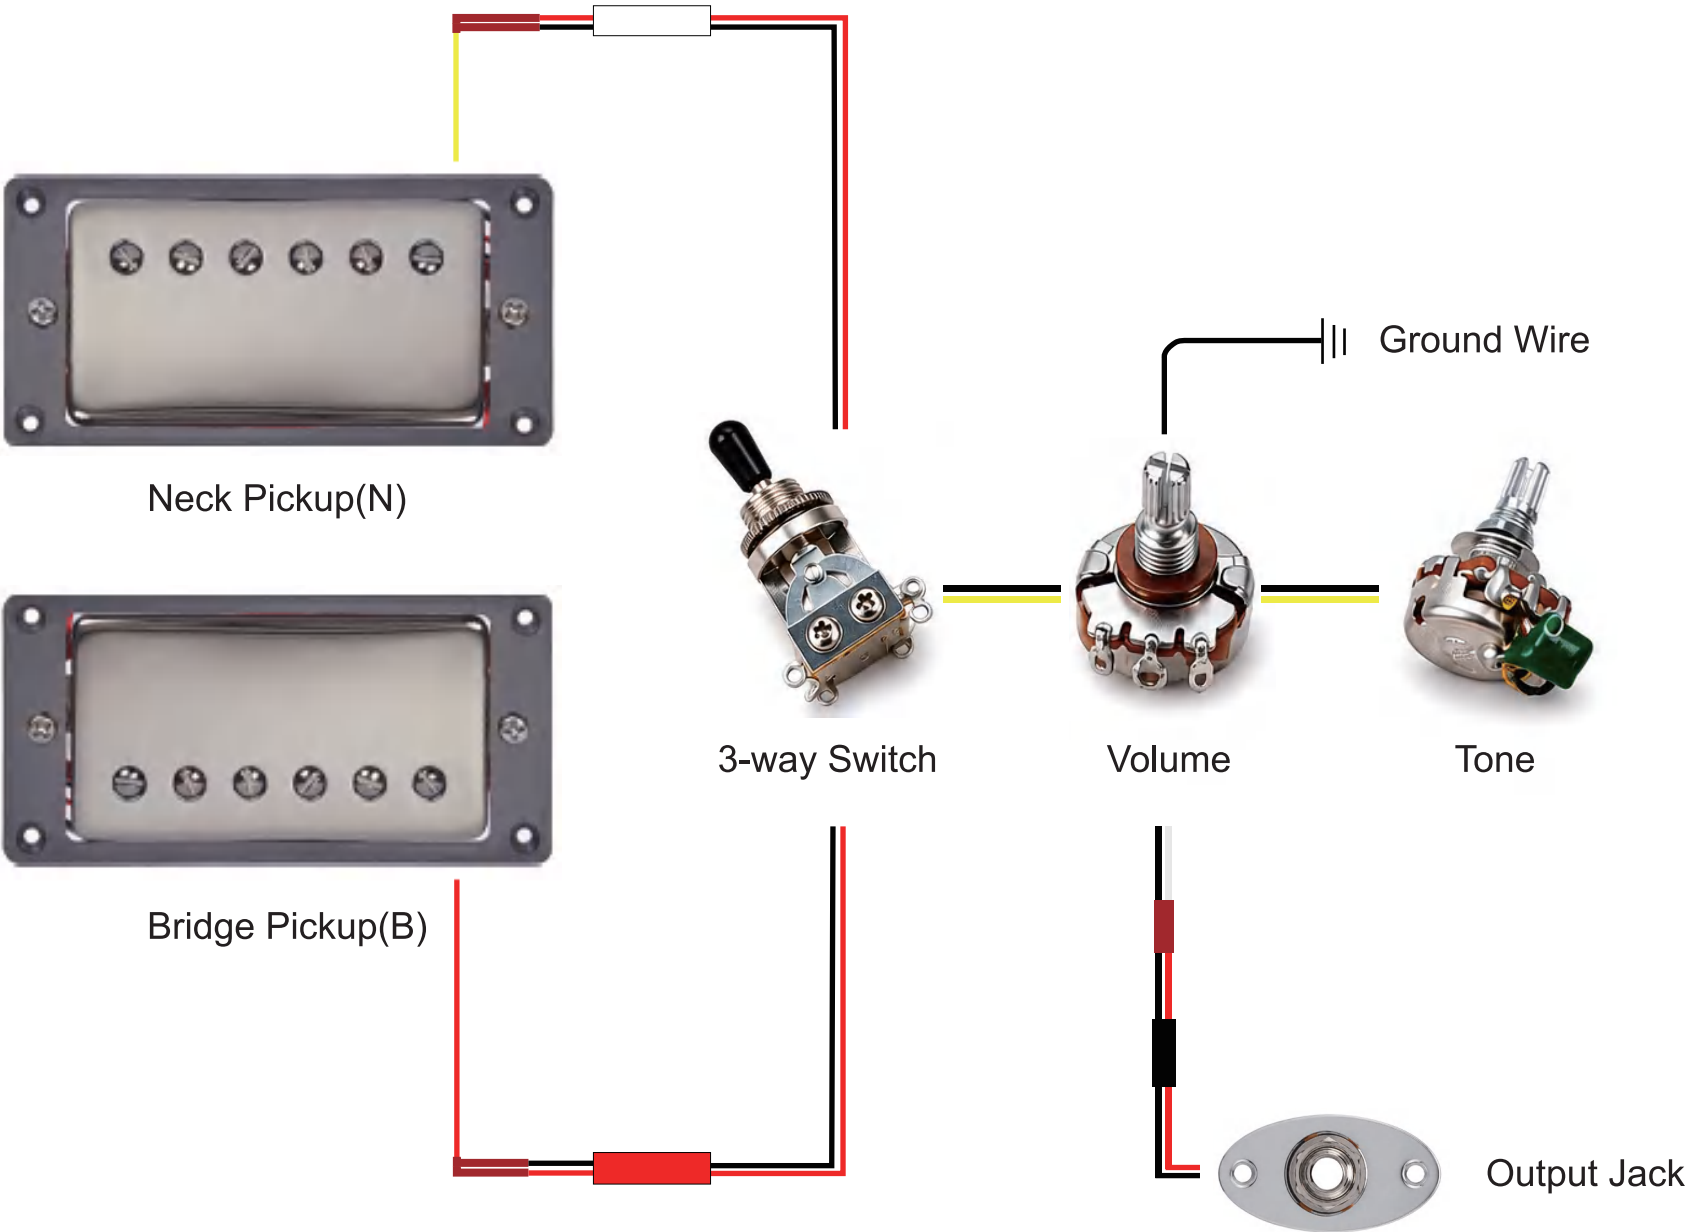

PICKUP INSTALLATION

Tidy up the control cavity and protect your wiring.

1 TUCK & ORGANIZE WIRES

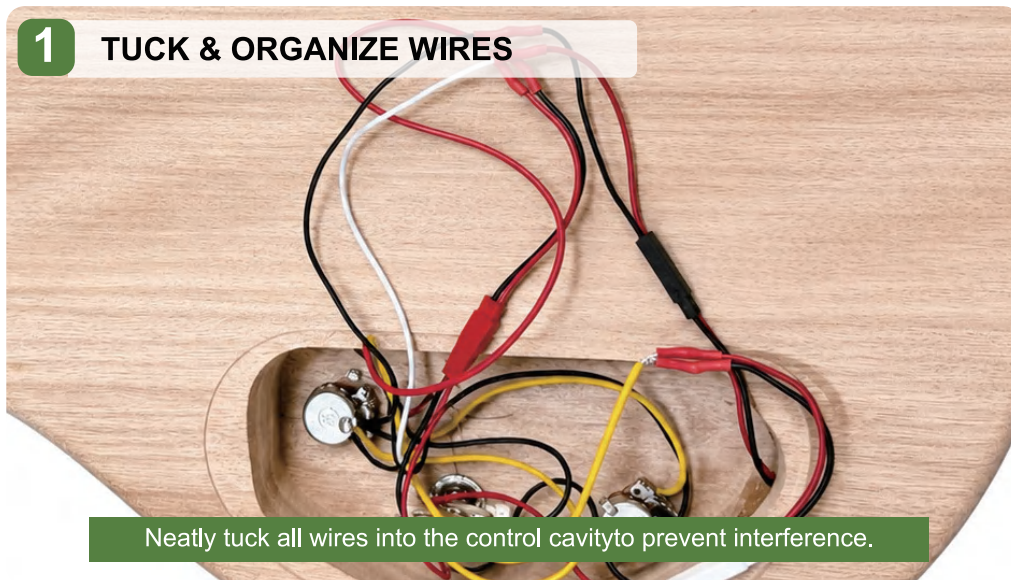

PARTS & SCREWS



Backplate
(1 pc)

Mounting Screws
(3 pcs)

2 INSTALL THE BACKPLATE



INSTALLATION STEPS

- Neatly tuck all wires into the control cavity to prevent interference.
- Align the backplate over the cavity and fasten with screws (diagonal pattern recommended).



CRITICAL CHECKS:

- Test all pickups/switch positions before closing - loose connections cause crackling.
- Ensure no wires touch the backplate's inner surface to prevent grounding shorts.

BRIDGE & TAILPIECE INSTALLATION

Secure the bridge and tailpiece for solid sustain and stable performance.

1 GROUND WIRE SETUP



A black ground wire has been pre-routed through the guitar body.



Bend the exposed copper end of this wire.



Insert it into the bridge post hole.



When installing the bridge post, the ground wire will be permanently secured through compression.



KEY TIPS

- Ground wire contact is critical—test with a multimeter if unsure.



2 INSTALLING BRIDGE & TAILPIECE POSTS



1 PREPARE THE POSTS

Prior to installing the bridge post by tapping, detach the post's top cap and place protective padding beneath the guitar body for impact absorption.

2 INSTALL THE POSTS

Tap the posts into their holes until fully seated. Ensure they are straight and firmly secured.

3 REATTACH TOP CAPS

Reinstall the top caps and hand-tighten.



CAUTION

Do not overtighten the posts-excessive force can damage the threads or guitar body.

BRIDGE & TAILPIECE INSTALLATION

Install the bridge and tailpiece, then complete the control knobs.




- Slide the bridge and tailpiece onto their posts.



KEY TIPS

If no rubber mallet is available, place cotton cloth padding over the bridge post before tapping to protect both the component and guitar body finish.

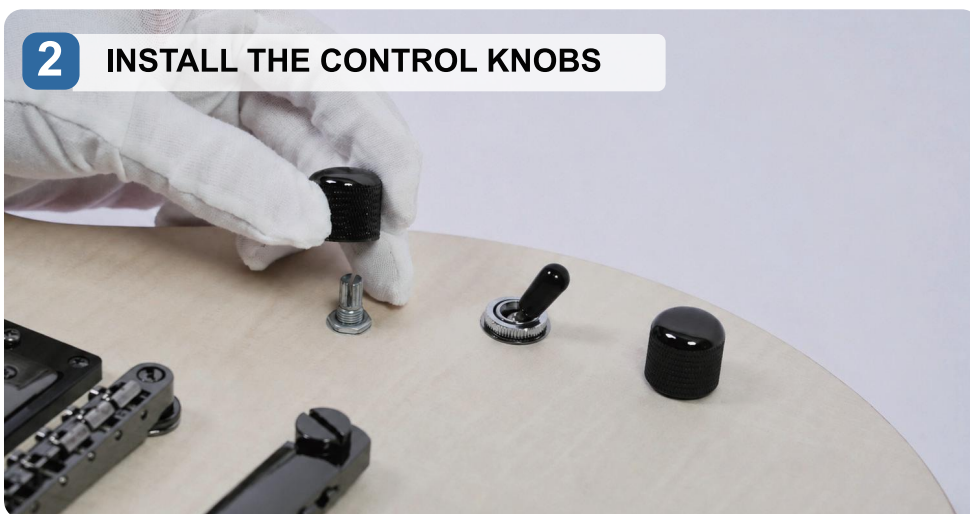

1 INSERT KNOBS

Insert the volume and tone knobs onto their potentiometer shafts.

2 PRESS DOWN FIRMLY

Press down firmly until fully seated.

3 TEST ROTATION

Test rotation to confirm smooth operation.



CAUTION


Do not force the knobs if they feel stuck. Check alignment and try again.

INSTALLING THE STRINGS

Install each string carefully and tune to pitch.




- ▲ The strings need to pass through the body to the back and then connect to the spring claw. You can install the strings from the front of the guitar by going through the bridge, starting from the 1st string or the 6th string. Then, pull each string through from the back.

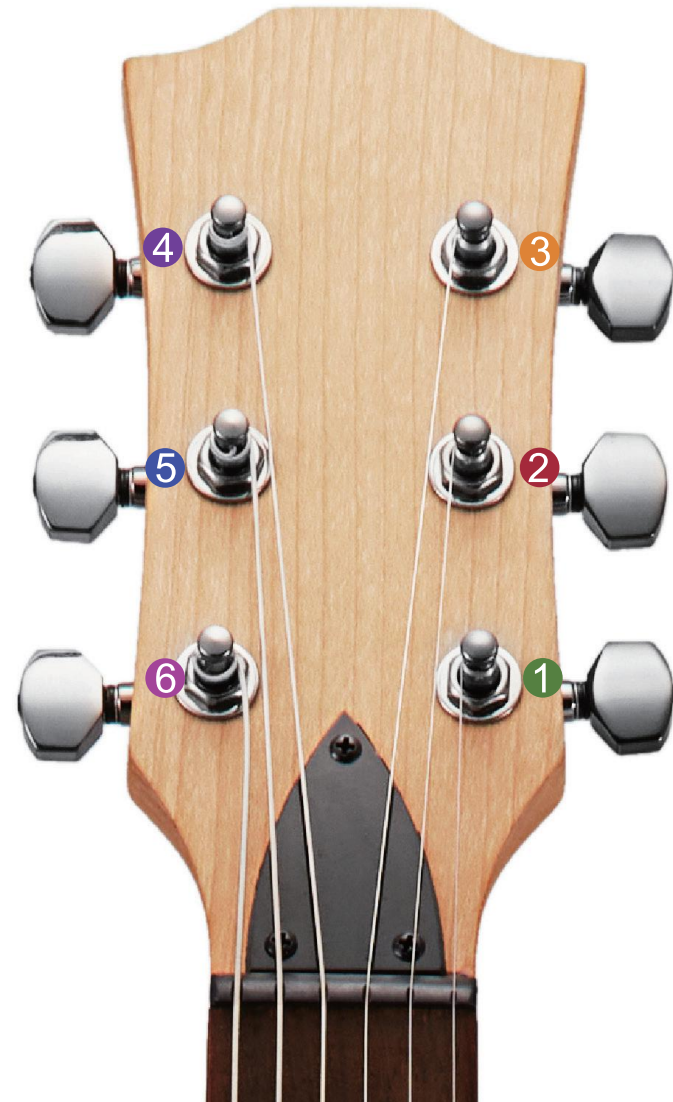

SECURING THE STRINGS

Route the strings under the string trees.

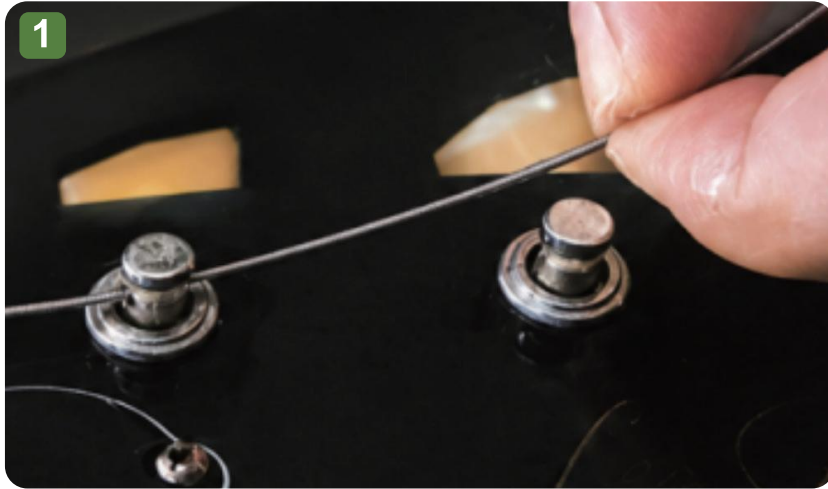

Tuners can extend the string post by about one tuner's length. Pass the string through the post and pull it tight. Do not cut the string yet.



Bend the string back toward you to form a "Z" shape.



◀ Wind the string down from the top.


- For the thicker strings (4-6), wind 1-3 coils.
- For the thinner strings (1-3), wind 3-4 coils.

After winding, cut off any excess string close to the post.

TUNING & SETUP


The final setup stage is essential for achieving ideal playability and tone. It involves four key adjustments:

1 NECK RELIEF

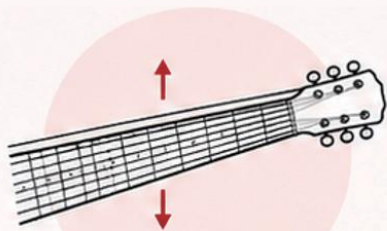


-  Prevents fret buzz by accommodating string vibration arc.
-  Enables lower action without compromising playability.
-  Ensures consistent feel across all fret positions.

2 STRING ACTION

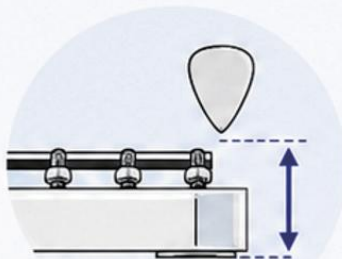


-  Balances playing comfort against clear note articulation.
-  Prevents premature note decay (choking) in bends.
-  Reduces hand fatigue during extended play.

3 INTONATION

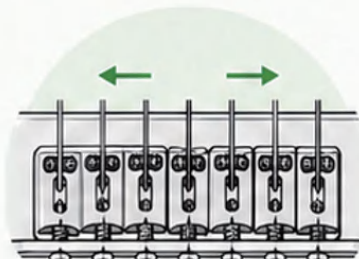

-  Guarantees accurate pitch at every fret position.
-  Eliminates harmonic dissonance in chords.
-  Makes the guitar usable in professional recording contexts.

4 PICKUP HEIGHT

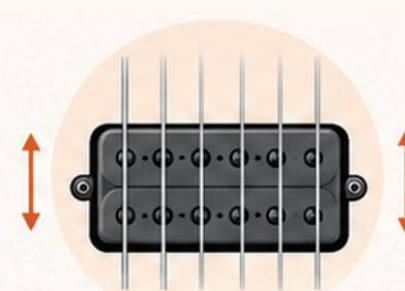

-  Maximizes output while preventing magnetic string damping.
-  Balances volume across all strings.
-  Shapes tonal character and dynamic responsiveness.

TIP: Adjust both sides evenly.



ADJUSTMENT OVERVIEW

The following content will provide a basic overview of each adjustment. Please remember to keep the guitar tuned to concert pitch (A440) throughout the process, and check regularly to ensure the neck maintains proper tension during adjustments.




KEEP IN TUNE

Tune to standard pitch (A440) before and after each adjustment for best results.

CHECK NECK RELIEF

Check the neck relief before making any truss rod adjustments.

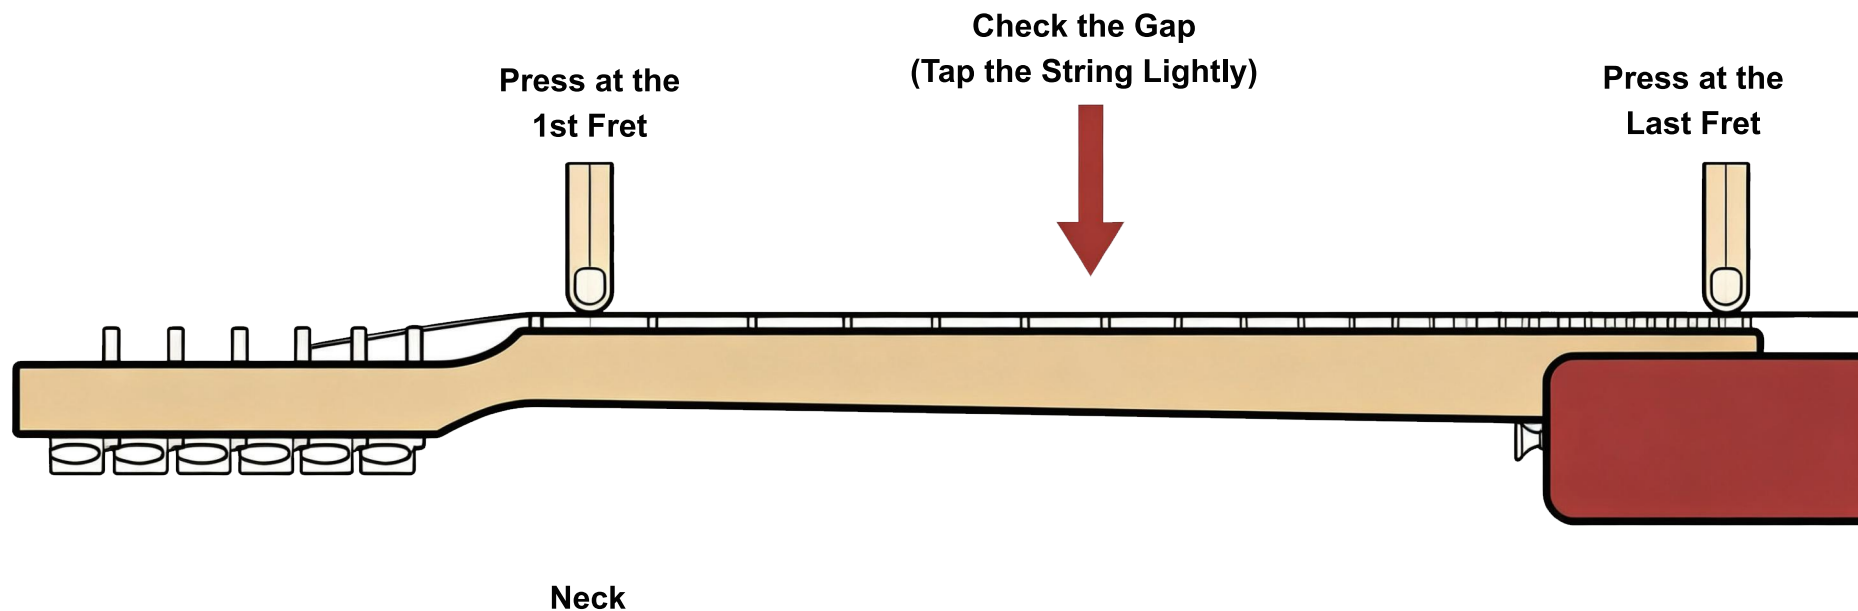

A small gap between the string and the fret is normal and indicates proper neck relief.



If there is too much gap, the neck has excessive forward bow.



If there is no gap at all, the neck may be back-bowed.

ADJUSTING NECK RELIEF

Adjust the truss rod to achieve the proper neck relief.


HOW TO ADJUST

1



Insert the hex wrench into the truss rod nut.

2

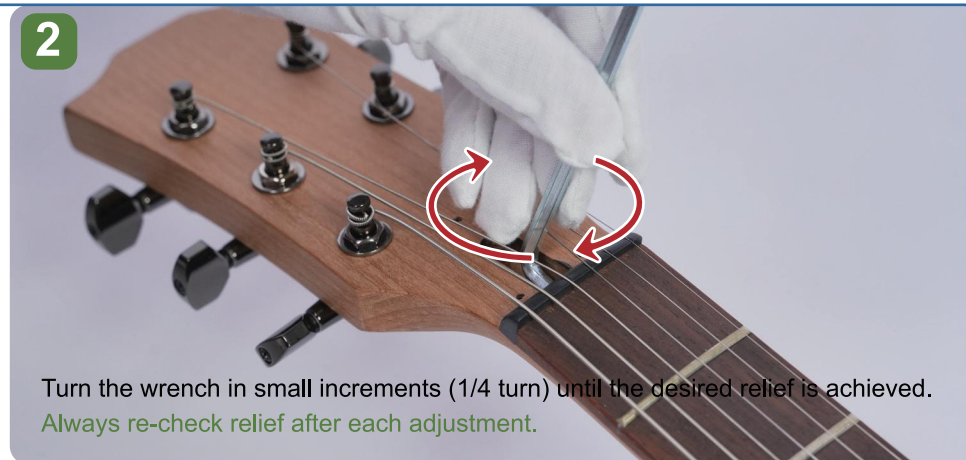

Turn the wrench in small increments (1/4 turn) until the desired relief is achieved.
Always re-check relief after each adjustment.

HOW TO TURN




TO INCREASE RELIEF

(More bow / More relief)

Turn the truss rod

COUNTERCLOCKWISE.

(Loosen)

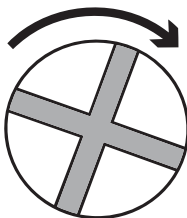



TO DECREASE RELIEF

(Less bow / Less relief)

Turn the truss rod

CLOCKWISE.

(Tighten)

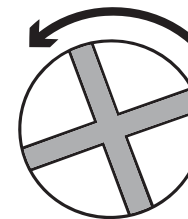

Do not force the truss rod. If you feel resistance or hear cracking, stop immediately.



Make small adjustments.



Turn no more than 1/4 turn (90°) at a time.



If unsure, contact customer support:
cs@aklot.com

ADJUSTING STRING ACTION

Proper string action ensures comfortable playability, clear tone, and prevents fret buzz.

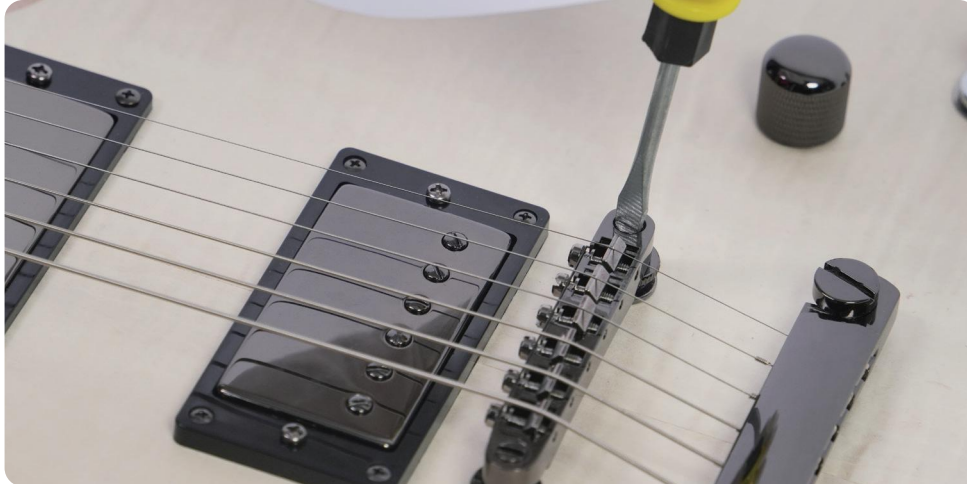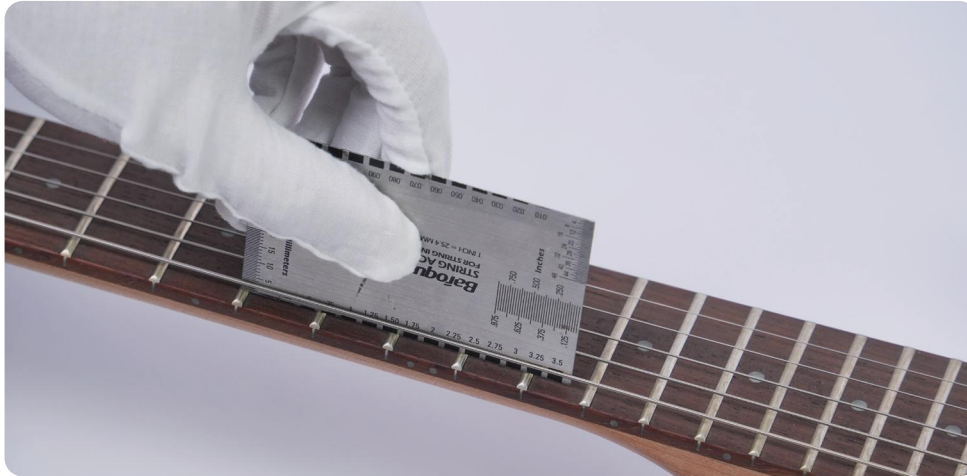

DEFINITION & MEASUREMENT

- String action refers to the height of strings above the fretboard, typically measured from the top of the 12th fret to the bottom of each string.



RECOMMENDED STARTING POINTS

Low E side	2.0-2.5 mm
High E side	1.5-2.0 mm

- Adjust according to string gauge and playing style.



ADJUSTMENT METHOD

- Turn saddle screws counterclockwise to raise action.
- Turn clockwise to lower action.
- Always check tuning after adjustments.



PRO TIP

Make small adjustments (1/8 turn at a time) and re-check playability and buzz.



CHECK AFTER EACH ADJUSTMENT

Tune to pitch and test across all frets for buzz and playability.


ADJUSTING SCALE LENGTH & INTONATION

Make precise adjustments for accurate intonation.

- 1 Tune the 12th fret harmonic.
- 2 Then fret the same note at the 12th fret.
- 3 Compare the two pitches.
- 4 Adjust the saddle and repeat until both notes are in tune.




CORRECT

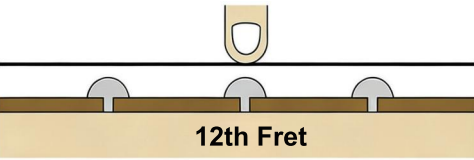


12th Fret

The fretted note is in tune with the 12th fret harmonic.

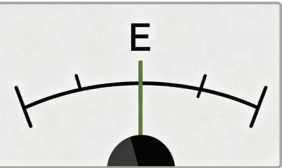




TOO SHARP

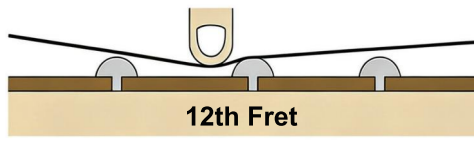


12th Fret

The fretted note is sharp (higher) than the 12th fret harmonic.

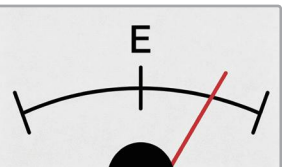




TOO FLAT

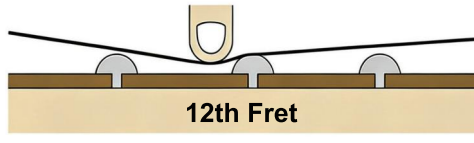

12th Fret

The fretted note is flat (lower) than the 12th fret harmonic.

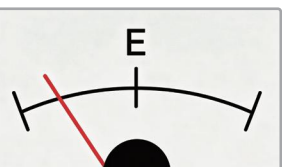




TIP:

- Make small adjustments (1/4 turn or less) and recheck.
- Always tune the string back to pitch before checking again.

ADJUST SADDLE




Move Saddle **Back**

TOO SHARP →



Move Saddle **Forward**

← **TOO FLAT**




ADJUSTING PICKUP HEIGHT & PROCEDURE

Measure and adjust the pickup height for balanced output and tone.




1 MEASURE

- Press the string at the last fret.
- Measure the distance between the bottom of the string and the top of the pickup pole piece.

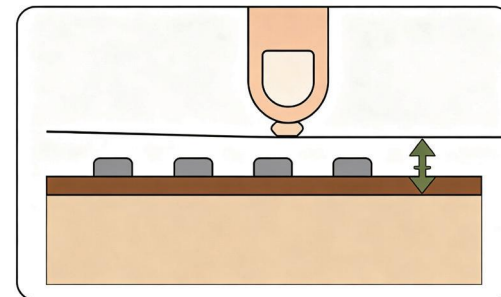

2 ADJUST

- Turn the pickup mounting screws to adjust the height.
- Clockwise = Lower the pickup
- Counterclockwise = Raise the pickup
- Adjust both sides evenly.

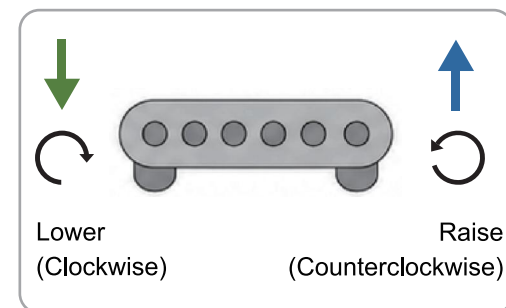

3 REFERENCE VALUES

Pickup	1st String
Neck	2.0-2.5 mm
Bridge	2.0-2.5 mm



These values are a starting point only.
Adjust to suit your playing style and preferred tone.

TROUBLESHOOTING

Use the table below to identify and resolve common issues.

Problem	Possible Cause	What to Check / Fix
 No sound	Loose connector, incorrect jack wiring, amp/cable issue	→ Re-seat all push-on connectors, confirm jack wiring, try another cable/amp
 Only one pickup works	Pickup connected to wrong terminal or selector issue	→ Check neck/bridge pickup routing and test all switch positions
 Loud hum / buzz	Ground wire not secured under bridge post	→ Inspect the bridge post ground path and confirm firm contact
 Strings not centered	Neck alignment off	→ Loosen neck screws slightly, re-align centerline, then tighten diagonally
 Action too high	Neck relief too large or bridge too high	→ Check neck relief first, then lower bridge gradually
 Buzzing strings	Back-bow, low action, uneven fret condition	→ Add slight relief, raise action, and inspect fretwork if needed
 Intonation is off	Strings old, guitar not tuned, saddles not set	→ Use fresh strings, tune to pitch, then set intonation at the 12th fret



TIP: Make one adjustment at a time and re-check after each change. Small adjustments make a big difference.

CONGRATULATIONS!

You now have a fully assembled, fully playable guitar.



As you become more familiar with your instrument, you may want to **fine-tune** your setup over time, especially the string action and intonation.



Before your first full playing session, complete a quick final check: Confirm the neck is properly adjusted, strings are centered on the fretboard, all controls function correctly, there is no excessive electronic hum, and the guitar plays cleanly up and down the neck.



If you are unsure about truss rod adjustment, neck alignment, or electrical wiring troubleshooting, please contact AKLOT customer support for assistance before making any forced adjustments.



FINAL CHECKLIST

- ☐ Neck aligned
- ☐ Strings centered
- ☐ Pickup & switch working
- ☐ No severe hum
- ☐ Action comfortable
- ☐ Intonation acceptable



SUPPORT



cs@aklot.com

For any issues encountered during installation, usage, or disassembly.



Please feel free to contact our customer service team, we will respond within **24 hours**.



Please include your order number and photos/videos when contacting support.



Scan QR Code for Customer Support



We hope you enjoy your playing experience!

AKLOT
UNLASH YOUR DREAM

THANK YOU

— **FOR CHOOSING AKLOT** —

We hope this manual helps you build, **customize**,
and enjoy your own unique sound.



cs@aklot.com



www.aklot.com



NEED HELP?

If there is anything you would like to say to us
or need support after-sales, contact our brand after-sales:

cs@aklot.com



WE'RE HERE FOR YOU

Our team will respond within
24 HOURS.

