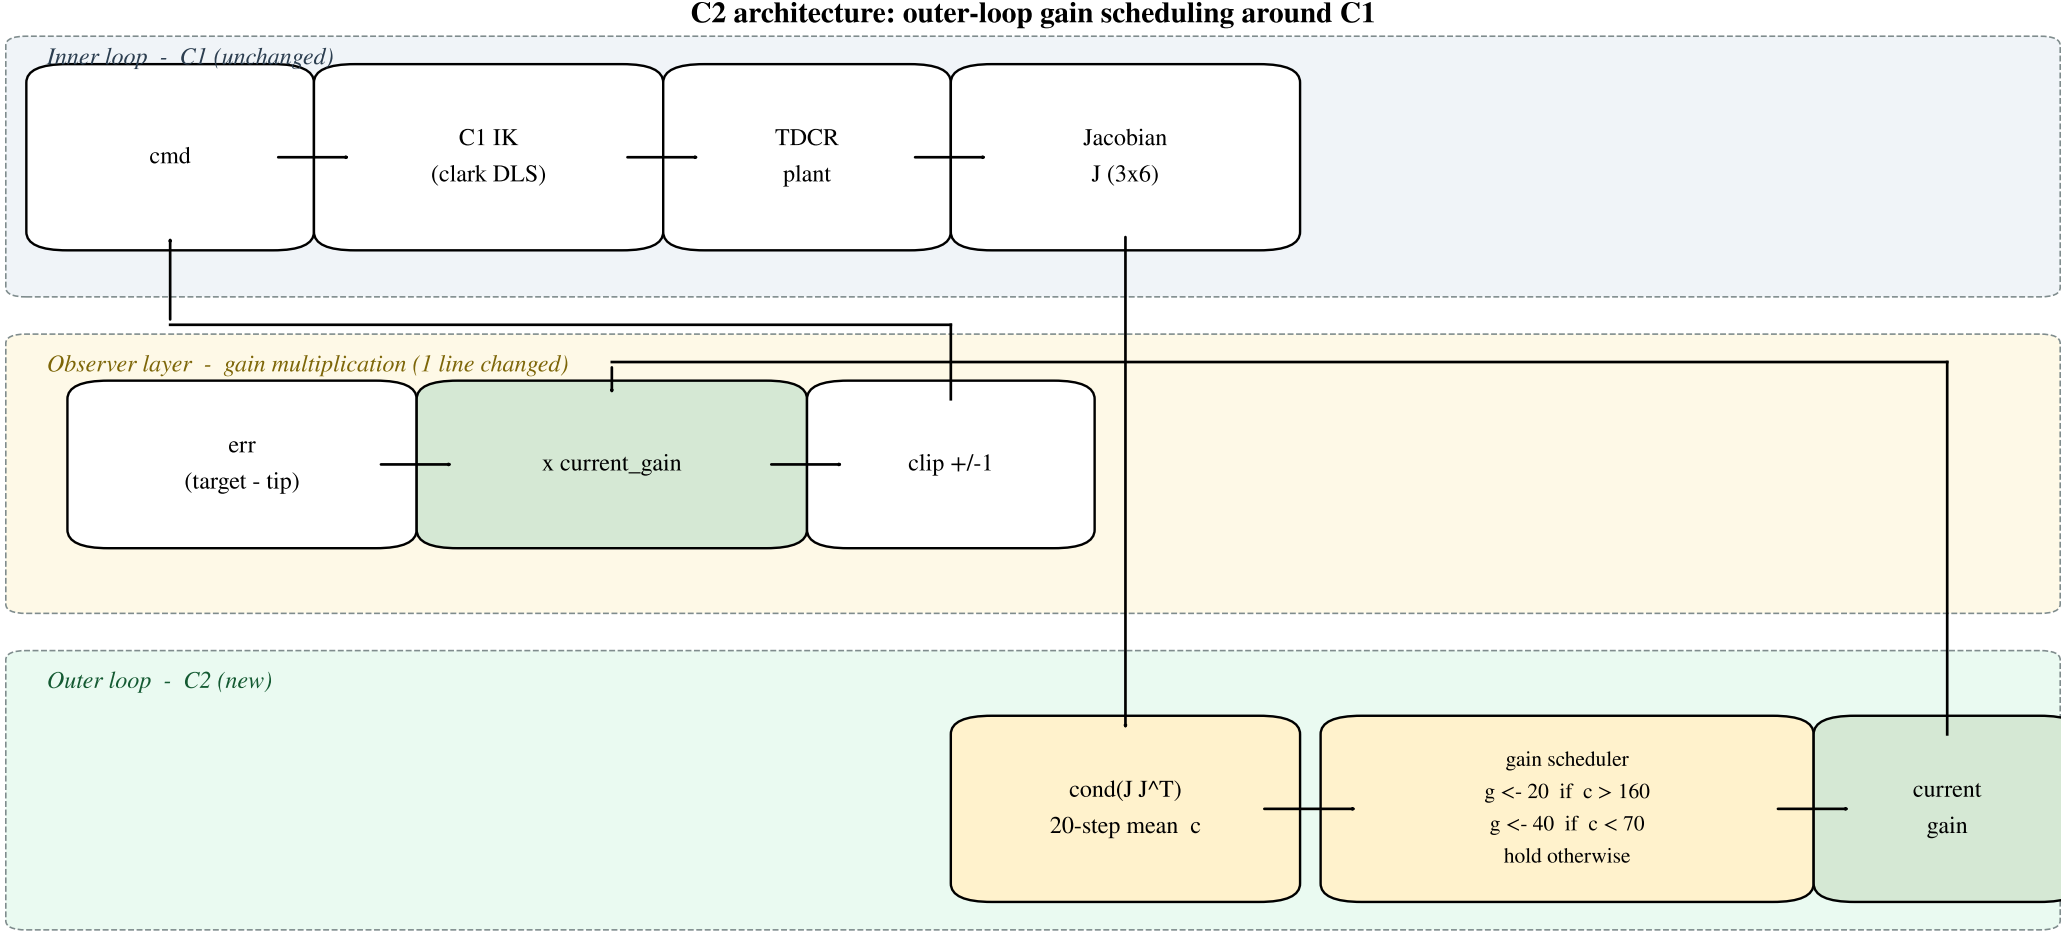
C2 architecture: outer-loop gain scheduling around C1
Inner loop - C1 (unchanged)
cmd
C1 IK
(clark DLS)
TDCR
plant
Jacobian
J (3x6)
Observer layer - gain multiplication (1 line changed)
err
(target - tip)
x current_gain
clip +/-1
Outer loop - C2 (new)
cond(J J^T)
20-step mean c
gain scheduler
g <- 20 if c > 160
g <- 40 if c < 70
hold otherwise
current
gain