UNIT 2:

Communication Channels and Components

What is Transmission media?


- o Transmission media is a communication channel that carries the information from the sender to the receiver. Data is transmitted through the electromagnetic signals.
- The main functionality of the transmission media is to carry the information in the form of bits through LAN(Local Area Network).
- o It is a physical path between transmitter and receiver in data communication.
- o In a copper-based network, the bits in the form of electrical signals.
- o In a fibre based network, the bits in the form of light pulses.
- In **OSI**(Open System Interconnection) phase, transmission media supports the Layer 1.
 Therefore, it is considered to be as a Layer 1 component.
- The electrical signals can be sent through the copper wire, fibre optics, atmosphere, water, and vacuum.
- The characteristics and quality of data transmission are determined by the characteristics of medium and signal.
- Transmission media is of two types are wired media and wireless media. In wired media, medium characteristics are more important whereas, in wireless media, signal characteristics are more important.
- Different transmission media have different properties such as bandwidth, delay, cost and ease of installation and maintenance.

The transmission media is available in the lowest layer of the OSI reference model,
 i.e., Physical layer.

Some factors need to be considered for designing the transmission media:


- Bandwidth: All the factors are remaining constant, the greater the bandwidth of a medium, the higher the data transmission rate of a signal.
- Transmission impairment: When the received signal is not identical to the transmitted one due to the transmission impairment. The quality of the signals will get destroyed due to transmission impairment.
- o **Interference:** An interference is defined as the process of disrupting a signal when it travels over a communication medium on the addition of some unwanted signal.

Causes Of Transmission Impairment:

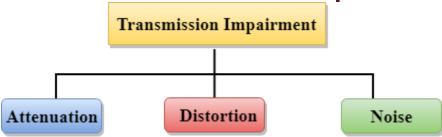

- Attenuation: Attenuation means the loss of energy, i.e., the strength of the signal decreases with increasing the distance which causes the loss of energy.
- Distortion: Distortion occurs when there is a change in the shape of the signal. This type of distortion is examined from different signals having different frequencies. Each frequency component has its own propagation speed, so they reach at a different time which leads to the delay distortion.
- Noise: When data is travelled over a transmission medium, some unwanted signal is added to it which creates the noise.

Classification Of Transmission Media:

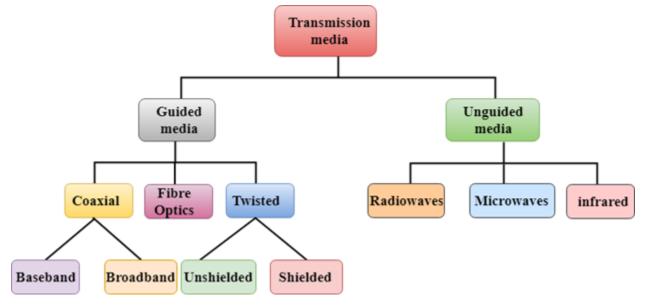

- Guided Transmission Media
- o UnGuided Transmission Media

Guided Media

It is defined as the physical medium through which the signals are transmitted. It is also known as Bounded media.


Types Of Guided media:

Twisted pair:


Twisted pair is a physical media made up of a pair of cables twisted with each other. A twisted pair cable is cheap as compared to other transmission media. Installation of the twisted pair cable is easy, and it is a lightweight cable. The frequency range for twisted pair cable is from 0 to 3.5KHz.

A twisted pair consists of two insulated copper wires arranged in a regular spiral pattern.

The degree of reduction in noise interference is determined by the number of turns per foot. Increasing the number of turns per foot decreases noise interference.

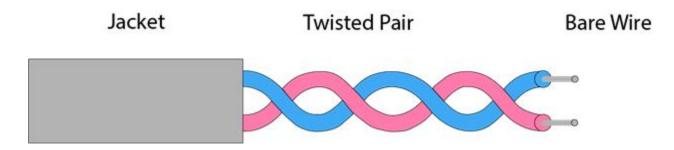

Types of Twisted pair:

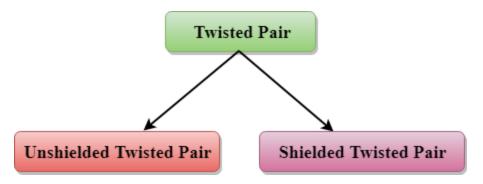

Unshielded Twisted Pair:

An unshielded twisted pair is widely used in telecommunication. Following are the categories of the unshielded twisted pair cable:

- o Category 1: Category 1 is used for telephone lines that have low-speed data.
- o Category 2: It can support upto 4Mbps.
- Category 3: It can support upto 16Mbps.
- Category 4: It can support upto 20Mbps. Therefore, it can be used for long-distance communication.
- Category 5: It can support upto 200Mbps.

Advantages Of Unshielded Twisted Pair:

- It is cheap.
- Installation of the unshielded twisted pair is easy.
- It can be used for high-speed LAN.

Disadvantage:

This cable can only be used for shorter distances because of attenuation.

Shielded Twisted Pair

A shielded twisted pair is a cable that contains the mesh surrounding the wire that allows the higher transmission rate.

Characteristics Of Shielded Twisted Pair:


- The cost of the shielded twisted pair cable is not very high and not very low.
- o An installation of STP is easy.
- It has higher capacity as compared to unshielded twisted pair cable.
- It has a higher attenuation.
- o It is shielded that provides the higher data transmission rate.

Disadvantages

- o It is more expensive as compared to UTP and coaxial cable.
- o It has a higher attenuation rate.

Coaxial Cable

- Coaxial cable is very commonly used transmission media, for example, TV wire is usually a coaxial cable.
- o The name of the cable is coaxial as it contains two conductors parallel to each other.
- o It has a higher frequency as compared to Twisted pair cable.
- The inner conductor of the coaxial cable is made up of copper, and the outer conductor is made up of copper mesh. The middle core is made up of non-conductive cover that separates the inner conductor from the outer conductor.
- The middle core is responsible for the data transferring whereas the copper mesh prevents from the EMI(Electromagnetic interference).

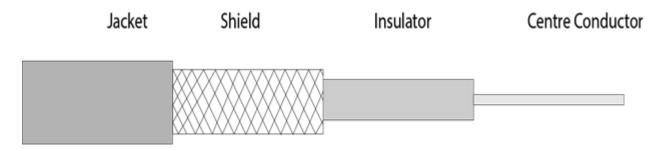

Coaxial cable is of two types:

- 1. **Baseband transmission:** It is defined as the process of transmitting a single signal at high speed.
- 2. **Broadband transmission:** It is defined as the process of transmitting multiple signals simultaneously.

Advantages Of Coaxial cable:

- The data can be transmitted at high speed.
- o It has better shielding as compared to twisted pair cable.
- o It provides higher bandwidth.


Disadvantages Of Coaxial cable:


- It is more expensive as compared to twisted pair cable.
- o If any fault occurs in the cable causes the failure in the entire network.

Fibre Optic

- Fibre optic cable is a cable that uses electrical signals for communication.
- Fibre optic is a cable that holds the optical fibres coated in plastic that are used to send the data by pulses of light.
- The plastic coating protects the optical fibres from heat, cold, electromagnetic interference from other types of wiring.
- o Fibre optics provide faster data transmission than copper wires.

Diagrammatic representation of fibre optic cable:

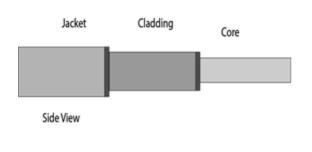

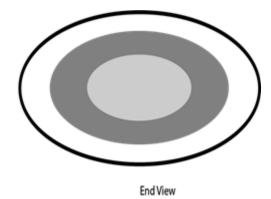

Basic elements of Fibre optic cable:

- Core: The optical fibre consists of a narrow strand of glass or plastic known as a core. A core is a light transmission area of the fibre. The more the area of the core, the more light will be transmitted into the fibre.
- Cladding: The concentric layer of glass is known as cladding. The main functionality of the cladding is to provide the lower refractive index at the core interface as to cause the reflection within the core so that the light waves are transmitted through the fibre.
- Jacket: The protective coating consisting of plastic is known as a jacket. The main purpose
 of a jacket is to preserve the fibre strength, absorb shock and extra fibre protection.

Following are the advantages of fibre optic cable over copper:

- Greater Bandwidth: The fibre optic cable provides more bandwidth as compared copper.
 Therefore, the fibre optic carries more data as compared to copper cable.
- Faster speed: Fibre optic cable carries the data in the form of light. This allows the fibre optic cable to carry the signals at a higher speed.
- Longer distances: The fibre optic cable carries the data at a longer distance as compared to copper cable.
- Better reliability: The fibre optic cable is more reliable than the copper cable as it is immune to any temperature changes while it can cause obstruct in the connectivity of copper cable.
- Thinner and Sturdier: Fibre optic cable is thinner and lighter in weight so it can withstand more pull pressure than copper cable.


UnGuided Transmission


- An unguided transmission transmits the electromagnetic waves without using any physical medium. Therefore it is also known as wireless transmission.
- In unguided media, air is the media through which the electromagnetic energy can flow easily.

Unguided transmission is broadly classified into three categories:

Radio waves

- Radio waves are the electromagnetic waves that are transmitted in all the directions of free space.
- Radio waves are omnidirectional, i.e., the signals are propagated in all the directions.
- o The range in frequencies of radio waves is from 3Khz to 1 khz.
- o In the case of radio waves, the sending and receiving antenna are not aligned, i.e., the wave sent by the sending antenna can be received by any receiving antenna.
- An example of the radio wave is FM radio.

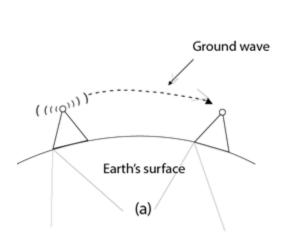

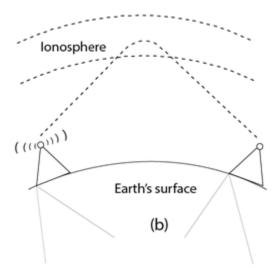


Applications Of Radio waves:

- o A Radio wave is useful for multicasting when there is one sender and many receivers.
- o An FM radio, television, cordless phones are examples of a radio wave.

Advantages Of Radio transmission:

- o Radio transmission is mainly used for wide area networks and mobile cellular phones.
- o Radio waves cover a large area, and they can penetrate the walls.
- o Radio transmission provides a higher transmission rate.

Microwaves

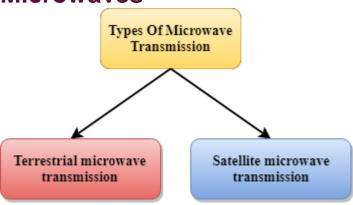

Microwaves are of two types:

- Terrestrial microwave
- o Satellite microwave communication.

Terrestrial Microwave Transmission

- Terrestrial Microwave transmission is a technology that transmits the focused beam of a radio signal from one ground-based microwave transmission antenna to another.
- Microwaves are the electromagnetic waves having the frequency in the range from 1GHz to 1000 GHz.
- Microwaves are unidirectional as the sending and receiving antenna is to be aligned, i.e.,
 the waves sent by the sending antenna are narrowly focussed.
- In this case, antennas are mounted on the towers to send a beam to another antenna which is km away.
- o It works on the line of sight transmission, i.e., the antennas mounted on the towers are the direct sight of each other.

Characteristics of Microwave:

- Frequency range: The frequency range of terrestrial microwave is from 4-6 GHz to 21-23
 GHz.
- Bandwidth: It supports the bandwidth from 1 to 10 Mbps.
- Short distance: It is inexpensive for short distance.
- Long distance: It is expensive as it requires a higher tower for a longer distance.
- Attenuation: Attenuation means loss of signal. It is affected by environmental conditions and antenna size.

Advantages Of Microwave:

- Microwave transmission is cheaper than using cables.
- It is free from land acquisition as it does not require any land for the installation of cables.
- Microwave transmission provides an easy communication in terrains as the installation of cable in terrain is quite a difficult task.
- o Communication over oceans can be achieved by using microwave transmission.

Disadvantages of Microwave transmission:

- Eavesdropping: An eavesdropping creates insecure communication. Any malicious user can catch the signal in the air by using its own antenna.
- Out of phase signal: A signal can be moved out of phase by using microwave transmission.
- Susceptible to weather condition: A microwave transmission is susceptible to weather condition. This means that any environmental change such as rain, wind can distort the signal.
- o **Bandwidth limited:** Allocation of bandwidth is limited in the case of microwave transmission.

Satellite Microwave Communication

- A satellite is a physical object that revolves around the earth at a known height.
- Satellite communication is more reliable nowadays as it offers more flexibility than cable and fibre optic systems.
- We can communicate with any point on the globe by using satellite communication.

How Does Satellite work?

The satellite accepts the signal that is transmitted from the earth station, and it amplifies the signal. The amplified signal is retransmitted to another earth station.

Advantages Of Satellite Microwave Communication:

- o The coverage area of a satellite microwave is more than the terrestrial microwave.
- The transmission cost of the satellite is independent of the distance from the centre of the coverage area.
- o Satellite communication is used in mobile and wireless communication applications.
- It is easy to install.
- It is used in a wide variety of applications such as weather forecasting, radio/TV signal broadcasting, mobile communication, etc.

Disadvantages Of Satellite Microwave Communication:

- Satellite designing and development requires more time and higher cost.
- The Satellite needs to be monitored and controlled on regular periods so that it remains in orbit.
- The life of the satellite is about 12-15 years. Due to this reason, another launch of the satellite has to be planned before it becomes non-functional.

Infrared

- An infrared transmission is a wireless technology used for communication over short ranges.
- The frequency of the infrared in the range from 300 GHz to 400 THz.
- It is used for short-range communication such as data transfer between two cell phones,
 TV remote operation, data transfer between a computer and cell phone resides in the same closed area.


Characteristics Of Infrared:

It supports high bandwidth, and hence the data rate will be very high.

- o Infrared waves cannot penetrate the walls. Therefore, the infrared communication in one room cannot be interrupted by the nearby rooms.
- o An infrared communication provides better security with minimum interference.
- o Infrared communication is unreliable outside the building because the sun rays will interfere with the infrared waves.

VSAT (Very Small Aperture Terminal)

VSAT stands for **Very Small Aperture Terminal**. VSAT is of importance, especially in remote areas such as the hilly mountain regions, where Internet connectivity cannot be directly provided. There is no option left in such places through which the Internet can be accessed anyway. These places could be the Ocean region and the Sea region, where the citizens have a lack of utilities. In such cases, VSAT is one of the technologies that make Internet Connectivity possible so that people can access it. All the work is carried out in a workstation group where the sending and receiving of signals takes place. The data such as audio, video, etc, can be sent and received. Therefore, VSAT is considered to be a private Earth Station. This Earth Station is designed in a way such that the signals are transmitted and received with the help of satellites. The term 'Very Small' in VSAT (Very Small Aperture Terminal) refers to the antenna size that is very small.

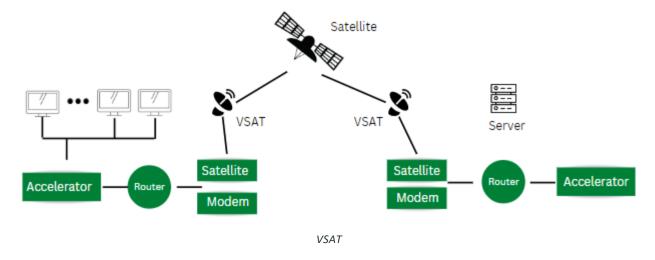

Characteristics of VSAT:

- VSAT is a two-way communication earth satellite station that has an antenna of less than 3 meters.
- The size of the VSAT antenna may vary from 75 cm to 1.2 meters.

 The data ranges between 4 kilobytes per second to 16 megabytes per second in VSAT.

Working for VSAT:

- The end user of the set requires a box that acts as an interface between the user and its system.
- The box consists of an antenna and a transceiver.
- The work of this transceiver is to send and receive signals to and from the transponder located in space.
- Every workstation works like a hub. The satellite sends or receives a signal from it.
- Each user is connected to each of the interconnected hub stations and operates in the form of a Star Topology (There is a server in between and all the nodes are connected to it, forming a star-like figure).
- With this medium, we can transmit data, voice, and video signals.

Advantages of VSAT:

- VSAT Terminals and its Hardware can be installed in vehicles such as Trucks or Vans and can also be used in situations where mobility is a need.
- Audio, Video, and data signals can be transmitted and received efficiently.
- Internet Access: A VSAT Network also serves to provide internet access in addition to pointing to a WAN link.
- It is set in the consumer broadband industry to make it the leading major wave. VSAT network provides an "Always on" broadband Internet Service.
- Information from remote locations can be accessed using satellites.
- It is more used for connectivity in rural areas, ships, and coastal regions.
- Mobile access is another conventional strength of satellite networks. For example, we can do online surfing, watch TV, use applications, and much more.
- VSAT Networks are not affected by earthquakes, Cyclones, and other natural calamities.
- VSAT Networks, with a low-cost architecture and extra powerful systems, share digital information.

Disadvantages of VSAT:

• **Delay:** VSAT Technology uses satellites in Geosynchronous orbit. This type of data transmission has an approximate delay of about 500 milliseconds for each round trip. It introduces a problem with the application that requires a consistent transmission.

- **Environmental conditions:** Like other satellite systems, the VSAT network may also get affected by the weather and other environmental conditions. The signal strength may be weak at times, although it depends upon the size of the antenna, frequency band, and the power of the transmitters.
- **Clear view:** Since VSAT requires an external antenna, therefore to contact the satellite, the location must have a clear view of the southern sky.

Network Devices (Hub, Repeater, Bridge, Switch, Router, Gateways and Brouter)

Network Devices: Network devices, also known as networking hardware, are physical devices that allow hardware on a computer network to communicate and interact with one another. For example Repeater, Hub, Bridge, Switch, Routers, Gateway, Brouter, and NIC, etc.

- **1. Repeater** A repeater operates at the physical layer. Its job is to regenerate the signal over the same network before the signal becomes too weak or corrupted to extend the length to which the signal can be transmitted over the same network. An important point to be noted about repeaters is that they not only amplify the signal but also regenerate it. When the signal becomes weak, they copy it bit by bit and regenerate it at its star topology connectors connecting following the original strength. It is a 2-port device.
- **2.** Hub A hub is a basically multi-port repeater. A hub connects multiple wires coming from different branches, for example, the connector in star topology which connects different stations. Hubs cannot filter data, so data packets are sent to all connected devices. In other words, the <u>collision domain</u> of all hosts connected through Hub remains one. Also, they do not have the intelligence to find out the best path for data packets which leads to inefficiencies and wastage.

Types of Hub


- Active Hub:- These are the hubs that have their power supply and can clean, boost, and relay the signal along with the network. It serves both as a repeater as well as a wiring center. These are used to extend the maximum distance between nodes.
- **Passive Hub:-** These are the hubs that collect wiring from nodes and power supply from the active hub. These hubs relay signals onto the network without cleaning and boosting them and can't be used to extend the distance between nodes.
- Intelligent Hub:- It works like an active hub and includes remote management capabilities. They also provide flexible data rates to network devices. It also enables

- an administrator to monitor the traffic passing through the hub and to configure each port in the hub.
- **3. Bridge** A bridge operates at the data link layer. A bridge is a repeater, with add on the functionality of filtering content by reading the MAC addresses of the source and destination. It is also used for interconnecting two LANs working on the same protocol. It has a single input and single output port, thus making it a 2 port device.

Types of Bridges

- **Transparent Bridges:** These are the bridge in which the stations are completely unaware of the bridge's existence i.e. whether or not a bridge is added or deleted from the network, reconfiguration of the stations is unnecessary. These bridges make use of two processes i.e. bridge forwarding and bridge learning.
- **Source Routing Bridges:-** In these bridges, routing operation is performed by the source station and the frame specifies which route to follow. The host can discover the frame by sending a special frame called the discovery frame, which spreads through the entire network using all possible paths to the destination.
- **4. Switch** A switch is a multiport bridge with a buffer and a design that can boost its efficiency(a large number of ports imply less traffic) and performance. A switch is a data link layer device. The switch can perform error checking before forwarding data, which makes it very efficient as it does not forward packets that have errors and forward good packets selectively to the correct port only. In other words, the switch divides the collision domain of hosts, but the <u>broadcast domain</u> remains the same. *Types of Switch*
- 1. Unmanaged switches: These switches have a simple plug-and-play design and do not offer advanced configuration options. They are suitable for small networks or for use as an expansion to a larger network.
- 2. Managed switches: These switches offer advanced configuration options such as VLANs, QoS, and link aggregation. They are suitable for larger, more complex networks and allow for centralized management.
- 3. Smart switches: These switches have features similar to managed switches but are typically easier to set up and manage. They are suitable for small- to medium-sized networks.
- 4. Layer 2 switches: These switches operate at the Data Link layer of the OSI model and are responsible for forwarding data between devices on the same network segment.
- 5. Layer 3 switches: These switches operate at the Network layer of the OSI model and can route data between different network segments. They are more advanced than Layer 2 switches and are often used in larger, more complex networks.
- 6. PoE switches: These switches have Power over Ethernet capabilities, which allows them to supply power to network devices over the same cable that carries data.

- 7. Gigabit switches: These switches support Gigabit Ethernet speeds, which are faster than traditional Ethernet speeds.
- 8. Rack-mounted switches: These switches are designed to be mounted in a server rack and are suitable for use in data centers or other large networks.
- 9. Desktop switches: These switches are designed for use on a desktop or in a small office environment and are typically smaller in size than rack-mounted switches.
- 10. Modular switches: These switches have modular design, which allows for easy expansion or customization. They are suitable for large networks and data centers.
- **5. Routers** A router is a device like a switch that routes data packets based on their IP addresses. The router is mainly a Network Layer device. Routers normally connect LANs and WANs and have a dynamically updating routing table based on which they make decisions on routing the data packets. The router divides the broadcast domains of hosts connected through it.

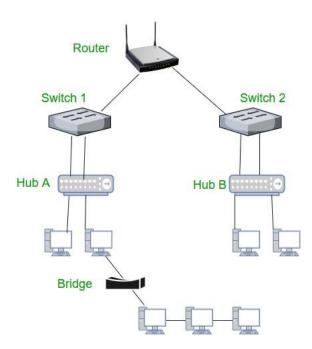

6. Gateway – A gateway, as the name suggests, is a passage to connect two networks that may work upon different networking models. They work as messenger agents that take data from one system, interpret it, and transfer it to another system. Gateways are also called protocol converters and can operate at any network layer. Gateways are generally more complex than switches or routers. A gateway is also called a protocol converter.


- **7. Brouter** It is also known as the bridging router is a device that combines features of both bridge and router. It can work either at the data link layer or a network layer. Working as a router, it is capable of routing packets across networks and working as the bridge, it is capable of filtering local area network traffic.
- **8. NIC** NIC or network interface card is a network adapter that is used to connect the computer to the network. It is installed in the computer to establish a LAN. It has a unique id that is written on the chip, and it has a connector to connect the cable to it. The cable acts as an interface between the computer and the router or modem. NIC card is a layer 2 device which means that it works on both the physical and data link layers of the network model.

Switching techniques

In large networks, there can be multiple paths from sender to receiver. The switching technique will decide the best route for data transmission.

Switching technique is used to connect the systems for making one-to-one communication.

Classification Of Switching Techniques

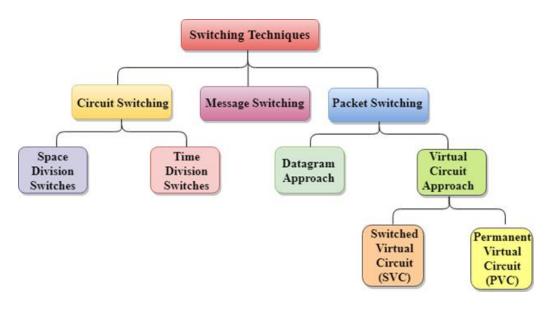


Circuit Switching

- Circuit switching is a switching technique that establishes a dedicated path between sender and receiver.
- o In the Circuit Switching Technique, once the connection is established then the dedicated path will remain to exist until the connection is terminated.
- Circuit switching in a network operates in a similar way as the telephone works.
- o A complete end-to-end path must exist before the communication takes place.
- In case of circuit switching technique, when any user wants to send the data, voice, video, a request signal is sent to the receiver then the receiver sends back the acknowledgment to ensure the availability of the dedicated path. After receiving the acknowledgment, dedicated path transfers the data.
- o Circuit switching is used in public telephone network. It is used for voice transmission.
- Fixed data can be transferred at a time in circuit switching technology.

Communication through circuit switching has 3 phases:

- Circuit establishment
- Data transfer
- Circuit Disconnect

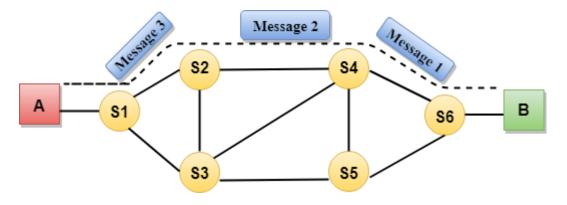

Circuit Switching can use either of the two technologies:

Space Division Switches:

Space Division Switching is a circuit switching technology in which a single transmission path is accomplished in a switch by using a physically separate set of crosspoints.

- Space Division Switching can be achieved by using crossbar switch. A crossbar switch is a metallic crosspoint or semiconductor gate that can be enabled or disabled by a control unit.
- The Crossbar switch is made by using the semiconductor. For example, Xilinx crossbar switch using FPGAs.
- Space Division Switching has high speed, high capacity, and nonblocking switches.

Space Division Switches can be categorized in two ways:

- Crossbar Switch
- Multistage Switch

Crossbar Switch

The Crossbar switch is a switch that has n input lines and n output lines. The crossbar switch has n^2 intersection points known as **crosspoints**.

Disadvantage of Crossbar switch:

The number of crosspoints increases as the number of stations is increased. Therefore, it becomes very expensive for a large switch. The solution to this is to use a multistage switch.

Multistage Switch

- Multistage Switch is made by splitting the crossbar switch into the smaller units and then interconnecting them.
- It reduces the number of crosspoints.
- o If one path fails, then there will be an availability of another path.

Advantages Of Circuit Switching:


- o In the case of Circuit Switching technique, the communication channel is dedicated.
- It has fixed bandwidth.

Disadvantages Of Circuit Switching:

- Once the dedicated path is established, the only delay occurs in the speed of data transmission.
- It takes a long time to establish a connection approx 10 seconds during which no data can be transmitted.
- o It is more expensive than other switching techniques as a dedicated path is required for each connection.
- It is inefficient to use because once the path is established and no data is transferred, then the capacity of the path is wasted.
- o In this case, the connection is dedicated therefore no other data can be transferred even if the channel is free.

Message Switching

- Message Switching is a switching technique in which a message is transferred as a complete unit and routed through intermediate nodes at which it is stored and forwarded.
- In Message Switching technique, there is no establishment of a dedicated path between the sender and receiver.
- The destination address is appended to the message. Message Switching provides a dynamic routing as the message is routed through the intermediate nodes based on the information available in the message.
- Message switches are programmed in such a way so that they can provide the most efficient routes.
- Each and every node stores the entire message and then forward it to the next node. This
 type of network is known as store and forward network.
- Message switching treats each message as an independent entity.

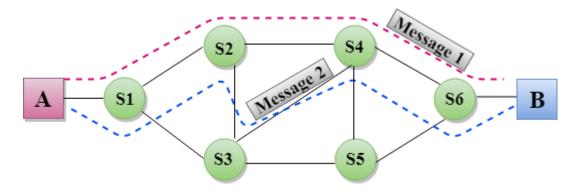

Advantages Of Message Switching


- Data channels are shared among the communicating devices that improve the efficiency of using available bandwidth.
- o Traffic congestion can be reduced because the message is temporarily stored in the nodes.
- Message priority can be used to manage the network.
- The size of the message which is sent over the network can be varied. Therefore, it supports the data of unlimited size.

Disadvantages Of Message Switching

- The message switches must be equipped with sufficient storage to enable them to store the messages until the message is forwarded.
- The Long delay can occur due to the storing and forwarding facility provided by the message switching technique.

Packet Switching

- The packet switching is a switching technique in which the message is sent in one go, but it is divided into smaller pieces, and they are sent individually.
- The message splits into smaller pieces known as packets and packets are given a unique number to identify their order at the receiving end.
- Every packet contains some information in its headers such as source address, destination address and sequence number.
- o Packets will travel across the network, taking the shortest path as possible.
- o All the packets are reassembled at the receiving end in correct order.
- o If any packet is missing or corrupted, then the message will be sent to resend the message.
- If the correct order of the packets is reached, then the acknowledgment message will be sent.

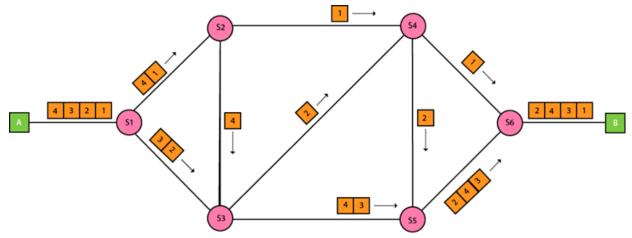

Approaches Of Packet Switching:

There are two approaches to Packet Switching:


Datagram Packet switching:

- o It is a packet switching technology in which packet is known as a datagram, is considered as an independent entity. Each packet contains the information about the destination and switch uses this information to forward the packet to the correct destination.
- o The packets are reassembled at the receiving end in correct order.
- o In Datagram Packet Switching technique, the path is not fixed.
- o Intermediate nodes take the routing decisions to forward the packets.
- o Datagram Packet Switching is also known as connectionless switching.

Virtual Circuit Switching

- Virtual Circuit Switching is also known as connection-oriented switching.
- In the case of Virtual circuit switching, a preplanned route is established before the messages are sent.
- Call request and call accept packets are used to establish the connection between sender and receiver.
- o In this case, the path is fixed for the duration of a logical connection.

Let's understand the concept of virtual circuit switching through a diagram:

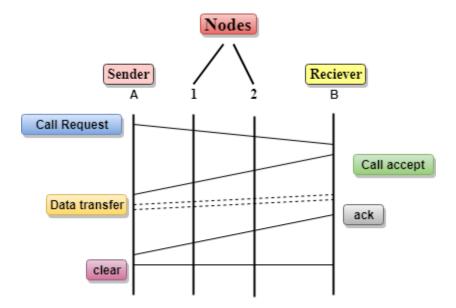

- o In the above diagram, A and B are the sender and receiver respectively. 1 and 2 are the nodes.
- Call request and call accept packets are used to establish a connection between the sender and receiver.
- o When a route is established, data will be transferred.
- After transmission of data, an acknowledgment signal is sent by the receiver that the message has been received.
- o If the user wants to terminate the connection, a clear signal is sent for the termination.

Differences b/w Datagram approach and Virtual Circuit approach

| Datagram approach | Virtual Circuit approach |
|--|--|
| Node takes routing decisions to forward the packets. | Node does not take any routing decision. |
| Congestion cannot occur as all the packets travel in different directions. | Congestion can occur when the node is busy, and it does not allow other packets to pass through. |

| It is more flexible as all the | packets | are | treated | as |
|--------------------------------|---------|-----|---------|----|
| an independent entity. | | | | |

It is not very flexible.

Advantages Of Packet Switching:

- Cost-effective: In packet switching technique, switching devices do not require massive secondary storage to store the packets, so cost is minimized to some extent. Therefore, we can say that the packet switching technique is a cost-effective technique.
- Reliable: If any node is busy, then the packets can be rerouted. This ensures that the Packet Switching technique provides reliable communication.
- Efficient: Packet Switching is an efficient technique. It does not require any established path prior to the transmission, and many users can use the same communication channel simultaneously, hence makes use of available bandwidth very efficiently.

Disadvantages Of Packet Switching:

- Packet Switching technique cannot be implemented in those applications that require low delay and high-quality services.
- The protocols used in a packet switching technique are very complex and requires high implementation cost.
- If the network is overloaded or corrupted, then it requires retransmission of lost packets.
 It can also lead to the loss of critical information if errors are nor recovered.