



capsule assembly instructions

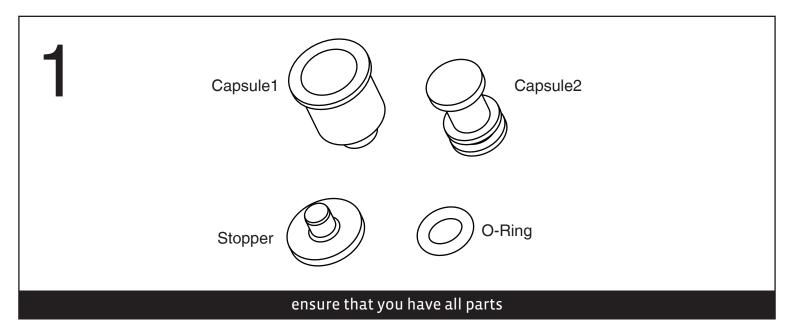

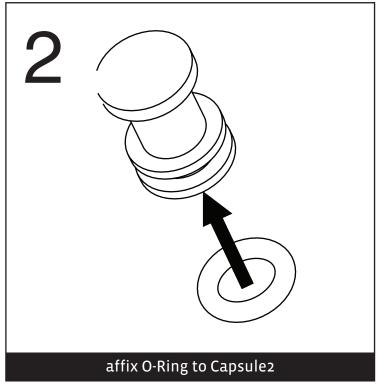


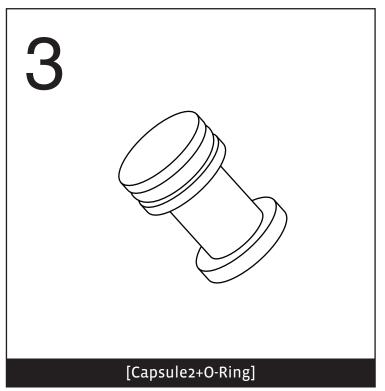

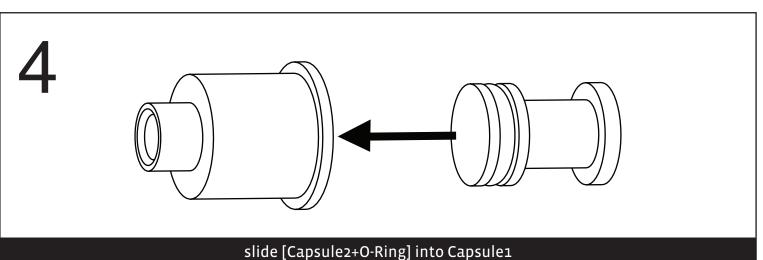






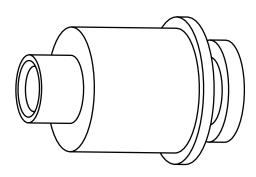


[Capsule1+Capsule2+O-Ring]

6

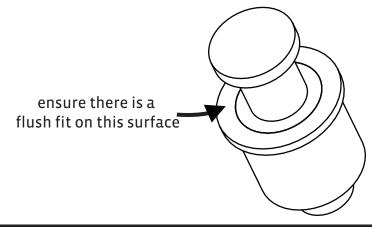

adjust height of [Capsule2+O-Ring] until flush with Capsule1's flange

7



using a disposable syringe, fill the assembly to the brim with Xylenol Orange

8

ensure that there are no air bubbles

push in the stopper, allowing excess reagent to overflow