


BMW 3-Series 320i & 320xi (12-14), 325i, 325xi, 330i & 330xi (06) & 328i & 328xi (07-14) Haynes Online Manual

## 15 Parking brake lever - removal and installation


- 1 Remove the center console (see Chapter 11), then remove the airbag control unit (see Chapter 12).
- 2 Release the parking brake, then use a screwdriver to push the spring stop back until the retaining hook engages with the stop (see illustration 14.4).
- 3 Disconnect the parking brake warning switch, then release the clips and move the cable guide/bracket to one side.
- 4 Press each cable retainer towards the center of the equalizer, on each side, and slide the ends of the parking brake cables upwards from the equalizer (see illustration).

15.4 Slide the cable end fittings up from the balance arm

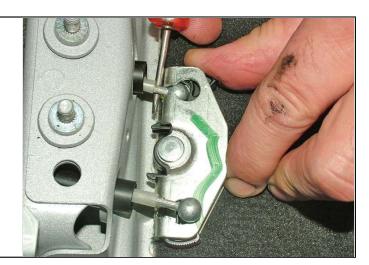

5 Remove the lever retaining nuts and lever (see illustration) .

15.5 Parking brake lever assembly retaining nuts

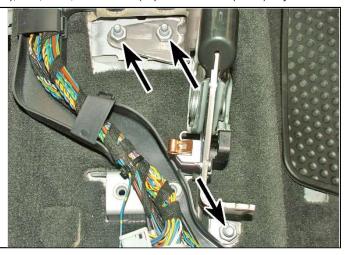

6 Installation is the reverse of removal. Prior to installing the center console, adjust the parking brake (see Section 14).

© 2024 Haynes Manuals, Inc. Contact us