


BMW 3-Series 320i & 320xi (12-14), 325i, 325xi, 330i & 330xi (06) & 328i & 328xi (07-14) Haynes Online Manual

## 10 Tire rotation (every 7,500 miles or 6 months)

## Note:

The manufacturer does not recommend tire rotation for the covered vehicle. Check with your tire dealer for his advice before rotating your tires.

- 1 If you decide to rotate your tires, they should be rotated at the regular intervals and whenever uneven wear is noticed. Since the vehicle will be raised and the tires removed anyway, check the brakes also (see Section 13).
- 2 Radial tires must be rotated in a specific pattern (see illustration) .

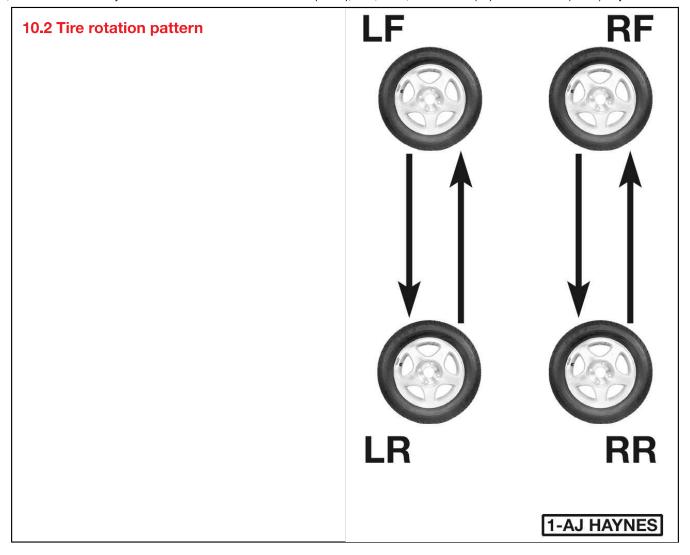

- 3 The vehicle must be raised on a hoist or supported on jackstands to get all four wheels off the ground. Make sure the vehicle is safely supported!
- 4 After the rotation procedure is finished, check and adjust the tire pressures as necessary and be sure to check the wheel bolt tightness.

© 2024 Haynes Manuals, Inc. Contact us